

# COBOLT

PORTABLE STEREO RADIO CD PLAYER

**Instruction Manual**

---

**Model CB2114BB**



**Please read these instructions carefully and retain for future reference.**

### Help line

For assistance during normal working hours (9am-5pm, Mon-Fri, New Zealand local time) call  
Oriental Pacific International Ltd.

NZ call: **0800 89 85 80**

Email: [service@orientalpacific.com](mailto:service@orientalpacific.com)

## SYMBOLS



The graphic symbols used in this manual or on the back cover of the set mean the following:



Read this manual in full before use.



Class II Double insulated Appliance



The lightning flash symbol is intended to alert the user to the enclosures that contain hazardous voltages.



The exclamation symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## IMPORTANT SAFEGUARDS

**When using any electrical apparatus always observe safety regulations and use basic safety precautions to reduce the risk of fire, electric shock and personal injury, including the following.**

### **Read, Keep and Follow these instructions, heeding all Warnings.**

**CAUTION!** This is a class 1 laser product. However this player uses a visible laser beam which could cause hazardous radiation exposure if directed. Be sure to operate the equipment as directed. Do not place eyes close to any openings when connected to the mains supply.

**WARNING!** Do not remove any cover.

**WARNING!** No objects filled with liquid, such as vases, shall be placed on this equipment or in any position where liquid may fall into this equipment or any other electrical apparatus.

**WARNING!** Do not insert any objects into any openings of this equipment or any other electrical apparatus.

**WARNING!** Do not use this apparatus near water. To avoid the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashes and is strictly for indoor use only.

**WARNING!** Not for use in Tropical humid climates.

**WARNING!** Do not immerse in any liquid whilst in use or cleaning. Clean only with a damp cloth, dry with a dry towel. Do not use harsh abrasives as these may damage the plastic parts.

**WARNING!** DO NOT block any ventilation openings. Keep away from curtains, newspapers and restricted areas. Install in accordance with any specific manufacturer's instructions. Always allow a sufficient gap around the apparatus to avoid overheating.

**WARNING!** Do not install near any heat sources such as radiators, gas heaters, stoves or other apparatus (including amplifiers) that produce heat. Do not leave in direct sunlight.

**WARNING!** Do not place any naked flame source, such as lighted candles on any electrical apparatus.

**WARNING!** Connect to a suitable 230V ~ 50 Hz power supply only.

**WARNING!** Keep out of reach of young children. This apparatus is not suitable for use by young children or infirm persons without supervision. Young children must be supervised to ensure that they do not play with the apparatus. Ensure young children have enough knowledge to operate the equipment safely if they do have access to this equipment.

**WARNING!** Do not abuse or damage a power cord. If any power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard. A replaceable cord must be replaced with an authorised replacement from an authorised service agent only.

**WARNING!** Only use attachments/accessories specified by the manufacturer.

**WARNING!** Unplug completely from the power source this apparatus during lightening storms or when unused for long periods of time.

**WARNING!** Attention is drawn to the environmental aspects of disposing of any battery.

**WARNING!** Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**WARNING!** For household use only, this apparatus is not intended for commercial use.

**WARNING!** If this apparatus is to be used by a third party, please supply these instructions with it.

**WARNING! No liability will be accepted for any personal injury or damage caused by failure to follow these instructions.**

## CLEANING

**WARNING!** Before you attempt to clean the appliance, always disconnect the appliance from the mains power and remove the plug from the main power outlet.





Clean the appliance with a soft dry cloth only. Never use any harsh chemical cleaning agent or water as this may damage the appliance.

**WARNING!** Never allow water splashes to enter the appliance. Do not immerse in water.


**WARNING!** Never remove the rear cover. Do not attempt to service this equipment.

## IMPORTANT INFORMATION

To receive maximum enjoyment from your new audio system, please take the time to read all of the Safety Precautions, and familiarize yourself with its many features and their operation.

	<b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>	
<p><b>WARNING:</b> TO PREVENT THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.</p> <p><b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		
	This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.	
	This symbol indicates that there are important operating and maintenance instruction in the literature accompanying this unit.	

# LOCATION OF CONTROLS

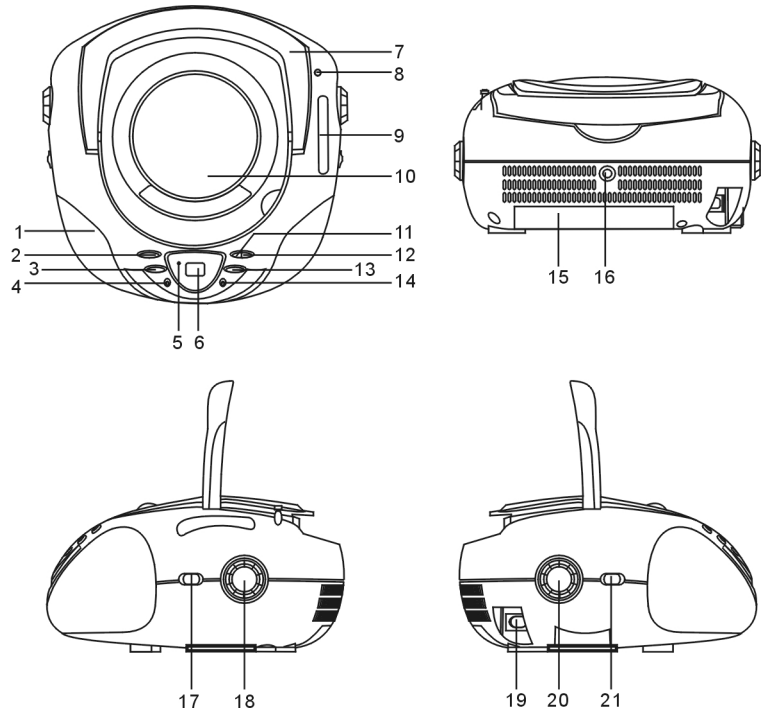

- |                        |                       |
|------------------------|-----------------------|
| 1. Speaker             | 12. Skip Up Button    |
| 2. Stop Button         | 13. Play/Pause Button |
| 3. Program Button      | 14. Random Button     |
| 4. Repeat Button       | 15. Battery Door      |
| 5. FM Stereo Indicator | 16. Headphone Jack    |
| 6. LED Display         | 17. Band Selector     |
| 7. Handle              | 18. Tuning Control    |
| 8. Antenna             | 19. AC Socket         |
| 9. Dial Scale          | 20. Volume Control    |
| 10. CD Door            | 21. Function Selector |
| 11. Skip Down Button   |                       |

## POWER SUPPLY AND CONNECTION

### Battery Operation

- Remove Battery Compartment Cover.
- Insert 8 X C size batteries (UM-2 or equivalent) in correct polarity as indicated inside the compartment.
- Replace the cover.

#### Note:

Check your batteries regularly, old or discharged batteries should be replaced. If the unit is not going to be used for some time or is being run exclusively on alternative power, remove the batteries to avoid leakage and damage.

To remove batteries from compartment, open the cover and simply shake the unit gently or place it slightly downward.

**We recommend using Alkaline type batteries.**

### AC Main Operation

Take the supplied AC Power Cord and connect the corresponding end to the AC Socket and household mains outlet. Make sure the voltage is compatible.

#### Note:

If you plug the AC power cord off from the AC socket and from the unit, the unit will operate with DC power.

## RADIO OPERATION

### Operation

- Set Function Selector to "RADIO" position.
- Select the desired radio frequency band with Band Selector.
- Rotate Tuning Control to set the Dial Pointer against the station frequency as marked on the dial scale.
- Adjust Volume Control to the desired level. To turn off the radio, set Function Selector to "OFF" position.

### Antenna

For FM stations, extend the Telescopic Antenna to full length, for the best reception. However, medium wave signals are picked up through the built-in ferrite antenna. You may have to orientate the set to obtain the clearest reception.

## PLAYING COMPACT DISC

### Getting Start

1. Set the Function Selector to "CD" position. Open the lid, insert a disc on the CD tray then close the lid.
2. The display will show the total number of tracks of the disc.
3. Do not swing or shock the unit when playing CD, otherwise it may not function properly.

### General Operation

#### Play/Pause Button

Press once to start play. The right hand side indicator will on. Press twice to stop playing disc temporarily. The right hand side indicator will flash. Press once more to play again.

#### Stop Button

Press to stop play. Total number of track will show again.

#### Skip Up Button

Press and release skip up key to go to next track. Press and hold skip up key to fast forward the track being played. After CD head has read disc, press and hold the key to fast search the track desired.

#### Skip Down Button

Press and release skip down key to go back to the beginning of the track being played. Press twice to go back to previous track. Press and hold skip down key to fast backward the track being played.

#### Repeat 1

Press repeat key once, the track No. shown will be repeated. The left hand side indicator will flash.

#### Repeat All

Press repeat key twice, all tracks will be repeated. The left hand side indicator will on. Press again will resume to normal play, repeat indicator will go off.

#### Program Button

At stop mode, press PROGRAM button, the track no. on display will flash. Use the SKIP UP/SKIP DOWN button to choose the tracks you wish to program, then press PROGRAM button again to finish the first track programming.

Repeat the above steps to program more tracks. Maximum 20 tracks can be programmed. Press play button to start, the tracks will play in programmed orders. To clear the program memory, press STOP/CD open.



### Random Button

Press the RANDOM button in play/stop mode, press the SKIP/UP button. Playback will start from any one track (not in the order of the disc).

## MAINTENANCE & CARE

1. Check your batteries regularly, old or discharged batteries should be replaced. If the unit is not going to be used for some time or is being run exclusively on alternative power, remove the batteries to avoid leakage and damage.
2. Electronic products of this kind should never be subjected to extreme temperatures or high humidity to ensure normal functioning and a long life-time. For instance, this set should not be placed in bathing areas, nor close to stoves and radiators.
3. If necessary, clean the unit with a piece of soft dry cloth only. (Be sure the AC Power Cord is disconnected from the Mains) Never use a polish nor a strong detergent as this will damage the finish of the cabinet.

## SPECIFICATIONS

<b>Description</b>	Portable Stereo Radio CD player
<b>Power input</b>	AC 230V 50Hz or 8 x size C alkaline batteries
<b>Power consumption</b>	15W
<b>Band Range</b>	FM 88 – 108 MHz AM 530 – 1600 KHz
<b>Supported format</b>	CD/CD-R/CD-RW
<b>Dimensions</b>	Body size: 235mm(L) x 230mm(W) x 125mm(H)

Note: Design and specifications are subject to change without prior notice for the purpose of performance improvement.



### Guarantee Card

This Product is guaranteed against faulty materials and workmanship for a period of one year from date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged, damaged by accident, damaged in any other way by improper use or has been purchased second hand.

Warning! Refer specific instructions. All production orders have quality inspections. IN the unlikely event of a deficiency, please contact the retailer from whom this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Type of Appliance: \_\_\_\_\_

Model Number: \_\_\_\_\_ Purchase date: \_\_\_\_\_

Product Purchased From: \_\_\_\_\_

Your Name: \_\_\_\_\_

Address: \_\_\_\_\_

\_\_\_\_\_

Phone Number: \_\_\_\_\_

#### **IMPORTANT!**

Please retain this warranty card with your **purchase receipt**.  
Please **do not post to the retailer** or importer. If service is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged.