



OWNER'S MANUAL

# MINI HI-FI SYSTEM

Please read this manual carefully before operating your set and retain it for future reference.

CM9950 (CM9950 , CMS9950F)

# Safety Information



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**CAUTION:** The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.



**CAUTION:** This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

**CAUTION concerning the Power Cord**

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

This device is equipped with a portable battery or accumulator.

**Safety way to remove the battery or the battery from the equipment:** Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

**Grounding**

(Except for devices which are not grounded.) Ensure that you connect the earth ground wire to prevent possible electric shock (i.e. a Audio with a three-prong grounded AC plug must be connected to a three-prong grounded AC outlet). If grounding methods are not possible, have a qualified electrician install a separate circuit breaker. Do not try to ground the unit by connecting it to telephone wires, lightening rods, or gas pipes.

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.  
Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



### FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION :** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**FCC WARNING:** This equipment may generate or use radio frequency energy. changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

**FCC RF Radiation Exposure Statement :** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

**CAUTION:** Regulations of the FCC and FAA prohibit airborne operation of radio-frequency wireless devices because their signals could interfere with critical aircraft instruments.

### Responsible Party :

LG Electronics USA, Inc. 1000 Sylvan Avenue  
Englewood Cliffs, NJ 07632  
TEL. : +1-800-243-0000

# Table of Contents

## 1 Getting Started

---

- 2 Safety Information
- 8 Unique Features
- 8 Accessories
- 9 Playable file Requirement
  - Music file requirement
  - Compatible USB Devices
  - USB device requirement
- 10 Remote control
- 12 Top panel
- 14 Front panel
- 14 Rear panel

## 2 Connecting

---

- 15 How to Affix the Ferrite Core
  - Affix the Ferrite Core for speaker cables
- 15 Connecting to speakers
  - Attaching the speaker light cables to the unit
- 16 Optional Equipment Connection
  - AUX IN Connection
  - AUX OUT Connection
  - PORT. IN Connection
  - USB Connection
  - Antenna Connection

## 3 Operating

---

- 20 Basic Operations
  - 20 – CD/USB Operations
  - 21 – Auto Play
  - 21 – Selecting a folder and an MP3/WMA file
  - 22 – Deleting an MP3/WMA file
- 22 Playback Effect
  - 22 – DJ EFFECT
  - 22 – SCRATCH Effect
  - 23 – DJ PRO
  - 23 – AUTO DJ
  - 23 – Adjusting TEMPO
  - 24 – MIX
  - 24 – AUTO SYNC
- 25 Using BLUETOOTH® wireless technology
  - 25 – Listening to music stored on the Bluetooth devices
  - 27 – Pairing your unit and Bluetooth device through NFC Tag
- 28 Using the Music Flow Bluetooth App
  - 28 – Install “Music Flow Bluetooth” App onto Your Bluetooth Device
  - 29 – Activate Bluetooth with “Music Flow Bluetooth” App
- 30 Radio Operations
  - 30 – Listening to the radio
  - 30 – Improving poor FM reception
  - 30 – Presetting the Radio Stations
  - 30 – Deleting all the saved stations

31	Sound adjustment
31	– Setting the sound mode
31	– Setting the USER EQ
32	Advanced Operations
32	– Recording to USB
34	– DJ SHARING
34	– JUKE BOX Playback
35	Other Operations
35	– Turn off the sound temporarily
35	– CHILDSAFE Mode
36	– Displaying file information (ID3 TAG)
36	– DEMO
36	– Using Microphone
36	– Using H/P MODE
36	– LIGHTING (X-FLASH) MODE
37	Setting the Clock
37	– Setting the Clock through “Music Flow Bluetooth” App
37	– Using your player as an alarm clock
37	– Sleep Timer Setting
37	– Dimmer
38	Auto power down
38	– AUTO POWER On
38	– Auto function change
39	LG Sound Sync

## 4 Troubleshooting

---

40	Troubleshooting
40	– General

## 5 Appendix

---

42	General specifications
43	Speakers specifications
43	Trademarks and Licenses
44	Maintenance
44	– Notes on Discs
44	– Handling the Unit

1

2

3

4

5

## Unique Features

### Bluetooth®

Listens to music stored on your **Bluetooth** device.

### Portable In

Listens to music from your portable device. (MP3, Notebook, etc.)

### Playback effects

Listens to music with various sound and playback effects.

### USB Direct Recording

Records music to your USB device.

### Music Flow Bluetooth


Music Flow Bluetooth is an App designed to let you take control of some of LG's latest Audio devices. Refer to page 28.

### LG Sound Sync


Controls volume level of this unit by the remote control of your LG TV that is compatible with LG Sound Sync.

## Accessories


Please check and identify the supplied accessories.

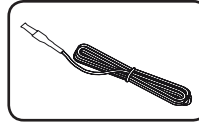

FM Antenna (1)

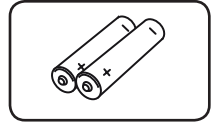

Batteries (2)

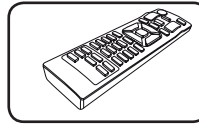

Remote Control (1)



# Playable file Requirement

## Music file requirement

MP3/WMA file compatibility with this unit is limited as follows.

- Sampling frequency : within 32 to 48 kHz (MP3), within 32 to 48 kHz (WMA)
- Bit rate : within 32 to 320 kbps (MP3), 40 to 192 kbps (WMA)
- Maximum files : Data CD : 999 / USB : 2000
- Maximum folders : Data CD : 99 / USB : 200
- File extensions : ".mp3"/ ".wma"
- Certain MP3/WMA files may not be played depending on the type or format of the file.
- CD-ROM file format : ISO 9660/ JOLIET
- We recommend that you use Easy-CD Creator, which creates an ISO 9660 file system.

The DTS is not supported. In case of DTS audio format, audio is not output.

You have to set the disc format option to [Mastered] in order to make the discs compatible with the LG players when formatting rewritable discs. When setting the option to Live File System, you cannot use it on LG players.

(Mastered/Live File System : Disc format system for Windows Vista)

## Compatible USB Devices


- MP3 Player : Flash type MP3 player.
- USB Flash Drive :  
Devices that support USB2.0 or USB1.1.
- The USB function of this unit does not support all USB devices.

## USB device requirement

- Devices which require additional program installation when you have connected it to a computer, are not supported.
- Do not extract the USB device while in operation.
- For a large capacity USB, it may take longer than a few minute to be searched.
- To prevent data loss, back up all data.
- If you use a USB extension cable or USB hub, the USB device is not recognized.
- Using NTFS file system is not supported. (Only FAT(16/ 32) file system is supported.)
- This unit recognizes up to 2000 files.
- External HDD, Card readers, Locked devices, or hard type USB devices are not supported.
- USB port of the unit cannot be connected to PC. The unit cannot be used as a storage device.
- Some USB may not work with this unit.

# Remote control

1 Getting Started

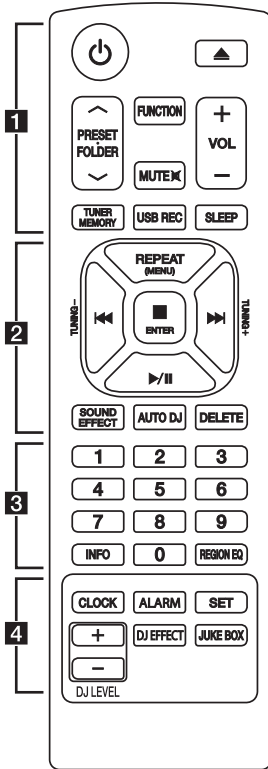

..... **1** .....

**⏻** (Power) : Switches the unit ON or OFF.

**⬆** (Open/Close) : Opens and closes the disc tray.

**PRESET-FOLDER  $\wedge/\vee$  :**

- Searches for a folder of MP3/WMA files. When a CD/USB containing MP3/WMA files in several folders is being played, press **PRESET-FOLDER  $\wedge/\vee$**  to select the folder you want to play.
- Chooses a preset number for a radio station.

**FUNCTION** : Selects the function and input source.

**MUTE  $\boxtimes$**  : Mutes the sound.

**VOL +/-** : Adjusts speaker volume.

**TUNER MEMORY :**


- Stores radio stations.
- Deletes all the saved stations.

**USB REC** : USB direct recording.

**SLEEP** : Sets the system to turn off automatically at a specified time.

(Dimmer : The display window will be darkened by half.)

## Battery Installation

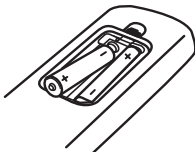

Remove the battery cover on the rear of the Remote Control, and insert two (size AAA) batteries with **+** and **-** matched correctly.

2

**REPEAT (MENU)** : Listens to your tracks/files repeatedly or randomly.

**TUNING-/+** : Selects the radio stations.

**◀◀/▶▶** (Skip/Search) :

- Skips Fast backward or Forward.
- Searches for a section within a track/file.

**■ ENTER** :

- Stops playback.
- Cancels DELETE function.

**▶/||** (Play/Pause) :

- Starts or pauses playback.
- Selects STEREO/MONO.

**SOUND EFFECT** : Chooses sound impressions.

**AUTO DJ** : Selects the AUTO DJ mode. (For more information refer to page 23)

**DELETE** :

- Deletes MP3/WMA files. (USB only).
- Deletes a song on the JUKE BOX list.

3

**0 to 9 numerical buttons** : Selects numbered tracks, files, or preset number.

**INFO**

- Sees informations about your music. An MP3 file often come with ID3 tag. The tag gives the Title, Artist, Album or Time information.
- Sees the address of connected **Bluetooth** device in Bluetooth mode.

**REGION EQ** : Chooses region equalizer.

4

**CLOCK** : Sets a clock and checks a time.

**ALARM** : With the ALARM function you can turn CD, USB play and Tuner reception on at a desired time.

**SET** : Confirms the setting.


**DJ EFFECT** : Selects DJ EFFECT mode. (Refer to page 22)

**JUKE BOX** :

- Selects JUKE BOX mode.
- Makes your favorites list.

**DJ LEVEL +/-** : Adjusts the level of DJ EFFECT sound.

# Top panel

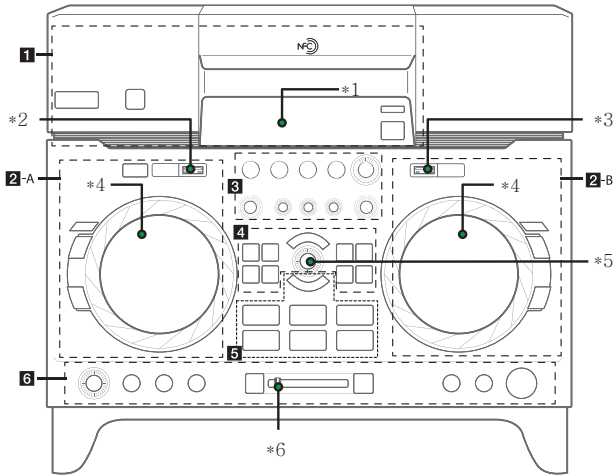

**1** (Power)

**DJ SHARING** : Shares a song stored in a USB device using the Music Flow Bluetooth App.

**NFC** : You can easily connect to **Bluetooth** devices through NFC Tag. (Refer to page 27)

\*1 - Display window

**FUNCTION** : Selects the function and input source.

**Bluetooth** : Turns to BLUETOOTH function.

**2** **USB REC** : Records to USB 1 (USB A port).

\*2 - USB **A** Port (USB 1) / \*3 - USB **B** Port (USB 2)

: You can play or record sound files by connecting the USB device.

**DELETE** : Deletes a song on the JUKE BOX list. / Deletes MP3/WMA files. (USB only).

**FOLDER** : Searches folders or files.


**ENTER** : Selects a folder when searching a file.

\*4 - Turn clockwise or counterclockwise to make Scratch sound or search a file or folder.

**3 DJ EFFECT :** Press a desired DJ effect button (**FLANGER, PHASER, CHORUS, DELAY**) and rotate **EFFECT LEVEL** to adjust the DJ EFFECT level.

**A / B TEMPO :** Adjusts TEMPO in USB function.

**MASTER EQ :** Adjusts **BASS, MIDDLE, TREBLE** sound level when setting **USER EQ**.

**4**  : Stops playback or cancels DELETE function.

**>||** : Starts or pauses playback.

**|<< / >>|** : Skips Fast backward or Forward. / Searches for a section within a track/file.

**USER EQ :** Controls sound register.

\*5 - **MASTER VOLUME :** Adjusts speaker volume.

**5 DJ Pro. :** Selects CLUB or FOOTBALL Sound effect to mix. (Refer to page 23)

**DJ Pro. PAD :** Press a desired sound pad.

**6 H/P VOL./SYNC SET :** Adjust Headphone volume. / Sets Delay value in X-BOOM PLUS mode.

**H/P MODE (X-BOOM PLUS) :** Press to select a Headphone monitor mode. / Press and hold to select X-BOOM PLUS mode.

**LIGHTING MODE :** Turns on/off the lighting effects.

**JUKE BOX / DEMO :** Makes your favorites list. / Switches on and off JUKE BOX. / Shows Demo mode.

**AUTO SYNC :** Synchronizes audio files

\*6 - **Mix fader :** Adjusts the sound volume of mixing files.


**MIX :** Mixes audio sound.

**LATIN EQ :** Chooses locally special equalizer.

**BASS BLAST :** Selects BASS BLAST or STANDARD effect directly.


**▲ EJECT :** Opens and closes the disc tray.

## Front panel

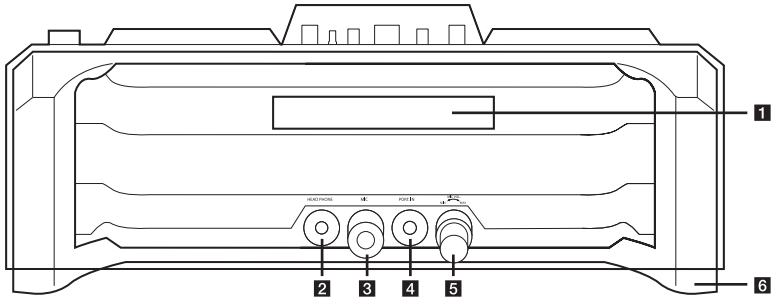

- 1** Disc tray
- 2** HEAD PHONE
- 3** MIC
- 4** PORT. IN
- 5** MIC VOL.
- 6** Handle

## Rear panel

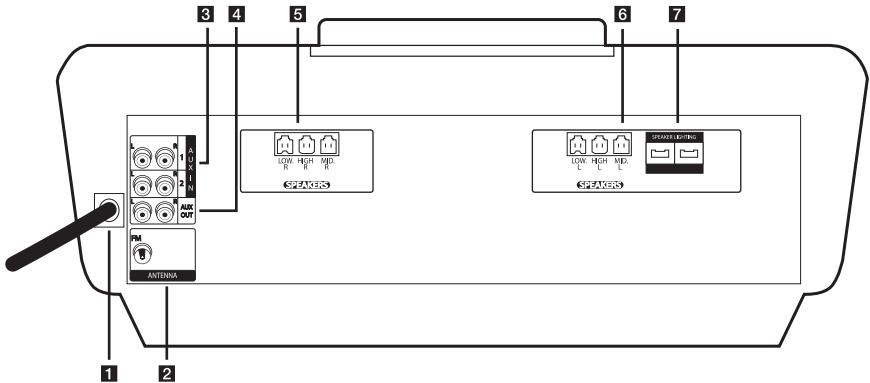

- 1** Power cord
- 2** ANTENNA (FM)
- 3** AUX IN 1/2 (L/R)
- 4** AUX OUT (L/R)
- 5** R SPEAKERS connector : Connects Right speaker's cables.
- 6** L SPEAKERS connector : Connects Left speaker's cables.
- 7** SPEAKER LIGHTING

### Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.


## How to Affix the Ferrite Core

Ferrite core may not be provided depending on each nation's regulations.

### Affix the Ferrite Core for speaker cables


You must affix a ferrite core in order to reduce or eliminate electrical interference.

1. Pull the stopper [a] of the ferrite core to open.
2. Wind **R SPEAKERS** cables, **L SPEAKERS** cables and **SPEAKER LIGHTING** cables around the ferrite core once.
3. Close the ferrite core until it clicks.

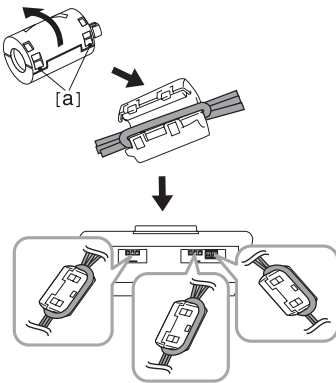


## Connecting to speakers

Connect the speaker cable plugs to the **SPEAKERS** connector. Make sure to connect the speaker's plug to the corresponding colored speaker connector when connecting the plug.

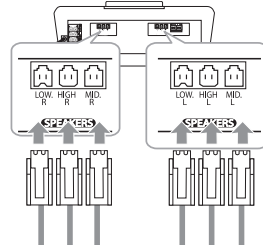

### Attaching the speaker light cables to the unit

To connect the speaker light cable to the unit, insert the cable to **SPEAKER LIGHTING** connectors on the unit.

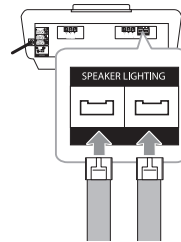


#### Caution

- Make sure that the jacks and the speakers are matched correctly.
- Make sure to connect the cables to connectors tightly on the unit.

### ! Caution

- Do not try to lift the speaker alone. It needs two persons to lift the speaker. Otherwise it may result in the speaker malfunction and cause personal injury and/or property damage.
- When you connect the speakers to the unit, make sure to connect the speaker's cable and plug to the corresponding speaker connector.
- The speakers must be placed a minimum of 20 cm from the unit for preventing the vibration caused by the speakers.

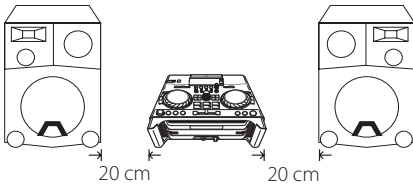


- Check the volume level before playing music to prevent infirm, child, and pregnant women from being shocked by the sudden and loud sound from the unit.
- Do not use the unit in a limited space. It may damage a person's hearing. It is recommended to use it in a wide space.
- Be careful to make sure children not to put their hands or any objects into the opening speaker duct hole.
- The speakers contain magnet parts, so color irregularity may occur on the TV screen or PC monitor screen. Please use the speakers far away from either TV screen or PC monitor.
- Avoid looking at the speaker lights for a long time. It may cause damage to eyesight.

## Optional Equipment Connection

### AUX IN Connection

Connect an output of auxiliary device (Camcorder, TV, Player, etc) to the **AUX IN 1/2** (L/R) connector.

If your device has only one output for audio (mono), connect it to the left audio jack on the unit.

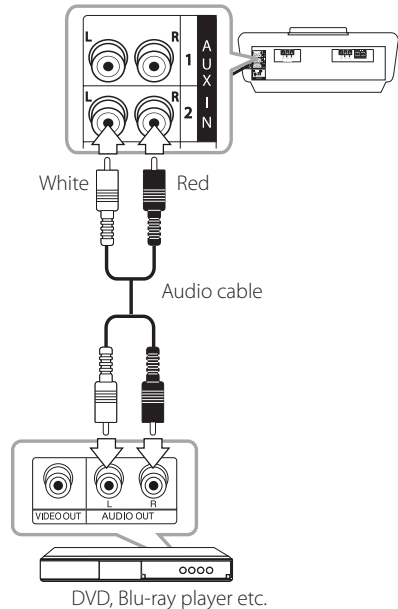




## AUX OUT Connection

Connect an input of auxiliary device to the **AUX OUT** (L/R) connector.

If your device has only one input for audio(mono), connect it to the left audio jack on the unit.

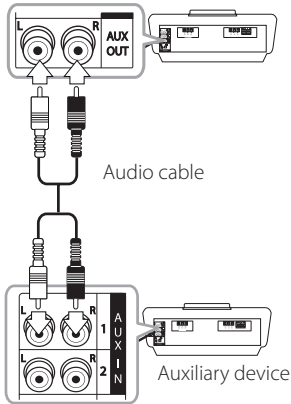

## X-BOOM PLUS

You can connect two units to play music together.


1. Connect **AUX OUT** connector on a unit to the **AUX IN** connector on the other unit using Audio cable.
2. Press and hold **H/P MODE** (X-BOOM PLUS) on the unit connected through AUX OUT. X-BOOM PLUS is displayed.
3. Rotate **H/P VOL./SYNC SET** clockwise or counterclockwise to adjust Delay setting.
4. Press **H/P MODE** (X-BOOM PLUS) to save the Delay setting.

### ! Note

- This function is available in only CD, USB 1, USB 2, BLUETOOTH or PORTABLE Function.
- The initial Delay is 0 ms and the Delay becomes to 30 ms when you press and hold **H/P MODE** (X-BOOM PLUS). The connected device's Delay may differ. If Audio Sync is not matched, adjust Delay of X-BOOM PLUS to synchronize sound.
- It is available to adjust the Delay from 0 ms to 100 ms. Synchronizing tempo is not available depending on devices. MP3 player etc.
- Delay value is saved when the unit turns off.

## PORT. IN Connection

Connect an output (earphone or line out) of portable device (MP3 or PMP etc) to the **PORT. IN** connector.

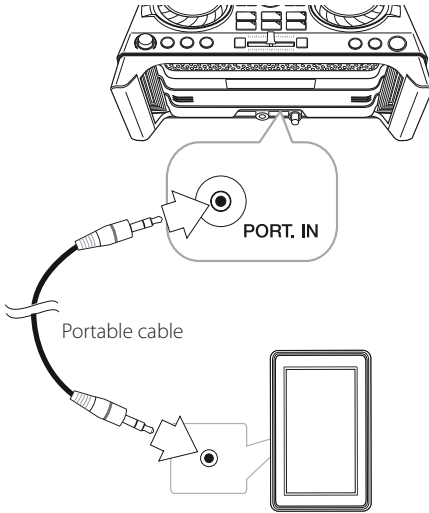

## Listening to music from your portable player or external device

The unit can be used to play the music from many types of portable player or external device.

1. Connect the portable player to the PORT. IN connector on the unit.


Or

Connect the external device to the AUX IN connector on the unit.

2. Turn the power on by pressing  $\text{P}/\text{I}$ .
3. Press **FUNCTION** to select the AUX 1, AUX 2 or PORTABLE Function.
4. Turn on the portable player or external device and start it playing.

## USB Connection

Connect a USB device (or MP3 player, etc.) to the USB ports on the unit.

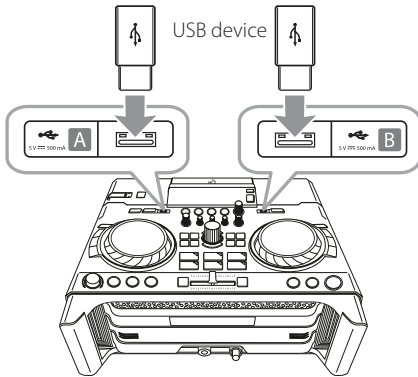

### ! Note


Removing the USB device from the unit :

1. Choose a different function/mode or press **ENTER** on the remote control or **ENTER** on the unit twice in a row.
2. Remove the USB device from the unit.

## Antenna Connection

Connect the supplied FM antenna for listening to the radio.

Connect the FM wire antenna to the FM antenna connector.

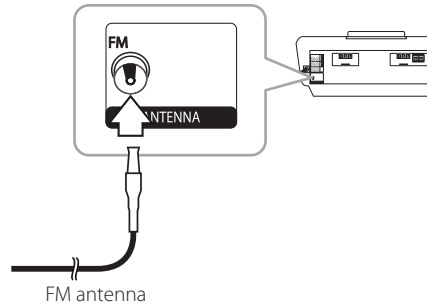

### ! Note

Be sure to fully extend the FM wire antenna.

## Basic Operations

### CD/USB Operations

1. Insert the disc by pressing **▲** on the remote control or **▲EJECT** on the unit  
Or connect the USB device to the USB port.
2. Select CD or USB function by pressing **FUNCTION**.

To	Do this
Stop	Press <b>■ ENTER</b> on the remote control or <b>□</b> on the unit.
Playback	Press <b>▶/  </b> on the remote control or <b>&gt;  </b> on the unit.
Pause	Press <b>▶/  </b> on the remote control or <b>&gt;  </b> on the unit during playback.
Searching for a section within a track/file	Press and hold <b>◀◀/▶▶</b> on the remote control or <b> ◀◀/▶▶ </b> on the unit during playback and release it at the point you want to listen to.
Selecting a track/file directly	Press <b>0</b> to <b>9</b> numerical buttons on the remote control to go to the desired file or track directly.
Skipping to the next/previous track/file	<p>- In stop status, Press <b>◀◀/▶▶</b> on the remote control or <b> ◀◀/▶▶ </b> on the unit to go to the next/previous track/file.</p> <p>- During Playback, By using <b>◀◀/▶▶</b> buttons : Press <b>▶▶</b> on the remote control or <b>&gt;&gt; </b> on the unit to go to the next track/file. Playing less than 2 seconds, press <b>◀◀</b> on the remote control or <b> ◀◀</b> on the unit to go to the previous track/file. Playing after 3 seconds, press <b>◀◀</b> on the remote control or <b> ◀◀</b> on the unit to go to the beginning of the track/file.</p>
Playing repeatedly or randomly	Press <b>REPEAT(MENU)</b> on the remote control repeatedly. Refer to the note for details about the display change.

### ! Note

- The display changes in the following order.

USB	MP3/WMA CD	Audio CD
REPEAT TRK	REPEAT TRK	REPEAT TRK
REPEAT *DIR	REPEAT DIR	-
REPEAT ALL	REPEAT ALL	REPEAT ALL
RANDOM	RANDOM	RANDOM
OFF	OFF	OFF

\*DIR : Directory

- When you play JUKE BOX list, only REPEAT TRK and REPEAT ALL are available.
- Even after restarting the unit or switching one function to another, you can listen to music from the point where it's last been played.
- The next file name is displayed every 30 seconds. (Except RANDOM play, AUTO DJ RANDOM play, the last file of playlist, etc.)
- If you leave the disc tray open for 5 minutes, it will close automatically.

## Auto Play

- AUDIO/MP3/WMA CD is played automatically after Disc tray is open and then closed.
- Automatically switches to the CD function if Disc tray is open and then closed when there is no disc in Disc tray.
- When CD or USB is inserted
  - If you press **>||** on the side **A** of the unit, the function is changed to CD or USB 1 and playback starts.
  - If you press **>||** on the side **B** of the unit, the function is changed to USB 2 and playback starts (except MIXER ON mode).

### ! Note

- When CD or USB is inserted
  - Function is changed to CD or USB 1 if **|<</>>|** (Except Tuner Function), **□** on the side **A** of the unit is pressed.
  - Function is changed to USB 2 if **|<</>>|** (Except Tuner Function), **□** on the side **B** of the unit is pressed (Except MIXER ON mode).
  - In Tuner Function, function is not changed even you press **|<</>>|**.

## Selecting a folder and an MP3/WMA file

### On the unit


1. Press **FOLDER** and rotate **SCRATCH/SEARCH** until a desired folder appears.
2. Press **ENTER** and rotate **SCRATCH/SEARCH** until a desired file appears. Press **>||** to play it.

### On the remote control

1. Press **PRESET-FOLDER ^/V** on the remote control repeatedly until a desired folder appears.
2. Press **>||** to play it. The first file of folder will play.

### ! Note

- CD / USB Folders/Files are recognized as below.

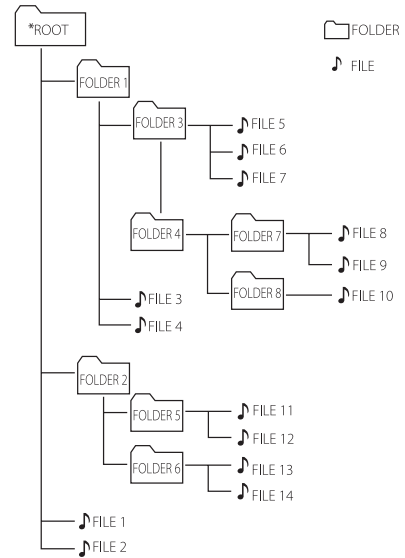

- If there is no file in a folder, the folder will not appear.
- Folders will be presented as the following order;  
ROOT → FOLDER 1 → FOLDER 3 → FOLDER 7 → FOLDER 8 → FOLDER 5 → FOLDER 6
- File will be played from **♪** file No.1 to **♪** file No.14 one by one.
- Files and folders will be presented in order recorded and may be presented differently according to the record circumstances.
- \*ROOT : The first screen you can see when a computer recognize the USB is "ROOT".

## Deleting an MP3/WMA file

You can delete file, folder or format by pressing **DELETE**. This function is supported only in stop status. (USB only)

1. -Select the file you want to delete and press **DELETE**.  
-Select the folder you want to delete by pressing **FOLDER** and rotating **SCRATCH/SEARCH** on the unit and press **DELETE**.  
Or select the folder you want to delete by pressing **PRESET-FOLDER**  $\wedge/\vee$  on the remote control and press **DELETE**.  
-Press and hold **DELETE** to format the USB device.

Or

Press **DELETE** repeatedly during selecting the MP3/WMA file.

The display changes in the following order.

- DEL FILE? : Deletes file
  - DEL FOLDER? : Deletes folder
  - FORMAT? : Formats USB
2. To delete file/folder or format, press **▶/||** on the remote control or press **>||** on the unit. If you want to exit the current mode, press **■ ENTER** on the remote control or press **□** on the unit.



### Caution

- Do not extract the USB device during operation. (play, delete, etc.)
- Regular back up is recommended to prevent data loss.
- The delete function may not be supported according to the USB status. (lock, etc.)

## Playback Effect

The unit supports various sound and playback effects : DJ EFFECT, SCRATCH, DJ PRO, AUTO DJ, TEMPO, MIX, AUTO SYNC.

### DJ EFFECT

It allows you to enjoy DJ EFFECT such as Flanger/Phaser/Chorus/Delay sound effect.

1. Press a desired DJ EFFECT (**FLANGER, PHASER, CHORUS, DELAY**) on the unit.  
To cancel it, press the DJ EFFECT (**FLANGER, PHASER, CHORUS, DELAY**) again.
2. Turn **EFFECT LEVEL** clockwise or counterclockwise to adjust the DJ EFFECT level between 0 to 15.



### Note

- The DJ EFFECT mode is displayed for 3 seconds when a **DJ EFFECT** Key is inputted.
- The gage starts at the beginning with an initial 7 level.
- The current gage level is displayed when adjusting gage.
- If the function changed or the unit is turned off and on, DJ EFFECT mode with DJ EFFECT is turned off.
- If DJ EFFECT is turned off, you should turn it on again to enjoy the effect.
- You can adjust Tempo for either USB while in USB function, when DJ EFFECT mode is on.

### SCRATCH Effect

You can output and mix the sound effects of the SCRATCH.

Rotating **SCRATCH/SEARCH** to mix the scratch sound.

- You can hear effect of scratch sound depending on the direction in which you rotate **SCRATCH/SEARCH**.

## DJ PRO

It allows you to mix CLUB or FOOTBALL sound effect. Each mode has up to 6 sounds effect.

1. Press **DJ PRO** repeatedly to select a desired DJ PRO sound effect.
2. Press a **DJ Pro. Pad** of desired sound.

Display Window	Description
DJ PRO CLUB	You can hear CLUB sound effects when you press <b>DJ Pro. Pad</b> .
DJ PRO FOOTBALL	You can hear FOOTBALL sound effects when you press <b>DJ Pro. Pad</b> .

### ! Note

- Initial DJ Pro mode is CLUB sound effect.
- DJ Pro mode is displayed for 3 seconds when you press **DJ PRO**.
- The DJ PRO sound is mixed when you press a **DJ Pro. Pad**.
- The currently playing DJ PRO sound is stopped and the selected DJ PRO sound outputs if you press a different **DJ Pro. Pad** while DJ PRO sound is playing.
- Display does not show Input **DJ Pro. Pad**.

## AUTO DJ

Auto DJ blends the end of one song into the beginning of another for seamless playback. It equalizes volume across tracks/files for uninterrupted playback.

Press **AUTO DJ** on the remote control repeatedly, the display changes as followings. RANDOM (AUTO DJ RANDOM) -> REPEAT ALL (AUTO DJ SEQUENTIAL) -> (AUTO DJ OFF)

Mode	Display Window	Description
OFF	- (AUTO DJ OFF)	-
RANDOM	RANDOM (AUTO DJ RANDOM)	The music is played randomly on this mode.
REPEAT	REPEAT ALL (AUTO DJ SEQUENTIAL)	The music is played repeatedly on this mode.

### ! Note

- AUTO DJ mode does not support searching for a section within a track/file or to play repeatedly or randomly.
- If you move to other functions or stop the music using  on the unit (or **ENTER** on the remote control) on AUTO DJ mode, AUTO DJ will be disable.
- AUTO DJ is not supported in the music file whose length is less than 60 seconds.
- During recording, AUTO DJ is not available.
- Only AUTO DJ SEQUENTIAL is selected when played JUKE BOX list.

## Adjusting TEMPO

You can adjust the Tempo for USB function 1 or 2 from 50 (MIN) to 150 (MAX).

Rotate **A TEMPO** to adjust the tempo for USB 1.  
Rotate **B TEMPO** to adjust the tempo for USB 2.

### ! Note

- The tempo is set as 100 if you turn the unit off, change the function or fully stop.
- The tempo is kept when you pause and resume play.

## MIX

You can mix audio sounds.

1. Press **MIX**. 'MIXER ON' is displayed.  
Select a desired Function for side **A** and play it.  
Mix is available in all functions except USB 2.
2. During playback, insert a USB device in USB port (**B**) and play it. Side B is fixed as USB2 function.
3. Move the Mix fader to adjust the sound volume of mixed sound. Move it to the left to lower the volume of side **B** and move it to the right to lower the volume of side **A**.

### ! Note

- In MIXER ON mode,
  - You can adjust the Tempo for USB function 1 or 2.
  - If you press **⏪/⏩**, **□** or **>||** on the unit, it works only for each side.
  - If you press **⏮/⏭**, **▶/||** or **■ ENTER** on the remote control, it works for both sides A and B.
  - For operating, it is recommended to use **⏪/⏩**, **□** or **>||** on the unit instead of remote control's.
  - Numerical buttons do not work.
  - You can use H/P MODE. (Refer to page 36)
- If you turn off the unit in the middle of mixing process, MIX mode turns to OFF.

## AUTO SYNC

When using Mixing, you can synchronize the tempo of audio files being played in USB 1 and USB 2 by pressing **AUTO SYNC**.

To stop it, press **AUTO SYNC** twice.

### ! Note

- The tempo of music being played in USB1 is synchronized to that in USB2.
- **A TEMPO** doesn't work when AUTO SYNC is on.
- If USB2 fully stops or function is changed, AUTO SYNC function is cancelled.
- In case of below, AUTO SYNC error may occur depending on the sound source.
  - The silent section in the beginning of the track.
  - Intro or bridge section in which few musical instruments appear.
  - In cases where playback speed or tempo of the song changes.
  - In case that the data for BPM is provided in real time, not the beginning of the song.
- If the song is being played too fast or slow, press and hold **AUTO SYNC**. 'AUTO SYNC/RE-ANALYZING' is displayed.
- AUTO SYNC is available only when USB 1 is selected for side A and USB 2 is selected for side B in MIXER ON mode and both are being played.



## Using BLUETOOTH® wireless technology

### About Bluetooth

**Bluetooth®** is wireless communication technology for short range connection.

The sound may be interrupted when the connection interfered by the other electronic wave or you connect the bluetooth in the other rooms.

Connecting individual devices under **Bluetooth®** wireless technology does not incur any charges. A mobile phone with **Bluetooth®** wireless technology can be operated via the Cascade if the connection was made via **Bluetooth®** wireless technology.  
Available Devices : Mobile phone, MP3, Laptop, PDA.

### Bluetooth Profiles

In order to use **Bluetooth®** wireless technology, devices must be able to interpret certain profiles. This unit is compatible with following profile.

A2DP (Advanced Audio Distribution Profile)

## Listening to music stored on the Bluetooth devices

### Pairing your unit and Bluetooth device

Before you start the pairing procedure, make sure the **Bluetooth** feature is activated on your **Bluetooth** device. Refer to your **Bluetooth** device's user guide. Once a pairing operation is performed, it does not need to be performed again.

1. Select the Bluetooth function by using **FUNCTION** until BLUETOOTH function is selected or pressing **Bluetooth** on the unit. "BLUETOOTH READY" appears on the display window.
2. Operate the **Bluetooth** device and perform the pairing operation. When searching for this unit with the **Bluetooth** device, a list of the devices found may appear in the **Bluetooth** device display depending on the type of **Bluetooth** device. Your unit appears as "LG CM9950(XX)".

#### ! Note

- XX means the last two digits of Bluetooth address. For example, if your unit has a Bluetooth address such as 9C:02:98:4A:F7:08, you will see "LG CM9950(08)" on your Bluetooth device.
- Depending on the Bluetooth device type, some devices may have a different pairing process. Enter the PIN code (0000) as needed.
- You can connect this unit with up to 3 Bluetooth devices simultaneously using the same method as described above, only in the Bluetooth function.
- The multi pairing connection is only supported on Android or iOS devices. (Multi pairing connection may not be supported depending on the connected device specifications.)
- Removable/detachable Bluetooth devices (Ex: Dongle etc.) will not support multi pairing.

3. When this unit is successfully connected with your **Bluetooth** device, "BLUETOOTH PAIRED" appears on the display window and change to **Bluetooth** device name soon.

**Note**

- "BLUETOOTH PAIRED" will momentarily appear on the display when you connect other devices for multi pairing.
- If the device name is unavailable, " \_ " will be displayed.

4. Listen to music.

To play a music stored on your **Bluetooth** device, refer to your **Bluetooth** device's user guide.

**Note**

- When using **Bluetooth®** technology, you have to make a connection between the unit and the bluetooth device as close as possible and keep the distance. However, it may not work well in certain situations as described below :
  - There is a obstacle between the unit and the bluetooth device.
  - There is a device using same frequency with **Bluetooth®** technology such as a medical equipment, a microwave or a wireless LAN device.
- You should connect your bluetooth device to this unit again when you restart it.
- Even if this unit connected up to 3 Bluetooth devices in the Bluetooth mode, you can play and control music by using only one of the connected devices.

**Note**

- When this unit connected with multiple Bluetooth devices, only one device which you are playing keeps Bluetooth connection when you change the function to the others.
- The sound may be interrupted when the connection has interference from other electronic devices.
- You may not control the Bluetooth device with this unit.
- Depending on the type of the device, you may not be able to use the Bluetooth function.
- You can enjoy wireless system using phone, MP3, Notebook, etc.
- The more distance between the unit and the bluetooth device, the lower the sound quality becomes.
- Bluetooth connection will be disconnected when the unit is turned off or the Bluetooth device gets far from the unit.
- When Bluetooth connection is disconnected, connect the bluetooth device to the unit again.
- When a Bluetooth device is not connected, "BLUETOOTH READY" appears on the display window.
- When you use the BLUETOOTH function, adjust the volume to a proper level on the Bluetooth device.
- If it is not in the BLUETOOTH function, only one device can be connected.
- If a Bluetooth device is connected when using LG TV, LG TV is disconnected and the Bluetooth device is connected.
- When you connect Bluetooth device (iOS device etc.) to this unit or operate the device, the volume level can be synchronized with each other.

## Pairing your unit and Bluetooth device through NFC Tag

### About NFC Tag

Connect to the **Bluetooth** by using the **Bluetooth** devices that support NFC(Near Field Communication) .

1. Activate the NFC feature of your NFC-enabled phone.
2. Turn on the unit.
3. Tag the back of your NFC-enabled phone over the unit.



4. "BLUETOOTH PAIRED" is displayed on the unit if **Bluetooth** pairing is successful.
5. You can listen to music played on this unit using your **Bluetooth** device.

### ! Note

- Please use a device which has the NFC feature.
- NFC Recognition area may be different depending on the type of Bluetooth device. Please check the position of NFC recognition area of the Bluetooth device before tagging.
- If the screen of the Bluetooth device is locked, the device may not recognize the NFC Tag.
- In some cases, the device may not recognize the NFC.
  - When the case of the Bluetooth devices is chrome-plated material.
  - According to the material and thickness of the case on the Bluetooth device.
  - According to the performance of the NFC of the Bluetooth devices.
- Android O/S : Ver 4.1.2 (or later)
- You must activate the NFC feature of your NFC-enabled phone.

## Using the Music Flow Bluetooth App

### ! Note

Only Android OS is available to use “Music Flow Bluetooth” app with this unit.

### About “Music Flow Bluetooth” App

“Music Flow Bluetooth” app brings a suite of new features to this unit.

To enjoy more features, you are recommended to download and install free “Music Flow Bluetooth” app.

### Install “Music Flow Bluetooth” App onto Your Bluetooth Device

There are two ways to install “Music Flow Bluetooth” App onto Your **Bluetooth** Device.

#### Install “Music Flow Bluetooth” App through QR code

1. Install “Music Flow Bluetooth” app through QR code. Use the scanning software to scan the QR code.



2. Tap an icon for installation.
3. Tap an icon for downloading.

### ! Note

- Make sure that your Bluetooth device is connected to the Internet.
- Make sure that your Bluetooth device has a scanning software application. If you don't have one, download one from “Google Android Market (Google Play Store)”.
- Depending on the area, QR code may not work.

#### Install “Music Flow Bluetooth” App through “Google Android Market (Google Play Store)”

1. Tap the “Google Android Market (Google Play Store)” icon.
2. In the search bar, type in the “Music Flow Bluetooth” and search it.
3. In the search result list, find and tap “Music Flow Bluetooth” to start downloading Bluetooth app.
4. Tap an icon for installation.
5. Tap an icon for downloading.

### ! Note

- Make sure that your Bluetooth device is connected to the Internet.
- Make sure that your Bluetooth device is equipped with “Google Android Market (Google Play Store)”.

## Activate Bluetooth with “Music Flow Bluetooth” App

“Music Flow Bluetooth” app helps to connect your **Bluetooth** device to this unit.

1. Tap “Music Flow Bluetooth” app icon on the home screen to open “Music Flow Bluetooth” app, and go to the main menu.
2. Tap [Menu] and select the unit you want.
3. If you want to get more information to operate, tap [Setting] and turn on the User guide.

### ! Note

- “Music Flow Bluetooth ” app will be available in the software version as follow;
  - Android O/S : Ver 4.0.3 (or later)
- If you use “Music Flow Bluetooth ” app for operation, there would be some differences between “Music Flow Bluetooth ” app and the supplied remote control. Use the supplied remote control as necessary.
- Depending on the Bluetooth device, “Music Flow Bluetooth ” app may not work.
- After connection of “Music Flow Bluetooth ” app, music may be output from your device. In this case, try connecting procedure again.
- If you operate the other applications or change the settings on your Bluetooth device while using “Music Flow Bluetooth ” app, “Music Flow Bluetooth ” app may operate abnormally.
- When “Music Flow Bluetooth ” app operates abnormally, check your Bluetooth device and the connection of “Music Flow Bluetooth ” app and then try to connect again.
- Depending on the smart phone’s operating system, you have some differences for “Music Flow Bluetooth ” operation.
- Check Bluetooth setting on your Bluetooth device if “Music Flow Bluetooth ” app connection does not work well.

## Radio Operations

Be sure that FM antenna is connected. (Refer to page 19)

### Listening to the radio

1. Press **FUNCTION** until FM appears in the display window.  
The last received station is tuned in.
2. Auto tuning :  
Press and hold **TUNING-/+** on the remote control or **|<</>>|** on the unit for about two seconds until the frequency indication starts to change, then release. Scanning stops when the unit tunes in a station.  
  
Or  
Manual tuning :  
Press **TUNING-/+** on the remote control or **|<</>>|** on the unit repeatedly.
3. Adjust the volume by rotating volume knob on the unit or by pressing **VOL +/-** on the remote control repeatedly.

### Improving poor FM reception

Press **▶/||** on the remote control. This will change the tuner from stereo to mono and usually improve the reception.

## Presetting the Radio Stations

You can preset 50 stations for FM.

Before tuning, make sure to turn down the volume.

1. Press **FUNCTION** until FM appears in the display window.
2. Select the desired frequency by pressing **TUNING-/+** on the remote control or **|<</>>|** on the unit.
3. Press **TUNER MEMORY** on the remote control. A preset number will blink in the display window.
4. Press **PRESET-FOLDER ^/V** on the remote control to select the preset number you want.
5. Press **TUNER MEMORY** on the remote control. The station is stored.
6. Repeat steps 2 to 5 to store other stations.
7. To listen a preset station, press **PRESET-FOLDER ^/V** or **0** to **9** numerical buttons on the remote control.

## Deleting all the saved stations

1. Press and hold **TUNER MEMORY** on the remote control for two seconds.  
“ERASE ALL?” will flash up on the unit display.
2. Press **TUNER MEMORY** on the remote control to erase all the saved radio stations.

## Sound adjustment

### Setting the sound mode

This system has a number of pre-set surround sound fields. You can select a sound mode you want by using **SOUND EFFECT** on the remote control.

The displayed items for the Equalizer may be different depending on sound sources and effects.

On Display	Description
NATURAL	You can enjoy comfortable and natural sound.
Local Specialization equalizer (Optional)	Regionally optimized sound effect. (FORRO/FUNK/SERTANEJO/DANGDUT/ARABIC/PERSIAN/INDIA/REGUETON/MERENGUE/SALSA/SAMBA/CUMBIA/AFRO/AXE/TECNO BREGA)
AUTO EQ	Realizes the sound equalizer that is the most similar to the genre of which is included in the MP3 ID3 tag of song files.
POP CLASSIC JAZZ ROCK	This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual rock, pop, jazz or classic concert.
BASS BLAST	Reinforces the treble, bass and surround sound effect.
FOOTBALL	You can enjoy the sound effect FOOTBALL STADIUM.
FLAT	Provides balanced sound.
BOOST	Boosts the mid-range for sound reinforcement.
TREBLE/BASS	Reinforces the treble and bass.
STANDARD	You can enjoy optimized sound.

### ! Note

- On some speakers, sound may not be heard or heard in low sound depending on the sound mode.
- Maybe you need to reset the sound mode, after switching the input, sometimes even after the sound track/file changed.
- By pressing **BASS BLAST** on the unit you can directly select STANDARD or BASS BLAST effect.
- By pressing **LATIN EQ** on the unit, you can directly select various latin equalizers.

### Setting the USER EQ

You can adjust the sound level of Treble, Middle and Bass as your preference.

1. Press **USER EQ** on the unit. "USER EQ" is displayed.
2. Rotate MASTER EQ (**BASS, MIDDLE, TREBLE**) to adjust the sound level.
3. Press **USER EQ** to save the setting.

## Advanced Operations

### Recording to USB

You can record a various sound source to USB 1. (CD, AUX, PORTABLE, Tuner, USB)

1. Connect a USB device to USB port (A) on the unit.
2. Press **FUNCTION** to select a Function you want to record.  
One track/file recording - You can record to USB after playing a track/file you want.  
All tracks/files recording - You can record to USB in full stop status.  
JUKE BOX list recording - After showing the JUKE BOX list, you can record it to USB. (Refer to page 34)
3. Start the recording by pressing **USB REC** on the remote control or **R USB REC** on the unit. To stop recording, press and hold **R USB REC** on the unit or **USB REC** on the remote control.

### Recording in MIXER ON mode

Recording is available in MIXER ON mode. If you record in MIXER ON mode, the unit records the mixed sound from that point when you press **USB REC**.

1. Start mixing. Refer to page 24.
2. Start the recording by pressing **USB REC** on the remote control or **R USB REC** on the unit. To stop recording, press and hold **R USB REC** on the unit or **USB REC** on the remote control to stop recording. Otherwise, the recording continues.

### Pausing recording

During recording, press **R USB REC** on the unit or **USB REC** on the remote control to pause recording. Press it again to restart recording. (Tuner/AUX/PORTABLE and MIXER Mode only)

### To select recording bit rate and speed

1. Press and hold **R USB REC** on the unit or **USB REC** on the remote control for 3 seconds.
2. Press **◀◀/▶▶** on the remote control or **◀◀/▶▶** on the side A of the unit to select a bit rate.
3. Press **R USB REC** on the unit or **USB REC** on the remote control again to set.
4. Press **◀◀/▶▶** on the remote control or **◀◀/▶▶** on the side A of the unit to select a desired recording speed. (AUDIO CD only)  
**X1 SPEED**  
- You can listen to music while recording it.  
**X2 SPEED**  
- You can just record the music file.
5. Press **R USB REC** on the unit or **USB REC** on the remote control to finish the setting.

### USB Copying

You can copy audio files in USB 2 to USB 1.

1. Connect a USB device including desired audio files to USB port (B) and select USB 2 Function.
2. Connect another USB device to USB port (A).
3. Press **R USB REC** on the unit or **USB REC** on the remote control.  
To stop recording, press and hold **R USB REC** on the unit or **USB REC** on the remote control.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

**Be responsible  
Respect copyrights**



**Note**

- You can record various sound using MIC/DJ Pro/Scratch/DJ Effect/Original Source. (Except USB Copying)
- You can control recorded MIC sound according to MIC volume.
- For stable recording, the output sound level goes down on its own when you record music from CD to USB.
- You can only change volume level between MIN and 30 during recording. (Only CD function)
- Do not remove the USB device or turn off the unit during USB recording. If dose not, an incomplete file may be made and not deleted on PC.
- If USB recording does not work, the message like "NO USB","ERROR","USB FULL" or "NO REC" is displayed on the display window.
- Multi card reader device or External HDD can not be used for USB recording.
- A file is recorded by about 512Mbyte when you record for a long term.
- You may not store more than 2000 files.
- You can not record in AUTO DJ mode.
- In case of the unsupported MP3/WMA file, the file recording may be stopped.
- It'll be stored as follows.

AUDIO CD	MP3/WMA	MIX mode
<pre> CD_REC ├── TRK_0001 ├── TRK_0002 ├── ... └── ...                     </pre>	<pre> FILE_REC ├── ABC(File name) ├── DEF(File name) ├── ... └── ...                     </pre>	<pre> DJ_MIX_REC ├── MIX_0001 ├── MIX_0002 ├── ... └── ...                     </pre>
The other source*	Tuner	
<pre> OTHERS_REC ├── AUDIO_0001 ├── AUDIO_0002 ├── ... └── ...                     </pre>	<pre> TUNER_REC ├── AUDIO_0001_107-7FM ├── ... └── ...                     </pre>	

\* : AUX and the like.

Tuner : The current recording frequency is shown.

**Note**

**Normal mode**

- You can check the recording percentage rate for the USB record on the display window during the recording. (MP3/WMA, CD only)
- During recording MP3/WMA, there is no sound.
- On CD function, sound of MIC, DJ Pro, Scratch, DJ Effect is recorded only during AUDIO CD X1 speed REC. It is recorded AUDIO CD source too.
- When you stop recording during playback, the file that has been recorded at that time will be stored.(Except MP3/WMA file)

**MIXER ON mode**

- When Function is set to BLUETOOTH or LG TV, recording is available in MIXER ON mode.

## DJ SHARING

DJ SHARING allows you to share a song stored in a USB device using Music Flow Bluetooth App.

1. Connect a USB device to USB port (A).
2. Activate the **Bluetooth** feature of your **Bluetooth** device. Make sure that "Music Flow Bluetooth" App on your **Bluetooth** device is connected with the unit.
3. Press **DJ SHARING**.
4. Press **|<</>>|** on the side **A** of the unit to select a song to share.
5. Press **DJ SHARING** to share.

### ! Note

- To cancel the DJ SHARING, press and hold **DJ SHARING** for 3 seconds.
- During transmission by the App,
  - Some functions may not work.
  - Key operation of the unit or remote control does not work. (Except turning the power off, canceling transmission, adjusting the volume.)
- Press and hold **DJ SHARING** to share the most recently recorded mix file. If there is no mix file, the first audio file in USB 1 Function will be shared.
- If the unit turns off during sharing, the file transfer fails.
- The transfer speed and performance of Bluetooth function may differ due to the number or type of the connected Bluetooth device or usage environment.
- If you share the file when multiple devices are connected to the unit in Bluetooth mode, the file is transferred to the last operated App.
- You can transfer a file up to 512 Mbyte.
- Before starting DJ SHARING, you can play the file to check.
- The file made by DJ Sharing is saved in 'Bluetooth' folder.
- The file may not be transferred or the unit may not work normally in below case during DJ sharing.
  - The unit is turned off.
  - The USB device is removed.
  - Bluetooth is disconnected.

## JUKE BOX Playback

JUKE BOX function enables you to make a playlist of your favorite tracks/files from a disc or USB device (USB 1). A playlist of up to 100 tracks/files can be entered.

### Making JUKE BOX list

It is supported only on stop status.

1. Press and hold **JUKE BOX / DEMO** on the unit to enter the edit mode.
2. Select a track/file by pressing **|<</>>|** on the remote control or by turning **SCRATCH/SEARCH** on the side **A** of the unit.
3. Press **JUKE BOX / DEMO** to save the track/file.
4. Repeat steps 2 - 3 to store other tracks/files. (You can modify the list by pressing **PRESET-FOLDER ^/V** on the remote control to select the JUKE BOX program number.)
5. Press **JUKE BOX / DEMO** once again.

To play the JUKE BOX list, press **▶/||** after you make the list.

### ! Note

- When making or modifying the JUKE BOX list, REPEAT mode is off.

### Enjoying JUKE BOX

Press **JUKE BOX / DEMO** twice on stop status. "JUKE BOX ON" appears on the display window. To play JUKE BOX list, press **▶/||** on the remote control or **>||** on the unit.

To cancel it, press **JUKE BOX / DEMO** twice. "JUKE BOX OFF" appears on the display window.

## Editing JUKE BOX

It is supported only on stop status.

1. Press and hold **JUKE BOX / DEMO** on the unit to enter the edit mode.
2. Press **PRESET-FOLDER ^/V** on the remote control to select a track/file to edit.
3. Press **◀◀/▶▶** to save the track/file.
4. Press **JUKE BOX / DEMO**.
5. Repeat 2 to 3 to store the other tracks/files.
6. Press **JUKE BOX / DEMO** once again.

To play the JUKE BOX list, press **▶/||** after you edit the list.

## Deleting JUKE BOX list

Deleting function only works in the edit mode.


1. Press and hold **JUKE BOX** on the remote control to enter the edit mode.
2. Select a song by pressing **PRESET-FOLDER ^/V** on the remote control repeatedly.
3. Press **DELETE** while a song is selected.

### ! Note

- To check the status of JUKE BOX, press **JUKE BOX** once. You can also check it by the word "PROG." on the display window.
- If there is no JUKE BOX list, "JUKE BOX NONE" appears on the display window when you press **JUKE BOX**.
- JUKE BOX is switched off in the case below.
  - Changing to a different function.
  - Turning off and on the unit.
  - Operating the numerical buttons on the remote control.
  - Playing a file by using **FOLDER** and **SCRATCH/SEARCH**.
- JUKE BOX list is cleared in the case below.
  - Removing the disc or the USB device.
  - Deleting or recording music files in the USB device.

## Other Operations

### Turn off the sound temporarily

Press **MUTE**  on the remote control to mute your unit.

You can mute your unit, for example, to answer the telephone, the mute icon "X" is blinked in the display window.

To cancel it, press **MUTE**  again or change the volume level.

### CHILDSAFE Mode

This function helps to prevent you from being surprised when you turn on the unit in case that the volume of the unit is set at a high level.

To turn on CHILDSAFE mode, press and hold **ENTER** on the unit when the volume of the unit is "MIN".

In CHILDSAFE mode, the volume increase gradually.

To turn off CHILDSAFE mode, press and hold **ENTER** on the unit when the volume of the unit is "MIN" and this mode is turned on.

### ! Note

In case of CD, USB or BLUETOOTH function, CHILDSAFE mode does not work after about 2 minutes from power on the unit even if this mode is enabled.

## Displaying file information (ID3 TAG)

While playing an MP3 file containing file information, you can display the information by pressing **INFO**.

## DEMO

In the power off state, press **JUKE BOX / DEMO** on the unit once. The unit will power on and display the each of functions with demo sound in the display window. To cancel the DEMO function, press **JUKE BOX / DEMO** once more.

### ! Note

- While in DEMO, this unit will keep DEMO status even if you unplug the power cord connection.
- You can enjoy other functions during the DEMO, the DEMO will temporarily pause.
  - Without input key in 10 sec, the DEMO will play back automatically.

## Using Microphone

1. Connect your microphone to the MIC jack.
2. Play the music you want.
3. Sing along with the accompaniment. Adjust the microphone volume by rotating **MIC VOL.** clockwise or counterclockwise on the unit.

### ! Note

- When not using the microphone, set the **MIC VOL.** to minimum or turn off the MIC and remove the microphone from the MIC jack.
- If the microphone is set too near the speaker, a howling sound may be produced. In this case, move the microphone away from the speaker or decrease the sound level by using the **MIC VOL.**
- If sound through the microphone is extremely loud, it may be distorted. In this case, rotate **MIC VOL.** to minimum.

## Using H/P MODE


Headphone monitoring is available.

Press **H/P MODE** to listen to music using Headphone. Rotate **H/P VOL. / SYNC SET** to adjust the volume.

When mixing, press **H/P MODE** to select a monitoring mode. You can listen to the music being mixed or playing in Source A or Source B.

### ! Note

- It is not compatible with a 4 pole jack.

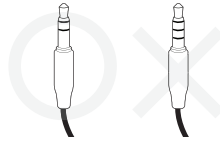

- If you select one source output in MIXER ON mode, the playback effects (Except TEMPO) are not applied to the output through the headphone.
- If you power off or switch to MIXER OFF, the selected H/P MODE is cancelled.

## LIGHTING (X-FLASH) MODE

The function is to create a Club like atmosphere by operating speaker lighting.

1. Press **LIGHTING MODE** on the unit.
 

The mode changes each time you press it :  
 OFF → VOLCANO → POLICE → THUNDER → PSYCHE → CAOS → OFF

### ! Note

- Lighting function is available in all functions.
- Lighting mode retains its previous mode when you first press **LIGHTING MODE**, press again to change modes.

## Setting the Clock

1. Turn the unit on.
2. Press and hold **CLOCK**.
3. Select time mode by pressing **◀◀/▶▶** on the remote control.
  - AM 12:00 (for an AM and PM display) or 0:00 (for a 24 hour display)
4. Press **SET** to confirm your selection.
5. Select the hours by pressing **◀◀/▶▶** on the remote control.
6. Press **SET**.
7. Select the minutes by pressing **◀◀/▶▶** on the remote control.
8. Press **SET**.

## Setting the Clock through "Music Flow Bluetooth" App

Install "Music Flow Bluetooth" app on your Android device. (Refer to page 28)

Your unit's clock will be automatically synchronized with your device by activating **Bluetooth** connection through "Music Flow Bluetooth" app.

## Using your player as an alarm clock

1. Turn the unit on.
2. Press and hold **ALARM**.
3. Press **◀◀/▶▶** on the remote control to change the hours and minutes and press **SET** to save.
4. Press **◀◀/▶▶** on the remote control to select function and press **SET** to save.
  - Press **◀◀/▶▶** on the remote control to select a memory No. when you select Tuner and then, press **SET**.  
If there is no memory No., this step is skipped.
5. Press **◀◀/▶▶** on the remote control to change the volume and press **SET** to save. The clock icon "⌚" shows that the alarm is set.

### ! Note

- If you set the clock time, you can check the time by pressing **CLOCK** even when the player is turned off.
- You can set alarm after you set the clock time.
- If you set the clock time and alarm, you can check the alarm icon "⌚" by pressing **CLOCK** even when the unit is turned off.
- If you set the clock time and alarm, you can check the alarm icon "⌚" and setting information by pressing **ALARM** even when the unit is turned off.
- You can select **ALARM ON/OFF** mode by pressing **ALARM**.

## Sleep Timer Setting

Press **SLEEP** repeatedly to select delay time between 10 and 180 minutes. After the delay time, the unit will be turned off.

To cancel the sleep function, press **SLEEP** repeatedly until "SLEEP 10" appears, and then press **SLEEP** once again while "SLEEP 10" is displayed.

### ! Note

- You can check the remaining time before the unit is turned off.
- Press **SLEEP**. The remaining time appears in the display window.

## Dimmer

Press **SLEEP** once. The display window will be darkened by half. To cancel it, press **SLEEP** repeatedly until dim off.

### ! Note

- All the LED turns off when Dimmer is being operated.

## Auto power down

This unit will turn itself off to save electricity in the case where the main unit is not connected to an external device and is not used for 20 minutes.

The unit will also turn itself off after six hours if the Main unit has been connected to another device using the analog inputs.

### How to disconnect the wireless network connection or the wireless device.

Turn off the unit by pressing the power button for more than 5 seconds.

## AUTO POWER On

This unit automatically turns on by an input source : LG TV or **Bluetooth**

If you try to connect your **Bluetooth** device, this unit turns on and connects your **Bluetooth** device. You can play your music.

### ! Note

- Depending on the connected device, this function may not operate.
- Depending on the connected device, the unit turns on but Bluetooth function may not be connected.
- If you disconnect Bluetooth connection by this unit, some Bluetooth devices try to connect to the unit continually. Therefore it is recommended to disconnect the connection before turning off the unit.
- If you try to connect to the "Music Flow Bluetooth" app, Bluetooth function of this unit is turned on.
- If you turn on the unit using LG TV or Bluetooth function, proper function of this unit is turned on.
- If you have already paired with this unit, automatically this unit can turn on by an input source when this unit is turned off.
- If you turn off the unit by pressing the power button for more than 5 seconds, Auto Power On function is disabled. To activate it, turn on the unit.

## Auto function change

This unit recognizes input signals such as **Bluetooth** and LG TV and then changes suitable function automatically.

### When you try to connect Bluetooth device

When you try to connect your **Bluetooth** device to this unit, Bluetooth function is selected. Play your music on the **Bluetooth** device.

### When LG TV is connected

When you turn on your LG TV connected by LG Sound Sync, this unit changes the function to LG TV. You can hear the sound from your TV.

### ! Note

- This function is not available during recording or deleting.
- This function only works with devices that were previously connected.

## LG Sound Sync



You can control some functions of this unit by your TV's remote control with LG Sound Sync. It is compatible with LG TV that supports LG Sound Sync. Make sure your TV has the LG Sound Sync logo.

Controllable function by LG TV's remote control :  
Volume up/down, mute

Refer to the TV's instruction manual for the details of LG Sound Sync.

### ! Note

- You can also use the remote control of this unit while using LG Sound Sync. If you use TV's remote control again, the unit synchronizes with the TV.
- If the connection fails, check the conditions of this unit and your TV : power, function.
- Make sure of the condition of this unit and the connection in the cases below when using LG Sound Sync.
  - Turn off the unit.
  - Changing to a different function.
  - Disconnecting the wireless connection caused by interference or a distance.
- The amount of time to turn off this unit is different depending on your TV.
- If you try to change the function on using the LG TV function, volume will be change according to the LG TV volume level.
- Details of TV setting menu vary depending on the manufacturers or models of your TV.
- If you connect LG Sound Sync when "Music Flow Bluetooth" app is connected, control through the app is available.
- If you turned off the unit directly by pressing (Power), LG Sound Sync will be disconnected. To use this function again, you should reconnect the TV and the unit.
- If an LG TV is connected when using Bluetooth, Bluetooth is disconnected and the LG TV is connected.

1. Turn on the unit by pressing (Power).
2. Press **FUNCTION** until LG TV function is selected.
3. Set up the sound output of TV to listen to the sound through this unit :  
TV setting menu [Sound] -> [TV Sound output] -> [LG Sound Sync (Wireless)]  
When the TV is not connected, "LG TV READY" appears on the display window.  
If the TV and this unit are connected normally, "LG TV PAIRED" will be appear on the display window.

# Troubleshooting

 
## General

Problem	Cause & Solution
The unit does not work properly.	<ul style="list-style-type: none"> <li>• Turn off the power of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and turn it on again.</li> <li>• Disconnect the power cord of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and then try connecting again.</li> <li>• Previous setting may not be saved when device power is shut off.</li> </ul>
No Power.	<ul style="list-style-type: none"> <li>• The power cord is not plugged in. Plug in the power cord.</li> <li>• Check whether electricity failed. Check the condition by operating other electronic devices.</li> </ul>
No sound.	<ul style="list-style-type: none"> <li>• Check whether you select right function. Press <b>FUNCTION</b> and check the selected function.</li> <li>• Check to see if the Speakers are connected correctly. Speaker cables connected correctly.</li> </ul>
The unit does not start playback.	<ul style="list-style-type: none"> <li>• An unplayable disc is inserted. Check the playable disc.</li> <li>• No disc is inserted. Insert a disc.</li> <li>• The disc is dirty. Clean the disc. (Refer to page 44)</li> <li>• The disc is inserted upside down. Place the disc with the label or printed side facing upwards.</li> </ul>
Radio stations cannot be tuned in properly.	<ul style="list-style-type: none"> <li>• The antenna is positioned or connected poorly. Connect the antenna securely.</li> <li>• The signal strength of the radio station is too weak. Tune to the station manually.</li> <li>• No stations have been preset or preset stations have been cleared (when tuning by scanning preset channels). Preset some radio stations, see page 30 for details.</li> </ul>



Problem	Cause & Solution
The remote control does not work properly.	<ul style="list-style-type: none"> <li>• The remote control is too far from the unit. Operate the remote control within about 23 ft (7 m).</li> <li>• There is an obstacle in the path of the remote control and the unit. Remove the obstacle.</li> <li>• The batteries in the remote control are exhausted. Replace the batteries with new ones.</li> </ul>
No speaker light	<ul style="list-style-type: none"> <li>• Check whether the speaker light cables are connected to the unit correctly. Connect the speaker light cables to the unit correctly.</li> <li>• Check the speaker light effects by pressing <b>LIGHTING MODE</b>.</li> </ul>
LG Sound Sync does not work.	<ul style="list-style-type: none"> <li>• Check whether your LG TV supports LG Sound Sync.</li> <li>• Check connection of LG Sound Sync.</li> <li>• Check sound setting of your TV and this unit.</li> </ul>

## General specifications

General	
Power requirements	Refer to the main label.
Power consumption	Refer to the main label.
	Networked standby : 0,4 W (If all network ports are activated.)
Dimensions (W x H x D)	495 mm x 213 mm x 462 mm
Net Weight (Approx.)	8,1 kg
Operating temperature	5 °C to 35 °C (41 °F to 95 °F)
Operating humidity	60 %
Bus Power Supply (USB)	5 V  500 mA

Inputs	
AUX IN	2,0 Vrms (1 kHz, 0 dB), 600 Ω, RCA jack (L, R)
PORT. IN	1,2 Vrms (3,5 Ø jack)
MIC	27 mV

Tuner	
FM Tuning Range	87,5 to 108,0 MHz or 87,50 to 108,00 MHz

CD	
Frequency Response	40 to 20 000 Hz
Signal-to-noise ratio	75 dB
Dynamic range	80 dB

Amplifier	
Total Output	4 400 W
Front	LOW : 1 000 W X 2 (8 Ω at 70 Hz)
	MID : 850 W X 2 (8 Ω at 1 kHz)
	HIGH : 350 W X 2 (6 Ω at 8 kHz)
THD	25 %

- Design and specifications are subject to change without notice.

## Speakers specifications

Front speaker	
Type	LOW : 1 Way 1 Speaker MID : 2 Way 2 Speaker HIGH : 1 Way 1 Speaker
Impedance	LOW : 8 $\Omega$ MID : 8 $\Omega$ HIGH : 6 $\Omega$
Rated Input Power	LOW : 1 000 W MID : 850 W HIGH : 350 W
Max. Input power	LOW : 2 000 W MID : 1 700 W HIGH : 700 W
Net Dimensions (W x H x D)	521 mm x 713 mm x 486 mm
Net Weight	30,2 kg

- Design and specifications are subject to change without notice.

## Trademarks and Licenses



**Bluetooth**® wireless technology is a system which allows radio contact between electronic devices.

Connecting individual devices under **Bluetooth**® wireless technology does not incur any charges. A mobile phone with **Bluetooth**® wireless technology can be operated via the Cascade if the connection was made via **Bluetooth**® wireless technology.

The **Bluetooth**® word mark and logos are owned by the **Bluetooth**® SIG, Inc. and any use of such marks by LG Electronics is under license.

Other trademarks and trade names are those of their respective owners.

## Maintenance

### Notes on Discs

#### Handling Discs

Never stick paper or tape on the disc.

#### Storing Discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

#### Cleaning Discs

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center to out.

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for old vinyl records.

## Handling the Unit

### When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

### Keeping the exterior surfaces clean

Do not use volatile liquids such as insecticide spray near the unit. Wiping with strong pressure may damage the surface. Do not leave rubber or plastic products in contact with the unit for a long period of time.

### Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

### Maintaining the Unit

The unit is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished. For details, please contact your nearest authorized service center.



LG Customer Information Center

1-800-243-0000 USA, Consumer  
1-888-865-3026 USA, Commercial

Register your product Online!

[www.lg.com](http://www.lg.com)