

User manual



**The multi-functional software platform for
professional label printing**

Version 4.1

Welcome to the platform!

With **Labels Platform 4** you have reached the highest level of label design.

Overview:

Like standing on the highest platform of an observation tower, LP4 enables you to look over the surrounding field of all other products of the **Platform series**, to solve any of your tasks in the printing-, labeling-, automation- or visualization area. You have **not bought an isolated solution**, but **one component of a future-safe modular system**.

Highlites of Labels Platform 4

- Compatible with Windows XP / Vista / Windows 7 - 10 (x86 and x64)
- Unicode MDI (Multiple Document Interface) application, network capable
- Supports multi languages (german / english)
- Fully compatible to LP3 layout files, import of LP2 layout files is possible
- Configurable toolbars and keyboard shortcuts for often used tasks
- Smooth zooming, Mouse wheel support
- Label- and graphic preview in the File Open dialogs
- User management with password security
- Direct printer connections: serial, parallel, TCP/IP network, USB
- Overview of all printer states and direct communication with printers using the integrated terminal window
- ODBC database interface with full Unicode support
- Docking windows with lists for label fields, variables, properties and printers
- Support of 1D/2D printer- and graphical barcodes
- Support of printer- and true-type-fonts (Unicode)
- Curved or free rotated text fields
- Continuous texts (word wrapping), including multiple columns, automatic font size adjustments and "dead zone" areas preventing text to run into pre-printed symbols
- Different shapes of "dead zone" areas: rectangle, circle, ellipse, straight line, curved line
- Tags inside continous texts to change font properties (bold, italic, underline) and font sizes/font names
- Free line drawing, all angles supported
- Graphic import (bmp, wmf, tif, pcx, gif, jpg and many more)
- Graphics embedded in the layout file or linked with external graphic files
- Integrated OLE objects for displaying/printing data of other applications like MSWinWord or MSEXcel
- Powerful variables manager, GS1/EAN128 content manager and Risk/GHS text manager
- Variables: constant, user input, time/date, formula, counter, printervars, fileimport (xml/ini/text), database- and table queries, list/GHS texts, marker/allergen texts
- Selectable object properties (printable/not printable, movable/not movable, groups/levels)
- Print conditions for each label object
- Remote controlling of print jobs by OLE (using for example Visual Basic or MSEXcel) or by TCP text sequences
- Integrated Spool Server: connect the label printers to one PC, and use them with all other PCs in your network as well; Windows Service
- LP4 Commander for creating own user interfaces, including OPC Server support
- Comfortable Printjob Manager for defining lists of future print jobs
- Direct support of the following printer languages:

J-Script (CAB printers)
ZPL (Zebra printers)
Fingerprint 6.1 oder higher (Honeywell / Intermec / UBI printers)
Datamax / Fargo Control Code Language
EasyPrint (Carl Valentin / EasyPrint printers)
Unicontrol (EasyPrint printers)
EPL (Eltron compatible printers)
Sato SBPL (Sato compatible printers)
SmartgraphCOM (Alltec Laser systems)
AZPrintEngine (Atlantic Zeiser)
bbScript (HAPA RedCube)

Other printer types can be used by installing vendor specific Windows printer drivers.

Contents

1	<u>Available versions.....</u>	8
1.1	Labels Platform 4 - PREMIUM.....	8
1.2	Labels Platform 4 - STAR.....	8
1.3	Labels Platform 4 - ECO.....	8
1.4	Labels Platform 4 – Print version.....	8
1.5	Labels Platform 4 – Demo version.....	8
1.6	Additional modules.....	8
2	<u>Installation.....</u>	9
2.1	Versions using a local hardlock dongle :.....	9
2.2	Versions using a Dongle Server :.....	9
2.3	Windows Vista – Windows 10 and/or restricted user privileges.....	10
3	<u>Using Labels Platform 4.....</u>	12
3.1	Introduction.....	12
3.2	Starting the application.....	13
3.3	Menu.....	14
3.3.1	Menu File.....	14
3.3.2	Menu Edit.....	32
3.3.3	Menu View.....	36
3.3.4	Menu Mode.....	43
3.3.5	Menu Tools.....	46
3.3.6	Menu Addons.....	53
3.3.7	Menu Window.....	59
3.3.8	Menu Help.....	59
4	<u>Label objects.....</u>	60
4.1	Generic.....	60
4.2	Lines.....	60
4.2.1	Description - Line.....	60
4.2.2	Properties - Line.....	60
4.3	Rectangles.....	61
4.3.1	Description - Rectangle.....	61
4.3.2	Properties - Rectangle.....	61
4.4	Crosses.....	62
4.4.1	Description - Cross.....	62
4.4.2	Properties - Cross.....	62
4.5	Circles.....	63
4.5.1	Description - Circle.....	63
4.5.2	Properties - Circle.....	63
4.6	Graphics.....	64
4.6.1	Description - Graphic.....	64
4.6.2	Properties - Graphic.....	66

4.7 OLE objects.....	67
4.7.1 Description – OLE object.....	67
4.7.2 Properties – OLE object.....	68
4.8 Deadzones.....	69
4.8.1 Description – Deadzone.....	69
4.8.2 Properties – Deadzone.....	69
4.9 Barcodes.....	71
4.9.1 Description – Barcode.....	71
4.9.2 Properties – Barcode.....	71
4.10 Texts.....	74
4.10.1 Description – Text.....	74
4.10.2 Properties – Text.....	75
4.11 Special texts.....	78
4.11.1 Description – Special text.....	78
4.11.2 Properties – Special text.....	78
 5 Label variables.....	 84
5.1 Generic.....	84
5.2 Constant Variable.....	86
5.2.1 Description – Constant variable.....	86
5.2.2 Properties – Constant variable.....	86
5.3 Input Variable.....	87
5.3.1 Description – Input variable.....	87
5.3.2 Properties – Input variable.....	87
5.4 Time/date Variable.....	88
5.4.1 Description – Time/date variable.....	88
5.4.2 Properties – Time/date variable.....	88
5.5 Formula Variable.....	89
5.5.1 Description – Formula variable.....	89
5.5.2 Properties – Formula variable.....	89
5.5.3 Formula commands – Formula variable.....	90
5.6 Counter Variable.....	97
5.6.1 Description – Counter variable.....	97
5.6.2 Properties – Counter variable.....	97
5.7 Printer Variable.....	98
5.7.1 Description – Printer variable.....	98
5.7.2 Properties – Printer variable.....	98
5.8 File Variable.....	100
5.8.1 Description – File variable.....	100
5.8.2 Properties – File variable.....	100
5.9 Table Variable.....	102
5.9.1 Description – Table variable.....	102
5.9.2 Properties – Table variable.....	102
5.10 Database Variable.....	103
5.10.1 Description – Database variable.....	103
5.10.2 Properties – Database variable.....	103
5.11 External Variable.....	105
5.11.1 Description – External variable.....	105
5.11.2 Properties – External variable.....	105
5.11.3 LP4 remote control.....	106
5.12 List/GHS Variable.....	108
5.12.1 Description – List/GHS variable.....	108
5.12.2 Properties – RS variable.....	108

5.13	Marker/Allergen variable.....	109
5.13.1	Description – Marker/Allergen variable.....	109
5.13.2	Properties – Marker/Allergen variable.....	109
6	<u>The LP4 Print Tool.....</u>	112
6.1	Generic.....	112
6.2	Usage.....	112
7	<u>The LP4 Printjob Manager.....</u>	113
7.1	Generic.....	113
7.2	Usage.....	113
8	<u>LP4 Remote.....</u>	115
8.1	Generic.....	115
8.2	Usage.....	115
9	<u>LP4 Format manager.....</u>	119
9.1	LP4 Formatmanager Intermec Standard.....	119
9.2	LP4 Formatmanager Zebra Standard.....	121
9.3	LP4 Formatmanager Intermec Multi-Boot.....	122
9.4	LP4 Formatmanager CAB Standard.....	123
10	<u>LP4 Productmanager Standard DB.....</u>	125
10.1	Generic.....	125
10.2	Configuration.....	125
10.3	Usage.....	130
11	<u>LP4 Spool Server.....</u>	131
11.1	Generic.....	131
11.2	Configuration.....	131
11.3	Usage.....	132
12	<u>Using VBScript Programs.....</u>	133
12.1	Overview.....	133
12.2	The additional LP4 VBScript commands.....	133
13	<u>Specific printer settings/informations.....</u>	135
13.1	Intermec/UBI printers.....	135
13.2	Zebra printers.....	138
13.3	CAB printers.....	138

14	License Agreement.....	141
-----------	-------------------------------	------------

1 Available versions

1.1 Labels Platform 4 - PREMIUM

- all in this document listed features including the options Format Manager, Product Manager and LP4 Remote, GHS list manager/variables. The option "LP4 Commander Editor" needs an additional license.

1.2 Labels Platform 4 - STAR

- all listed features without the special options Format Manager, Product Manager, LP4 Commander Editor, LP4 Remote, GHS/list text manager/variables or Marker/allergen variables

1.3 Labels Platform 4 - ECO

- all listed STAR features, but no circles, crosses, deadzones, special texts, OLE objects
- limited variables, only available:
Constants, User inputs (scanner), Counters, but without variable values
- no user management
- no database functions
- not usable as LP4 Spool Server

1.4 Labels Platform 4 – Print version

- The print-only application for labels created with the ECO / STAR and PREMIUM versions

1.5 Labels Platform 4 – Demo version

- Same features as the STAR version (inclusive GHS text support), but it is not possible to save label files, and all print jobs will get distorted

1.6 Additional modules

- LP4 Formatmanager: storing of labels, graphics and textdatabases directly into the printer, including customized printing behaviours
- LP4 Produktmanager : customized applications for production specific tasks
- LP4 Remote : starting of print jobs directly on CAB and Intermec printer displays – the PC acts as label server, starting the label download on the external printer demand
- LP4 Spool Server: share your label printers by network
- LP4 Commander: free configurable user interface for production tasks

Additional modules and connections to existing systems are possible.

2 Installation

2.1 Versions using a local hardlock dongle :

The installation of Labels Platform 4 is done by the setup application on the Labels Platform 4 installation CD. If you have a full (ECO, STAR, PREMIUM) version of Labels Platform 4, you have to put the delivered hardlock dongle on the parallel port / USB port (depending on the dongle type) of your PC, or get a Computer license from BBK, before you start the installed software. If you start the LP4 Editor, it will ask you to enter your LP4 serial number to unlock your license's functionality. You can also enter the serial number by starting the Serial number tool from the LP4 menu, for example if you want to use different dongles – and therefore serial numbers - on the same PC: for each dongle you have to enter the related serial number once.

2.2 Versions using a Dongle Server :


The Dongle Server can be used on PCs connected to a local TCP/IP network, IPV6 addresses are supported.

Just one PC in that network will actually have a connected hardlock dongle, all other PCs will ask this PC for a free LP4 license at startup time. The Dongle Server can hold up to 127 licenses, an unlimited Dongle Server is also available.

Installation: Each PC needs a working connection to the local network, and an individual IP address or DNS name.

The PC acting as Dongle Server needs the local parallel / USB port dongle (or Computer license), and an installed „LP4 Dongle Server“ software. The Dongle Server software can work as an application (= the network licenses are only available if the software has been started), or it can work as a Windows service (= the network licenses are available as soon as Windows has been started, even if no user has logged in).

After startup of the LP4 Dongle Server software, you can change between application mode and service mode by pressing the “Mode...” button:

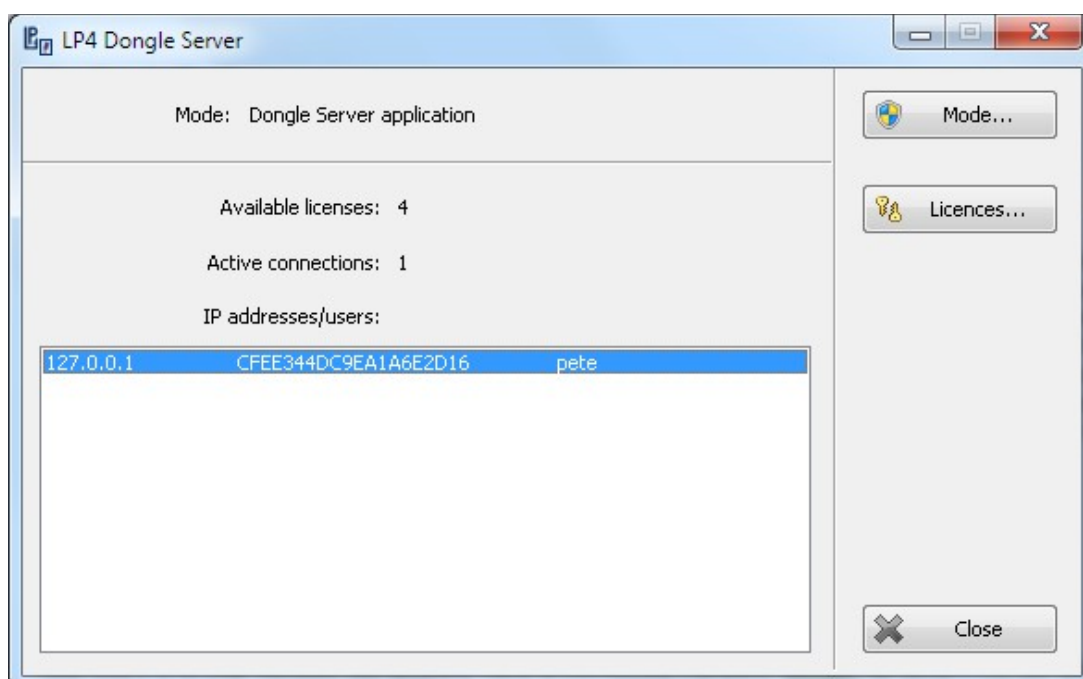


If you have just one license serial number (for example 5 PREMIUM licenses), you simply enter this number on each PC (server and client PCs alike).

If you have multiple different license numbers for your Dongle Server (for example 3 STAR licenses, 1 PREMIUM and 5 ECO licenses), you have to input all license numbers by pressing the “Licenses...” button. On each client PC you have to enter just the serial number you want to use with this client.

As long as the Server PC is running the Dongle Server application/service (and, of course, as long as it is connected to the network), a client can connect to that PC and ask for an unused license. If there are enough free licenses on the server, the LP4 software is allowed to start. If there are no free licenses, LP4 will start as demo version only. Each time when a client closes the LP4 application, the license will get free again, and another client can connect to the server.

Important: if you are using a network firewall, you have to enable TCP telegrams on port 40097. Otherwise the LP4 Dongle Server will not work correctly.

On the client PC you have to start the LP4 Dongle Client application before you can start any other LP4 application. You can setup the Dongle Client to automatically start other LP4 applications. In this case it is also possible to close the Dongle Client automatically, when the user is closing the auto-started applications.

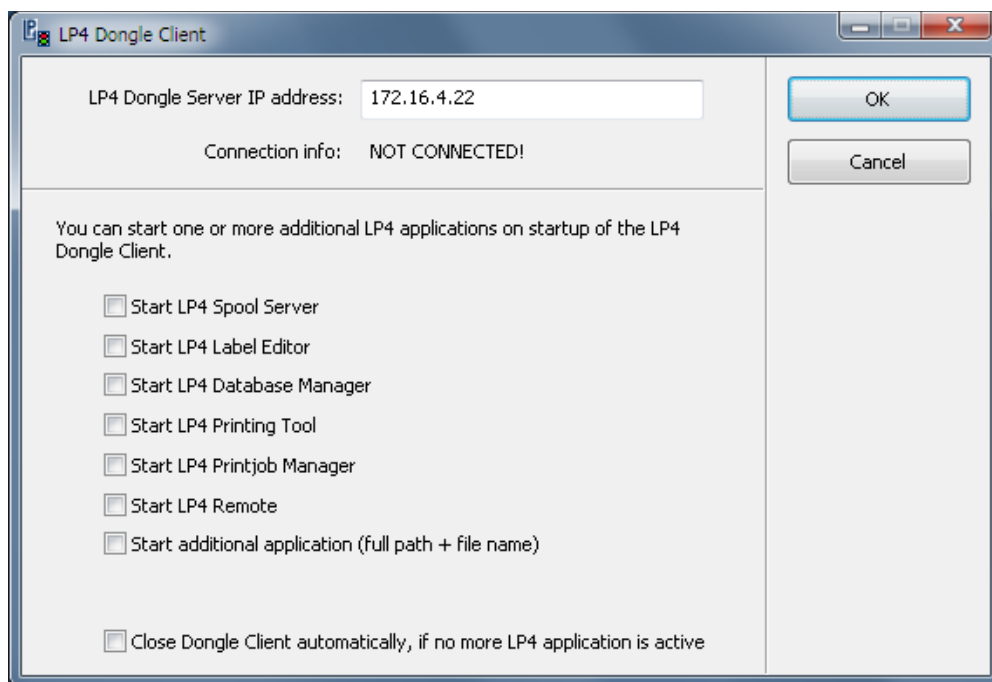

On first startup of the Dongle Client, you have to define the IP address of the Dongle Server PC. Press the “Change...” button, enter the IP address, and press “OK”. From now on the Dongle Client will start minimized in the Windows System tray. A green tray symbol will show the user that a license is granted, a red tray symbol means that no license is available.


2.3 Windows Vista – Windows 10 and/or restricted user privileges

For the LP4 installation you have to be logged on as a Windows administrator. After installation you can of course work as a more restricted Windows user.

A normal Windows user cannot save application files (like the layout files) in the “C:\Program Files” folder. If you install LP4 in this folder, it will save such user files in the “My Documents” folder instead. Also configuration files will be saved into the Windows “Programdata” instead of the LP4 installation folder.

You can also configure different folders for your layout, graphics and data file, for example some global networking folders.

The folder settings can be changed in the LP4 Editor, menu “Tools -> LP4 folders”.

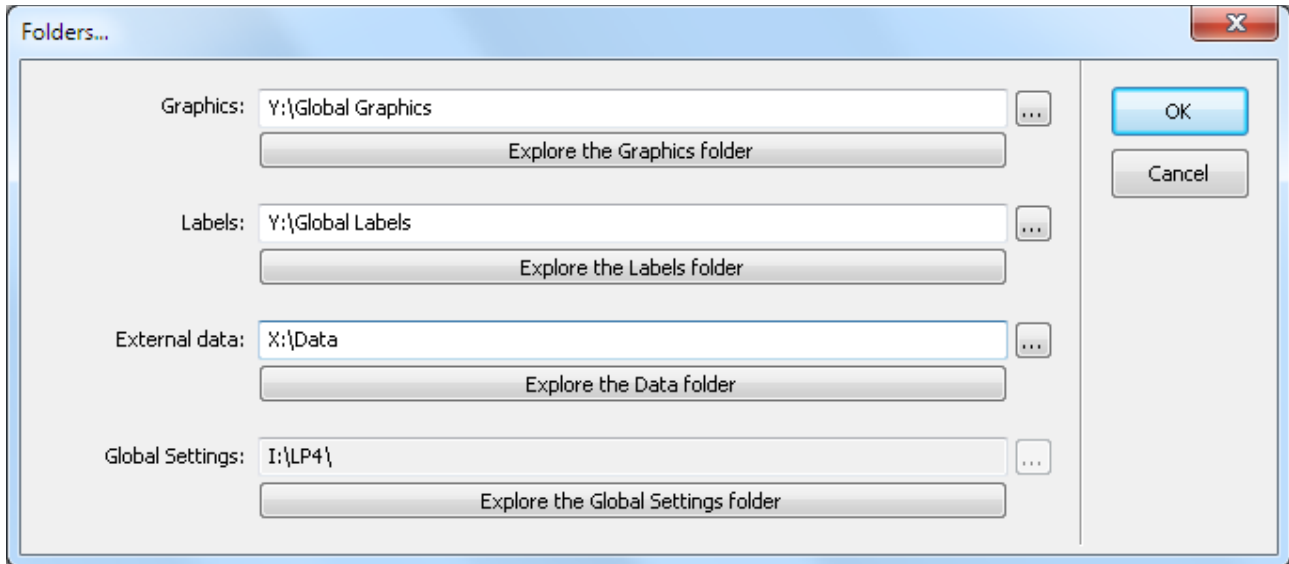

If you do not install LP4 in the “C:\Program Files” (for example into the default path “C:\LP4”), all layouts, graphics and data files will be stored into sub folders of your installation path.

3 Using Labels Platform 4

3.1 Introduction

LP4 is following the design guides for MSWindows applications, so many functions are easy to use even for users who have not worked with LP4 before.

For example LP4 supports Drag & Drop, right mouse clicks are opening context menus, standard MDI (Multiple Document Interface) is used for handling multiple label design windows, and an 'undo' function does help to correct user actions.

The software offers all kind of help functions: pressing F1 will show the online-help, each toolbar button will show a small textinfo (tool tips), and the statusbar will also show a button/menu description.

Additional windows like the infobar or the measuring borders will show detailed informations at one glance, other bars and symbols will help you to change the editor window (quick rotation in 90° steps and/or smooth zooming).

The basic handling for creating labels is easy to learn (select an object type, and left mouse click to create the object; in select mode you can move/resize objects; right mouse click will open the context menu for showing the object properties).


Advanced users are able to use the powerful LP4 variables to fulfill even the most complex tasks concerning the label objects.

3.2 Starting the application

You can start the LP4 application by double-clicking its desktop icon. At startup time the available license (Dongle or Computer-ID) is tested. If no license is found, the application will start in DEMO mode (no saving possible, and print jobs will be slightly distorted).

After the LP4 splash screen vanishes, you can see the editor window and a new empty label. All symbol bars and docking windows will be repositioned at the same place as your last LP4 session.

Now you can edit/change/save the new label, or open an exiting one:

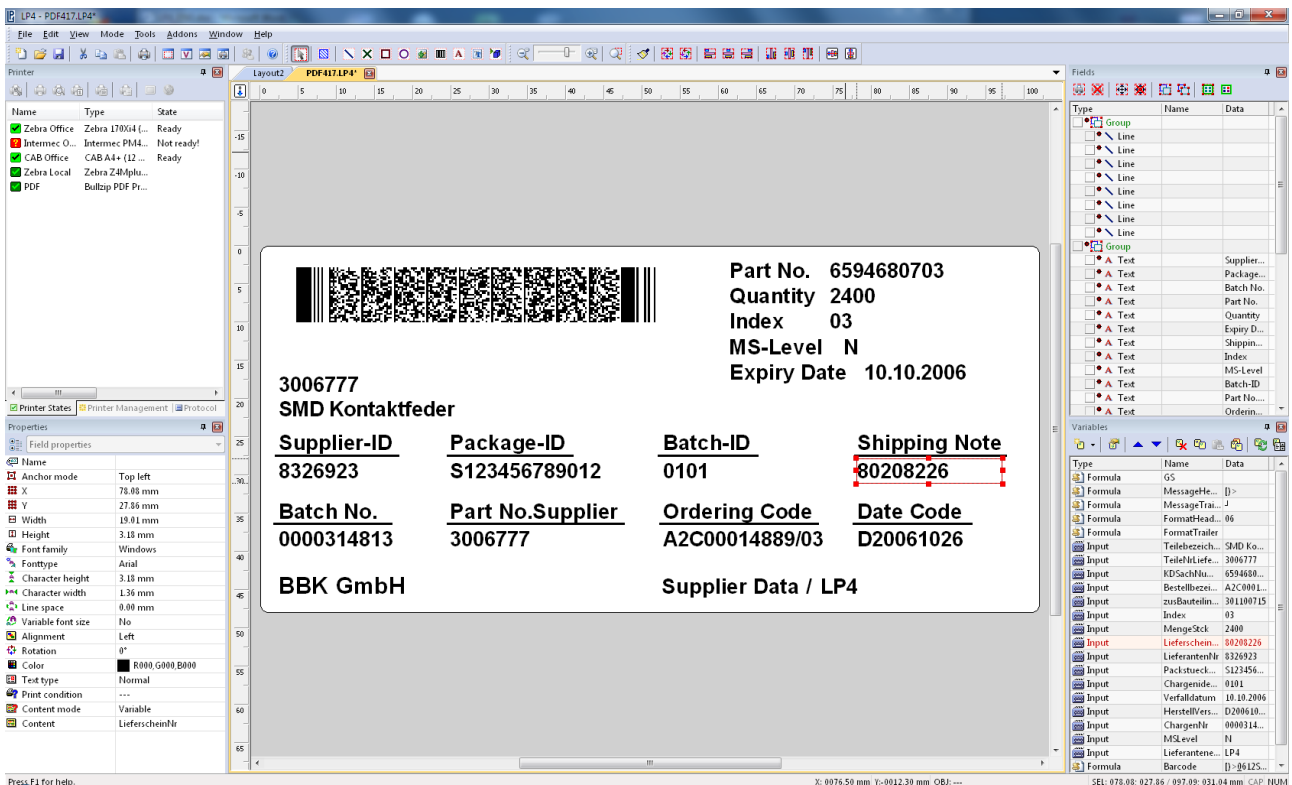

If you have already defined your printer connections, LP4 will automatically connect to those printers on startup, and show the current printer states in the “Printers” docking window .

You can use the available window items to control the software:


- Menus
- Toolbars
- Zoombar
- Measuring/rotating bars
- Layout edit area
- Statusbar
- Docking windows (objects, variables, printers and properties lists)

3.3 Menu

The menu can be controlled by mouse or keyboard (pressing the ALT key and one of the underlined chars will activate the proper menu item).

- Menu File
- Menu Edit
- Menu View
- Menu Mode
- Menu Tools
- Menu Addons
- Menu Windows
- Menu Help

3.3.1 Menu File

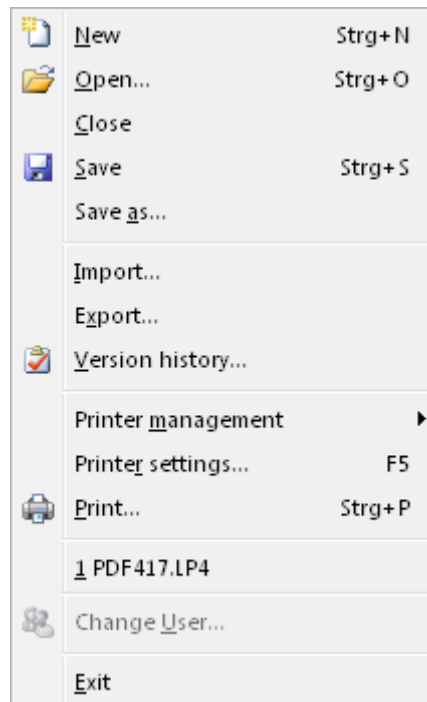

You can find the following functions in the File menu:

- New
Creates a new label
- Open
Opens an existing label
- Close
Closes the currently active label
- Save
Saves a label using its current filename
- Save as
Saves a label using a new filename
- Import
Imports one LP2 or multiple LP3/LP4 labels

- Export
Exports multiple LP4 label files
- Version history
Shows version infos of the current label (if activated)
- Printer Management
Define new printers, change existing printer connections
- Printer settings
Change the settings of the currently active printer of the current label
- Print
Prints the active label
- Change user
Changing the current user (if user management is active)
- Exit
Exits Labels Platform 4

3.3.1.1 Menu File - New

Use this command to create a new label edit window in Labels Platform 4.

A new window showing an empty label will get created. You can change the label size (and other properties) by left-clicking the label area to make the label properties active in the property list.

Short cut

Toolbar:



Keyboard:

STRG+N

3.3.1.2 Menu File - Open

Use this command to open an existing label file in a new edit window. You can open multiple windows at once. With the „Window“ menu you can switch between all available label edit windows.

Short cut

Toolbar:




Keyboard:

STRG+O

File Open window

This window appears when you activate File Open. You can select the label file with this window:

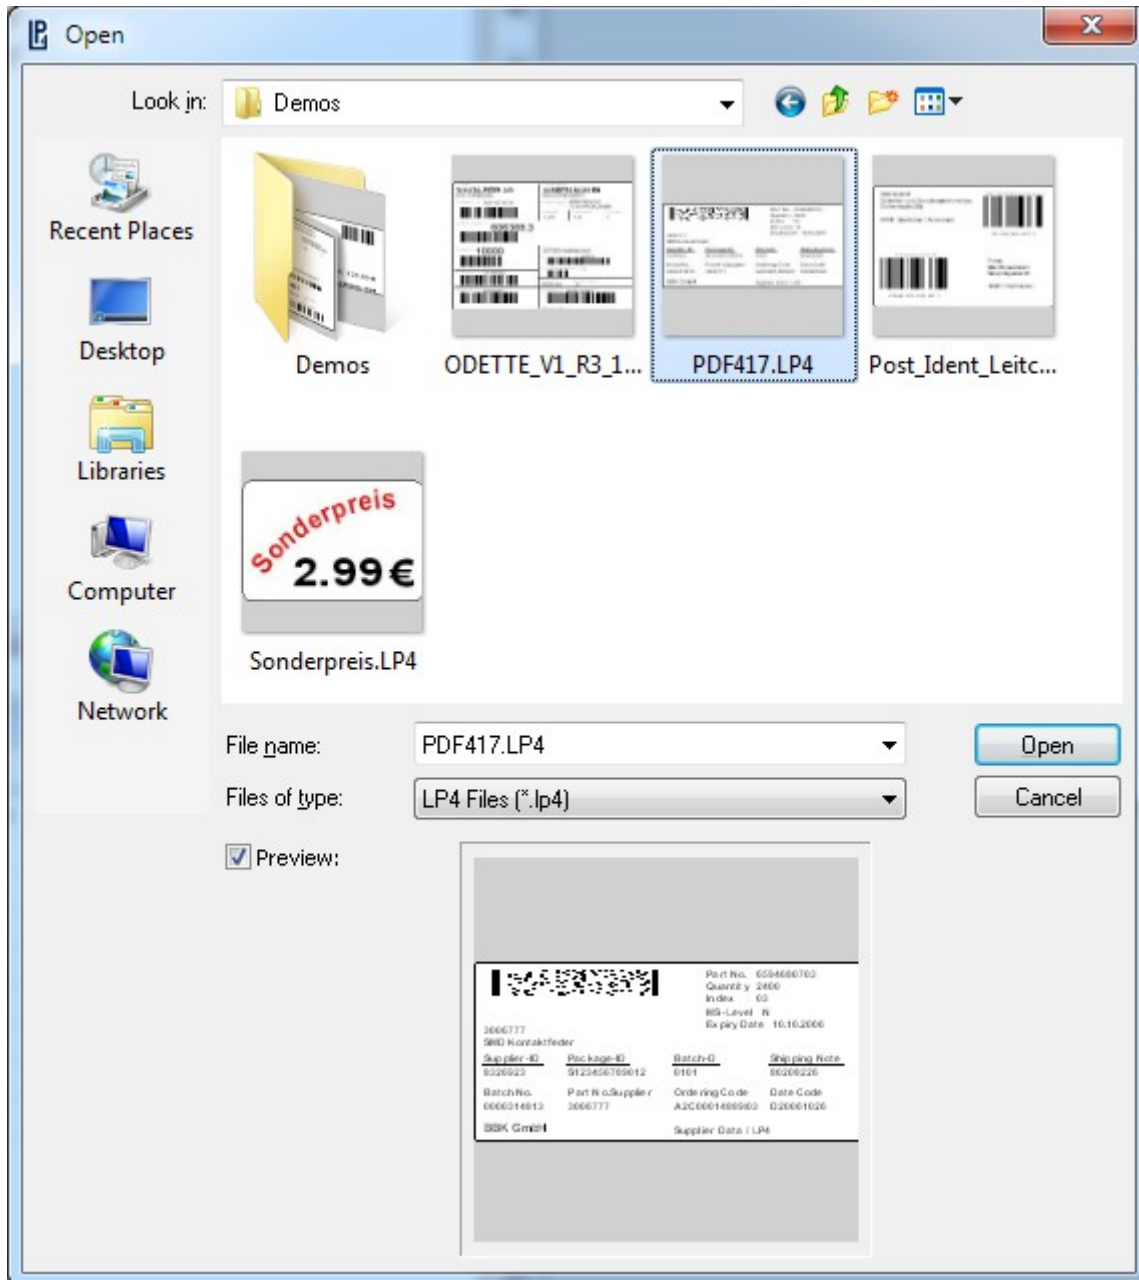

File name:

Enter the file name or select it from the file list.

File type:

Select the type of the files you want to open: .LBF is the old LP3 label file format, .LP4 is the LP4 label file format.

Preview:

If this option is activated, you will see a small preview picture of the selected label file.

3.3.1.3 Menu File - Close

Use this command to close the active label edit window. If you have changed the label, LP4 will ask you if you want to save the new label file before closing. If you close a window without doing a save, all changes you have done since the last saving point will get lost.

3.3.1.4 Menu File - **Save**

Use this command to save the active label using its current filename. If the label has no old filename, you will get asked for a filename to save. If you want to save the label with a new filename, you can also select the „Save as“ menu item.

Short cut

Toolbar:



Keyboard: STRG+S

3.3.1.5 Menu File – **Save as**

Use this command to save the active label using a new filename. Labels Platform 4 will show the standard MSWindows save dialog window, where you can enter the new filename.

To save a label using its current filename, you can also use the Save menu item.

The Save As dialog window

The Save As windows allows you to enter a new filename and a new directory:

Filename

Enter the new filename. If you don't apply a LP4 file extension, the software will automatically add this extension to the filename.

Drives

Select the drive you want to save to.

Directories

Select the directory you want to save to.

Network...

Use this button if you need to connect to a network drive.

3.3.1.6 Menu File – **Import**


Use this command to import LP2 label files / exported LP3/LP4 label files.

3.3.1.7 Menu File – **Export**


Use this command to backup existing LP4 labels, or to easily transfer them to another LP4 system. The Export file (LBY) can contain multiple LP4 label files, and all needed graphic files will get exported as well.

3.3.1.8 Menu File – **Version History**

If the LP4 Version Control is activated in the LP4 configuration (menu “Tools”), each time the user wants to save the label file the following window appears. Here the user can enter a version information comment.

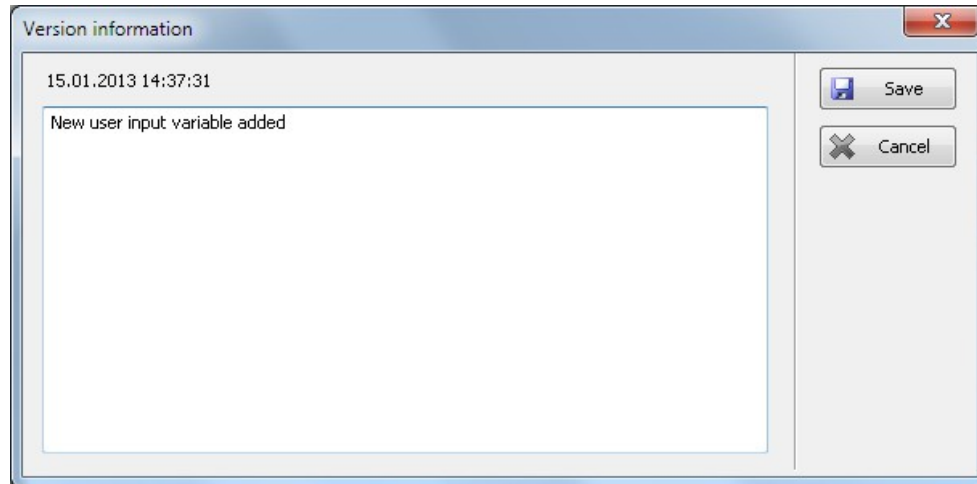

The version information is saved inside the .LP4 layout file, the old version of the file is backed up in the file "Filename.LP4.Versionnummer.LPV". You can see all the backup files and the related version information in the "Version History" window. The user can select an older version and press "Load" to get this old layout in the label editor.

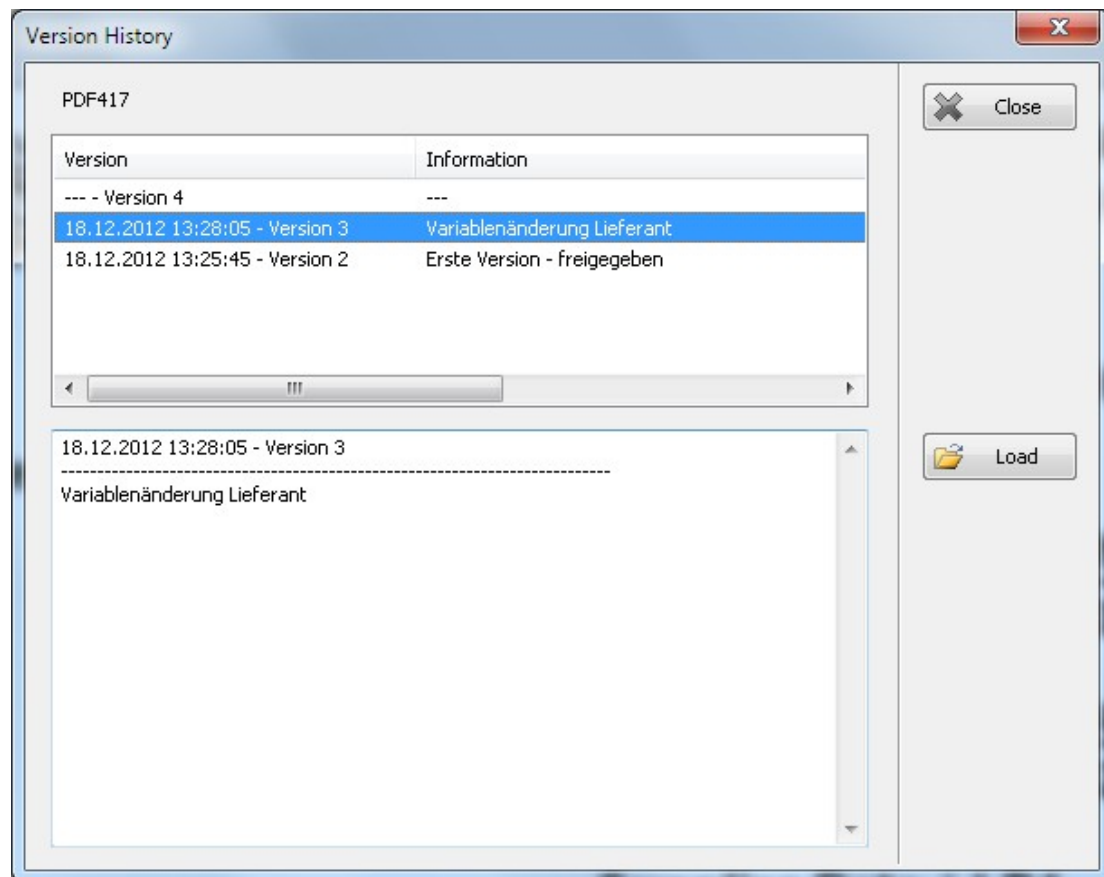


3.3.1.9 Menu File – Printer Management

This command can be used to access the functions "Show printer management", "New printer..." and "Printer groups".

3.3.1.10 Menu File – Printer Management – Define new printer

Inside the “Printer Management” docking window all LP4 printers are defined and managed. You can only use printers with LP4 which have been defined here. Depending on the printer type and the connection type (RS232, USB, network, LPT, file) several settings need to be done.

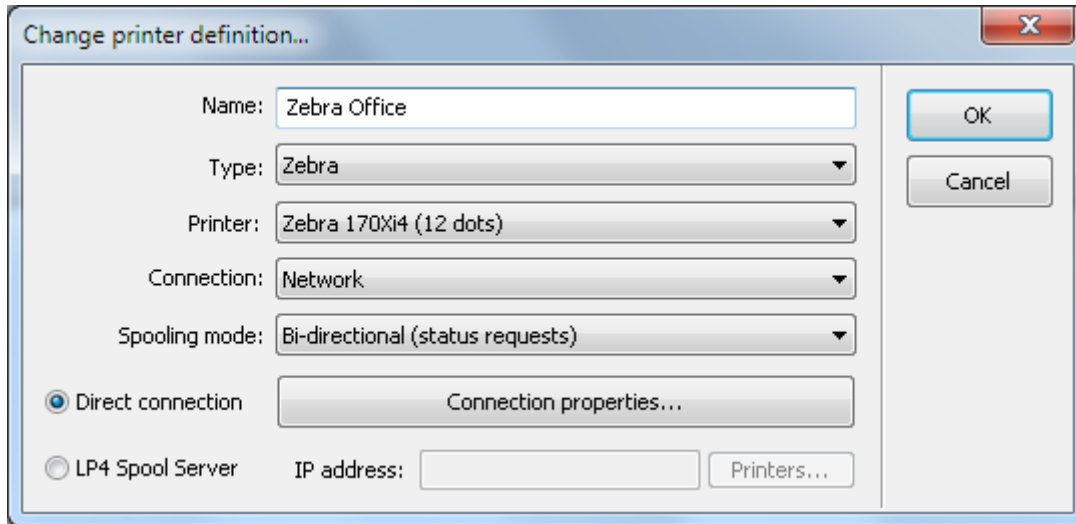


The dialog box titled "Change printer definition..." contains the following fields and controls:

- Name:** Text field with "Zebra Office".
- Type:** Dropdown menu with "Zebra".
- Printer:** Dropdown menu with "Zebra 170Xi4 (12 dots)".
- Connection:** Dropdown menu with "Network".
- Spooling mode:** Dropdown menu with "Bi-directional (status requests)".
- Direct connection:** Radio button (selected).
- LP4 Spool Server:** Radio button (unselected).
- IP address:** Text field (empty).
- Printers...** button.
- Connection properties...** button.
- OK** and **Cancel** buttons.

The printer definition settings are global for all labels. The defined printers also have additional settings, like the print orientation or print speed. Those settings are managed for each label separately, by the “Printer settings” function. If you have several similar printers, you can also put them into the same “printer group”, all printers in a group will have the same label settings.

The “connection properties” are the global printer settings, used by all labels:

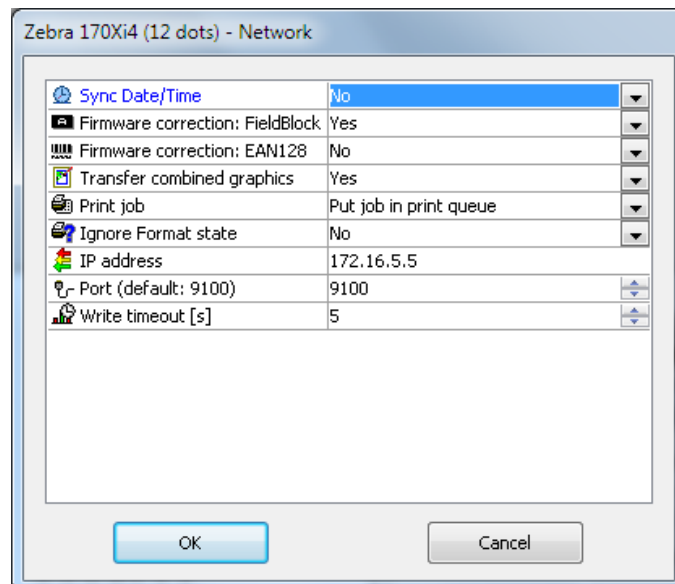

The dialog box titled "Zebra 170Xi4 (12 dots) - Network" contains the following settings:

Sync Date/Time	No
Firmware correction: FieldBlock	Yes
Firmware correction: EAN128	No
Transfer combined graphics	Yes
Print job	Put job in print queue
Ignore Format state	No
IP address	172.16.5.5
Port (default: 9100)	9100
Write timeout [s]	5

At the bottom are **OK** and **Cancel** buttons.

The following connection properties are available:

- “Write timeout”: this is a timeout value which will be used by the internal LP4 spooler. Each time when a printer will block the data receiving (while downloading new labels), LP4 will wait up to the specified time until it reports an error to the user. On some special tasks (for example when downloading exotic counters and a high batch count to a Zebra printer), it’s necessary to increase the default 5 seconds wait time to a higher value (like 60 seconds), to avoid printer problems.

- “Sync Date/Time”: the current PC date & time will be transferred into the printer with each new print job.
- “Job start”: Some printers will offer the choice to add a new print job to a queue (and start downloading after the current job has been finished) or to cancel the currently running job and download the new one instead. Please notice that the job queue may not work properly in unidirectional communication modes on some printers.
- Ask file name on print start / default file name: if the connection mode is “file”, you can define with this properties if the user is asked on each print job where to save the file to, or you can define a default file name to save without user interaction.
- CAB specific properties:
„Check buffer full (%)“: on CAB printers, it is possible to improve the speed of variable label jobs (= a print job which contains different variable content on each label, like address labels). If a “Check buffer full” % value bigger 0 is given, LP4 will check during the data transfer, if it can download the next label contents as well, until the buffer has reached the given level. Please note: all transferred labels will be removed from the LP4 printing queue, therefore LP4 cannot show those print jobs in the printer state/printer job list anymore.
- Zebra specific properties:
“Ignore Format State” (yes/no): In some Zebra firmware versions you have to set this option to “yes”, otherwise LP4 cannot detect (in bidirectional communication mode) if the print job has been completed. Some Zebra firmware revisions have problems with aligned variable text fields (Fieldblock) or do not support EAN128 barcodes directly. In such cases you can enable the related Firmware corrections. The property “Transfer combined graphics” is telling LP4 to put all graphical elements of a label into a big graphic.
- Sato specific properties:
„Protocol: Status 3 / Status 4“: in case of Sato printers, you have to configure „Status 3“ or „Status 4“ as communication protocol, otherwise LP4 cannot establish a bidirectional connection. In LP4, you also have to select „Status3/Status4“ in the serial port configuration.
- Windows printer specific properties:
You can define if you want to emulate a certain DPI setting, if you want to force a black/white print out or if you want the printer internal “copy” function if printing more than one label. With some printer you have to activate the “Use printer device context” option to print a label, please note that in this case the text fields may look slightly differently (since the printer can replace the used Windows fonts with printer internal fonts). You can also redirect the print data to the Windows default printer, which can be useful if the printer is not available, or if you have some office environment, where every user should print on a different printer.


If you want to use a LP4 Spool Server connection, you do not have to specify the specific connection properties, instead you enter the IP address of the LP4 Spool Server PC. Please note that all other connection port settings need to be identical to the port settings of the Spool Server printer you want to use. Please look in a later “Spool Server” chapter for details.

Toolbar:



3.3.1.11 Menu File – Printer Management – Printer fonts

Some printers can use additional internal fonts. You can tell LP4 with the “printer fonts” configuration, if you have activated such additional internal fonts:

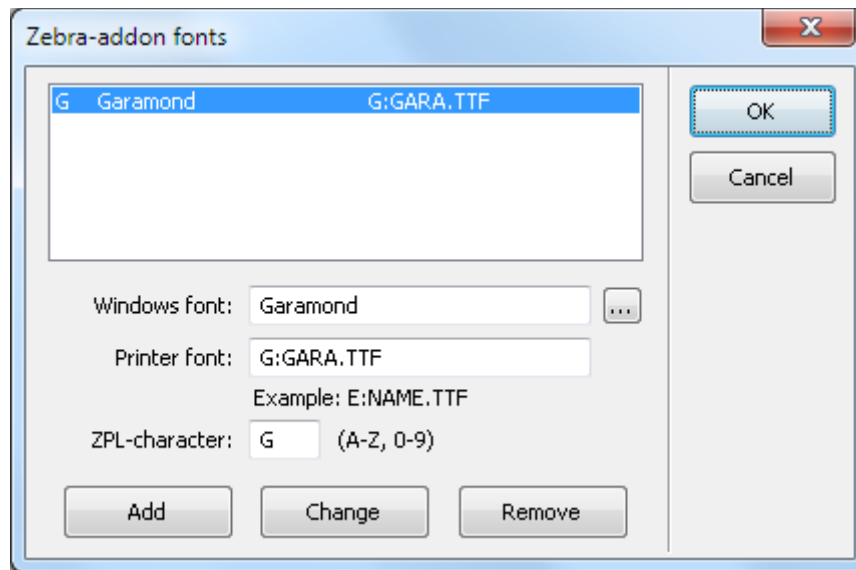


Toolbar:

F

3.3.1.12 Menu File – Printer Management – Printer groups

If you want to use printer groups (= similar printers should use the same label settings), you can define such groups in the following window:

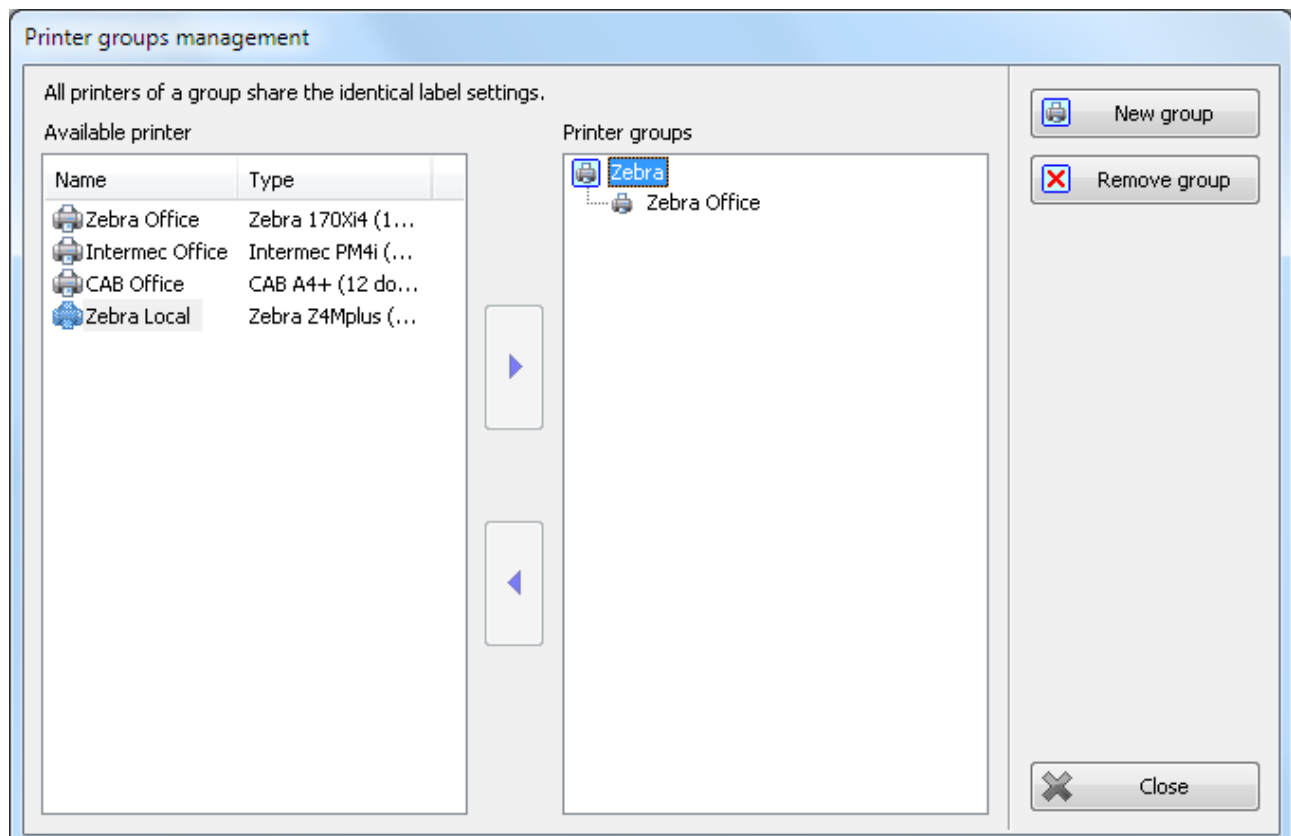

You can define a group by pressing the “New group” button and entering a group name. You can change the name later on by doing a single click on the group name. You can assign printers to this group by selecting the printer in the left list, and pressing the “>” button. The “<” button can be used to remove a printer from a group. If you want to remove the complete group, you can use the “Remove group” button, all printers will now have individual settings for each label.

Toolbar: 

3.3.1.13 Menu File – Printer settings


Label printers have certain options to control the print results. You can change the settings according to your label, all the settings will get saved inside the label file, and restored if you load the label again.

Some dialog windows (for example the LP4 Print dialog window) will also allow direct access to the settings.

Short cut
Toolbar: 

3.3.1.14 Menu File – Printer settings - Zebra

Here you can adjust the Zebra printer settings. Most of the options are Zebra-specific values, please consult your printer manual for details. Special options like „Use additional printer files“ and „Create ZBI code“ will only be needed with special customized printing solutions (for example to connect a scanner to the printer, or for permanent counters).

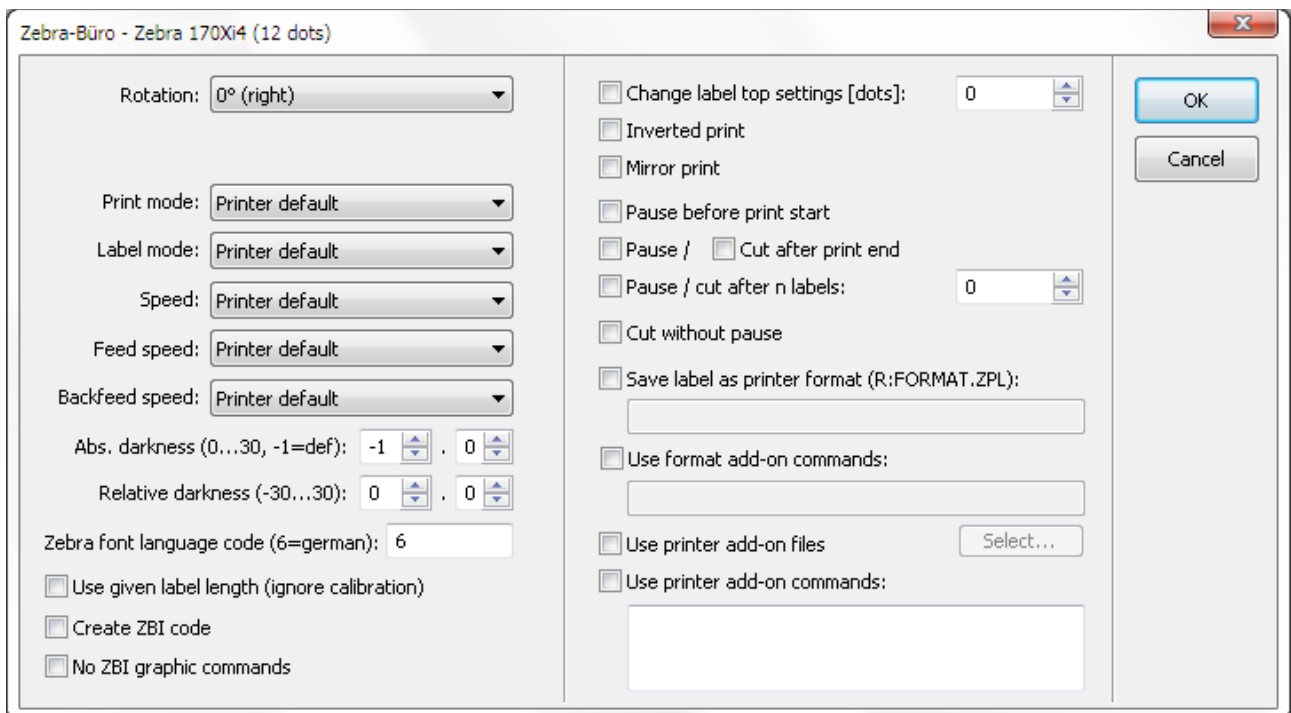


The screenshot shows a dialog window titled "Zebra-Büro - Zebra 170Xi4 (12 dots)". The window is divided into two main sections. The left section contains settings for rotation, print mode, label mode, speed, feed speed, backfeed speed, and darkness (absolute and relative). The right section contains checkboxes for various printer options, including "Change label top settings [dots]", "Inverted print", "Mirror print", "Pause before print start", "Pause / Cut after print end", "Pause / cut after n labels", "Cut without pause", "Save label as printer format (R:FORMAT.ZPL)", "Use format add-on commands", "Use printer add-on files", and "Use printer add-on commands". There are also input fields for "Abs. darkness (0...30, -1=def)", "Relative darkness (-30...30)", and "Zebra font language code (6=german)". The "OK" and "Cancel" buttons are located at the bottom right.

The option „Use printer add-on files“ enables you to specify special printer commands (using the Zebra ZPL language), which will get downloaded on each print job for this label. The „ZBI code“ option only can be used

in combination with certain LP4 Product Manager software packages. The special option 'Use given label length (ignore calibration)' can be used to print a oversized LP4 layout on two or more real labels.

3.3.1.15 Menu File – Printer settings – Intermec

Here you can adjust the Intermec/UBI printer settings. Most of the options are Intermec-specific values, please consult your printer manual for details.

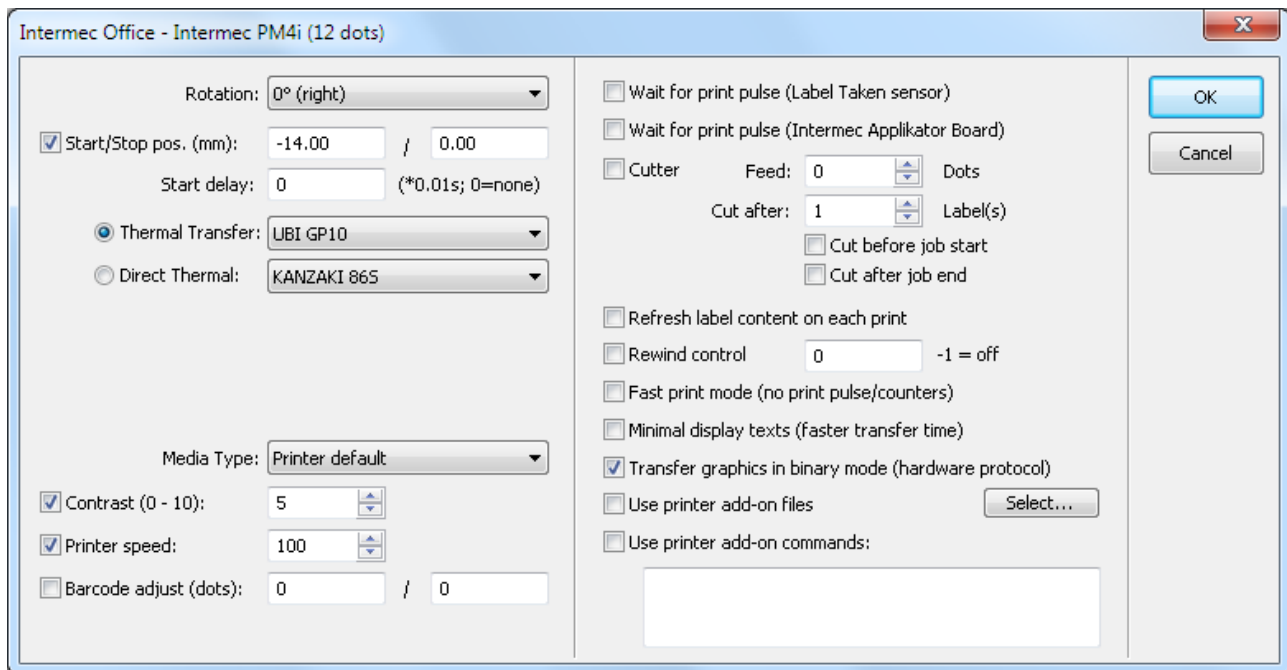

The screenshot shows the 'Intermec Office - Intermec PM4i (12 dots)' dialog box. It contains various settings for the printer, including rotation, start/stop position, start delay, thermal transfer options, media type, contrast, printer speed, barcode adjust, and several checkboxes for advanced features like 'Wait for print pulse', 'Cutter', 'Refresh label content', 'Rewind control', 'Fast print mode', 'Minimal display texts', 'Transfer graphics in binary mode', 'Use printer add-on files', and 'Use printer add-on commands'. The 'OK' and 'Cancel' buttons are visible on the right side.

If you are using a „Start delay“, the printer will wait after each printed label the specified time before doing its startposition adjustments.

If the printer is used in an industrial area, most often it has to wait for a printing pulse before printing a label. You can specify two different „print pulse“ modes, depending on the interface you are using.

„Refresh label content“ is needed if you are using a printer variable (for example the printer time), and you want to update the variable content on each printed label.

The „Fast print mode“ option minimizes the time between two label printings. You cannot use counter variables or print pulse in this mode, though.

To get a (slightly) faster download time, you can use the „Minimal display texts“ option. It will disable some of the printers display texts and function keys, making the download a little bit smaller.

The option „Use printer add-on files“ enables you to specify special printer commands (using the Intermec Fingerprint Basic), which will get downloaded on each print job for this label. The same option, for smaller tasks, can be found in „Use printer add-on commands“.

There are several function keys at the Intermec front panel available:


- * F1: Select label format (only available on certain Format managers)
- * F2: Input printer variables
- F5: Display SYSTEM INFO (only available with newer printer firmware)
- SHIFT + F5 : Stop label program
- SHIFT + F4 : Show error number
- FEED : Feed
- SHIFT + FEED : Test feed

- SETUP : Setup
- * PRINT : Print one label
- * PAUSE : Pause the current printing
- * C : Cancel the print job, only available in Pause mode

The * marked keys are only available if a print job is active


3.3.1.16 Menu File – **Printersettings - Easyprint**

Here you can adjust the Easyprint printer settings. Most of the options are Easyprint -specific values, please consult your printer manual for details.

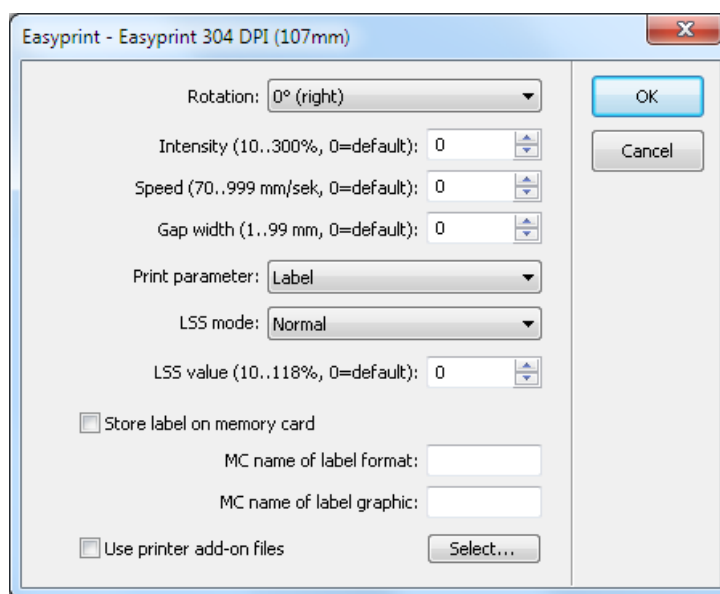

3.3.1.17 Menu File – **Printersettings - Unicontrol**

Here you can adjust the Unicontrol-Easyprint printer settings. Most of the options are printer-specific values, please consult your printer manual for details.

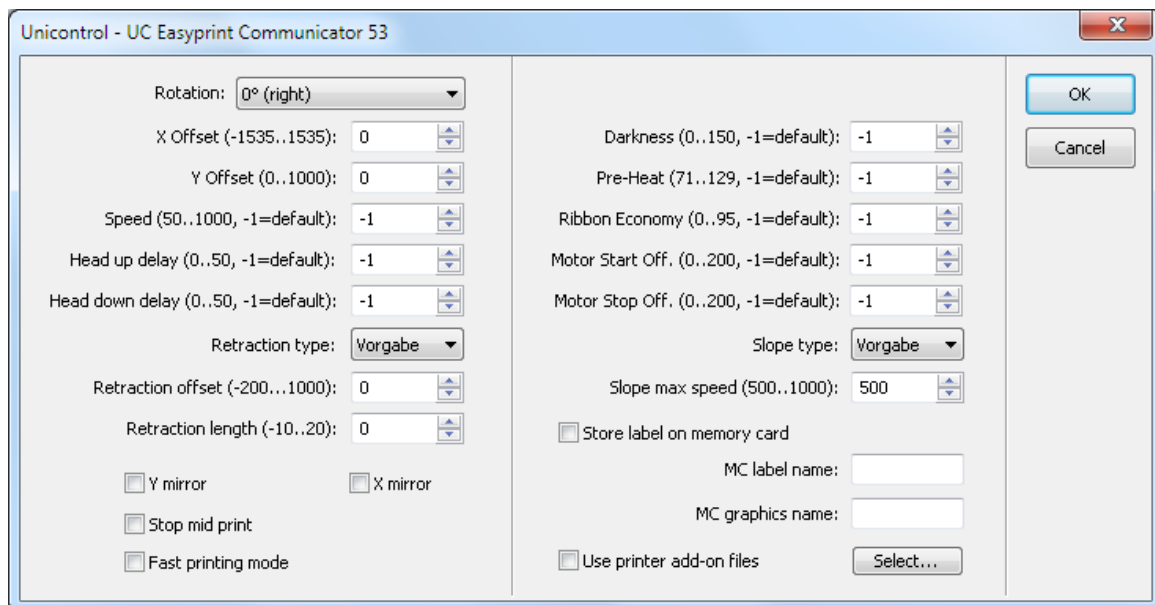

Unicontrol - UC Easyprint Communicator 53

Rotation: 0° (right)

X Offset (-1535..1535): 0

Y Offset (0..1000): 0

Speed (50..1000, -1=default): -1

Head up delay (0..50, -1=default): -1

Head down delay (0..50, -1=default): -1

Retraction type: Vorgabe

Retraction offset (-200..1000): 0

Retraction length (-10..20): 0

☐ Y mirror ☐ X mirror

☐ Stop mid print

☐ Fast printing mode

Darkness (0..150, -1=default): -1

Pre-Heat (71..129, -1=default): -1

Ribbon Economy (0..95, -1=default): -1

Motor Start Off. (0..200, -1=default): -1

Motor Stop Off. (0..200, -1=default): -1

Slope type: Vorgabe

Slope max speed (500..1000): 500

☐ Store label on memory card

MC label name:


MC graphics name:

☐ Use printer add-on files Select...

OK Cancel

3.3.1.18 Menu File – **Printer settings - EPL**

Here you can adjust the EPL printer settings. Most of the options are printer-specific values, please consult your printer manual for details.

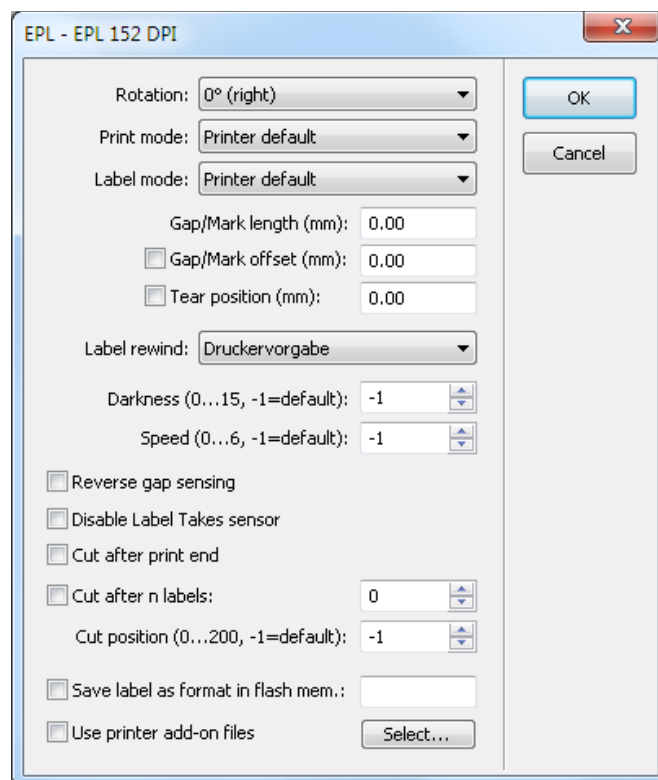

EPL - EPL 152 DPI

Rotation: 0° (right)

Print mode: Printer default

Label mode: Printer default

Gap/Mark length (mm): 0.00

☐ Gap/Mark offset (mm): 0.00

☐ Tear position (mm): 0.00

Label rewind: Druckervorgabe

Darkness (0..15, -1=default): -1

Speed (0..6, -1=default): -1

☐ Reverse gap sensing

☐ Disable Label Takes sensor

☐ Cut after print end

☐ Cut after n labels: 0

Cut position (0..200, -1=default): -1


☐ Save label as format in flash mem.:

☐ Use printer add-on files Select...

OK Cancel

3.3.1.19 Menu File – **Printer settings – Sato SBPL**

Here you can adjust the Sato SBPL printer settings. Most of the options are printer-specific values, please consult your printer manual for details.

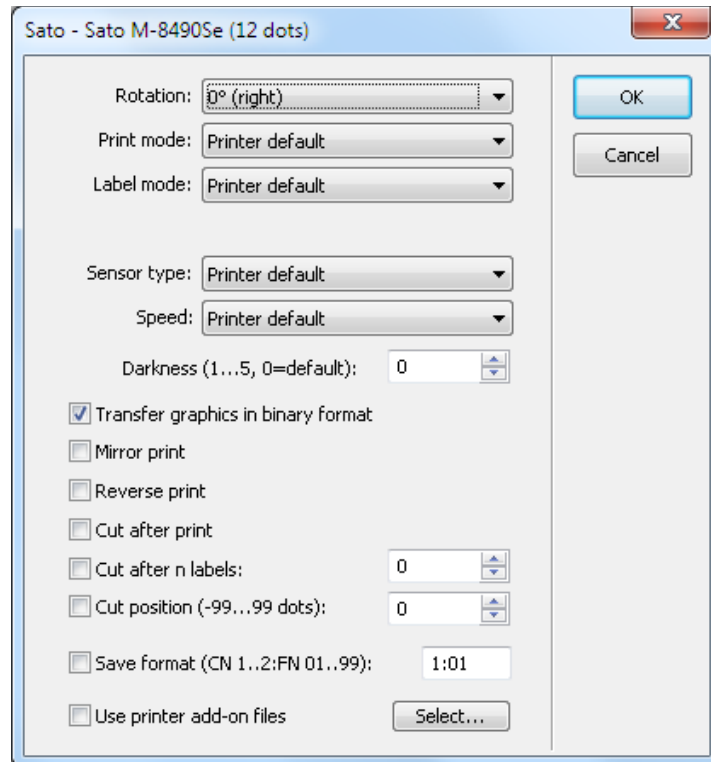

You can specify to store the label as a format inside the printer (on one of the printers memory cards). If you enable this function, the label will not get printed after transfer, but saved on the card for later use. So you have to specify a memory card number and a format number, to tell LP4 where to store your label format („2:03“ would mean: format 03 on card 2).

To use such formats, you have to send the following SBPL commands to the printer:

```
<STX><ESC>A<ESC>CCcardnumber<ESC>YR,formatnumber<ESC>/D,fieldnumber,fielddata<ESC>Qprint  
count<ESC>Z<ETX>
```

„Cardnumber“ is to replace with 1 or 2 (the card number), „formatnumber“ is 01-99, the following „/D“ commands are optional, if you are using LP4 Printer Variables in your layout to define variable text- and barcode-fields. „Printcount“ will tell the printer how many labels to print, <STX> is the ASCII value 2, <ETX> is 3, and <ESC> is 27.


Example:

```
<STX><ESC>A<ESC>CC1<ESC>YR,04<ESC>/D,01,Test 1<ESC>/D,02,Test 2<ESC>Q33<ESC>Z<ETX>
```

This will print format 04 from card 1 with the texts „Test 1“ and „Test 2“ 33 times.

3.3.1.20 Menu File – **Printersettings – Alltec SmartGraphCom**


Here you can adjust the Alltec SmartGraphCom system settings. Most of the options are system-specific values, please consult your system manual for details.

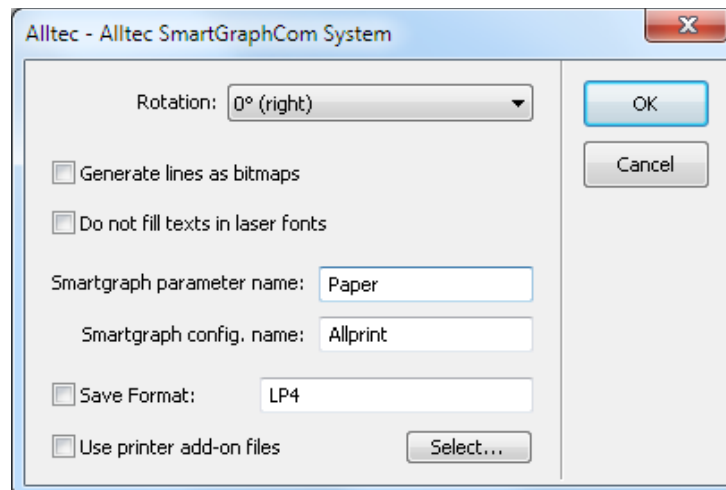

Please note that you need to start the Alltec SmartGraphCom application on the same PC as Labels Platform 4 to establish a printer connection.

3.3.1.21 Menu File – Printersettings – CAB


Here you can adjust the Jscript/CAB printer settings. Most of the options are printer-specific values, please consult your system manual for details.

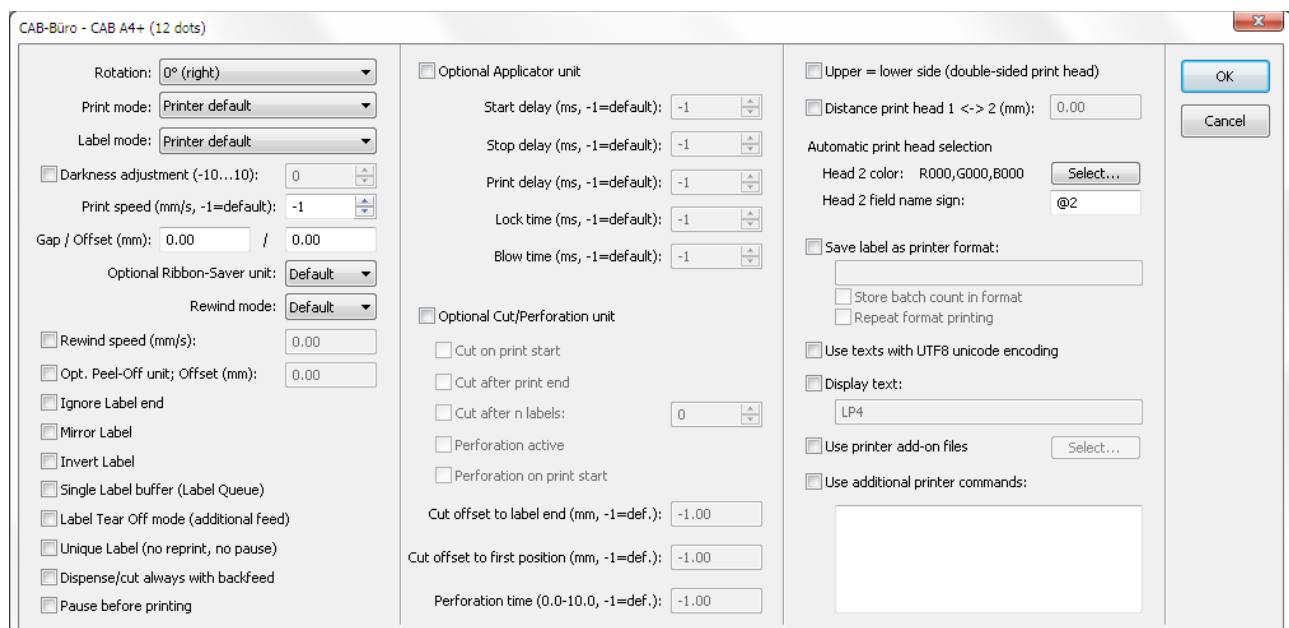

On printers with two printheads (CAB XC series), LP4 will send the label fields depending on the „Head 2 color“ and „Head 2 field name sign“ settings. By default all black fields (and fields with the sign „@2“) are send to print head 2 (which is using by default a black ribbon). All other fields are send to print head 1 (for example with a red ribbon). The color can be used with the label fields „Line“, „Cross“, „Rectangle“, „Circle“, „Barcode“, „Text“. The label fields „Graphic“, „Special text“ and „OLE Object“ need to get the special sign in the field name, since those objects are using multiple colors.


3.3.1.22 Menu File – Printersettings – Atlantic Zeiser

Here you can adjust the Omega Atlantic Zeiser printer settings. Most of the options are printer-specific values, please consult your printer manual (AZ PrintEngine manual) for details.

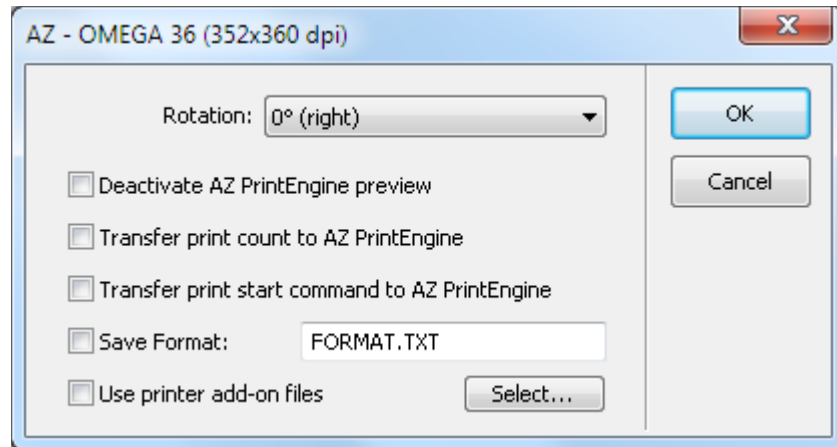

3.3.1.23 Menu File – **Printersettings** – **bbPrinter / HAPA RedCube**

Here you can adjust the bbPrinter service settings.

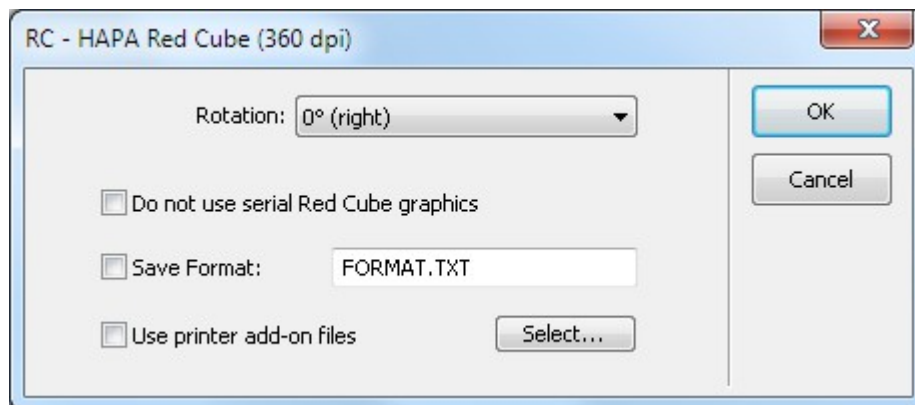

The only available option (beside the Rotation) is “Do not use serial Red Cube Graphics”. If this option is activated, a print job containing variable data will pause between two print outs. This way special just-in-time variable data (like the current date/time, or scale data) can be used.

3.3.1.24 Menu File – **Print**

Use this command to print the active label.

A window will appear, there you can specify the label quantity and change margins/printer settings.

To use a printer, you have to define the printer connection with the Printer definition menu item.


Short cut

Toolbar:



3.3.1.25 Menu File – **Print** – **Print dialog window**

After you have selected „Print“, the LP4 print window will appear:

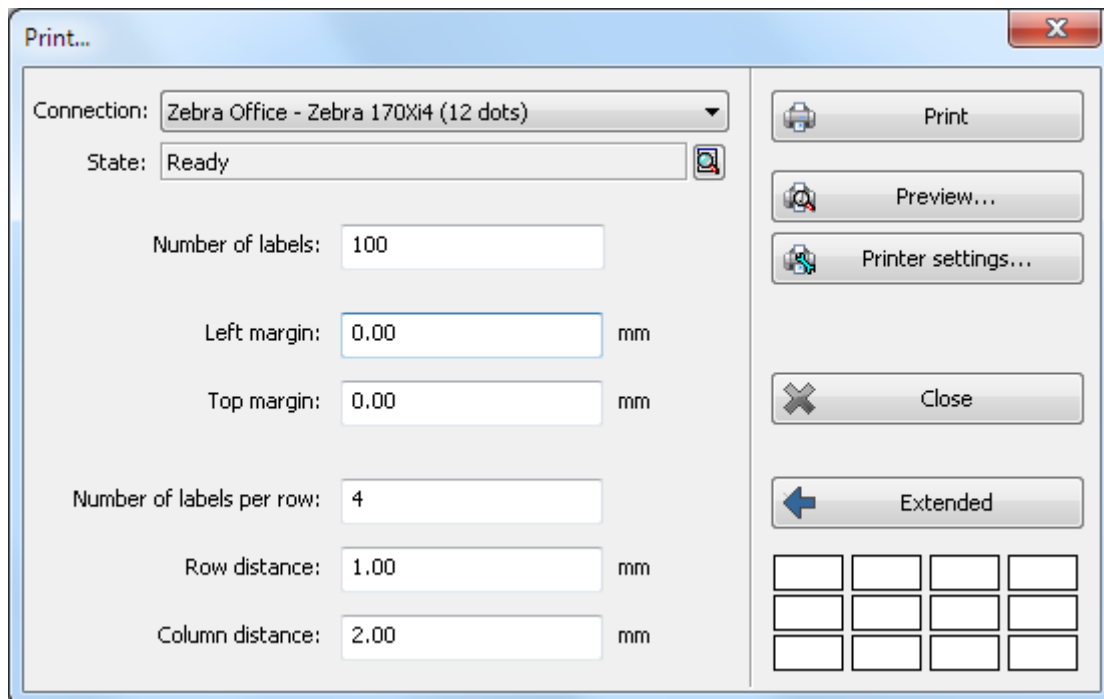

Here you can select the printer (the currently active label printer will be initially selected), specify a quantity of labels to print, and adjust the print margins.

The button „Extended“ will show you a few more options, to be used when you need to print multi-row labels.

By pressing the „Print“ button, the label will be send to the printer. The current printer state will be displayed in the „State“ field.

If you need to adjust certain printer setting, you can easily do that by pressing the „Printer settings“ button without leaving the print dialog window.

All entered settings (printer settings, quantity, margins, etc) will get saved with the label file, and LP4 will store all settings per printer. Therefore, if you have to print the same label at two different printers, you can specify different settings for each printer, as soon as you select one of them as printing device, LP4 will use the settings stored exactly for that printer. No need to change margins/settings each time you swap between the connected printers.

3.3.1.26 Menu File – Print preview

Use this command to display the current label inside a preview window. The preview will show you the first label to get printed, all variables, counters, etc. will get displayed as the first real printed label. It is possible to turn the preview in steps of 90°, and to save the displayed label as a bitmap or PDF file.

To do a real print, select the Print or Test print command.

Print preview

Page view Turn right Turn left Save...


Part No. 6594680703
Quantity 2400
Index 03
MS-Level N
Expiry Date 10.10.2006

3006777
SMD Kontaktfeder

Supplier-ID	Package-ID	Batch-ID	Shipping Note
8326923	S123456789012	0101	80208226
Batch No.	Part No.Supplier	Ordering Code	Date Code
0000314813	3006777	A2C00014889/03	D20061026

BBK GmbH Supplier Data / LP4


Short cut

Toolbar:



3.3.1.27 Menu File – Printer states

In the “Printer states” docking view you have an overview on all defined printers and their current state. You can select a printer, change its label settings, open the print dialog, open the print preview, print a test label, reset a printer communication, view the current print jobs, and communicate to a printer directly by a build-in terminal window.

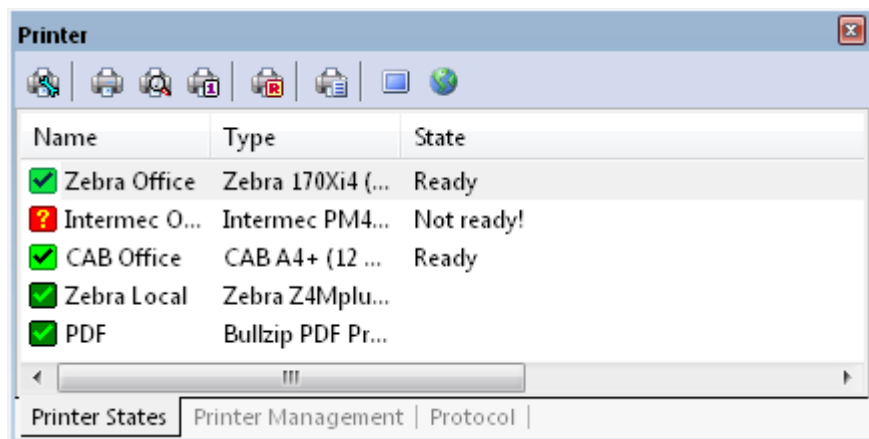

The Terminal window for accessing bi-directional printers can be used to send special printer commands directly to the printer:


If you close LP4, all user settings (position of toolbars, etc) will get stored, this settings will be used on the next startup.

Short cut

Mouse: Double-click at the system menu

Keyboard: ALT+F4

3.3.2 Menu Edit

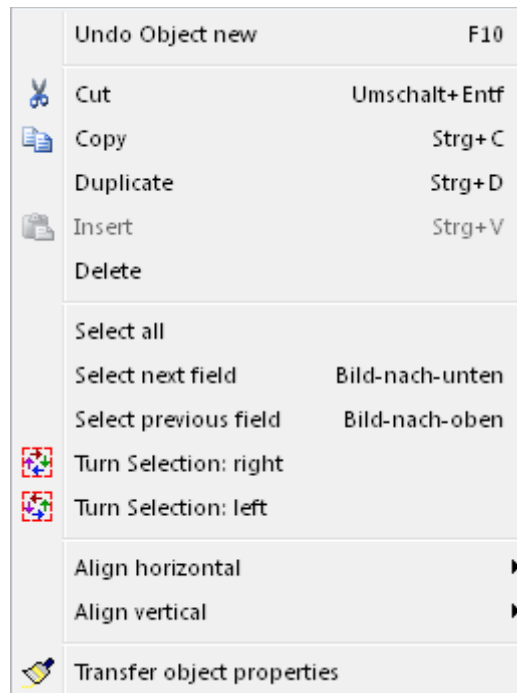

The following functions are available in the Edit menu:

- Undo
Restores the label to its previous state
- Cut
Deletes the selected objects and places them into the Windows clipboard
- Copy
Copies the selected objects into the Windows clipboard
- Duplicate
Copies the selected objects, and pastes them at the current mouse position
- Paste
Pastes the objects from the clipboard to the current label
- Delete
Deletes all selected objects
- Select all
Selects all items on the label
- Select next/previous
Selects the next/previous label object
- Align fields
Aligns objects fields
- Transfer object properties
Transfers various display properties from one object to another.

3.3.2.1 Menu Edit – **Undo**

Use this command to undo your last actions (if possible). If you cannot undo your last action, the menu item will be grayed.

Short cut

Keyboard: STRG+Z or
ALT-DELETE

3.3.2.2 Menu Edit – **Cut**

Use this command to delete all selected objects from the label, and place them into the Windows clipboard. You cannot use this command if no label object is selected.

Short cut

Toolbar: 
Keyboard: STRG+X

3.3.2.3 Menu Edit – **Copy**

Use this command to copy all selected objects into the Windows clipboard. You cannot use this command if no label object is selected.

Short cut

Toolbar: 
Keyboard: STRG+C

3.3.2.4 Menu Edit – **Duplicate**

Use this command to copy the selected objects and paste them at the current mouse position. You cannot use this command if no label object is selected.

Short cut

Keyboard: STRG+D

3.3.2.5 Menu Edit – **Paste**

Use this command to paste objects from the Windows clipboard to the current label. You cannot use this command if no objects are available in the clipboard.

Short cut

Toolbar: 
Keyboard: STRG+V

3.3.2.6 Menu Edit – **Delete**

Use this command to delete all selected objects from the label.

Short cut

Keyboard: DEL / STRG+DEL

3.3.2.7 Menu Edit – **Select all**

Use this command to select all objects on a label.

3.3.2.8 Menu Edit – **Select next/previous**

Use this command to switch to the next/previous label object, and to select it.

Short cut

Keyboard: PAGE UP/PAGE DOWN

3.3.2.9 Menu Edit – **Align fields**

You can align fields internally by using this commands:

Left

Center vertical

Right

Top

Center horizontal

Bottom

For example: selecting „Top“ will align all selected fields, moving all object tops in one line.

Short cut

Toolbar: 

You can also align fields relatively to the label:

Label horizontal

Label vertical

Short cut

Toolbar: 

You can rotate selected fields in 90° steps.

Rotate left

Rotate right

Short cut

Toolbar: 

3.3.2.10 Menu Edit – **Field printable**

Use this commands to make selected fields printable/not printable. All objects are printable by default, but if you want certain objects not to get printed (but still visible in the label window), you have to set such objects to „not printable“. If an object is not printable, a small icon will appear in the object list.

Short cut

Toolbar:



3.3.2.11 Menu Edit – Field movable

Use this commands to make selected fields movable/not movable. A „not movable“ field cannot change accidentally its object position. If an object is not movable, a small icon will appear in the object list.

Short cut

Toolbar:



3.3.2.12 Menu Edit – Field groups

Use the command „Make group“ to set all selected objects into one object group. Group objects cannot get selected independent (always the complete group will be selected), so also moving/sizing/deleting/changing will always happen to all members of a group.

Short cut

Toolbar:



3.3.2.13 Menu Edit – Transfer object properties

Use this command to transfer display properties of a label object to a different label object. Just select the source objects, and activate the „transfer“ command by menu item/symbolbar button/hotkey. Now click on the destination object, and the display properties of the source object will be transferred to the destination object.

Display properties are: line width, color, fill type (rectangles/circles), corners (rectangles), font settings, text alignment, barcode type and various graphic settings.


Short cut

Toolbar:

Keyboard: CTRL + T



3.3.3 Menu View

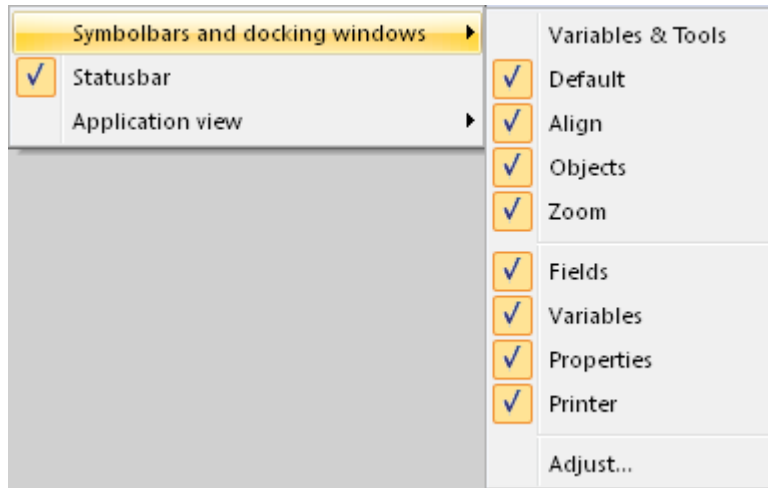

The following functions can be found in the View menu:

- Symbolbars and docking windows
Shows/hides the toolbars/docking windows
- Adjust...
Configuration of menus and toolbars
- Statusbar
Shows/hides the status bar
- Application view
Switches between different user interface skins

3.3.3.1 Menu View – Default toolbar

Use this command to show or hide the default toolbar. The toolbar contains buttons to do the most common tasks, like File Open.

Button _____ Action



- Creates a new empty label window
- Opens an existing label file
- Saves the current label
- Cut selected objects
- Copy selected objects to clipboard
- Pastes objects from clipboard to label
- Opens the print dialog
- Shows/hides the docking window for the label fields
- Shows/hides the docking window for the label variables
- Shows/hides the docking window for the object properties
- Shows/hides the docking window for the printer management
- User logon
- Copyright and version information

3.3.3.2 Menu View – Object mode

Use this command to show or hide the object mode bar. This toolbar contains buttons to change the current mode.

Button _____ Action



- Selection mode to select/move/size label objects
- Deadzone : create a deadzone object
- Line : create a line object
- Cross : create a cross object
- Rectangle : create a rectangle object
- Circle : create a circle object
- Graphic : create a graphic object
- Barcode : create a barcode object
- Text : create a text object
- Special text : create a special text object
- OLE : create an OLE object

3.3.3.3 Menu View – Zoom bar

Use this command to show or hide the zoom bar. This toolbar contains buttons to change the label zoom and a slider control for smooth zooming.

Button _____ Action



- Zoom -: smallest Zoom level, displays a small label to get a complete overview
- Zoom+: optimum Zoom level, displays the label to use all the available space
- Selection Zoom: shows the selected fields as big as possible

3.3.3.4 Menu View – Object alignment bar

Use this command to show or hide the object align bar. This toolbar contains buttons to align objects positions.

Button _____ Action



- Transfer object properties
- Rotation right
- Rotation left
- Left
- Center vertical
- Right
- Bottom
- Center horizontal



Top

 
Label horizontal : align fields relatively to the label

Label vertical : align fields relatively to the label

3.3.3.5 Menu View – Fields – Toolbar / Docking window

Use this command to show or hide the Fields docking window and the Fields toolbar. This toolbar contains buttons to change certain object properties.

Button _____ Action




Printable / not printable

Movable / not movable

Create group / ungroup

Create level / remove level

The field list is shown beneath the toolbar:

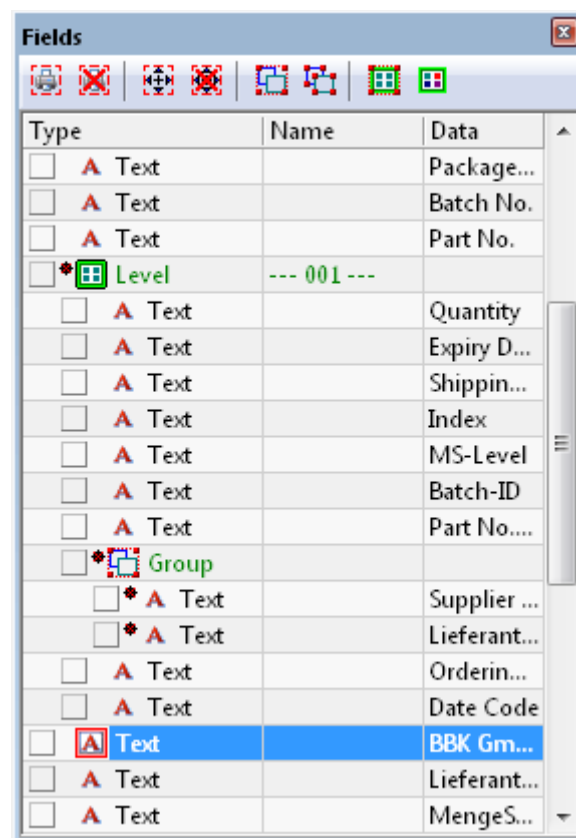

The fields will be displayed according their display and print order. Left clicking a list entry selects the related fields inside the layout. A multiple selection can be done by pressing the SHIFT or CTRL key. Right clicking a list entry shows the related context menu (copy, cut, etc).

You can change the field order by „Drag & Drop“.

The list also displays the special properties of the fields (printable/movable/grouped/level). You can toggle those properties by clicking on the symbol. The first symbol (empty rectangle) can be used to hide a field (shown as a red cross inside the rectangle).

3.3.3.6 Menu View – Variables - Toolbar / Docking window


Use this command to show or hide the Variables docking window and toolbar. This toolbar contains buttons to manage your label variables.

Button _____ Action



New variable: a selection of available variable types is shown
 Variable properties: shows the property window of the selected variable
 Variable position: move up
 Variable position: move down
 Variable delete: delete selected variables
 Variable copy: copy selected variables to the Windows clipboard
 Variable paste: inserts variables from the Windows clipboard
 Variable duplicate: combined copy / paste action
 Refresh variables: calculates and displays all variables and connected label object fields.
 Variable input fields: displays the input window, if input variables are available.

The variable list is shown beneath the toolbar:

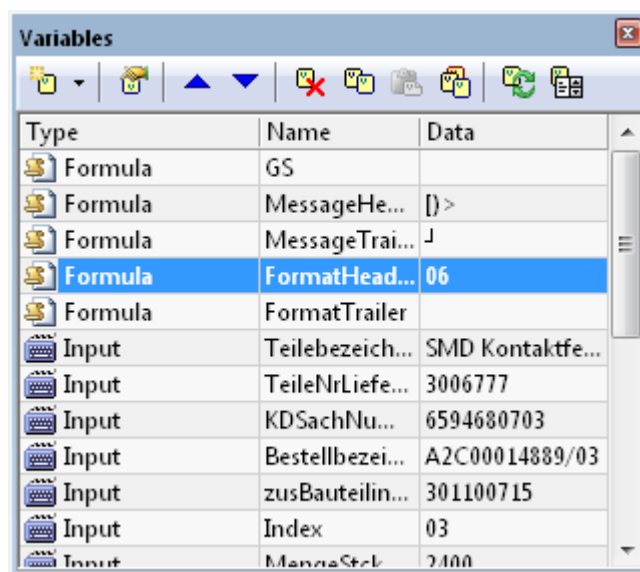

Type	Name	Data
Formula	GS	
Formula	MessageHe...	{ } >
Formula	MessageTrai...	J
Formula	FormatHead...	06
Formula	FormatTrailer	
Input	Teilebezeich...	SMD Kontaktfe...
Input	TeileNrLiefe...	3006777
Input	KDSachNu...	6594680703
Input	Bestellbezei...	A2C00014889/03
Input	zusBauteilin...	301100715
Input	Index	03
Input	MengeStek	2.100

In this list all variables of the active label are shown. A left-click at an entry is selecting the related variable, and all label fields which are connected to this variable. If you select a label field in the layout, which is connected to a variable, the related variable list entry will be selected as well.

You can do a Drag&Drop operation from this list into the layout to create new text/barcode/graphic fields (connected to this variable). If you drop the variable on a already existing field, it will be connected to the variable.

You can also change the order of the variables with Drag&Drop.

Double-clicking a variable will show the variable property window. Right-clicking a variable will show the variable context menu.

Variable Input

You can use this function to open the Variable Input window. The window will only appear, if you have defined at least one Input variable. If no Input variable is defined, an error message is shown instead. After you have entered all Input values, all variables will be recalculated (depending on the variable order), and the result is shown in the label fields.


Depending how the Input variable is defined, the Input edit controls will behave differently, some edits may have a certain input condition. The user can only leave the edit control (by Mouse, TAB or ENTER) if his input is matching the condition. A status line at the bottom of the input window is telling the user about the input condition, it will turn red if the condition is not met.

3.3.3.7 Menu View – Printer – Toolbar / Docking window

Use this command to show or hide the Printer docking window and the Printer toolbars. The Printer docking window is divided into three function parts: Printer States, Printer Management, Protocol. Depending which function is active, the toolbar will change.

This toolbar contains buttons to change certain object properties.

Printer States

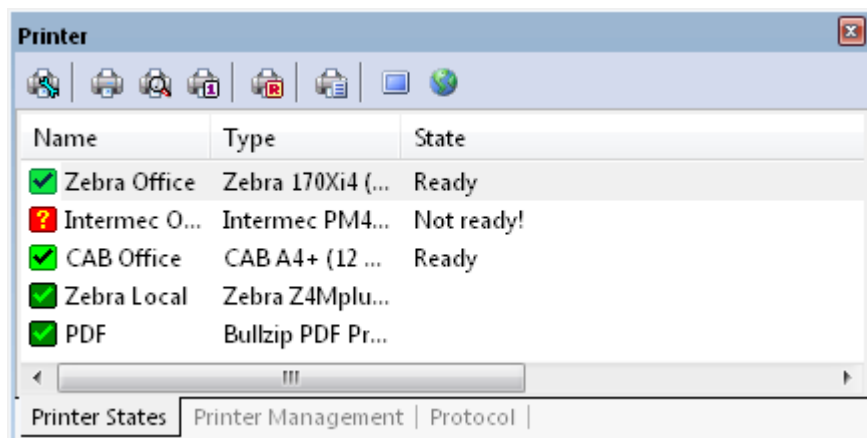

In “Printer States” all defined printers are listed, and their current state is shown (if a bi-directional communication is active). This list is also showing printers, which are saved to the label layout, but do not exist in the current LP4 installation (blue question mark symbol).

Printer States – Button Action



Printer settings: change the label printer settings of the selected printer

Print: shows the Print dialog window

Print preview: shows the Preview window

Test printing: one label is send to the printer

Reset: resets the printer communication and cancels all active print jobs

Print jobs: display of all active print jobs of the selected printer

Terminal: shows the Terminal window of the selected printer

Web site: shows the web site of the selected printer (if IP address is defined)


A double click on a printer opens the Printer settings window. Those settings are saved with the current label layout.

The following symbols are giving information about the printer state:

	Printer ready (uni-directional, no reported printer state!)
	Printer reports: no error, printer is ready
	Printer reports: printer is paused
	Printer reports: error (no labels, no ribbon, etc)
	Printer not ready, no communication
	Printer is not defined, but there are printer settings saved in the current label

Printer, which are not defined, cannot be used for printing, but it is possible to see and change the related settings. Such settings are saved in the layout file. If you want to remove the complete settings before saving, you can do this by doing a right-click -> remove properties.

Printer Management

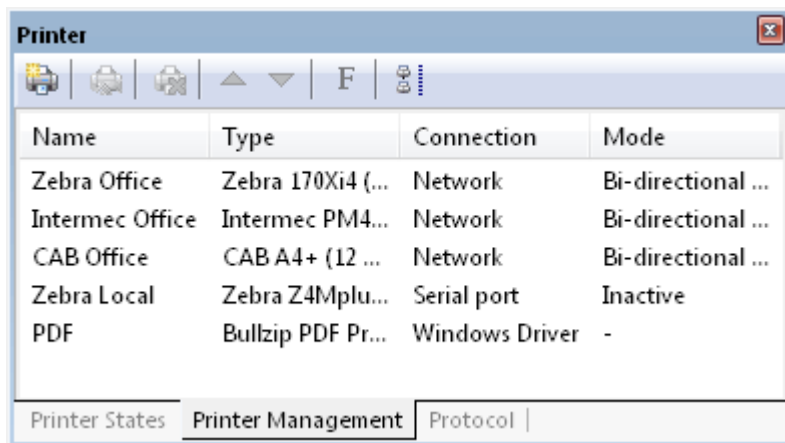


The Printer Management is used for creating, changing and deleting of printer definitions. Only if you create a printer definition, you can use the printer with Labels Platform.

Printer Management – Button Action

	New printer: shows the „printer definition“ window
	Change printer: change the selected printer definition
	Remove printer: removes the selected printer definition
	Change order: moves the selected printer definitions up/down in the list
	Printer fonts: shows the window for defining additional printer fonts
	Printer groups: shows the printer group definition window

Printer protocol

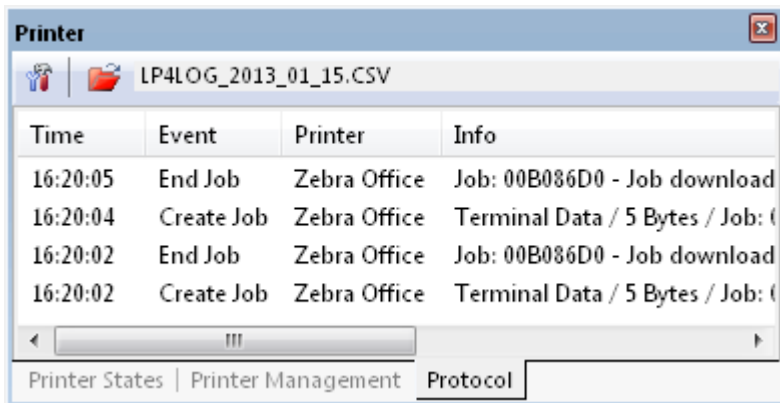

Time	Event	Printer	Info
16:20:05	End Job	Zebra Office	Job: 00B086D0 - Job download
16:20:04	Create Job	Zebra Office	Terminal Data / 5 Bytes / Job: (
16:20:02	End Job	Zebra Office	Job: 00B086D0 - Job download
16:20:02	Create Job	Zebra Office	Terminal Data / 5 Bytes / Job: (

Printer States | Printer Management | **Protocol**

The printer protocol can be activated to save information about print job start / stop and error states. Labels Platform 4 creates a new log file for every new day, the log files can be opened using a text editor or MS Excel. You can also open a log file in the protocol window, if no log file is selected, the protocol window is showing the information for the current day.

Printer protocol – Button Action



Protocol settings: in the settings window you can activate/deactivate the protocol function and define a folder for storing the log files. It is also possible to include variable content on print start in the protocol.



Open protocol file: you can select an existing protocol file for opening in the protocol list. By pressing “Cancel” you will see the entries of the current day again.


3.3.3.8 Menu View – Statusbar

Use this command to show or hide the statusbar. This bar contains text fields to show certain informations.

While you are moving through the LP4 menus or toolbar buttons, the left part of the statusbar will give you a short description of the menu items.

In the right part of the statusbar the state of the locked keys will get displayed.

3.3.4 Menu Mode

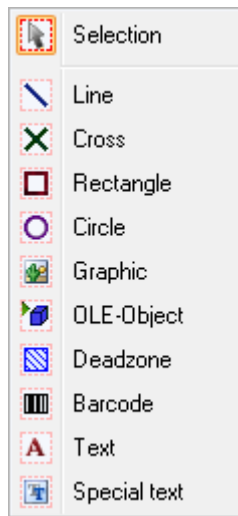

You can change the object creation mode by using the Mode menu:

- Selection
Selection mode to select, move and size label objects
- Line
Line mode
- Cross
Cross mode
- Rectangle
Rectangle mode
- Circle
Circle mode
- Graphic
Graphic mode
- OLE
OLE-object mode
- Deadzone
Deadzone mode (controls continuous text)
- Barcode
Barcode mode
- Text
Text/continuous text mode
- Special text
Special text mode

3.3.4.1 Menu Mode – Selection

By using the selection mode you can select one or more label objects by clicking on the object or by using a multiselection rectangle.

Selected fields will get a red border, and selection drag points.

You can move selected objects by the mouse (if they are not marked as ,not movable') and use the drag points to resize them. Hint: some field types have restrictions in size, you cannot resize such objects freely.

Selected objects can be manipulated by the Edit menu commands.

Hint: if there is an object in front of another, the selection mouse click will always select the visible, uppermost, object. If you want to select the underlying object, simply press the SHIFT key while doing the mouse click.

A special Zoom function is available in the Selection Mode: select a certain area by the mouse and hit the HOME key. LP4 will zoom into this area. If you press the END button, LP4 will zoom to the currently selected fields.

3.3.4.2 Menu Mode – Line

If the line mode is active, a new line will be created by a left mouse click. New lines will be positioned horizontal, vertical or in 45° steps. If you need a free angle, you have to press the SHIFT key while creating the line.

The line properties are described in the chapter „Line objects“.

3.3.4.3 Menu Mode – Rectangle

If the rectangle mode is active, a new rectangle will be created by a left mouse click. If you want to create a square, you have to press the SHIFT key while creating the rectangle.

The rectangle properties are described in the chapter „Rectangle objects“.

3.3.4.4 Menu Mode – Cross

If the cross mode is active, a new cross will be created by a left mouse click. If you need a 90° cross, you have to press the SHIFT key while creating the cross.

The cross properties are described in the chapter „Cross objects“.

3.3.4.5 Menu Mode – Circle

If the circle mode is active, a new circle will be created by a left mouse click. If you need a perfect rounded circle, you have to press the SHIFT key while creating the circle.

The circle properties are described in the chapter „Circle objects“.

3.3.4.6 Menu Mode – Graphic

If the graphic mode is active, a new graphic will be placed by a left mouse click. A window will appear, asking for the filename of the graphic object. If you leave that window by selecting „Cancel“, no new object will be created.

There are two different graphic modes in LP4: an “embedded” graphic is saved within the .LP4 layout file. A “linked” graphic is stored into an external graphic file, LP4 will just save the file name in the layout file. Embedded graphics are helpful, if you want to preserve the current design (even if the original graphic file is changed, the label stays the same).

The graphic properties are described in the chapter „Graphic objects“.

3.3.4.7 Menu Mode – OLE Object

If the OLE object mode is active, a new OLE object will be placed by a left mouse click. A window will appear, asking for the OLE application or filename. If you leave that window by selecting „Cancel“, no new object will be created. Otherwise the object will get created, and the linked application will start up, to edit the object content.

The OLE object properties are described in the chapter „OLE objects“

3.3.4.8 Menu Mode – Deadzone

If the deadzone mode is active, a new deadzone object will be placed by a left mouse click. Deadzones are no printable objects, they influence the printing behaviour of other objects instead.

The deadzone properties are described in the chapter „Deadzone objects“

3.3.4.9 Menu Mode – Barcode

If the barcode mode is active, a new barcode object will be placed by a left mouse click. You can change the barcode type and content by doing a right click on the new object, selecting its property window.

The barcode properties are described in the chapter „Barcode objects“

3.3.4.10 Menu Mode – Text

If the text mode is active, a text input cursor will be placed by a left mouse click. Now you can type your text directly on the label, ESC or a left mouse click will stop the input mode. Empty textfields will be removed from the label.


The text properties are described in the chapter „Text objects“

3.3.4.11 Menu Mode – Special text

If the special text mode is active, a new special text object will be placed by a left mouse click. You can change the special text content by doing a right click on the new object, selecting its property window.

The special text properties are described in the chapter „Special text objects“

3.3.5 Menu Tools

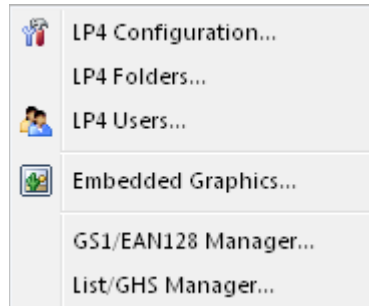


The Tools menu contains the LP4 configuration, the user management, the embedded graphics management, and additional tools for creating GS1/GHS variables:

- LP4 Configuration
Configuration window containing several LP4 settings and the UI language selection
- LP4 Folders
Definition of the LP4 folders (layouts, graphics, external data, configuration files)
- Embedded Graphics
Management of embedded graphics
- GS1/EAN128 Manager (Star- or Premium license needed)
Easy creation of variables with GS1/EAN/UCC-128 content
- List/GHS Manager (Premium license needed)
Easy creation of variables with list/GHS content

3.3.5.1 Menu Tools – LP4 Configuration

Use this command to make changes in the LP4 configuration settings.

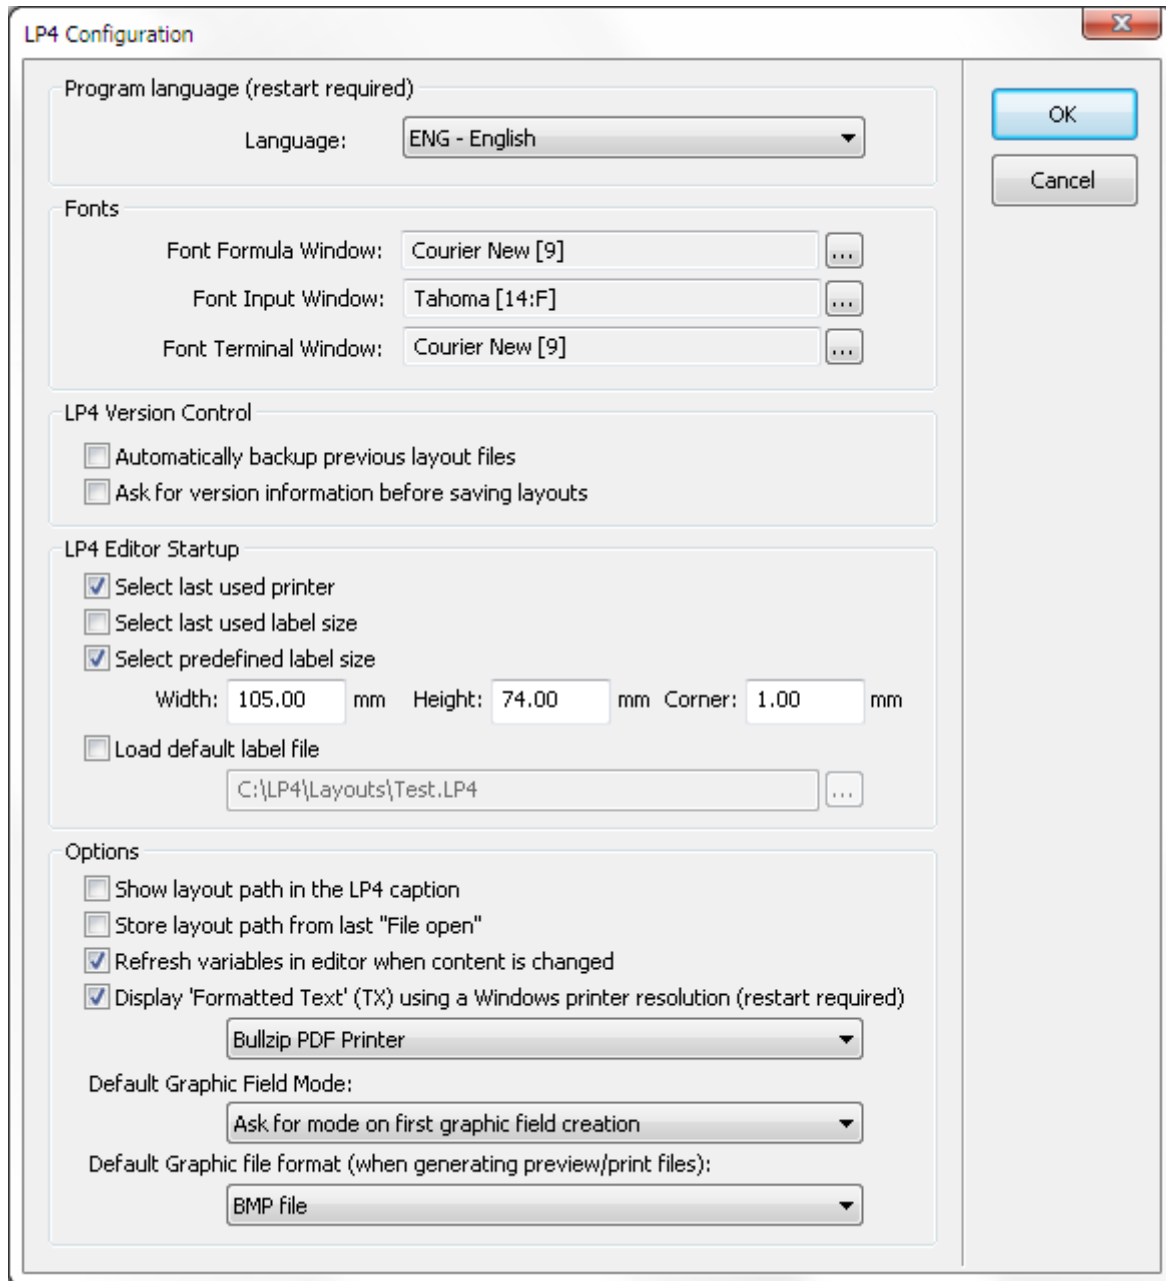

The image shows the 'LP4 Configuration' dialog box. It has a title bar with 'LP4 Configuration' and a close button. The dialog is divided into several sections:

- Program language (restart required):** A dropdown menu showing 'ENG - English'.
- Fonts:** Three rows for 'Font Formula Window', 'Font Input Window', and 'Font Terminal Window'. Each row has a text field showing the current font (Courier New [9], Tahoma [14:F], and Courier New [9] respectively) and a browse button (...).
- LP4 Version Control:** Two checkboxes: 'Automatically backup previous layout files' and 'Ask for version information before saving layouts'.
- LP4 Editor Startup:** Three checkboxes: 'Select last used printer' (checked), 'Select last used label size', and 'Select predefined label size' (checked). Below these are input fields for 'Width: 105.00 mm', 'Height: 74.00 mm', and 'Corner: 1.00 mm'. There is also a checkbox for 'Load default label file' and a text field showing 'C:\LP4\Layouts\Test.LP4' with a browse button (...).
- Options:** Four checkboxes: 'Show layout path in the LP4 caption', 'Store layout path from last "File open"', 'Refresh variables in editor when content is changed' (checked), and 'Display "Formatted Text" (TX) using a Windows printer resolution (restart required)' (checked). Below these are three dropdown menus: 'Bullzip PDF Printer', 'Ask for mode on first graphic field creation', and 'BMP file'.

On the right side of the dialog, there are 'OK' and 'Cancel' buttons.


- **Program language**
Selection of the language used in the LP4 menus and windows. If you change the language, a restart of all LP4 applications is required.
- **Fonts**
You can select the fonts of the Formula, Input and Terminal window.
- **LP4 Version Control**
LP4 can automatically backup the original layout file when the user is saving the layout. The backup files are stored using the filename „filename.LP4.version.LPV“, and can be enumerated and loaded in the Version History window. You can also activate a „version information“ window, which will

appear when saving the label, to ask the user for an additional comment.

- LP4 Editor Startup
You can define here the behaviour of the LP4 Editor after starting up.
- Options
Here you can find several options to adjust the LP4 user interface and functionality.
If the option “refresh variables” is active, all variable contents will be recalculated whenever one variable is changed. You can turn it off, if it slows down your system.

3.3.5.2 Menu Tools – LP4 Folders

Here you can define the folders used by LP4.

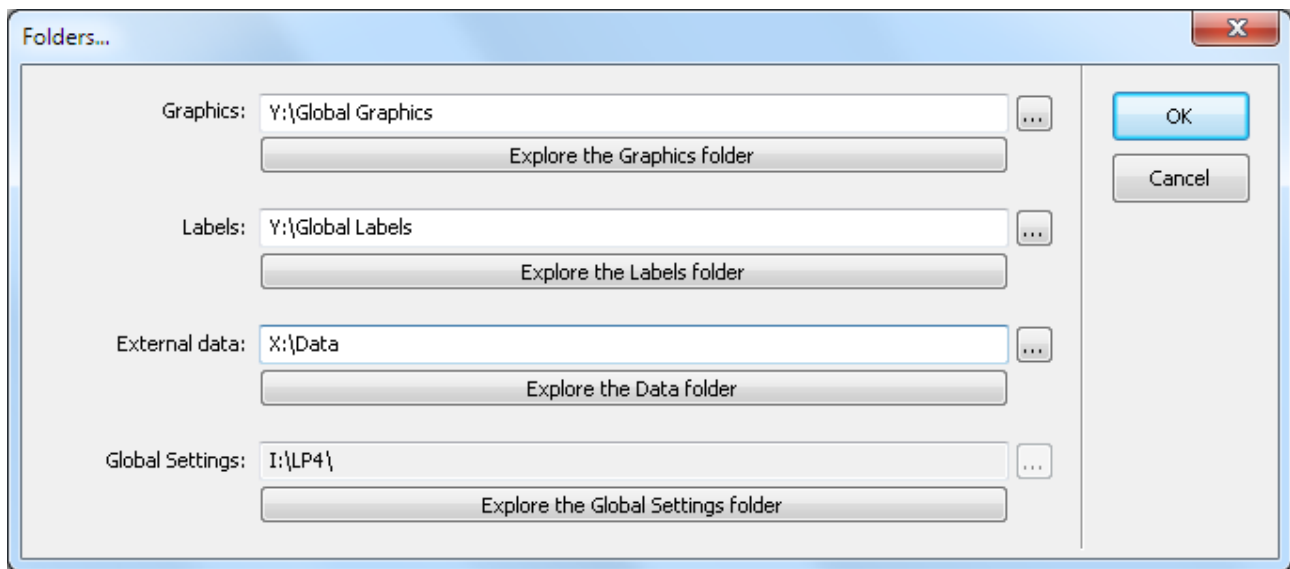

The folder for the Global Settings (LP4 configuration files) cannot be changed in this window. If you want to store the configuration files in a different folder, you need to close all LP4 applications. Then you need to move all files and folder from the currently used application folder to the new folder. Then you need to change the local LP4.INI (=the one in the installation folder) to contain the following entry:


```
[SETS]
Settingspath=X:\My_Configuration_Folder
```

On next startup LP4 will use this folder for its configuration.

3.3.5.3 Menu Tools – LP4 Users

The LP4 user management is disabled by default. In the user management window you can enable this option, and create/change users and their privileges.

There will be always a default user, that means a user without name and password, who will get active on each startup of LP4. This user should have as little privileges as possible. All other users have to get defined by name and password, and depending on their label printing tasks each will have certain rights to use LP4.

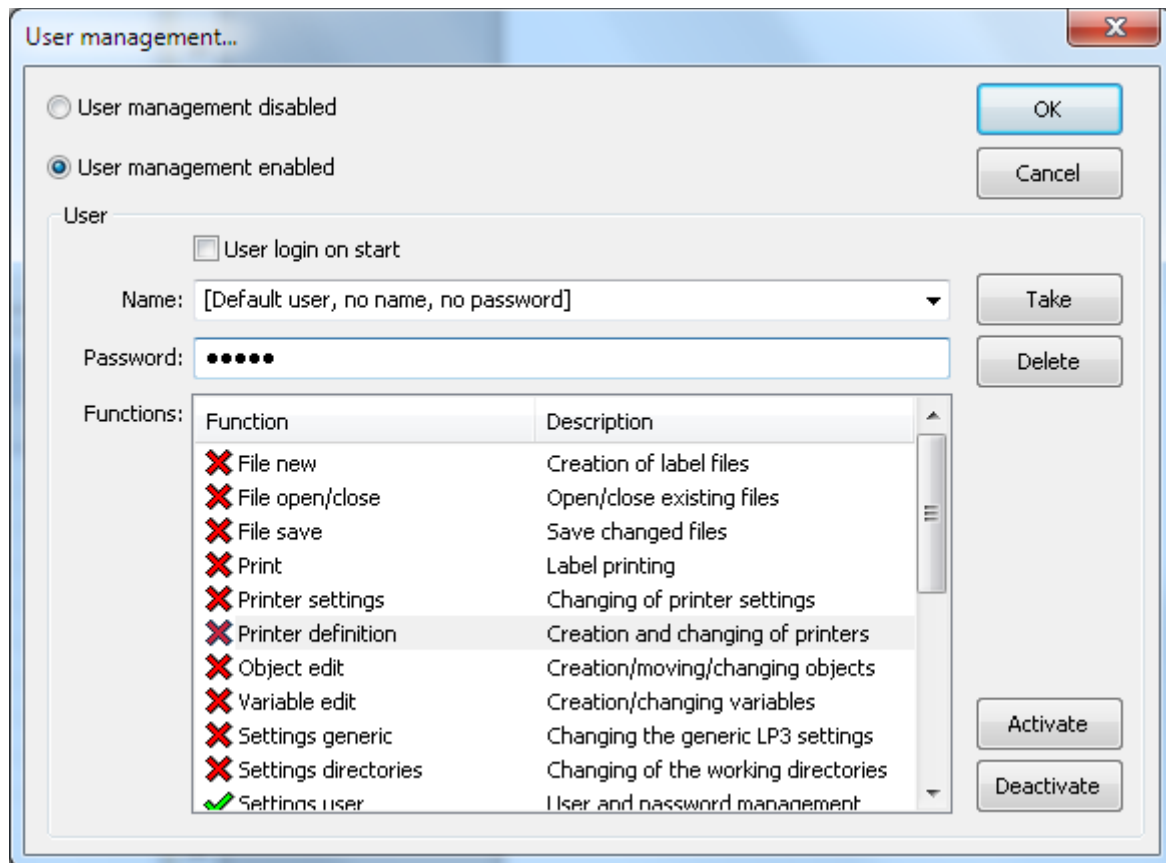


Attention: at least one „administrator“ has to get defined as well. An administrator is a user with the privilege to access the user management window. All other users should not have that privilege, otherwise they will be able to change their (and other user's) rights.

3.3.5.4 Menu Tools – Embedded Graphics

Labels Platform 4 can use graphics as „external“ linked files or as „embedded“ objects. Embedded graphics are useful if you need to prevent changes from the label, even if the original graphic is changed. Such graphics are also useful, since if you transfer the label file, the graphics are automatically included. External linked files are useful, if you are using the same graphic in a couple of label files, for example a company logo. If the logo is changed, the layouts automatically will print the new logo without any additional work needed.

You can define in the „LP4 Configuration“ window which graphic mode you want to use by default. There is also an option to ask the user each time when he creates the first graphic object on a label. Of course you can change the graphic mode later on, each graphic field can be configured individually in the field properties.


External graphic files are selected by a Windows file selection window. Embedded graphics are selected in a special management window, you can reach this window by the Tools menu.

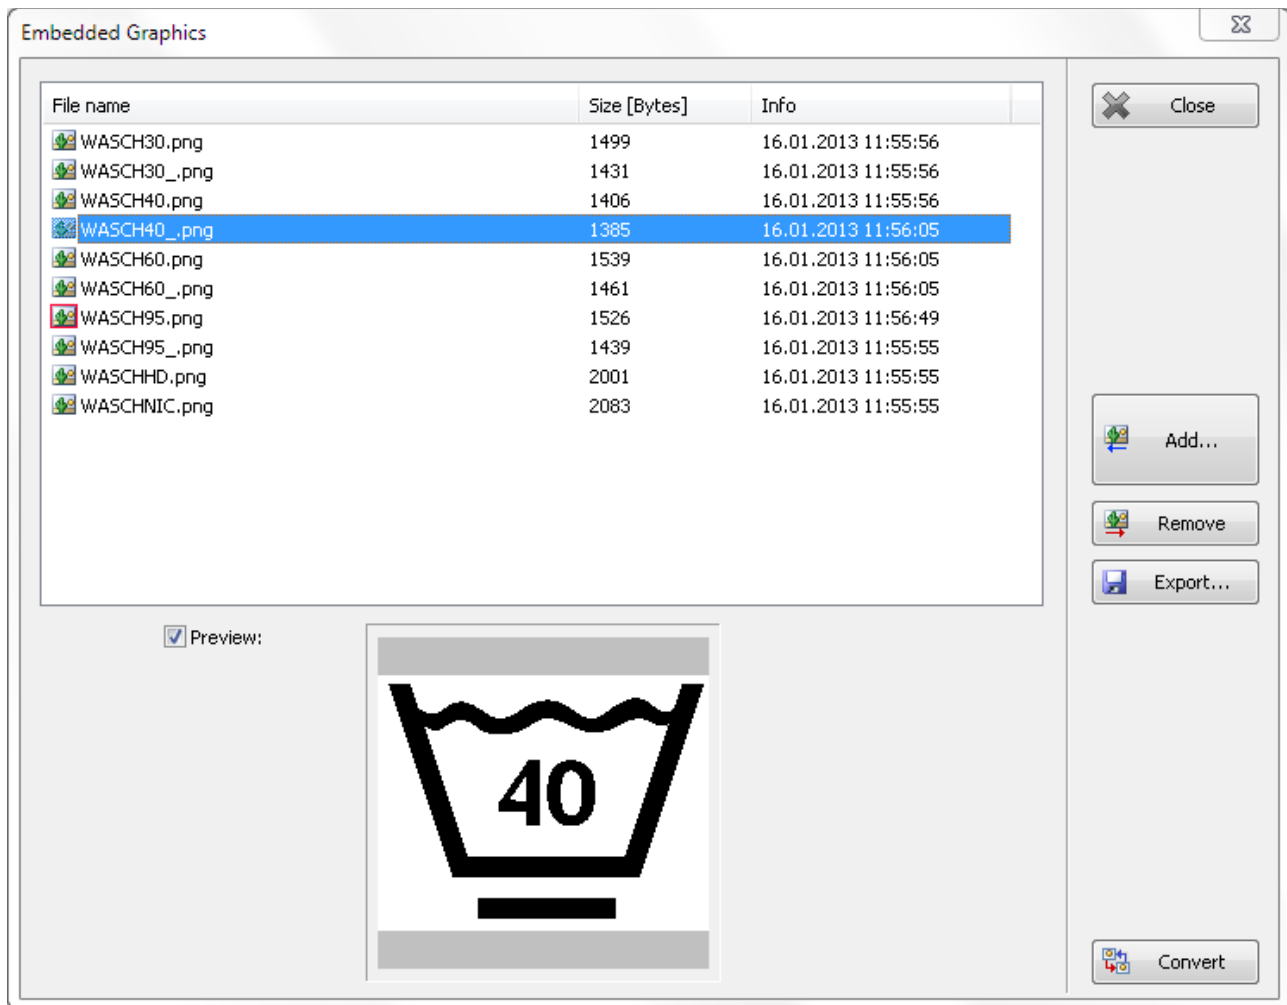

The button „Add...” can be used to import graphics into the label. Newly added graphics are displayed with a red border around their symbol. “Remove” deletes the selected graphic from the label, they cannot be used in graphic fields anymore. With „Export” you can save a graphic as an external file again. “Convert” can be used to change all graphic fields on the label from „external” graphics to „embedded” ones.

3.3.5.5 Menu Tools – GS1/EAN128 Manager

Use this command to start the GS1/EAN128 Manager window. Here you can easily define GS1/EAN/UCC contents which are compliant with the GS1/EAN rules. The manager will create two formula variables, one for barcodes, and one for the optional text field, which can be placed by drag&drop to the label area. Right-clicking an existing formula variable will show a popup menu containing also the GS1/EAN128 Manager entry, so it is even possible to change existing formulas in the manager window.

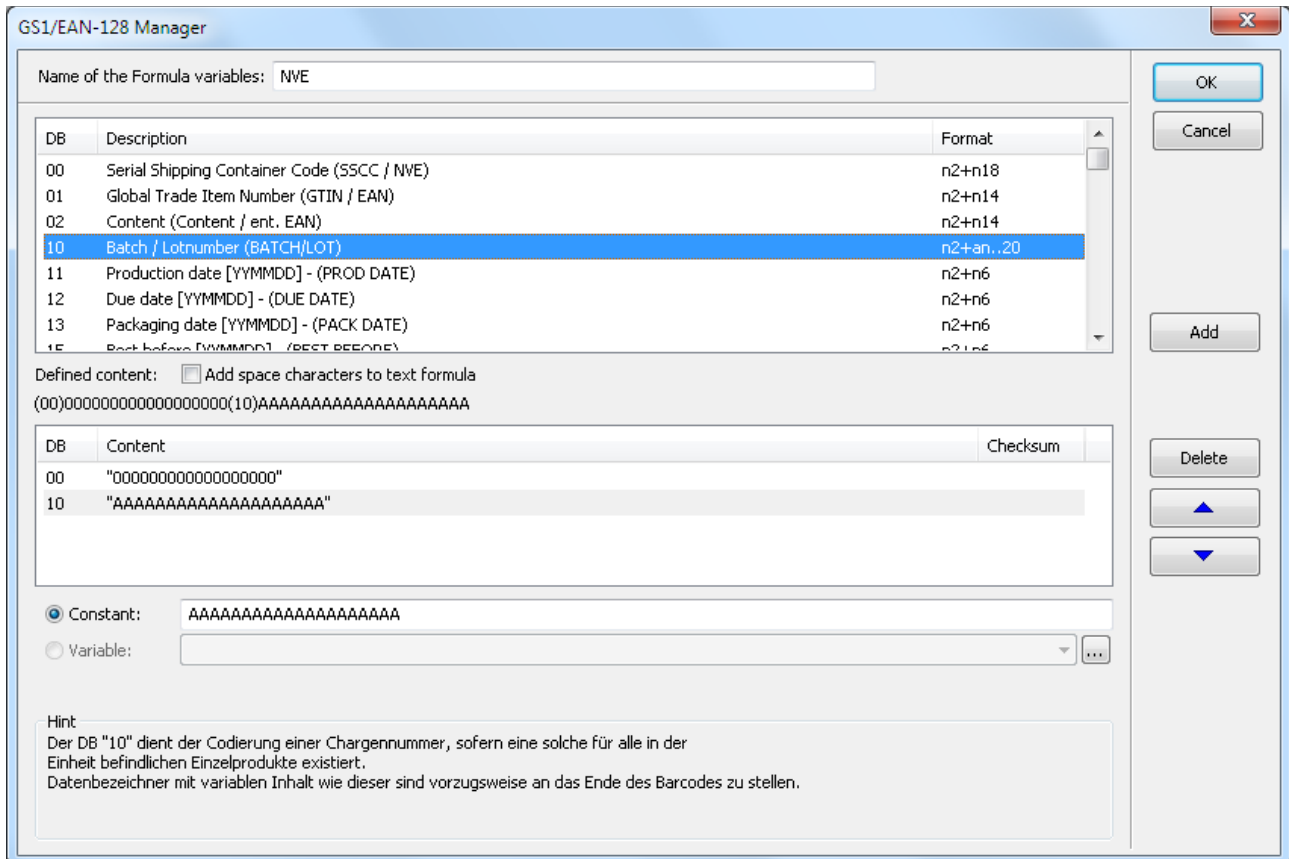

GS1/EAN-128 Manager

Name of the Formula variables: NVE

DB	Description	Format
00	Serial Shipping Container Code (SSCC / NVE)	n2+n18
01	Global Trade Item Number (GTIN / EAN)	n2+n14
02	Content (Content / ent. EAN)	n2+n14
10	Batch / Lotnumber (BATCH/LOT)	n2+an...20
11	Production date [YYMMDD] - (PROD DATE)	n2+n6
12	Due date [YYMMDD] - (DUE DATE)	n2+n6
13	Packaging date [YYMMDD] - (PACK DATE)	n2+n6
15	Best before [YYMMDD] - (BEST BEFORE)	n2+n6

Defined content: ☐ Add space characters to text formula
(00)0000000000000000(10)AAAAAAAAAAAAAAAAAAAA

DB	Content	Checksum
00	"0000000000000000"	
10	"AAAAAAAAAAAAAAAAAAAA"	

☒ Constant: AAAAAAAAAAAAAAAAAAAAAA
☐ Variable: []

Hint
 Der DB "10" dient der Codierung einer Chargennummer, sofern eine solche für alle in der Einheit befindlichen Einzelprodukte existiert.
 Datenbezeichner mit variablen Inhalt wie dieser sind vorzugsweise an das Ende des Barcodes zu stellen.

At the top of the window is an edit field, to enter the unique variable name.

Below this field is a list with all existing GS1/EAN possibilities. By double-clicking (or using the "Add" button) the entry will be moved to the lower list, which is defining the user content.

In this lower list all parts of the defined user GS1/EAN content will be shown. Using the "Delete" button, an entry can be removed from the content, and the arrow buttons will move an entry up/down in the list. If one entry gets selected with the mouse, it is possible to change it: enter a fix text, or select a variable which is delivering the text for this entry. With some DBs it is possible to activate an automatic checksum calculation.

Each time the text/variable of an entry is changed, it will be reflected in the preview area (between both lists). It is also possible to activate a "space character" option, which will adjust the text with space characters (only for the optional text formula, not for the barcode formula, of course).

Pushing the "OK" button will create the two formula variables, one "MyName_BC" and one "MyName_TXT". The "_BC" variable will hold the barcode informations (fe with FNC1 characters), the "_TXT" variable will hold the user readable text (with brackets and optional space characters). The variables can now be placed on the label, using Drag&Drop or the property settings of text/barcode objects.

3.3.5.6 Menu Tools – List/GHS Manager

Use this command to start the List/GHS Manager window (Premium version only). Here you can define GHS texts in different languages, which can get used in LP4 text fields.

The Manager will create several LP4 List/GHS variables containing the texts (usually one List/Risk variable will hold one language), the variables can be used in standard text fields or formatted special text fields.

Right-clicking an existing List/GHS variable will show a popup menu containing also the List/GHS Manager entry, so it is even possible to change existing List/GHS variables again in the manager window.

The screenshot shows the 'List/GHS Manager' dialog box. At the top, there's a text field for 'Name of List/GHS variables' containing 'Test'. Below it is a dropdown for 'ODBC data source' set to 'LP4RS'. The main area is divided into two lists: 'Available languages' (BG_HP, CS, CS_HP, DA_HP, DE, DE_HP) and 'Selected languages' (BG_HP, CS_HP, DE_HP), with buttons for adding, removing, and reordering. Below these is the 'List/GHS Selection' section with radio buttons for 'variable' and 'fix'. The 'fix' option is selected, and below it is a table with columns 'Number' and 'Text' containing hazard statements like 'EUH 201/201A' and 'EUH014'. At the bottom, there are 'Display options' including 'Replace Word break character' (checked) and 'Use unicode hex encoding' (unchecked), and a 'List/GHS mode' dropdown set to '1: One variable each language (no number, only text)'.

At the top of the window is an edit field, to enter the unique variable name. This name will be used for creating the List/GHS variables.

Below is the selection of the database. LP4 will install an Access-database "LP4RS" which can be instantly used. But it is also possible to use different databases.

The next section shows all available languages from the database. You can select multiple languages in the list, by pressing the green arrow button the selection will be confirmed. The red cross will remove languages from your selection, while the blue arrows can be used to change the order of the languages.

Below you can select the codes in a similar way as the languages, or you can specify that the codes will come from another LP4 variable. The LP4 variable can hold multiple codes by separating the codes with a ";" character: „R 1;R 52/53;S 25“.

The display option „Replace word break character X with character Y” can be used to remove the LP4RS wordbreak character („}“ = ASCII 125), or to replace it with a different character. That can be used with formatted special text fields: this field types can do an automatic word break, but it needs the (not displayable) ASCII 31 character. Therefore you can set the option „Replace word break character 125 with character 31” to get an optimal display with formatted special text fields.

The option „Use unicode hex format” is only needed for compatibility with existing LP3 layouts; in LP4 all texts will be handled in Unicode.

The last option will tell the List/GHS manager what kind (and how many) variables have to be created:

- "1: one variable for each language (no number, only text)"
- "2: one variable for each language (number with space separated from text)"
- "3: one variable for each language (number with tab separated from text)"
- "4: one variable holding all numbers, and one variable in each language for texts"
- "5: two variables for each language (number and text separately)"

"6: one variable for each language and code (number with linebreak separated from text)"

"7: two variables for each language and code (number and text separately)"

Some List/GHS examples can be found in the LP4 sample label files.

3.3.6 Menu Addons



The Addon menu offers commands to start special (sometimes optional) LP4 applications.

- **BBK Quick Support**
Tool for the BBK support team for Remote Access
- **Serial number tool**
Adding a LP4 license to your installation
- **Format Manager**
Special solutions for storing label formats into the printers
- **Printjob Manger**
An application for defining lists of multiple printjobs
- **Database Manager**
The database manager offers an easy access to ODBC databases.

3.3.6.1 Menu Addons – **BBK Quick Support**


The BBK Quick Support tool enables your BBK support partner to access your PC by an internet connection.



You are in full control: only if the tool has been started by you, and you are telling the random access password to your support partner, he will be able to connect. As soon as you close the tool, he will not be able to connect anymore.


3.3.6.2 Menu Tools – Serial number tool

For each LP4 Dongle or Computer-ID you will get a 20 digit serial number containing your license information. If LP4 detects on start up that you do not have a valid license, it offers to proceed in DEMO mode, or to start the serial number tool.

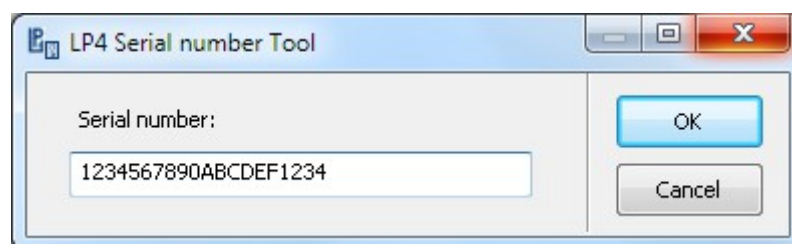


Please enter your serial number and press OK, this will save the number in your LP4 configuration files. If the license number is not valid, an error message is displayed.

If you have a software-only license (without Hardlock Dongle), you need to tell your BBK Support partner your Computer-ID. The serial number tool can calculate your Computer-ID by using the system menu item "Computer-ID":

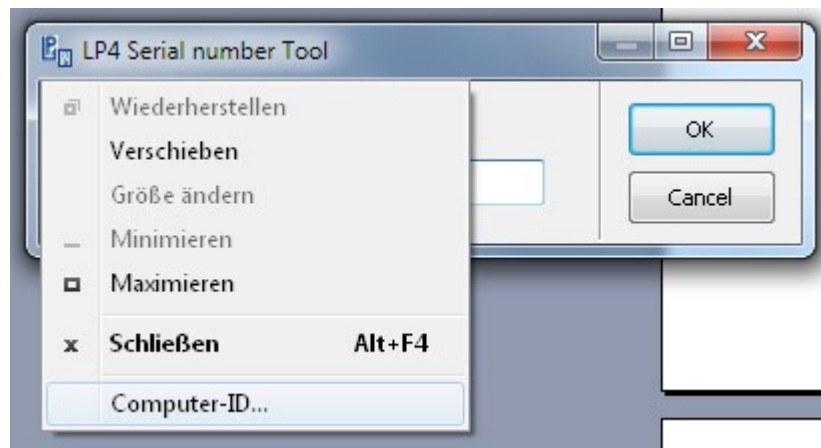

In the following window the Computer-ID is shown. You can copy the ID to the Windows clipboard, for example to send it by email to the BBK support.:

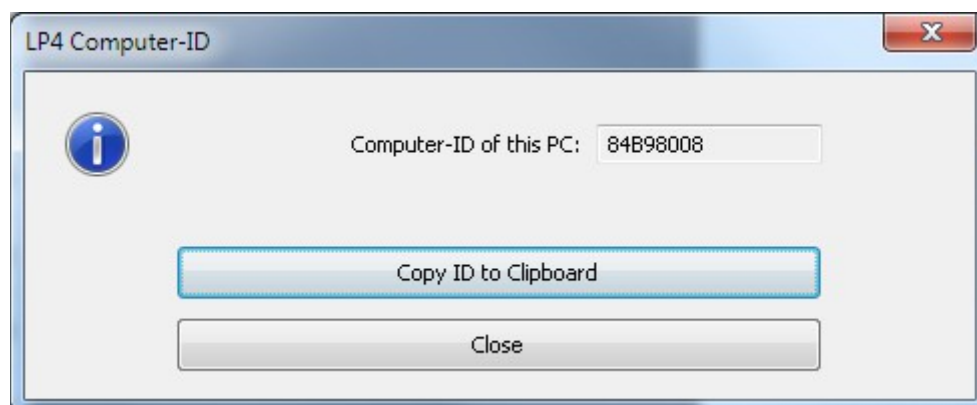

3.3.6.3 Menu Tools – **Format Manager**

If you have a PREMIUM license, you can use the LP4 Format Manager to store layout files inside the printer memory (flash memory). Those formats can be recalled in different ways, depending on the printer capabilities.

You can find further information in the chapter “LP4 Format Manager”

3.3.6.4 Menu Tools – **Print job Manager**

The Print job Manager is a tool for defining complete job lists which need to be printed. The job list can be set to one or more printers, the LP4 Spooler will execute the jobs one after each other (printers need to be connected with a bi-directional interface).

You can find further information in the chapter “LP4 Print job Manager”

3.3.6.5 Menu Addon – **Database Manager**

The LP4 Database Manager (short: DM) is a stand-alone application, and can be started from the menu item, or by its Windows shortcut.

LP4DB:LP4DB - LP4 Database Manager

File Edit View Settings Help

All data records are displayed

Filter records...

ArtikelID	Etikett	Stückzahl	Artikeltext	Bezeichnung	Preis
500000	LP4_ET2LP4	1	DRUCKKOPF.TTD	10612M, Druckkopf Z-220/221	1303.80
500263	LP4_ET2LP4	1	GUMMIROLLE.TTD	899103, Roller Label Drive 112/112+	48.60
500384	LP4_ET2LP4	1	GUMMIROLLE.TTD	CV6800 10.04.15	50.00
500479	LP4_ET1LP4	1	SCANNER.BARCODE	Metall-Lesestift P51R-22	126.80
500490	LP4_ET2LP4	1	KABEL.EDV	CAB101, Tastatur XT/AT 5pol für DPS Decoder	44.40
501052	LP4_ET2LP4	2	ZAHNRAD.TTD	899164, Pulley24Groove Timing	7.20
501054	LP4_ET3LP4	2	ZAHNRAD.TTD	899279, Pulley44GrTiming 112/112+	10.70
501056	LP4_ET2LP4	5	STELLRING.TTD	Collar 5/16 899256 112+	10.70
501057	LP4_ET2LP4	1	RIEMENSPANNER.TTD	899608, Assy-Tensioner-Lower 112+	19.90
501058	LP4_ET2LP4	5	STELLRING.TTD	Collar-Set Screw.375 899230 112+	9.70
501294	LP4_ET1LP4	1	HANDBUCH.TTD	Z-105 Service-Handbuch	55.00
501507	LP4_ET2LP4	1	ADAPTER.EDV	Gender-Changer RA734-25 Stecker	10.70
501508	LP4_ET2LP4	1	ADAPTER.EDV	Gender-Changer RA735-25 Buchse (beidseitig)	10.70
501509	LP4_ET2LP4	2	ZAHNRIEMEN.TTD	45189-3, Belt 175T(30189-3) Z130/90	12.50
501512	LP4_ET2LP4	1	KABEL.EDV	1819, 25-po ST-BU 2m Verl.-Kabel	14.10
502069	LP4_ET2LP4	1	GUMMIROLLE.TTD	30001, Platen Shaft Z90A,91	55.40
502070	LP4_ET1LP4	1	AUFWICKLER	Z140/140xi/140xiII intern	470.40
502084	LP4_ET2LP4	2	KUGELLAGER.TTD	30145, BracketThru. Z90/91/105/140/Xi-Serie	1.00
502126	LP4_ET1LP4	1	CODESOFT	Update Codesoft 5 Ent > 6 Enterprise	340.00
502150	LP4_ET2LP4	5	FILZRING.TTD	Washer13/16 30041-6 Z91/105/140	0.30
502151	LP4_ET2LP4	5	FILZRING.TTD	Washer.Fel 30041-4 Z91/105/140	0.40
521181	LP4_ET1LP4	1	TTD	Eltron TLP 2722	740.00
521303	LP4_ET1LP4	1	CODESOFT	Update Codesoft 4 Lite > 6 Premier	383.00
521304	LP4_ET1LP4	1	CODESOFT	Update Codesoft Druckv. 4 > 6	170.00
521338	LP4_ET2LP4	1	LICHTSCHRANKE.TTD	Media Bracket Zebra S600/S400 Etikettenaufhängung	9.00
521362	LP4_ET2LP4	2	ZAHNRIEMENSCHLEIBE.TTD	30336-IM, Pulley RTU 170xiII	60.50
521363	LP4_ET2LP4	4	SICHERUNGSRING.TTD	30118, E-Ring 170xiII	0.30
521364	LP4_ET2LP4	5	UNTERLEGSCHEIBE.TTD	30114, Washer flat 170xiII 76X.51X.03	0.80

Ready Nr.: 11 Count: 67 CAP NUM

On DM startup an „open“ window will appear, in which you can select an existing database/table. There is also an option „open this database on next startup“, if this option is activated the current database/table will get opened on the next startup without asking the user. Of course you can still open another database/table from the DM application menu. Some data sources (like MS Excel) are not showing internal tables (system tables or tables defined by the DB administrator) by default. You can see those table names by activating the option „Show all tables“.

The loaded table will be displayed in the DM as a list. One set of data is one column in this list, if you select a data set with a left mouse click, it will be displayed in a different color:


501052	LP4_ET2LP4	1	ZAHNRAD.TTD	899164, Pulley24Groove Timing	7.20
501054	LP3_ET2Lbf	2	ZAHNRAD.TTD	899279, Pulley44GrTiming 112/112+	10.70
501056	LP2_ET2Lbf	5	STELLRING.TTD	Collar 5/16 899256 112+	10.70

If you do a double mouse click on a data set, the print window will appear, a right mouse click will show you the chosen data set in the „sheet view“, you can edit/delete/etc the data that way.

Note: you can only edit/delete/create data sets, if the DM knows the primary key of the table. Usually the DM will autodetect the primary key, but if there is no key defined for this table, the user has to select an unique data field manually (menuitem „Settings“ -> „Field assignment“) before he is allowed to edit a data set.

So it is possible to open any existing table, and to use it as a printing source. If you change certain settings of the table (for example the row sizes, or the colors), this values will get stored in the local LP4DBManager.ini file, the DM will use this stored values automatically on next startup.

You can also define specials „views“ to the database data, the „view“ definition is also stored in the INI file:

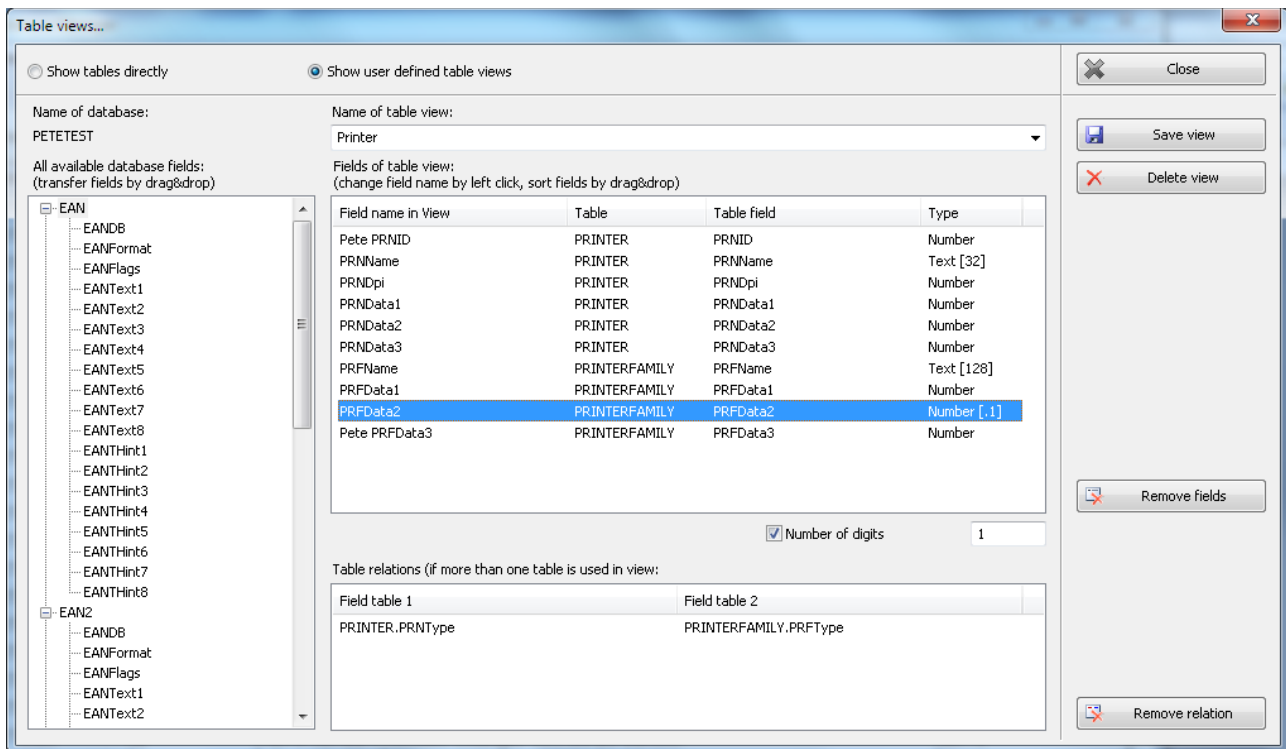

A „table view“ is a collection of fields from one or more tables of the database. For example two tables „Addresses“ and „Contacts“ can be used at the same time, if they are having two related fields (one field of table „Contactes“ has the key information for table „Addresses“). It is also possible to define a view with just one table, for example if you want the user just to see certain fields of a table, or if you want to define your own field order. You can use views like normal tables in LP4, but often it is not possible to edit/create data records in such views.

If you have one table (or a view containing fields of one table including the key field), you can use the DM to edit/create the data content. To edit an existing data set, the user can select the „Sheet view“ or by right clicking a data set. The sheet view enables you to change the data by selecting a field by a mouse click, and entering the new values. Even big memo fields can be easily changed that way. Advanced users can do all commands by keyboard, „TAB/ SHIFT TAB“ will jump to the next/previous data field, „ESC“ will restore a changed data field. The changes will be saved at the time when the user is selecting the „save“ toolbar button, or if he is scrolling to the next data set, or if he is changing from sheet view to table view again. Before storing the new data, the DM will always ask if the user wants really to save the data. Additional hint: if you want you can configure the edit mode to jump into the next edit field by pressing the ENTER key: add the entry [Settings] EditEnterJump=1 to your LP4DBManager.ini configuration file.


It is very easy to create a label with database connections: simply open the data source in the DM, use the menuitem „variable definitions“, and a window with all table row names will appear. Simply drag&drop one (or more) names from this window to a LP4 label window.

By doing this drag&drop operation, LP4 will create a) the correctly configured database variables, and b) text/barcode/graphic fields connected to that variables. You only have to save the label, and it will be ready to use with the DM.

Even more powerful is the creation of table variables, if you want to use your table as a source for address labels, which will print on each label a different data set. Simply do the same drag&drop procedure as before, select all data field names you want to print. Now you will not only get the proper table variables, but also different helper variables (a formula variable for changing the label quantity and database variables for DM-queries).

A label with such automatically created variables will work in the following way:

The user can select all or just a part of the current table data by using the “Filter records” option, and he can sort the records by clicking at the column headers.

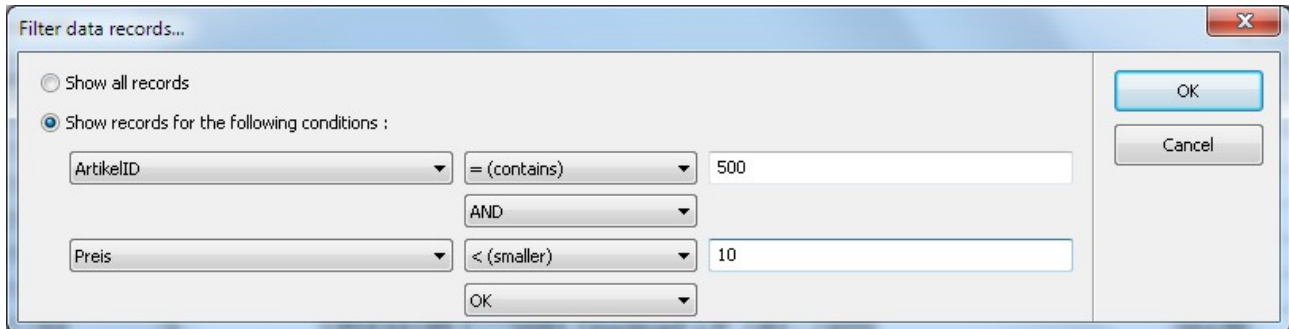

When the user now chooses „Print“, and selects the label he has created by drag&drop table variables, the print job can be started. The printer will be the default printer of the selected label (it is also possible to put the printer name into a table field or to set a “DM default printer” by putting [SETTINGS] Printer=... into the LP4DBManager.ini). The print quantity will be calculated automatically: the print job will print exactly as much labels as selected data sets, and each label will have the data from one data set. In our example all the Berlin customers will get printed, in the order of the company names. If you want to have the Print window closed after print start automatically, you can use the [SETTINGS] PrintAutoClose=1 entry.

The filter is also useful for deleting a range of data sets at once. The menuitem “Edit” > “Delete all” will delete all currently filtered data sets.

Additionally you can use the filter to generate “n” single printjobs at once, each job can have a different printer or layout or count (if this informations are stored in the table). Simply click on „Print all“ in the menu, in the following window you can define if the jobs should use the same layout/printer/batch count, or if this data is stored individually for each data record. By clicking „Print“ n print jobs will get generated and spooled to the printer(s), each job has the data of one of the table records. Therefore this printing is similar to the printing with table variables, but it will generate multiple jobs (if needed on multiple printers with different layouts) instead of just one job. And of course the layouts need to use database variables instead of a table variable.

3.3.6.6 Menu Addon – Format Manager


The PREMIUM version of LP4 offers additional special solutions, called Format Managers. This application can be used to store label formats directly into the printers (different Zebra or Intermec solutions are available), to integrate the printers closely in production lines, without the need for a PC.

If a Format Manager exists, it’s menu item is available, which you can use to start the application.

Further details can be found in the chapter “LP4 Format managers”.


3.3.7 Menu Window

The Window menu offers commands to handle the multiple label windows:

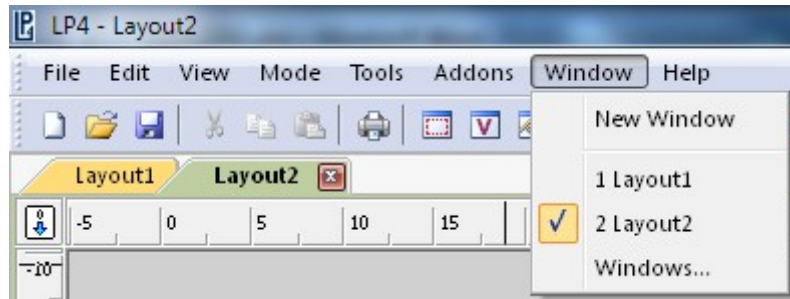

You can also switch between different open layout by left-clicking on the colored tabs in the editor area.

3.3.8 Menu Help

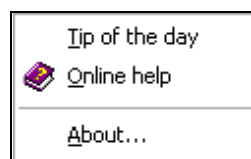

The Help menu contains the following commands:

- Help Topics
Starts the LP4 online help
- About
Displays the copyright information and version number of LP4

4 Label objects

4.1 Generic

A LP4 label layout contains printable or not printable label objects, objects which are showing a certain content or having a special function.

A label object can be placed in the label area by selecting the wanted object mode from the Mode menu or toolbar, and by left clicking the label area. Depending on the object type the user has to hold down the left mouse button to move/size the object, or a special window does appear. Text objects will show a colored text cursor for entering the desired text by keyboard.

Designing a label means to create and arrange the needed label objects on the available label area. LP4 offers a wide range of tools and properties for manipulating existing label objects. To manipulate/change an object, you have to select it first. You can do that by activating the „Select“ mode, and clicking on one or more objects. After you have done a selection, the properties are shown in the dockable Properties window.

The following label objects and properties are available:


4.2 Lines

4.2.1 Description - Line

Lines can have every possible angle in Labels Platform 4. If a native label printer only supports vertical and horizontal lines directly, all other line types will be downloaded as graphic symbols to the printer (can cause a slower label download time).

To create a line, you have to activate the line mode, and left-click on a free label area. Now you have to hold the mouse button down and move the mouse to the second line point. By default LP4 only creates lines in 45° steps. To create another angle you need to press the SHIFT key while creating the line object.

4.2.2 Properties - Line

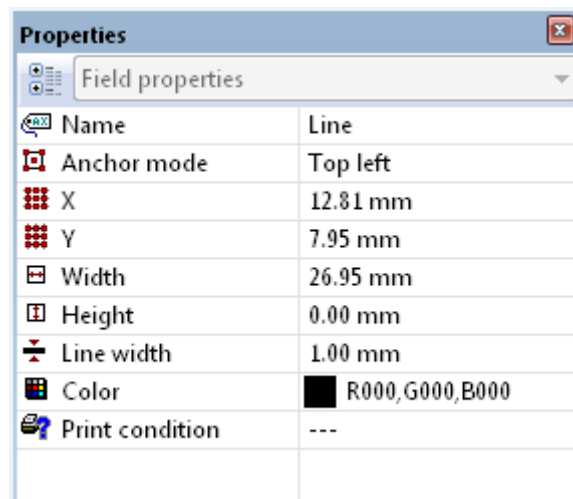

Name

The name of the line. The name is empty by default, but if you want to access the object in a LP4 formula, you have to enter a unique name for it.

Anchor mode

Depending on the anchor mode the x/y coordinates will be displayed differently.

X/Y/Width/Height

The line has a starting and an ending point. The exact point coords can be entered here.

Line width

The width of the line in [mm]

Color

The color of the line (note: colors are only supported on color printers)

Print condition

If you have enabled a print condition, the object gets only printed, if the condition is fulfilled at the time when the print job starts.


4.3 Rectangles

4.3.1 Description - Rectangle

Rectangles can have rounded corners, and can be filled.

To create a rectangle, you have to activate the rectangle mode, and left-click on a free label area. Now you have to hold the mouse button down and move the mouse to the second rectangle corner point. If you want to have a quader with the same width and height, you can press the SHIFT key while creating the object.

4.3.2 Properties - Rectangle

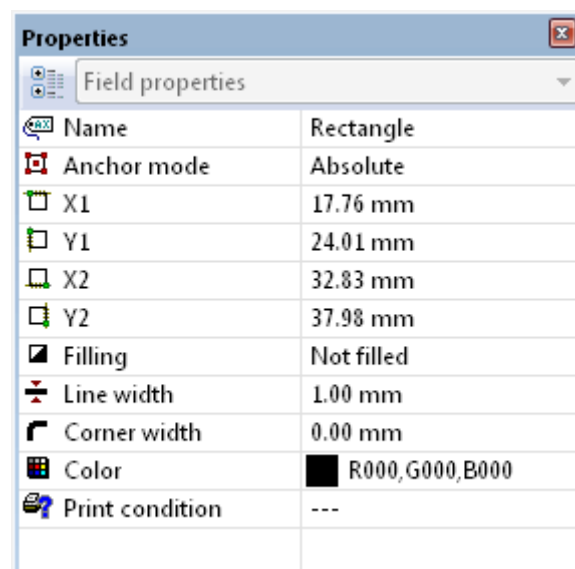

Field properties	
Name	Rectangle
Anchor mode	Absolute
X1	17.76 mm
Y1	24.01 mm
X2	32.83 mm
Y2	37.98 mm
Filling	Not filled
Line width	1.00 mm
Corner width	0.00 mm
Color	R000,G000,B000
Print condition	---

Name

The name of the rectangle. The name is empty by default, but if you want to access the object in a LP4 formula, you have to enter an unique name for it.

Anchor mode

Depending on the anchor mode the x/y coordinates will be displayed differently.

X/Y/Width/Height

A rectangle is defined by its top left and right bottom corner points. Sometimes it's helpful to just enter the coords of one corner point, and to specify the width/height of the object. That can be done by selecting a different anchor mode.

Filling

A rectangle have different filling types:

not filled (rectangle will be displayed as four lines)

Completely filled (using the selected color)

Fine pattern (will be generated as graphic on most native label printers)

Medium pattern (will be generated as graphic on most native label printers)

Rough (will be generated as graphic on most native label printers)

Inverted (not available on all label printers)

Line width (if no filling is active)

The width of the four lines in [mm]

Corner width

You can create a rectangle with rounded corners by entering a corner width in [mm]. This rectangle type will be generated as graphic on most native label printers.

Color

The color of the rectangle (note: only supported on color printers)

Print condition

If you have enabled a print condition, the object gets only printed, if the condition is fulfilled at the time when the print job starts.


4.4 Crosses

4.4.1 Description - Cross

Crosses are two lines, connected in the center.

To create a cross, you have to activate the cross mode, and left-click on a free label area. Now you have to hold the mouse button down and move the mouse to the second cross corner point. If you want to have a cross with the same width and height, you can press the SHIFT key while creating the object.

4.4.2 Properties - Cross

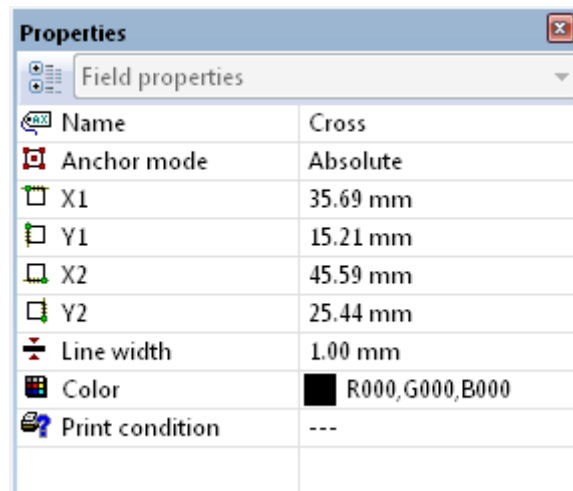

Name

The name of the cross. The name is empty by default, but if you want to access the object in a LP4 formula, you have to enter an unique name for it.

Anchor mode

Depending on the anchor mode the x/y coordinates will be displayed differently.

X/Y/Width/Height

A cross is defined by its top left and right bottom corner points. Sometimes it's helpful to just enter the coords of one corner point, and to specify the width/height of the object. That can be done by selecting a different anchor mode.

Line width

The width of the two lines in [mm]

Color

The color of the cross (note: only supported on color printers)

Print condition

If you have enabled a print condition, the object gets only printed, if the condition is fulfilled at the time when the print job starts.


4.5 Circles

4.5.1 Description - Circle

Circles can be of any width and height, and they can be filled as well.

To create a circle, you have to activate the circle mode, and left-click on a free label area. Now you have to hold the mouse button down and move the mouse to the second circle corner point. If you want to have a quader with the same width and height, you can press the SHIFT key while creating the object.

4.5.2 Properties - Circle

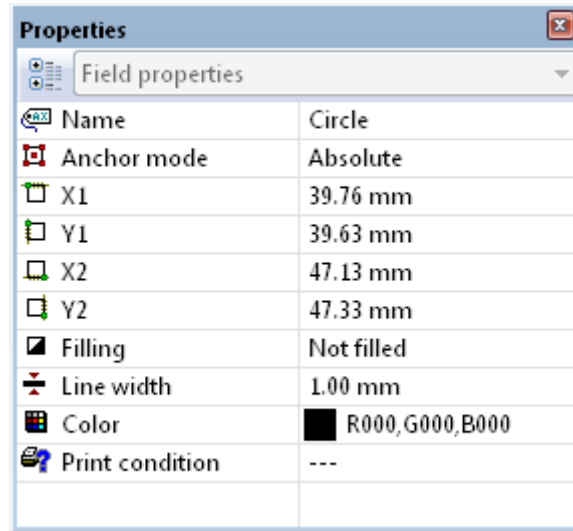

Name

The name of the circle. The name is empty by default, but if you want to access the object in a LP4 formula, you have to enter an unique name for it.

Anchor mode

Depending on the anchor mode the x/y coordinates will be displayed differently.

X/Y/Width/Height

A circle is defined by its top left and right bottom corner points. Sometimes it's helpful to just enter the coords of one corner point, and to specify the width/height of the object. That can be done by selecting a different anchor mode.

Filling

A circle has different filling types:

not filled (circle will be displayed as a round line)

Completely filled (using the selected color)

Fine pattern (will be generated as graphic on most native label printers)

Medium pattern (will be generated as graphic on most native label printers)

Rough (will be generated as graphic on most native label printers)

Line width (if no filling is active)

The width of the line in [mm]

Color

The color of the circle (note: only supported on color printers)

Print condition

If you have enabled a print condition, the object gets only printed, if the condition is fulfilled at the time when the print job starts.


4.6 Graphics

4.6.1 Description - Graphic


Graphics can be used in many gfx formats. LP4 offers many graphic display properties to adjust the bitmaps as good as possible.

To create a graphic, you have to activate the graphic mode, and left-click on a free label area. Now a window will appear, asking for a graphic file name. If you don't choose a file, and press „Cancel“, no graphic object will be created. Otherwise the graphic will get loaded and displayed. Depending if you are using “external” or “embedded” graphics, the selection window is displayed:


External graphic selection:

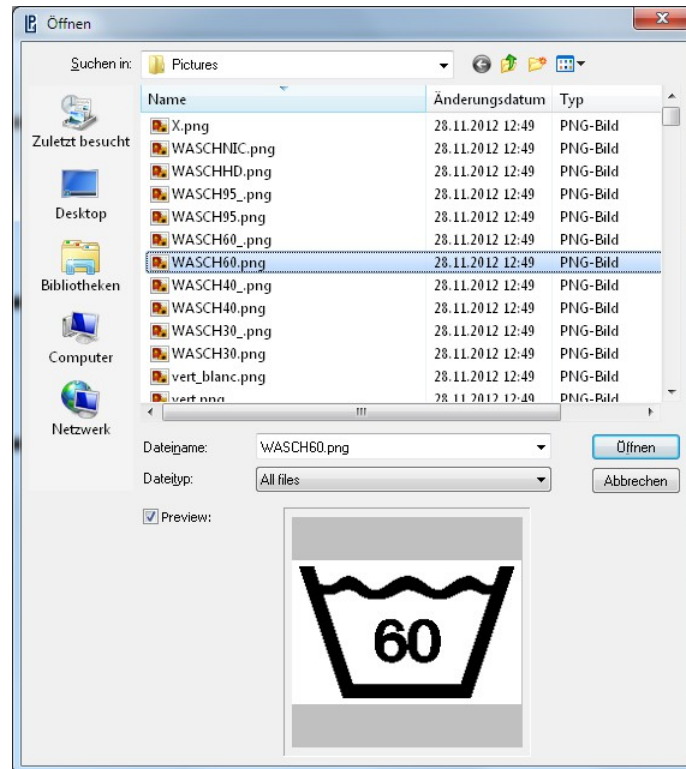

Embedded graphic selection:

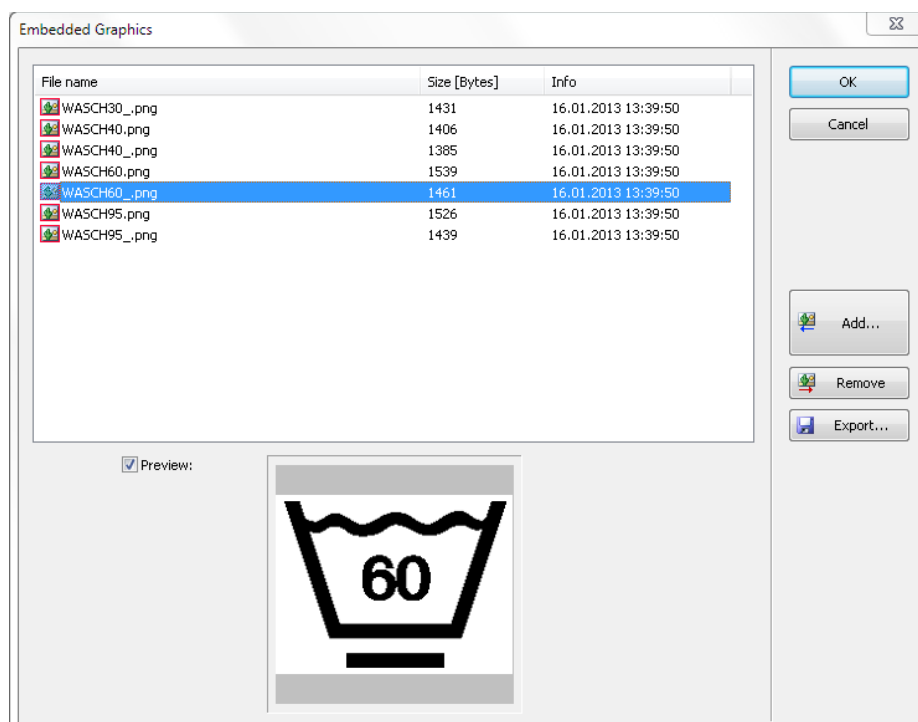

4.6.2 Properties - Graphic

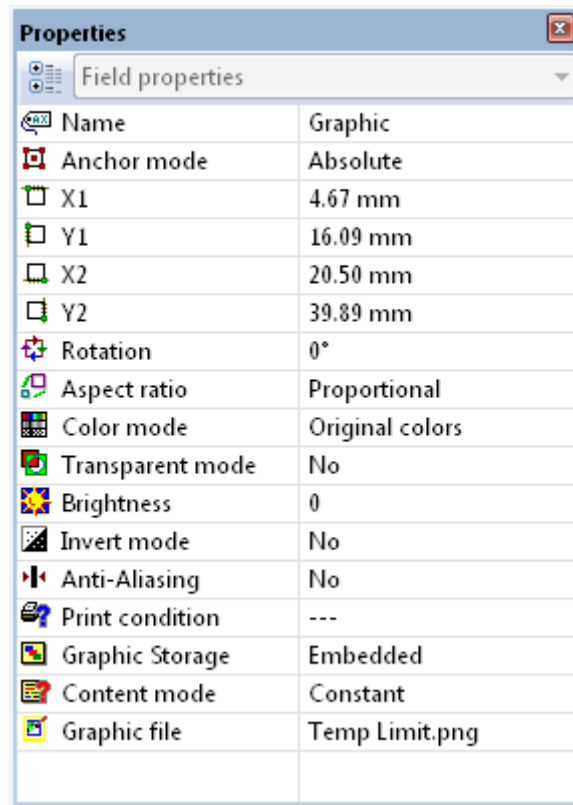

Name

The name of the graphic. The name is empty by default, but if you want to access the object in a LP4 formula, you have to enter a unique name for it.

Anchor mode

Depending on the anchor mode the x/y coordinates will be displayed differently.

X/Y/Width/Height

A graphic is defined by its top left and right bottom corner points. Sometimes it's helpful to just enter the coords of one corner point, and to specify the width/height of the object. That can be done by selecting a different anchor mode.

Rotation

A graphic can get rotated in steps of 90°. There is also a „free rotate“ mode for angles between 0° and 359°

Angle (on „free“ rotations)

The angle value: 0° - 359°

Aspect ratio

If you use a „proportional“ ratio, the graphic can only be sized in a way that the ratio of width and height remains the same. A „1:1“ ratio will show you the graphic in a way that one graphic dot is one printer dot (not sizeable). In the „free“ mode you can select any object height/width you want, but of course the graphic can get heavily distorted that way. The „proportional-anchor“ mode is useful with variable graphics: here the current graphic will be scaled to the defined graphic field, keeping the original width/height ratio.

Color

If you have a color printer, you can of course print colored graphics without problems. On b/w label printer an automatic color conversion will be done, but you can also try to get better results by using a manual color conversion in the graphic properties.

Transparent mode

If the transparent mode is active, a color in the graphic (usually the white color) is transparent. Note: depending on your graphic card this mode can cause slowdowns while editing the label.

Transparent color (if transparent mode is active)

The color of the graphic which should be used for transparency.

Brightness

It is possible to darken/brighten the graphics in 255 steps. The „0“ level displays the graphic without brightness adjustments.

Invert mode

All colors will get inverted.

Anti Aliasing

Edges inside the graphics get smoothed out. This can improve the image quality on color printers.

Print condition

If you have enabled a print condition, the object gets only printed, if the condition is fulfilled at the time when the print job starts.

Graphic storage

Here you can select between external linked files or embedded graphic symbols.

Content mode

The content of a graphic object can be a constant value (file name or name of embedded graphic), but also variables like database values are possible.

Graphic file

Here you can select the graphic file you want to use (constant content). If you have a variable content, the used variable has to give the graphic file name to the object. If the graphic is an external file, the filename can be a full one (using a complete path), or just the name of the file, then LP4 will look for this file in the default LP4 graphic subdirectory.

LP4 is supporting a big number of graphic formats (BMP, PNG, JPG, ...). Also PDF documents can be used as graphical fields, but it is required to install the 32 bit Ghostscript library to use the PDF format (<http://www.ghostscript.com>).

4.7 OLE objects


4.7.1 Description – OLE object

You can place documents of other applications like MSWord or MSeExcel directly as OLE objects into a LP4 label. The linked application will do all the drawing and managing of the object, LP4 just serves as painting area for the external application.

If you create an OLE object by left clicking at the label area, the standard MSWindows „OLE linking“ window will open. You can select an application or document file in this window. If you use a document file, the object will not get saved inside the LP4 label file, only a link to this file will be stored.

Hint: if the label display is rotated (90°/180°/270°), showing OLE objects in the label area may get very slow (depending on the PC). LP4 will reduce the image quality inside the editor window to speed up the drawing, but the best option is to turn the label design to match the OLE rotation.

4.7.2 Properties – OLE object

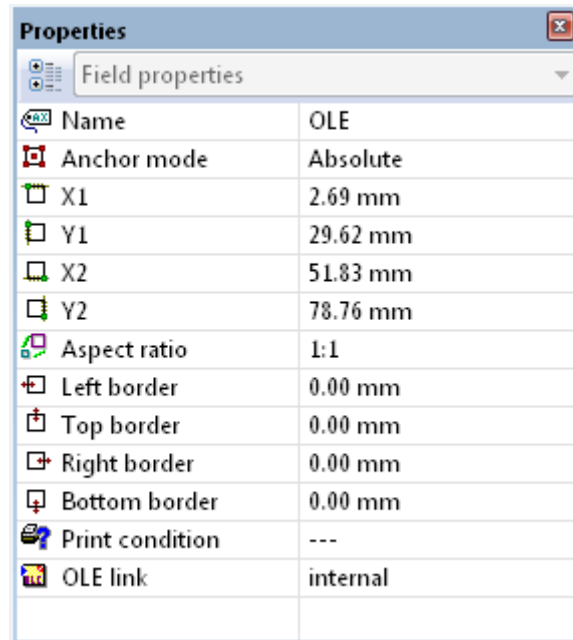

Name

The name of the OLE object. The name is empty by default, but if you want to access the object in a LP4 formula, you have to enter a unique name for it.

Anchor mode

Depending on the anchor mode the x/y coordinates will be displayed differently.

X/Y/Width/Height

An OLE object is defined by its top left and right bottom corner points. Sometimes it's helpful to just enter the coords of one corner point, and to specify the width/height of the object. That can be done by selecting a different anchor mode.

Aspect ratio

If you use a „proportional“ ratio, the object can only be sized in a way that the ratio of width and height remains the same. A „1:1“ ratio will show you the object in a way that one graphic dot is one printer dot (not sizeable). In the „free“ mode you can select any object height/width you want, but of course the graphic can get heavily distorted that way.

Left/Top/Right/Bottom border

Sometimes it is needed to adjust the area of the displayed OLE object. Positive border values will decrease the display area of an OLE object, negative border values will increase the area.

Print condition

If you have enabled a print condition, the object gets only printed, if the condition is fulfilled at the time when the print job starts.

OLE link

If you want to edit the embedded object, selecting this property will start the linked application for this object.

4.8 Deadzones


4.8.1 Description – Deadzone

Deadzones are no printable objects, they influence other objects which are touching the deadzone rectangle instead.

Deadzones can a) switch objects which are touching the deadzone area to „no-printable“, b) limit floating text fields, to define „no-printable“ areas inside of the text.

To create a deadzone, you have to activate the deadzone mode, and left-click on a free label area. Now you have to hold the mouse button down and move the mouse to the second deadzone corner point.

4.8.2 Properties – Deadzone

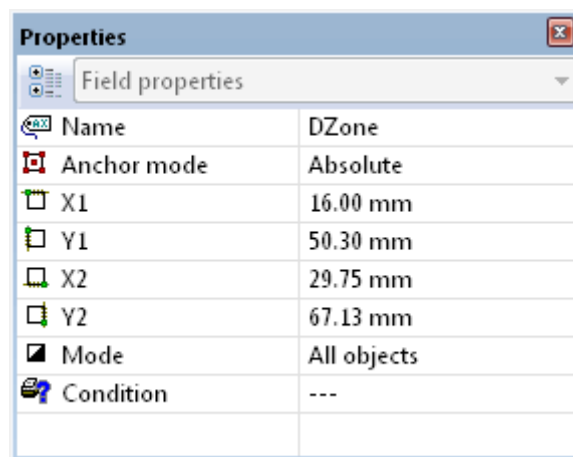

Name

The name of the deadzone. The name is empty by default, but if you want to access the object in a LP4 formula, you have to enter an unique name for it.

Anchor mode

Depending on the anchor mode the x/y coordinates will be displayed differently.


X/Y/Width/Height

A deadzone is defined by its top left and right bottom corner points. Sometimes it's helpful to just enter the coords of one corner point, and to specify the width/height of the object. That can be done by selecting a different anchor mode.


Mode

„All objects“ will affect all objects touching the deadzone areas, „float texts“ will only affect the content of floating text fields. There are different types of floating text regulation:


- Float text (rectangle)

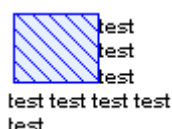


- Circle

 


- Straight top left

 


- Straight top right

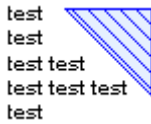


- Straight bottom right

 


- Straight bottom left

 


- Curved top left

 


- Curved top right

 

- Curved bottom right

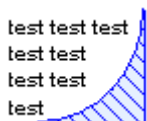

- Curved bottom left

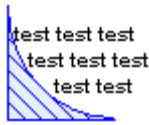

Condition

If you have enabled a deadzone condition, the deadzone will only be active, if the condition is fulfilled at the time when the print job starts.

4.9 Barcodes

4.9.1 Description – Barcode

There are many different types of barcodes available in Labels Platform 4. If a barcode type is fully supported by the label printer, you should use the „Printer barcode“ option to get the best printing quality. Barcodes which are not directly supported by a printer will be generated as graphics, so you should take care to select a module width which is fine for your printer's resolution. Also take note that it's not possible to use counter variable with graphical barcodes on native label printers.

To create a barcode, you have to activate the barcode mode, and left-click on a free label area. A new barcode will be placed on this position, you can now change the barcode type and content by the barcode's property window.

4.9.2 Properties – Barcode

Properties	
Field properties	
Name	Barcode
Anchor mode	Absolute
X1	51.31 mm
Y1	49.42 mm
X2	73.81 mm
Y2	72.75 mm
Barcode type	GSI-128
Printer barcode	No
Module width	0.25 mm
Text line	Yes
Fonttype	Courier New
Text size (0=auto)	0
Text position	Bottom
Additional checksum	None
Bearer lines	No
Rotation	0°
Color	R000,G000,B000
Print condition	---
Content mode	Constant
Content	12345678

Name

The name of the barcode. The name is empty by default, but if you want to access the object in a LP4 formula, you have to enter an unique name for it.

Anchor mode

Depending on the anchor mode the x/y coordinates will be displayed differently.

X/Y/Width/Height

A barcode is defined by its top left and right bottom corner points. Sometimes it's helpful to just enter the coords of one corner point, and to specify the width/height of the object. That can be done by selecting a different anchor mode. Please note, that not every barcode with is possible, it depends fully on the barcode type and its content.

Rotation

You can rotate a barcode in steps of 90°

Barcode type

The following types are available:

Aztec Code
Booklan
Codabar
Codablock F
Code11
Code128 Auto
Code128 A
Code128 B
Code128 C
Code39

Code39Full
 Code93
 Data Matrix
 EAN/UCC128 Auto
 EAN/UCC 128 A
 EAN/UCC 128 B
 EAN/UCC 128 C
 EAN13 (optional Addon 2 or Addon 5)
 EAN8 (optional Addon 2 or Addon 5)
 GS1-128
 Interleaved 2/5
 Maxicode
 MSI-Plessey
 PDF417
 Pharmacode (one line)
 Postnet
 QR
 RSS14
 UPCA (optional Addon 2 or Addon 5)
 UPCE (optional Addon 2 or Addon 5)

Addon 2 or Addon 5 codes can be created by adding the Addon content to the real barcode content, separated by a comma.

For example: the content '1234567,12345' would not only create an EAN8 barcode, but also an Addon5 barcode with the content '12345'.

Printer barcode

This option is only available, if the currently selected label printer can print the barcode type directly. If you select „yes“ the barcode will be printed in best quality, and counter variables are possible. If you select „no“ the barcode will be downloaded as graphic informations.

Module width

The width of the small barcode line. If you are using a printer barcode, you can only select module widths supported by the label printer.

Ratio

That is the ratio between small barcode lines and thick barcode lines. A value „2.0“ means that the thick line is twice as big as a small line. You can change the ratio in the range from 2.0 to 3.0.

Text line

Some barcode types offer an optional text line for the barcode, where the barcode content will be printed. Please note, that the display of the text line could be different from the screen display if you are using an internal printer barcode.

Of course you can always place a real text object beneath a barcode field, to have more control over the text line optics.

Font

The font used in the text line (if available).

Text size

The size of the text line (if available).

Text position

With some barcode types you can decide if you want to place the text line on barcode top or barcode bottom.

Show checksum

If the barcode is using a special checksum, this option tells the barcode to display it in the text line as well.

Additional checksum

On certain barcode types you can enable an additional checksum calculation:

- * Code39 : Modulo43 checksum
- * Interleaved 2/5 : Modulo10 checksum
- * Codabar : Modulo16 checksum
- * GS1/EAN/UCC128: Modulo10 checksum

Bearer lines

Displays additional horizontal lines to limit the barcode height.

Modul height/Max. cols/Max. rows/Aspect ratio/Safety level/Security %

Special PDF417 properties

Error correction

Special correction properties for Aztec Code/Datamatrix barcodes.

Format

You can select the data format with Datamatrix codes.

Color

The color of the barcode (note: only supported on color printers)

Print condition

If you have enabled a print condition, the object gets only printed, if the condition is fulfilled at the time when the print job starts.

Content mode

The content of a barcode can be a constant value, but also variables like counters or database values are possible.

Content

If the content mode is „constant“, you can enter the barcode content directly in this property. Otherwise the Variable Manager window will open, you can select an existing variable there.

There are special function characters in GS1-128/Code128/EAN128/Datamatrix barcodes. You can reach them by using the tokens <FNC1>, <FNC2> or <FNC3> in the barcode content. LP4 will map that tokens correctly on available Windows printers, Zebra printers, Intermec/UBI printers and Esayprint printers. Since the barcode text line can vary when such function characters are used, it is recommended to use an additional text object as text line instead.

4.10 Texts


4.10.1 Description – Text

Texts are the most often used objects of labels. LP4 can use the big family of Windows True Type fonts, but also the internal printer fonts are available for variable counters or fast download times.

Windows TTFs will be generated as graphic objects (therefore the download time will be higher and not all variable types are possible), and the printing of such texts will be very exact. Internal printer fonts will be very fast to download, and all variable types are usually possible (including counters, etc), but the print out may vary slightly from the screen display.

To create a text, you have to activate the text mode, and left-click on a free label area. A colored text cursor will appear, you can now enter the text using the keyboard. You can stop the input mode by pressing ESC or left clicking a free label area. If no text is inside a text field, the text field will get deleted automatically.

4.10.2 Properties – Text

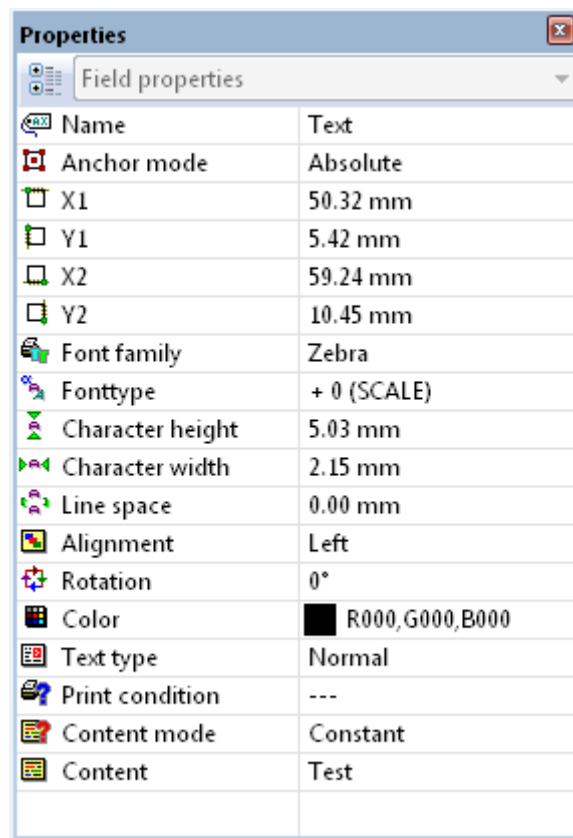

Name

The name of the text field. The name is empty by default, but if you want to access the object in a LP4 formula, you have to enter an unique name for it.

Anchor mode

Depending on the anchor mode the x/y coordinates will be displayed differently.

X/Y/Width/Height

A text is defined by its top left and right bottom corner points. Sometimes it's helpful to just enter the coords of one corner point, and to specify the width/height of the object. That can be done by selecting a different anchor mode. Please note that with some printer fonts not every height and width may be possible.

Font family

The font families:

- | | |
|----------------|--|
| - Windows | All installed MSWindows True-Type-Fonts |
| - Alltec | Internal printer fonts of Alltec-SmartGraph laser systems |
| - CAB | Internal printer fonts of CAB printers |
| - Easyprint | Internal printer fonts of Easyprint printers |
| - EPL | Internal printer fonts of EPL printers |
| - Fargo | Internal printer fonts of Fargo printers |
| - Intermec/UBI | Internal printer fonts of Intermec/UBI printers |
| - MI | Internal printer fonts of Markem-Imaje printers (optional) |
| - Sato | Internal printer fonts of Sato printers |
| - Unicontrol | Internal printer fonts of Unicontrol Easyprint printers |
| - Zebra | Internal printer fonts of Zebra printers |

Font type

Here you can select one of the available fonts of the chosen font family. With True-Type Windows fonts the standard font dialog will appear, on printer fonts a list will be displayed, showing all available printer font names. If a “-“ is displayed in front of the font name, this font is not available on your printer model. You can still use such a font in your label, but the text will be generated as a graphic object, so no counter variables are possible.

Character height/width

You can enter the average character height/width with this properties. Please note: with some printer fonts not all values are allowed for the height/width. LP4 will adjust the values automatically, depending on the currently selected label printer model.

Line space

If you are having a multi-line text, you can adjust the space between the lines using this option.

Variable font size

If the text field is connected to the text field, and a Windows font selected, this option is available. You can define here that the font size will be automatically adjusted depending on the variable content. LP4 will enlarge/shrink the font size in a way that the complete content is always visible.

With variable font size, the text types „Float text“ and „Block text“ can contain special tags to control the relative font size and the font attributes:

[\$N100]	= Normal regular font style, font size 100%, default
[\$Bxxx]	= Bold font style, font size xxx%
[\$Ixxx]	= Italic font style, font size xxx%
[\$Uxxx]	= Underline font style, font size xxx%
[\$Axxx]	= Bold + italic + underline
[\$Xxxx]	= Bold + underline
[\$Yxxx]	= Bold + italic
[\$Zxxx]	= Italic + underline
[\$nxxx]	= Lower-case letter: as above, but without automatic font scaling
[\$Tzzz]	= Tab size (zzz=number of “space” characters for one “tab” character)
[\$----]	= Change column (if there are multiple columns specified)
[\$Fxxx:font]	= Font name. Space characters in the font name need to be replaced with underscore (“_”) characters!

The tags can be placed on any text position. “Tab” characters have only limited support in block texts (every text line containing a “tab” needs to be closed with a ENTER line break!

Optionally you can specify the font scaling in height and width separately:

[\$Bxxx]	= Bold font style, font size (=font height and font width) scaling xxx%
[\$Bhhh,www]	= Bold font style, font height scaling hhh% and font width scaling www%

Example:

```
[$X150]Header:
[$N050]
[$N100]That's a normal text, which will wrap at the right side of the text field.
[$I050]That's an italic text, with half font size.
[$N100]Switched back to normal size...
```

Will be displayed as:

Header:

That's a normal text, which will wrap
at the right side of the text field.

That's an italic text, with half font size.

Switched back to normal size...

You can also specify a "minimum char height", to limit the automatic font resizing to a specific height. If the minimum height is "0.0 mm", the field can reduce the font size without any limitation. If the minimum is bigger than the basic char height, the field will not reduce the font size at all (text may get cut on the lower field edge). If the minimum height is between 0.01 mm and the basic char height, the field will reduce the height (100% scaling) until it reaches the minimum height, further on only the font width is reduced.

The automatic font scaling of block/float texts is done by reducing the basic character size in 1% steps, if the text is not fitting into the field size. Older LP4 version did bigger steps to find a suitable font size. You can activate the old mode, if required, by putting the following entry in the LP4.INI file:

[Settings] FTShrinkMode=0

If you are using lower-case font attributes (n,b,i,u,a,x,y,z, for example [\$b100]), the automatic font scaling is disabled for this text block.

Size adjust (Unicontrol printer fonts only)

With Unicontrol printer fonts you can specify, if the printed text should always be within the text field borders (Size adjust = yes), or if the field borders can be ignored (Size adjust = no, text may get printed somewhat larger as on the PC display). Variable text fields (counters) are always ignoring field borders.

Alignment

A text can be aligned on the left, on the right, or centered.

Line alignment

On float/block texts with format commands you can specify how texts with different font sizes are aligned to each other. For example, "top" alignment is needed with special trademark symbols, while "bottom" alignment can be used for chemistry formulas.

Rotation

A text field can be rotated in steps of 90°

Color

The color of the text (note: only supported on color printers)

Text type: Float text/Block text

If you are enabling this option, the text will be automatically placed in the available lines. That means, if a word is not having enough place to get displayed fully in the current line, the word will be placed in the next free line instead. You can also use this option in combination with deadzone objects, to create texts which will be arranged around a given graphic object, for example.

Block texts will additionally enlarge the spaces between words, so they appear left and right border aligned.

Text type: Unicode hex text (LP3 compatibility mode)

It was not possible to use Unicode texts in the old LP3 Editor with text fields. Nevertheless it was possible to use Unicode fonts in text fields for displaying and printing the Unicode content by using special "hex codes" as Unicode data. If you have old labels using such data, you can tell LP4 to show the content correctly by activating this option.

FT-space char/FT-word break/FT tab size

If the float text option is activated, you can define two special characters. The first one will be displayed like a space character, but LP4 will not try to part the words at this position. The second one can be used to tell LP4 if a (long) word can be broken in smaller word parts. With formatted float texts you can even use tab characters, if you specify the tab size (measured in spaces).

FT-columns/FT-column gap

If the float text option is activated, you can define the number of columns for the text to flow. Default is 1 column (= the complete field), with 2 or more columns you can also specify the gap between the columns to keep a defined spacing. You can use the [\$----] tag inside your text to force a column change.

Print condition

If you have enabled a print condition, the object gets only printed, if the condition is fulfilled at the time when the print job starts.

Content mode

The content of a text can be a constant value, but also variables like counters or database values are possible.

Content

If the content mode is „constant“, you can enter the text content directly in this property. Otherwise the Variable Manager window will open, you can select an existing variable there.


4.11 Special texts

4.11.1 Description – Special text

Special texts are True-Type font fields with special display abilities. Special texts will also be generated as graphic objects on label printers.

To create a special text, you have to activate the special text mode, and left-click on a free label area. A new special text will be placed on this position, you can now change the type and content by the special text's property window.

4.11.2 Properties – Special text

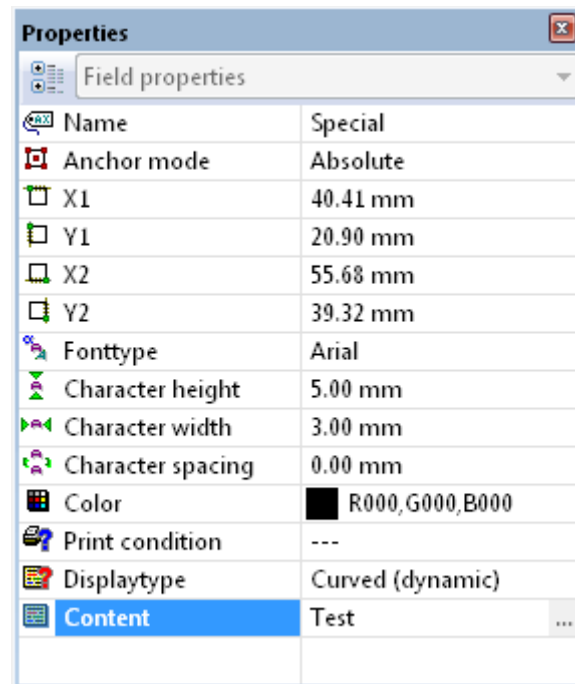

Name

The name of the special text. The name is empty by default, but if you want to access the object in a LP4 formula, you have to enter an unique name for it.

Anchor mode

Depending on the anchor mode the x/y coordinates will be displayed differently.

X/Y/Width/Height

A text is defined by its top left and right bottom corner points. Sometimes it's helpful to just enter the coords of one corner point, and to specify the width/height of the object. That can be done by selecting a different anchor mode.

Font type

You can select a true type font name and some of its attributes (italic, bold, etc). This setting is not available with formatted texts, the special text editor has to be used to change this setting.

Character height/width

Here you can enter the average character width and height. This setting is not available with formatted texts, the special text editor has to be used to change this setting.

Character spacing

It can be useful to adjust the spacing between characters, especially when using curved special texts. This setting is not available with formatted texts, the special text editor has to be used to change this setting.

Page count

Only available in the display mode "formatted text". By default just one page of formatted text will be displayed, here you can specify if multiple pages should be placed into the field area.

Rotation

A special text field can get rotated in steps of 90°. Note: depending on your system, a rotated formatted text may slow down the display.

Color

The color of the text (note: only supported on color printers). This setting is not available with formatted texts, the special text editor has to be used to change this setting.

Print condition

If you have enabled a print condition, the object gets only printed, if the condition is fulfilled at the time when the print job starts.

Display type


You can select rotated or curved or formatted special texts. Formatted texts are the default display type if a new special text object is created.

Content

Depending on the display type, a special editor window will get displayed:


Rotated texts

On rotated texts you can enter the text content, and use an angle between 0° - 359°.

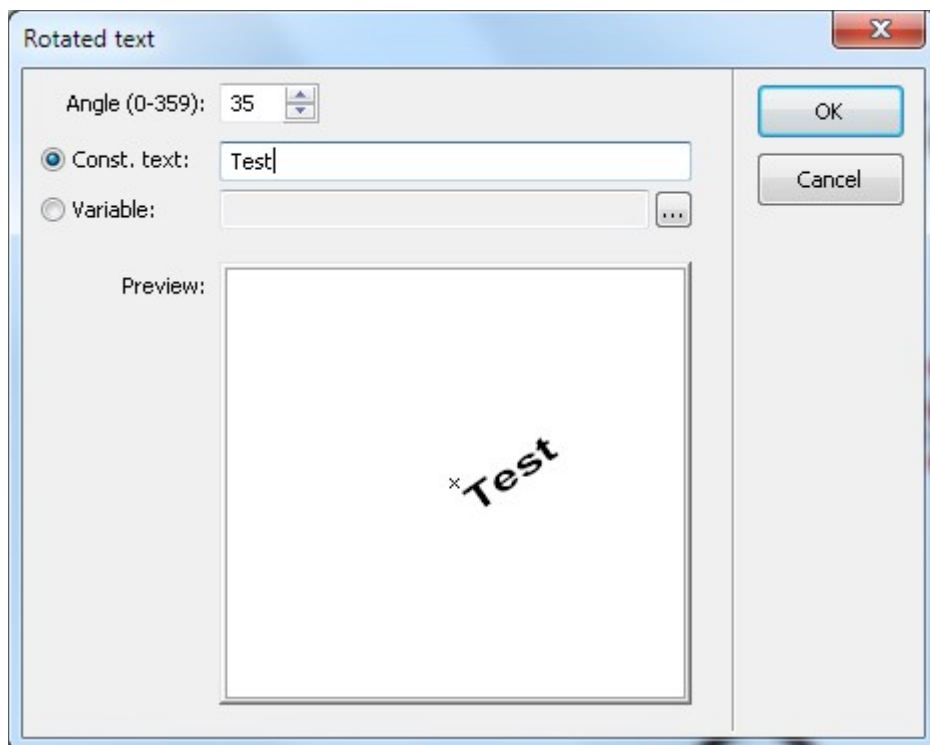

Curved texts (static)


On curved texts (static) you can enter the text content, and use several buttons and a special editor field to adjust the angle of each character of the text. In the editor field you can left or right click one of the drag points, and move the point to the desired angle.

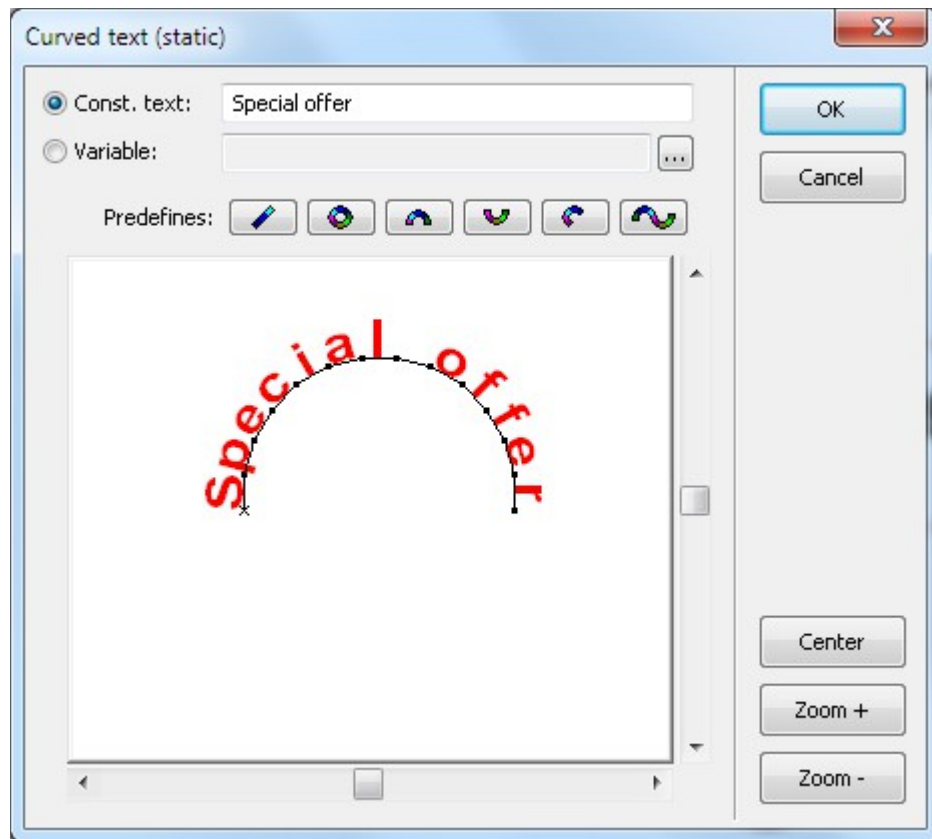

You can even assign a variable for the content. Since the size of the field will change whenever the content changes, you should use a „centered“ anchor mode, to prevent movements of the field.

Curved texts (dynamic)

On curved texts (dynamic) you can enter the text content, and define the center point (circle origin) of your curved text.

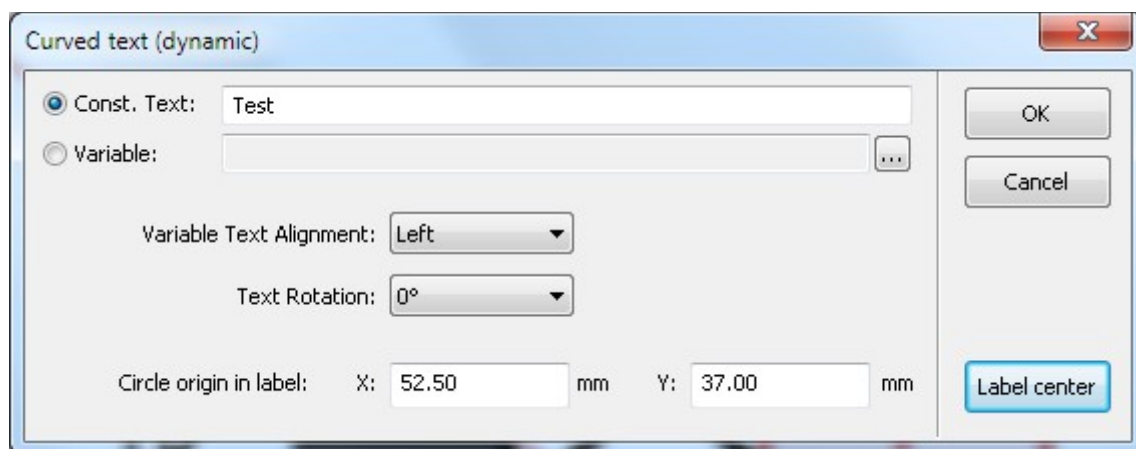


If you now move your special text field with the Mouse, it will automatically rearrange around the given origin. If you press CTRL while moving the object, you can also move the origin point itself.

Formatted text

Formatted texts can be designed and edited in a way like with typical word processing software (for example MS Word). It is possible to mix different fonts/sizes/attributes and arrange the text with tabs and tables. Floating text is available, also in combination with anchored graphics. And of course Unicode texts can freely be used, so for example cyrillic and chinese texts are possible.

The user can edit the formatted texts in a powerful editor, which appears when the user selects a text object and presses the space key, or when the user is pushing the “content” button in the text item property window.

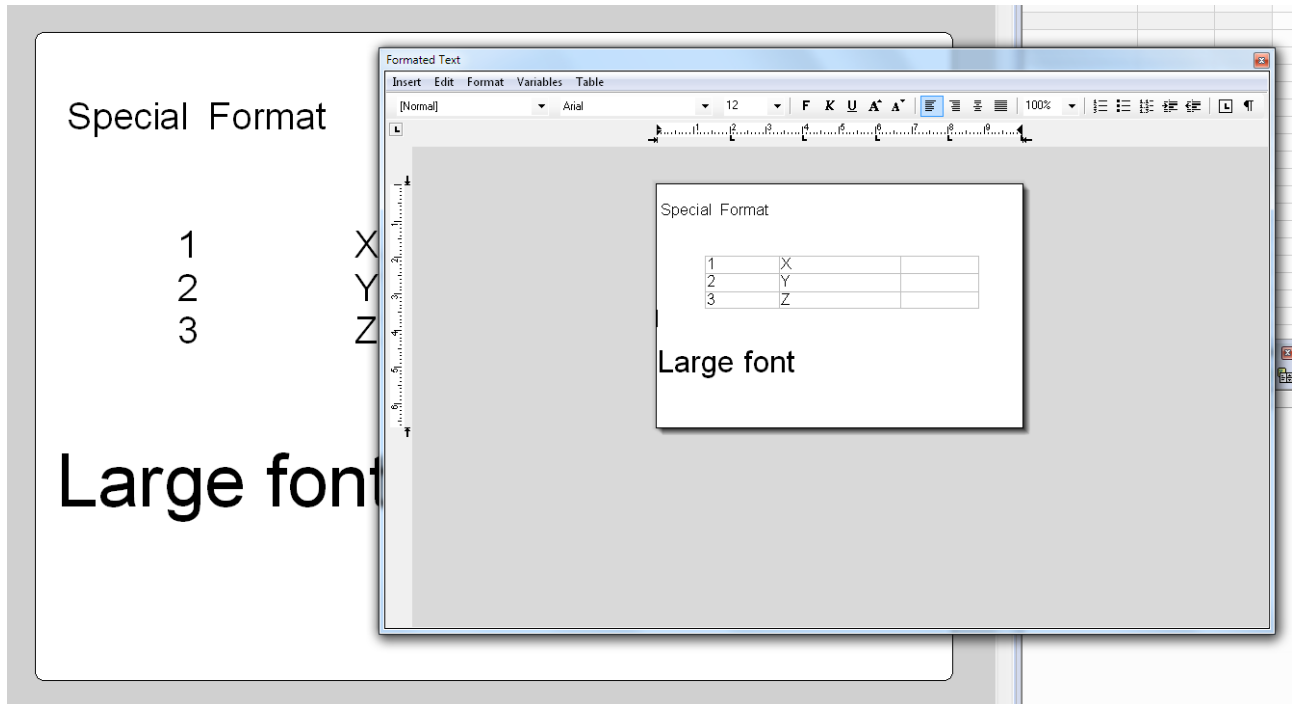

The size of the edit area equals the size of the text object on the label, but it will be displayed always in a 100% zoom in the text editor. If more edit place is needed, the object needs to get resized in the label editor.

The features of the text editor are comparable with modern word processing applications, here is a list of features:

- Import of existing documents (WinWord, HTML, XML, RTF)
- Insert graphics, with a fixed anchor or embedded in the text. If a anchor is used, the graphic can still be moved or sized by using the mouse cursor while pressing the ALT key.
- All typical clipboard functions, including undo/redo and search/replace functions
- All kind of font/attributes/tab/numbering options, available in MS Word alike dialog windows.
- Tables can be defined (either invisible, for easy text arrangement, or visible with custom line widths)
- LP4 Variables can be inserted in the formatted text.

With the menuitem “variables” an existing variable can be chosen from a list, and it will be inserted at the current text cursor position. The variable will be displayed by name in the editor window, it cannot be directly changed in the editor, though. If a variable should get removed, the user has to select it (variable will highlight) and remove it by using the variable menu.

In the label the current variable content will get displayed, and not the variable name.

Especially List/GHS variables are very powerful to use with formatted texts. You can see examples of such a usage in the installed LP4 example labels.

Notes:

- For displaying and editing of the formatted texts a special ActiveX control is used. If this control is not installed properly (for example if the user has only copied the LP4 folder) the "formatted text" display type is not available. It is possible to install the ActiveX control manually by double-clicking the file "TXRegister.bat" in the LP4 directory (administrative rights required).
- If a document with multiple pages gets imported into the text editor, by default only the first page will be visible in the label. The editor window will display all pages, though, so the user can edit the text to suit its label appearance.
Also please note to make the text object big enough before importing a document, otherwise the imported text may get rearranged to fit in the current size, and the original formatting will be lost. It is also possible to display multiple pages in the same field area: simply increase the "page count" option in the text field properties.
- LP4 does not support OLE linking inside the formatted texts. The text editor will support it (it is possible to paste an OLE link by using the clipboard functions), but as soon as the editor gets closed, LP4 will remove all such links because of stability reasons.
- If you need to use very small fonts (point size 7 or smaller), you may get an uneven text display (character spacing seems to be wrong sometimes). That depends on the font and the default Windows printer driver you are using (the TXControl is taking informations from the default driver to render fonts), or the printer driver you have configured for the TX Control in the LP4 Configuration.

In LP4 it is also possible to improve the look of small fonts by increasing the internal rendering resolution of the TXControl by using an INI switch. The only side effect: the higher the internal resolution, the smaller the maximum width of the text field. The default resolution of „1“ is supporting a field width of around 50 cm. If you are using the resolution „2“ (twice as high resolution“, you can only use fields up to 25 cm. The resolution „3“ will limit the field width to 17 cm, and so on (50cm divided by the resolution factor).

If you need an factor bigger than 1, you can set it in your local LP4.INI configuration file:

```
[Settings]
...
TXSizeFactor=2
...
```

5 Label variables

5.1 Generic

Label variables are used, if you need to fill texts or barcode fields dynamically. Also the printing of each label field can depend on variables, using the field's print condition. Variables can import data from various sources, and even change the printing behaviour (for example by changing the print quantity, or by moving around the label fields dynamically).

Label variables are generated and stored for each label, but they don't have to be linked to printable label fields. For example you can create a database variable, importing data from a database table, but you don't use that imported data directly in a text field, but in another variable (for example a formula variable).

You have to be aware that variables will get executed in a given order. So, if one variable depends on another one, this variable should be further below in the variable order, to access the correct variable data, and not some old data from a previous print job.

For example: a formula variable is used to calculate a checksum over the contents of a database variable and a user input variable. Here you should use the following variable order:

1. Input variable
2. Database variable
3. Formula variable

Position 1 and 2 can be swapped in this example, since the first two variables don't depend on each other, but if the database variable would be used as a default value for the input variable, the order has to be:


1. Database variable
2. Input variable
3. Formula variable

If the formula variable would be on top in this list, wrong printing would happen: the formula would calculate the checksum over two old values (probably the ones from the last printing), and not over the actual entered/readed values.

The golden variable rule is: always look after variable dependencies, and adjust the variable order if needed!

Therefore it is also not possible to create 'recursive' variable dependencies. If, for example, a data base variable depends on an input variable, which also needs the data of the database variable as a default value, it's not possible to arrange the variables in a correct order, and one of the variables will use an old value. But also no lock ups due to endless loops will be possible that way.


The creation and ordering of variables is done in the Variable docking window.

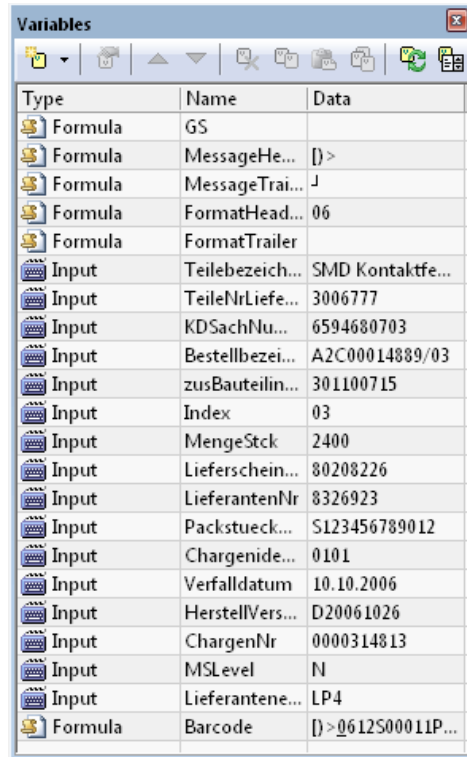

Type	Name	Data
Formula	GS	
Formula	MessageHe...	] >
Formula	MessageTrai...	] >
Formula	FormatHead...	06
Formula	FormatTrailer	
Input	Teilebezeich...	SMD Kontaktfe...
Input	TeileNrLiefe...	3006777
Input	KDSachNu...	6594680703
Input	Bestellbezei...	A2C00014889/03
Input	zusBauteilin...	301100715
Input	Index	03
Input	MengeStck	2400
Input	Lieferschein...	80208226
Input	LieferantenNr	8326923
Input	Packstueck...	S123456789012
Input	Chargenide...	0101
Input	Verfalldatum	10.10.2006
Input	HerstellVers...	D20061026
Input	ChargenNr	0000314813
Input	MSLevel	N
Input	Lieferantene...	LP4
Formula	Barcode	] > 0612500011P...

Here you can create/change/delete variables, and change their order by Drag&Drop.

There is also a “Variable selection” window available, which is used when you need to select a label from a field property:

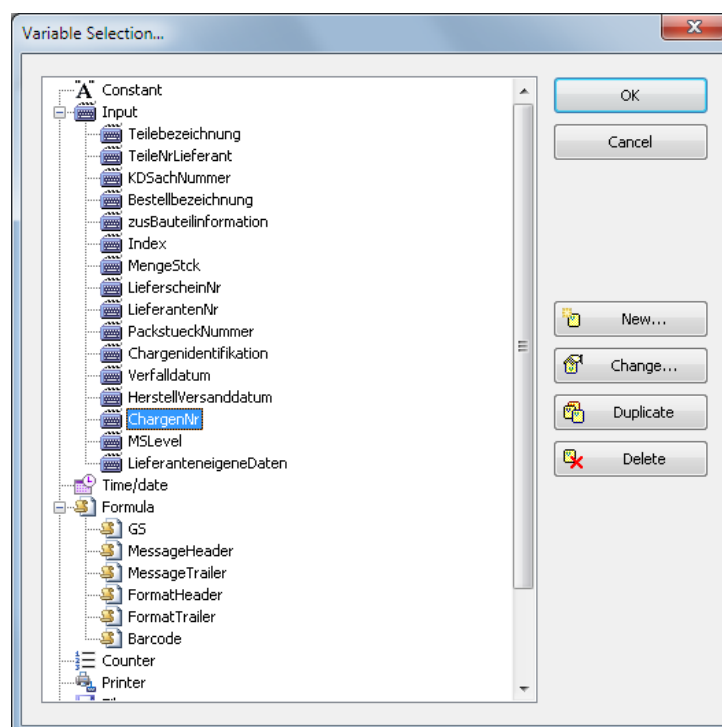

You can use this window to create/change/delete variables as well.

It is also possible to use the LP4 Database Manager to create certain variable types (database and table variables) by drag&drop from the database manager window to the label area.


5.2 Constant Variable

5.2.1 Description – Constant variable

The Constant variable is the easiest type of variable available. You can only enter a constant text (beside the unique variable name), which is used as the variable content.

Still such variables can be useful, for example if you are having many label fields containing the same text. If you link that fields with a Constant variable, you only have to change the text once, if it needs to get changed. All label fields will automatically have the new text this way, you don't have to change all fields separately.

5.2.2 Properties – Constant variable

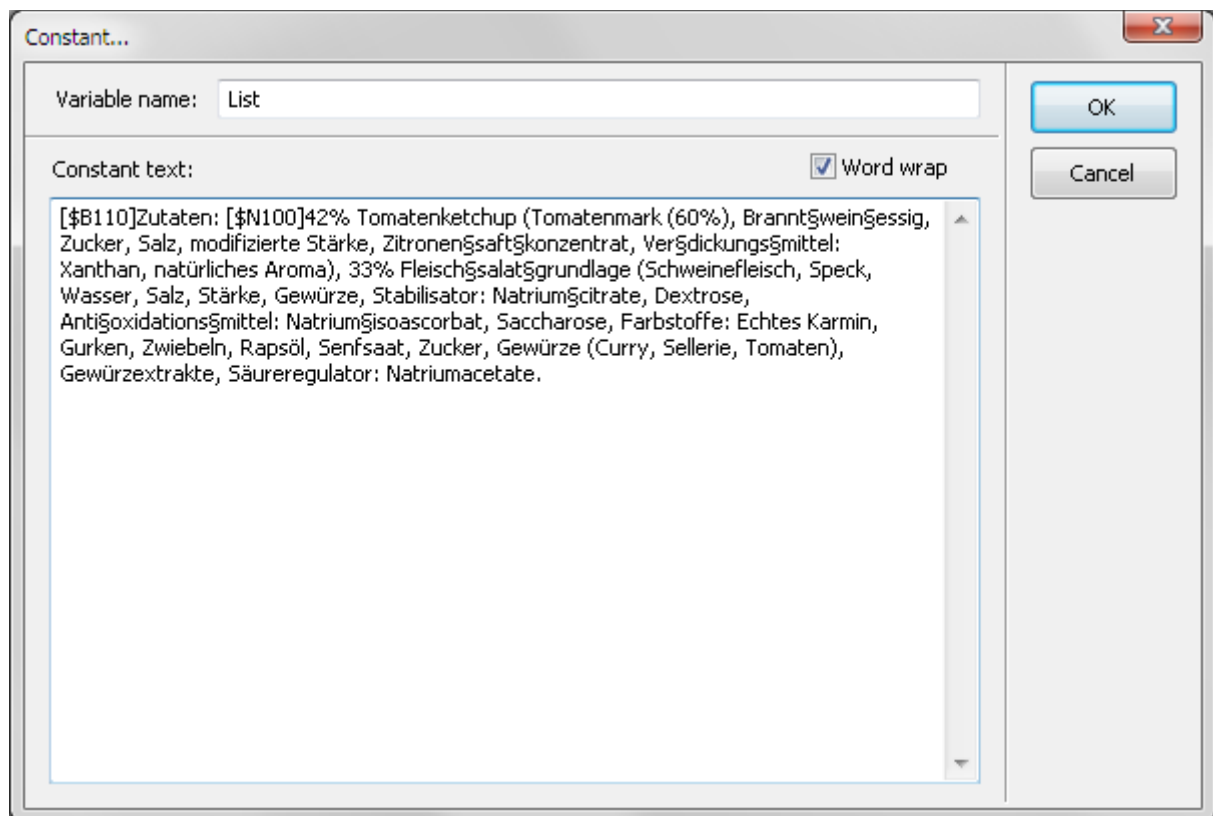

Name of variable

The unique name of the variable

Constant text

Edit field for the variable content

Word wrap

For easier editing: words will wrap/not wrap at the right edit field border


5.3 Input Variable

5.3.1 Description – Input variable

The input variables can be used to enter new values by keyboard (or by a keyboard-scanner device) each time when a print job is starting.

The input window will list all defined input variables, using the user defined variable order.

5.3.2 Properties – Input variable

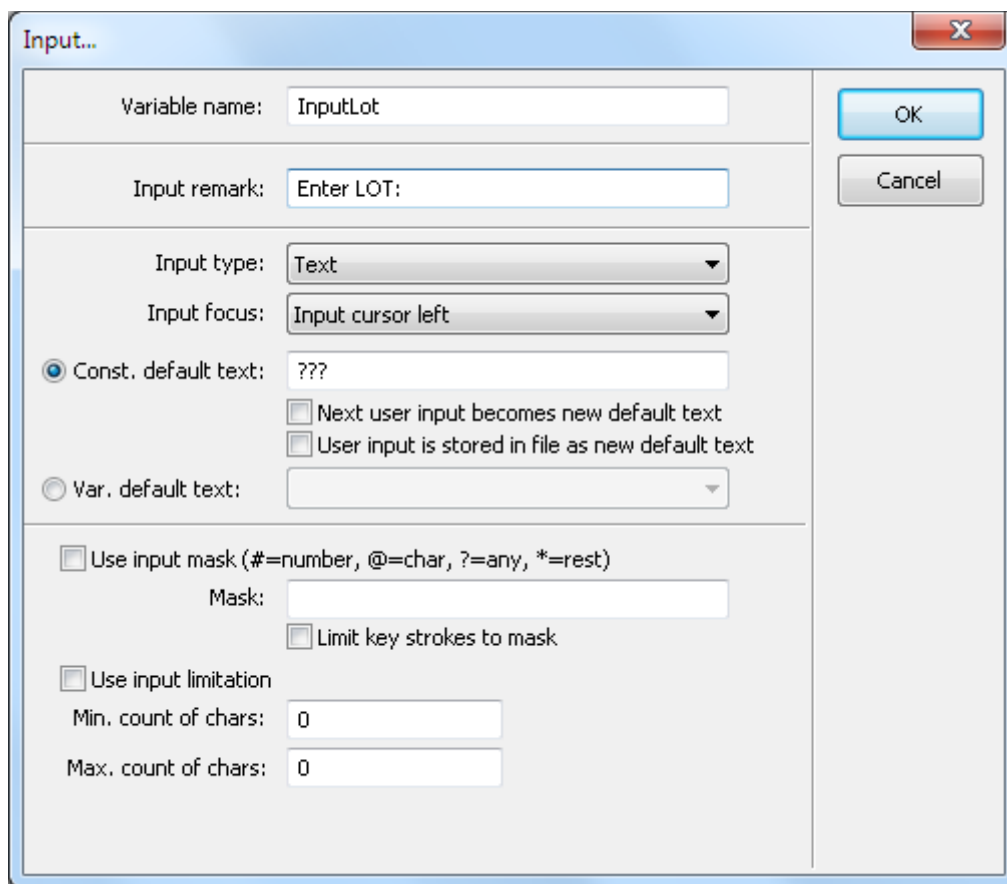

The screenshot shows the 'Input...' dialog box with the following fields and options:

- Variable name:** InputLot
- Input remark:** Enter LOT:
- Input type:** Text (dropdown menu)
- Input focus:** Input cursor left (dropdown menu)
- Const. default text:** ??? (radio button selected, text field)
- Var. default text:** (radio button unselected, dropdown menu)
- ☐ Next user input becomes new default text
- ☐ User input is stored in file as new default text
- ☐ Use input mask (#=number, @=char, ?=any, *=rest)
- Mask:** (text field)
- ☐ Limit key strokes to mask
- ☐ Use input limitation
- Min. count of chars:** 0 (text field)
- Max. count of chars:** 0 (text field)
- Buttons:** OK, Cancel

Name of variable

The unique name of the variable

Input remark

This text will be displayed in the input window in front of the edit field, for example „Article number:“

Default text (variable/constant)

This text will be used as default value in the input window. You can use a constant default text, or a text from another variable (for example a default text from a database variable). Please note: if you are using variable default texts, you have to take care about the variable order.

It is also possible to activate an option to replace the constant default value with the text the user will enter the next time. That way the input field for this variable will show on each print job the last entered user value, instead of the default text (until the label will be reloaded, of course then the input field will start with the saved default value). To store the input remanently, you have to use the “Store input in file” option, then the input data will be saved in a INI file on the LP4 data folder.

Input type

There are four different input types available:

- Text input: the user can type in text in the input window. It is possible to limit the numbers of characters, or give a special text format the user has to use for his input. For example: if the user should enter 'AB', then another char, and at the end four numbers, a format mask AB@#### can be provided. It is also possible to activate the "Limit keyboard input to mask" option, now the user really only can enter the mask positions, all fixed positions of the text are not available. There is also a small drawback, though: the "*" wildcard is not usable with this option, and no clipboard functions are available.
- Integer input: that's like the text input, but you can specify a lower and upper limit for the entered value.
- Floatingpoint value: same as the integer value, but you can provide a floating point upper/lower limit.
- Selection input: here you can enter the selection items, you user cannot input any text with this input type, but only select one of the available items. You can also define a variable containing the selection items, simply separate the items by semicolon ("Yes;No;Maybe").

If the input type is not "Selection input", the user can even select how the input cursor should behave in the LP4 input window: if "Cursor left" is activated, the cursor will be placed at the left side of the input field. If "Cursor right" is activated, the cursor will be placed at the right side. "Select all" will select all the current text of the input field, so the next keystroke will clear the complete field.

5.4 Time/date Variable

5.4.1 Description – Time/date variable

Very flexible time/date functions can be defined using the Time/date variable. It is also possible to add an expiration time to the time/date.

Please note: the current PC system time is used for Time/date variables. If you want/need to use the real time clock of a printer, you cannot use Time/date vars, you have to use special printer variables instead.

5.4.2 Properties – Time/date variable

The screenshot shows a dialog box titled "Time/date...". It has a "Variable name:" field with the text "Date". Below this are two radio buttons: "Use current PC date/time as base time" (which is selected) and "Variable base time:". To the right of these are "OK" and "Cancel" buttons. Below the radio buttons is a "Time/date format:" section with a dropdown menu showing "<DD>.<MO>.<YYYY> (Date)". Below this is a text field containing "<DD>.<MO>.<YYYY>". Further down is a checked checkbox "Add the following value to the base time:". Below this checkbox are two options: "Constant value:" with a text field containing "1", and "Variable value:" with a dropdown menu. Below these is a "Format:" dropdown menu showing "Years (365 days)". At the bottom is a "Preview:" section with a text field showing "16.01.2014".

Name of variable

The unique name of the variable

Time/date format

Here you can define the needed display format and informations. Simply select the needed parts from a list, and add them to your format field. You can also edit the format field directly, for adding special separators, for example.

Add value (expire)

Activate this option if you need to add a certain amount of time to the current system time/date. You can specify a fixed value, which will be always added, or the content of a variable. In the format field you specify the type of the value (for example months or days).

Please note: if you are using a variable addition value, take care about the variable ordering.

5.5 Formula Variable

5.5.1 Description – Formula variable

The most powerful variable type is the formula variable. You can do calculations, text manipulations, or even move or hide label fields.

5.5.2 Properties – Formula variable

Variable name:

MessageHeader;
 FormatHeader;
 "12S";"0001";GS;
 "1P";TeileNrLieferant;GS;
 "P";KDSachNummer;GS;
 "31P";Bestellbezeichnung; GS;
 "20P";zusBauteileinformation;GS;
 "2P";"E";Index;GS;
 "Q";MengeStck;GS;
 "16K";LieferscheinNr;GS;
 "V";LieferantenNr;GS;
 "3S";_left(_cat(PackstueckNummer,""),17);GS;
 "20T";Chargenidentifikation;GS;
 "15D";_mid(Verfalldatum,1,2);_mid(Verfalldatum,4,2);
 _mid(Verfalldatum,7,4);GS;
 "9D";HerstellVersanddatum;GS;
 "1T";ChargenNr;GS;
 "Z";MSLevel;GS;
 "12";LieferanteneigeneDaten;
 FormatTrailer;
 MessageTrailer

Preview:

☒ Variable list
 ☐ Command list

Variable	Content
Bestellbezeichnung	A2C00014889/03
Chargenidentifikation	0101
ChargenNr	0000314813
FormatHeader	06
FormatTrailer	
GS	
HerstellVersanddatum	D20061026
Index	03

Buttons: OK, Cancel, Help

Name of variable

The unique name of the variable

Formula edit field

Here you enter the formula, using constant texts, variable names and special formula commands. At the bottom of the window you can see an help window, showing all available variables or all formula commands. Simply do a double-click at one entry, and the text will get placed inside the formula edit field. You can also start up an online help for the available formula commands.

5.5.3 Formula commands – Formula variable

How to create a formula

Formulas can use three different base types: texts, integer values and floating point values. You can do the usual calculations with the values, and texts can get manipulated by the proper formula commands.

Different parts of one formula can get separated by a semicolon. The result of the formula will be the combination of the results of every single part.

Existing base types:

Integer values

Range from -2147483647 to 2147483647.

For example: -100; 0; 0xFF (hexadecimal notation)

Floating point values

Range from +2.2250738585072014 E-308 to +-1.7976931348623158 E+308.

The decimal sign is the dot (eg. 123.45). If you have very big/small values, you can use the exponential notation, VALUE E EXPONENT (for example: 123.45 E 15)

Texts:

Texts will be set in double-quotation marks (" ... ").

For example: "Hello", "Q", "1234567890"

Variables:

By using the variable name you can insert the content of a variable into the formula result. You can use any variable type (database, input, even other formula variables), but you should ever have a look at the correct variable order.

Hint: it is not possible to use variable names containing special characters (like "+", "-", or all kind of brackets) in a formula, since this characters will have a special calculation meaning in the formula, making it impossible for the formula parser to detect the variables correctly.

Easy example:

Formula: "Weight: ";WEIGHT; " kg"

This will insert the content of the variable WEIGHT between the two constant texts.

Basic calculations:

You can use +, -, *, / along with integer/floating point values, also (...) is possible. The „%“ operation will calculate the division rest.

Easy example:

Formula: "Package weight: ";(WEIGHT/100)*5; " kg"

This would calculate another weight value from the original WEIGHT variable. The variable type would need to be integer or floating point, but most variables will create text contents. To use such variables as a value, you have to use an _int or _real command on the variable name first, for example.

Formula: "Package weight: ";(_int(WEIGHT)/100)*5;" kg"

Special commands:

_case (Variable, # Test1 : Value1 # Test2 : Value 2 #... [, optional default text])

Using a _case command you can test a given variable to contain certain contents. If a contain is found in the # list, the value after the : will be the result of the _case command. If the content cannot be found in the list, the _case will result in an empty text or in the optional default text (if given). You can write the _case command in multiple lines to get a better overview on large lists.

Example: _case(INPUTVAR, # 0 : "Off" # 1: "On", "Not found")

_cat (Text1,Text2)

This will combine two texts to one resulting text. It is needed, if another command just accepts one text parameter (you cannot simply write Text1;Text2 as an parameter, since that are two texts, not only one).

Example: _mod10(_cat(TEXTVAR, "45678"))

_check5s(5 characters of text)

The result of this command is one checksum character (text) which will be used in special EAN13 barcodes.

Example for correct EAN13 encoding:

"270072";_check5s("10950"); "10950";_mod10(12)

bzw.

"270072";_check5s(VARIABLE);VARIABLE;_mod10

_check6itu(text)

This command will calculate a CRC 6 ITU checksum (two characters). You can specify the text you want to use for calculation as a parameter, or you can give a number of chars. If you specify a number, the n chars in front of the _check6itu command will be used for calculation.

Example: "123456789012";_check6itu(12)

or VARIABLE;_check6itu (VARIABLE)

_chr(integer value)

This will turn an integer value in the range from 0 to 255 into one text character, the character will be the proper ASCII character for the given value.

Example: "Char: ";_chr(65); " is ASCII 65"

_convert(text, type number)

This will convert a given value text into a different format. The type number is controlling the convert action:

0 = Decimal -> Hex

1 = Hex -> Decimal

2 = Decimal -> Base33

3 = Base33 -> Decimal

4 = Decimal -> Alpha numeric

5 = Alpha numeric -> Decimal

6 = Hex unicode -> Text

Example: "Hex: ";_convert("123",0); " is Decimal 123"

_if(condition,true text,false text)

The condition will be checked, if it is true (not equal 0) or false (equal 0). The condition can use the following compare options:

x1 > x2 Greater

x1 < x2 Less

x1 >= x2 Greater equal

x1 <= x2 Less equal

x1 == x2 Equal

x1 != x2 Not equal

Using () and AND / OR commands you can also check larger logical conditions.

If the condition is true (not equal 0), the result of this test will be the „true text“, else the „false text“ will be taken.

Note: an `_if` command is only able to select between two given texts, but it's not possible to use execution commands like `_objmove` in the true/false branches. If you do that, random results will happen.

Example:

```
_if(Testvar=="Hello", "Testvar contains Hello", "No Hello")
```

```
_if( ((Month==1) AND (Days>31)) OR
      ((Month==2) AND (Days >29)) OR
      ((Month==3) AND (Days >31)) OR
      ((Month==4) AND (Days >30)) OR
      ((Month==5) AND (Days >31)) OR
      ((Month==6) AND (Days >30)) OR
      ((Month==7) AND (Days >31)) OR
      ((Month==8) AND (Days >31)) OR
      ((Month==9) AND (Days >30)) OR
      ((Month==10) AND (Days >31)) OR
      ((Month==11) AND (Days >30)) OR
      ((Month==12) AND (Days >31)),
      "DATE IS ILLEGAL!?!", "Expirement time:" )
```

`_int(text)`

The result will be the integer value of a given text

Example: "Value : ";_int(TEXTVAR)*100

`_labcount`

Will return the number of to printed labels on job start.

Example: "Label quantity: ";_labcount

`_labname`

Contains the current label file name.

Example: "Label name: ";_labname

`_labuser`

Contains the current user name. If the usermanagement is disabled, or no user is logged in, the return value will be empty.

Example: "Username: ";_labuser

`_labprinter`

Contains the active printer name of the current label file.

Example: "Printer name: ";_labprinter

`_lppath`

Contains the current LP4 installation path (default, C:\LP4\). The path contains a trailing back space character.

Example: `_lppath;"My settings.INI"`

`_left(text,count)`

Result is the left part of a given text. The count is the numbers of chars to be taken.

Example: `_left("Hello world",5)`

`_len(text)`

Result is the length of the text (number of characters).

Example: "Length: "; `_len("Hello")`

`_mid(text,start,count)`

Result is the mid of a given text. The start is the number of the character to start (the first char is position 1), the count is the numbers of character to be taken.

Example: `_mid("Hello wonderful world",6,9)`

`_mod10(text) or _mod10(value)`

This command will calculate a modulo 10 checksum character. You can specify the text you want to use for calculation as parameter, or you can give a number of chars. If you specify a number, the n chars in front of the `_mod10` command will be used for calculation.

Example: `"123456789012";_mod10(12)`
or `_mod10("123456789012")`

`_mod43(text) / _mod43(value) / _mod103(text) / _mod103(value) / _mod1094(text) / _mod1094(value)`

Same as `_mod10`, just a different calculation is used.

`_objmove(name,X-value,Y-value)`

This command will move a label object field to a given label position (the position values are 1/100 mm value, so 100=1mm).

Example: `_objmove("Test",100,200)`
moves the field "Test" to X=1mm, Y=2mm

`_objprint(name,0/1)`

Will make a given label object „printable“ (=1) or „not printable“ (=0).

Example: `_objprint("Test",0)`
will mark the field „Test“ as „not printable“

_objsize(name,Width-value, Height-value)

This command will size a label object field to a given new width and height (the width/height values are 1/100 mm value, so 100=1mm).

Example: `_objsize("Test",1000,2000)`
resizes the field "Test" to a width of 10mm, and an height of 20mm

_part(text,divider,number)

This command will give the n-th part of a text list. You can specify the dividing character of the list, the number will start with position 1. The result will be empty, if there does no n-th part exist in the list.

Example: `_part("Dog;Cat;Mouse";";",2)`
Results in "Cat".

_replace(text,oldtext,newtext)

This command replaces a textpart within a bigger text. If the text can be found multiple times, each instance will be replaced. The replacement is case-sensitive.

Example: `_replace("Wintertime in Indiana","in","out")`
Results in "Wouttertime out Indiana".

_readini (positiontext,standardtext)

Reads a text entry from a given INI file. If the text entry doesn't exist, the standardtext will be returned instead. The positiontext have to build like the following: "SECTION;ENTRY;INIFILE". SECTION is the section name in the INI file (the group name in [...]), ENTRY is the key name in the section, followed by a „=". The last part is the full path name of the ini file, if this one is missing, the function tries to read the entry from the MSWindows WIN.INI.

Example: `_readini("SETTINGS;TEST;C:\LPFORM\TEST.INI", "not found")`
or `_readini("SETTINGS;TEST","not found in WIN.INI")`

_real(text) / _reald(text,decimals)

Result is the floating point value of a given text. With the `_reald` function you can specify the number of digits after the decimal point.

Example: "Calculation: "; `_real(TEXTVAR)/1.25`

_remchar(text,characters)

Removes all given characters from the first text.

Example: `_remchar("100.12", ". ")`

_right(text,count)

Result is the right part of a given text. The count is the numbers of chars to be taken.

Example: `_right("Hello world",5)`

`_setcount(value)`

Sets the print quantity before the print job is generated. The old user print quantity will get overwritten.

Example: `_setcount(10)`

`_text(value)` or `_text(unicode-var)`

Changes a value to a text, for example to use it with another text command.

Example: `_mod10(_text(INTVAR))`

If the argument is a LP3 Hex Unicode variable (content: "FFFE..."), the text will be converted to the real Unicode text.

`_textpos(text,search text)`

The first text will be searched for occurrence of the search text. If the search text can be found in the first text, the result will be the starting position. The first position is 1, if the text cannot be found a 0 will be returned.

Example: `if(_textpos(WEIGHT, ". ")==0, "no decimals in weight",WEIGHT);`

`_var ("variable name")`

If a variable name contains reserved characters (like +/-), it cannot be used directly within a formula. In such a situation the `_var` command can be used to access the variable content.

Example: `_var("Var-1");`

`_varupdate`

This command will not change the content of a formula field. It will tell LP4 that all variables used inside of the formula has to get re-calculated for each label again.

`_writeini (positiontext,new text)`

Writes a new text in an INI file. The position text has the same structure as in the `_readini` command, there's just one speciality: if the position text contains no entry name, the `_writeini` will delete the complete section from the ini file. This command will only be executed if a real printing gets started.

Example: `_writeini("SETTINGS;TEST;C:\LPFORM\TEST.INI", "Hello")`
or `_writeini("SETTINGS;;C:\LPFORM\TEST.INI ", "");"Section deleted"`

`_writefile (filename,new text)`

Writes a new text line in a text file. If the file does not exist, it will get created. This command will only be executed if a real printing gets started.

Example: `_writefile("C:\LPFORM\TEST.TXT", "Hello")`

Examples

Here is a more complex formula for calculating a special EAN128 barcode content.

The variable MHD contains the date text "12.03.99", the variable EAN contains "0401234512345" and EPA contains "75":

"(01)9";_mid(EAN,2,12);_mod10(13); "(15) "; _mid(MHD,7,2); _mid(MHD,4,2); _mid(MHD,1,2); " (30) ";EPA
result: (01)94012345123459(15)990312(30)75


5.6 Counter Variable

5.6.1 Description – Counter variable

A counter is needed, if you want to place a special number field (text or barcode) unto the label, the number will change every printed label.

Please note: if you print at a real label printer, the counter text field has to use an internal printer font. Also barcodes have to be real internal printer barcodes, otherwise the counter value will not change at all. This restrictions don't apply to Windows printers.

5.6.2 Properties – Counter variable

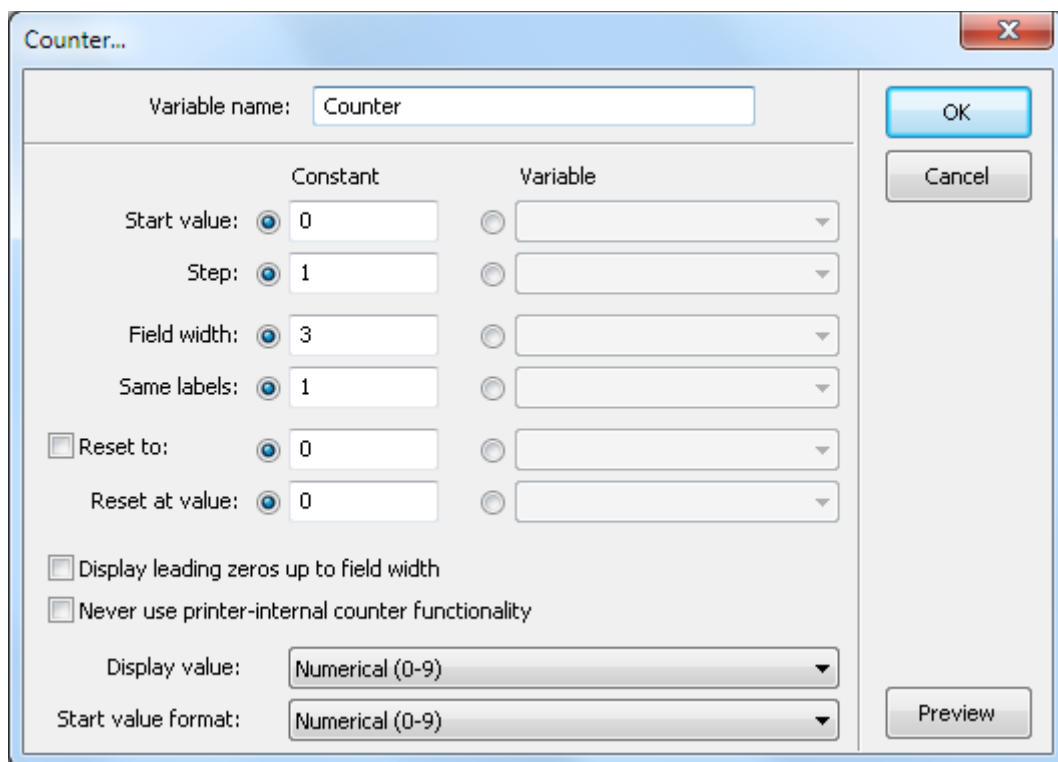

The dialog box "Counter..." contains the following fields and options:

- Variable name:** Counter
- Start value:** ☒ Constant 0 ☐ Variable
- Step:** ☒ Constant 1 ☐ Variable
- Field width:** ☒ Constant 3 ☐ Variable
- Same labels:** ☒ Constant 1 ☐ Variable
- ☐ **Reset to:** ☒ Constant 0 ☐ Variable
- Reset at value:** ☒ Constant 0 ☐ Variable
- ☐ **Display leading zeros up to field width**
- ☐ **Never use printer-internal counter functionality**
- Display value:** Numerical (0-9)
- Start value format:** Numerical (0-9)
- Buttons:** OK, Cancel, Preview

Name of variable

The unique name of the variable

Start value

The start value of the counter

Step

Positive step values will count up, negative step values will count down.

Field width/leading zeros

How many characters are used for the counter, for example a counter using field width 3 and leading zeros will get printed as „001“.

Same labels

If you need a counter which doesn't change on every label, but on every n-th label, you can define this here.

Reset to value x at value y

It is possible to define counters which will jump back to a starting value when they have reached a given limit. For example you can define a counter which will count up to „999“, and jumps back to „001“ after he has reached this value.

All values can be fixed, or be of variable origin. If you are using variables, take care about the variable order.

Counter type

It's not only possible to define numeric counters, also hexadecimal, alphanumerical or counters with base 33 are available.

Start value format

Often the start value is not a fixed value, but given by other variables (for example input variables). And if the counter type is not numeric, the given start value should often be in the same format as the printed counter value. This can be controlled with “start value format” setting.

Preview

The preview button will open a new window, displaying the first 20 counter values. That can be used to verify the current counter settings.


5.7 Printer Variable

5.7.1 Description – Printer variable

You can use internal printer variables to access certain printer infos like the printer's real time clock. You will need knowledge what kind of variables your printer is offering, LP4 will give you but a small collection of available printer variables for some printer types.

Also, the LP4 Intermec input variables can be defined here.

5.7.2 Properties – Printer variable

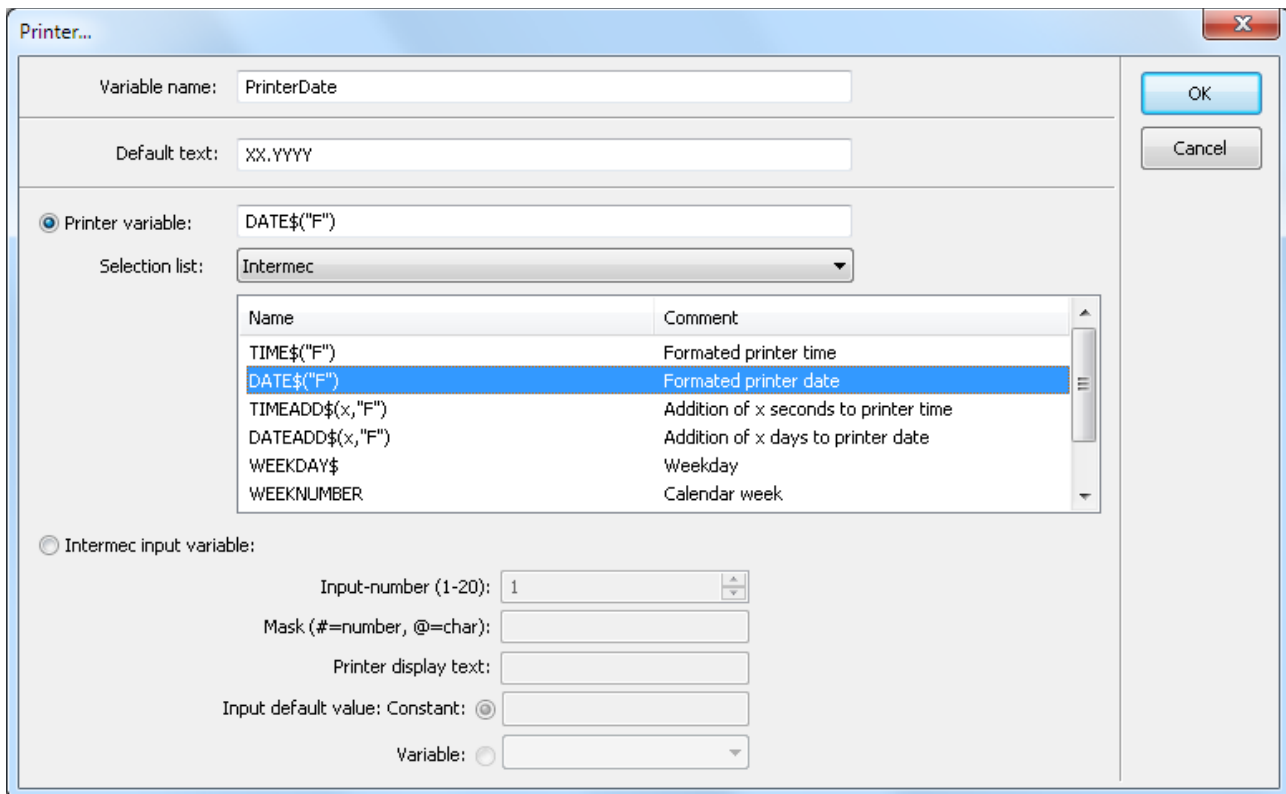

The dialog box 'Printer...' contains the following fields and controls:

- Variable name:** PrinterDate
- Default text:** XX.YYYY
- Printer variable:** DATE\$("F")
- Selection list:** Intermec
- Table:**

Name	Comment
TIME\$("F")	Formatted printer time
DATE\$("F")	Formatted printer date
TIMEADD\$(x,"F")	Addition of x seconds to printer time
DATEADD\$(x,"F")	Addition of x days to printer date
WEEKDAY\$	Weekday
WEEKNUMBER	Calendar week
- Intermec input variable:**
 - Input-number (1-20):** 1
 - Mask (#=number, @=char):**
 - Printer display text:**
 - Input default value:** Constant: ☒ Variable: ☐

Name of variable

The unique name of the variable

Printer variable

You have to enter the correct printer variable name or definition here, LP4 will add that text to a print command for the printer. You can use predefined variables, or define your own variables, if the printer is supporting them. Some printers (for example Unicontrol) will also allow to access the content of a LP4 variable inside the printer variable definition: simply add the placeholder [SVAR]LP4VariableName[EVAR] to the printer variable definition, on print start LP4 will replace this placeholder with the current content of the LP4 variable.

CAB printers are capable to use whole sequences with variables. To use this in LP4, you can define a text field with a ":NAME" field name. This field name can be used in following variables as [NAME].

Example:

1. Text field „:NETTO“, connected to printer variable „[?:Amount netto][I]“.
2. Text field, connected to „[*:NETTO,19]“

The first field will not be printed (due to the [I] sign), it just holds the user input in variable NETTO. This variable is used in the second text field (multiplication by 19).

Please note: you need to define the fields in "reverse order", the first text field needs to be below the second field in the LP4 field list (because LP4 will send "lower" fields first to the printer).

With newer LP4 version you can also define a stand alone "... printer variable, this one will automatically define an invisible text field for handling CAB variables.

Printer input variable

The Intermec input variable is comparable with the LP4 input variable, but the user can input the values directly at the printer panel.

5.8 File Variable

5.8.1 Description – File variable

To read values from a file, you can use the file variable. The file variable can use keywords to find the data (like INI files), or fixed positions, or (for example) comma separated positioned data. It is also possible to write data into files. In this mode the file variable will have no return value, and just start the write action on every print job.

5.8.2 Properties – File variable

Name of variable

The unique name of the variable

Mode

There is a reading mode (to get data from a file) and a writing mode (to store data into a file)

File name

Can be fixed or variable. If the file name does not contain a directory, the LP4\DATA folder will be used as directory instead.

File type

You can select files with keywords (like INI files) or fixed position files or character (comma) separated data files.

File type – Keywords or INI file

If you are using keywords, LP4 is looking for the following:

KeycharacterKeyword

So, the first character of a keyword (key character) is always used as special termination info, if LP4 is reading this character, it assumes that the text field is finished.

Example:

@S1=Test1
@S2=Test2

If you now entering @S1= as keyword, LP4 will read the text „Test1“. The key character shouldn't be used in the real text, of course.

Example:

@S1=hugo@world.com
@S2=....

Would just read the value „hugo“. Up to 4095 characters can be read at once.

If you have to read entries from Windows INI-files, you don't need a key character. In this case you specify the INI section and the INI entry by entering „[INI-SECTION]entry“.

File type – fixed positions

This type can be used, if the source file is always having the same structure. In that case you can simply select the first and last position of the text to read, up to 4095 characters are possible.

File type – character seperated data

If the source file contains single lines with character seperated data, you can specify here the position of the data, and the ASCII-value of the data separator.

For example:

12345678;Business Inc;Red;999999
87654321;ISP Solutions;Green;3333333

If you want to have the third data from this file, you specify „3“ as position and „59“ (the ASCII value of a „;“ character). The variable will read the data „Red“. Position „7“ would be „Green“ (therefore, also multiple data sets can be in one file).

File type – last line of file

In this mode the variable will read the last complete text line of the file. If the file contains just one line of text, this one will be read.

This type is also useful in writing mode: it will add a new line with the given data, so you can easily create logging functionality.

File type – XML file

You can read an individual XML value from a given XML file. You just have to specify the tag name (either fixed or by using a variable). There is a button „XML keyword“ with this file type, which will help you to find the right tag name: a window with an example how to build the tag will appear, and it is even possible to select a tag from an existing XML file in this window.

With XML files you can also specify to read the content as Unicode. You can use such variables in text fields with the content type “Unicode” to display special language characters.

File writing

Every of the file types can not only be read, but also get written. If you select the „Write file“ mode, you will get some additional options:

„Create new file on writing“ will delete any existing file before writing into a new file.

The „Data to write“ can be a fixed text, or a text returned by a LP4 variable.


A file variable in writing mode will not return any printable text, instead the write action will be executed on each started print job. It can be used to store the current counter value inside of a file, or to make an easy job logging function.

5.9 Table Variable

5.9.1 Description – Table variable

The table variable is a special way to access database tables, to generate labels with different contents each label (for example for address labels). By adding a new table variable, LP4 will automatically generate a sets of „sub table variables“, each of them will hold the value of one field from the table.

5.9.2 Properties – Table variable

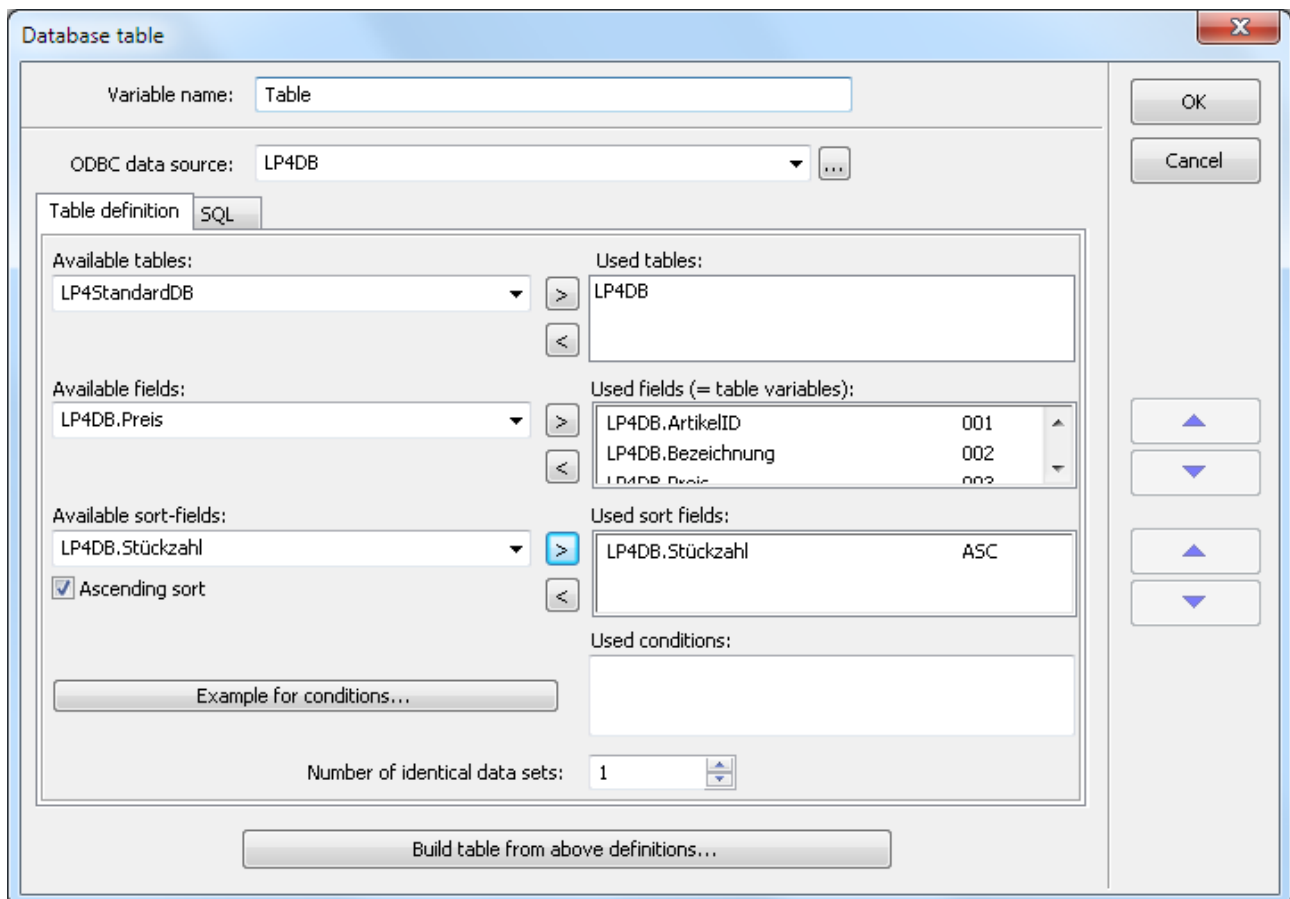

Name of variable

The unique name of the variable

ODBC data source

Here you can select an existing ODBC data source name. Per „...“ button you can enter a username and password, if the database requires such. If you want to access an Access database, you don't have to create an ODBC source, you can simply enter the filename of the Access MDB file, using 'ACCESS=..xxx.mdb'.

Table definition

Here you can specify the table. The selection fields will build a SQL expression which will select the wanted data.

The table variable doesn't select only one value (like the database variable), but a complete table set, usually multiple rows of data. Each row will be printed on a different label. Easy example: you have a customer address database, and you want to send packages to some (or all) of your customers, printing the customer name and address.

Simply select all the required tables and fields in the table variable property window, if you want you can also give a special order statement, or some data limitation (for example: only customers living in Berlin). Experienced database users can even enter a completely customizable SQL statement, like: 'SELECT table1.Name AS LPDATA1, table1.Street AS LPDATA2, table1.City AS LPDATA3 FROM table1 WHERE table1.City='Berlin';'

Using the button „Build table...” you can easily check, if your definition will give you the right set of datas, you will see a table view containing all the print informations.

All table fields will be accessible as sub variables, LP4 will generate them automatically. In the above example the sub variables for the fields 'Name', 'Street' und 'City' would get created, and named like '001_ADDRESS', '002_ADDRESS' und '003_ADDRESS'. You can use that variables directly with text or barcode fields, of course.

The ‚main table variable' also has a result: the number of selected data rows. That can be used in another text field, for example, but usually this value will be used to automatically set the print quantity, to print as much labels as selected data rows. This can be archived by using the variable's value in a formula variable, using the „_setcount“ formula command.

The easiest way to create table variables is to drag&drop them from the LP4 Database Manager. It will create all necessary variables for an easy table print.

5.10 Database Variable

5.10.1 Description – Database variable

The database variable can be used in combination with the LP4 Database Manager, or for to read single values from an existing ODBC database.

5.10.2 Properties – Database variable

Name of variable

The unique name of the variable

ODBC data source

Here you can select an existing ODBC data source name. Per „...” button you can enter a username and password, if the database requires such. If you want to access an Access database, you don't have to create an ODBC source, you can simply enter the filename of the Access MDB file, using 'ACCESS=..xxx.mdb'.

Selection using DB Manager / search criteria / SQL statement

The database variable has 3 different modes:

a) in combination with the LP4 database manager. The value which the user has selected in the database manager will get printed that way.

b) without LP4 database manager. You have to give a „search field“ and „search value“, LP4 will access the data set which is matching the search criterias. For example you can use an input variable „Please enter product number“, and use this variable as search value for the database variable.

c) without LP4 database manager, using a complete SQL statement. That way very complex queries can be done, and you can even access other variables contents by using the {...}:
 SELECT table1.Test as LPDATA
 FROM table1,table2 WHERE table1.PNumber=table2.ID AND table1.ID={LPVARIABLE};

You can use the „Test read“ button to check, if your database variable is working correctly. if there is an error condition, it will get displayed in full text form (if an error occurs while printing, no error message appears, and the default text will be printed instead).


5.11 External Variable

5.11.1 Description – External variable

The external variable can only be used in combination with the LP4 COM interface. This interface can be used to control LP4 label printing from an external application. In the LP4 COM interface exists a special command to set the content of external variables, so this variable type can be used to transfer data from one application to LP4.

Also some LP4 Product Manager applications are using external variables as data source.

5.11.2 Properties – External variable

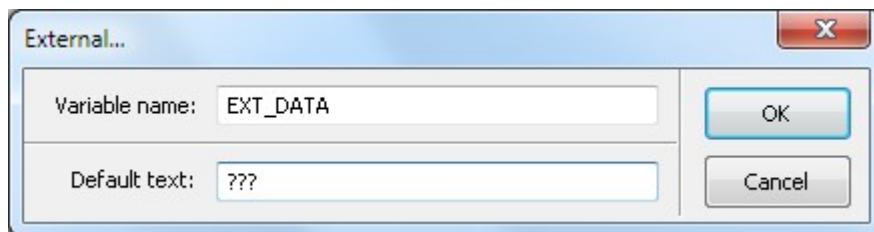

The image shows a dialog box titled "External...". It contains two text input fields. The first field is labeled "Variable name:" and contains the text "EXT_DATA". The second field is labeled "Default text:" and contains the text "???". To the right of the input fields are two buttons: "OK" and "Cancel".

Name of variable

The unique name of the variable

Default text

As long as no external application is changing the content of the variable, the default text will be used for printing.

5.11.3 LP4 remote control

Using the automation interface LP4COM

LP4 offers an automation control, which can be used in Visual Basic or other automation-capable applications.

The automation interface will be registered automatically when LP4 gets installed, otherwise you can register the interface by starting the LP4COM.EXE application with the /RegServer command line.

Here is some small Visual Basic code, explaining all the available LP4COM interface functions:

```
Sub PrintMe()
```

```
' The first two lines are creating a LP4 object for communicating with the LP4 spooler.  
' IMPORTANT: the printer connection will only last as long as the object exists.  
' So usually it is much better to create that object globally, to keep it alive as long as  
' the application is up and running. If you are using only MSWindows printers, it's  
' not necessary to keep the object alive, and you can define the object locally.
```

```
Dim LP As Object  
Set LP = CreateObject("LP4COM.LP4")
```

```
' Set the label file name... if no path is given, LP4 will search the label in the current  
' label directory
```

```
LP.LabelName = "test.lbe"
```

```
' Set the batch count to print
```

```
LP.Count = 654
```

```
' Set the printer connection name. This printer will be used for printing the job
```

```
LP.PrinterName = "LASER"
```

```
' The above properties have always to be set before the printing can start...  
' Additional you can transfer data into external label variables, here for example  
' we set the external variable „Hugo“
```

```
Call LP.SetVar("Hugo", "This is an example text")
```

```
' Now you can start the job. The "Print" function doesn't have any arguments, it  
' will return if the print job was created successfully (value 0) or if an error  
' occurred (value not equal 0)
```

```
i% = LP.Print()
```

' If you are printing at a real label printer, you can ask the LP4 spooler for the
' current printer/job state:

```
' i% = LP.State()
```

' i% can have the following values:

- ' -5: Printer name unknown
- ' -4: No printer connection
- ' -3: Printer connection „File“
- ' -2: Cannot open port
- ' -1: Port doesn't exist/error
- ' 0: Printer is online, no job pending
- ' 1: Job is spooling
- ' 2: Job is printing
- ' 3: Paper out
- ' 4: Bad temperature
- ' 5: Head open
- ' 6: Ribbon out
- ' 7: Unknown state

' To reset a printer connection, you can use the following function:

```
' i% = LP.Reset()
```

' If the reset was successfully, the result will be 0, and the current print job gets
' canceled. Also the communication will start anew.

End Sub

There is an additional command to 'remote control' the LP4 Database Manager. This command will set (like the above shown „SetVar“ command) variables in the selected LP4 layout, but it will set the LP4 DatabaseManager variables instead of the external ones.

Code example (VB):

```
Call LP.SetDBMVars("LPODBCTEST", "LP4DB", "ProductID=21303")
```

The first parameter is giving the ODBC datasource name (here: LPODBCTEST). If the source also needs an username and password, the proper values have to be added to the source name with help of the „@“ character (example: „LPODBCTEST@Name@Password“).

The second parameter is giving the table name of the ODBC source (example: LP4DB).

The last parameter is the search key and the search value (search condition). In the example the data with the number 21303 in the „ProductID“ column will be selected. If a text has to be searched, simple quotation marks have to be used for the value (example: "TextCol='ABCDEFGH'").

The „SetDBMVars“ function call will open the database, search into the table for the wanted value, and set the found data record in the Database Manager variables in the layout. If no record can be found, the variables will use their user given default values instead. Attention: like with the real Database Manager application, a call to the function will initialize all database variables.


5.12 List/GHS Variable

5.12.1 Description – List/GHS variable

The List/GHS variable can be used for an automatic database selection of numbers and texts. LP4 comes with a special database (LP4RS) containing over a dozen different languages of Risk texts.

You will need a Premium version of LP4 to use this type of variables.

5.12.2 Properties – RS variable

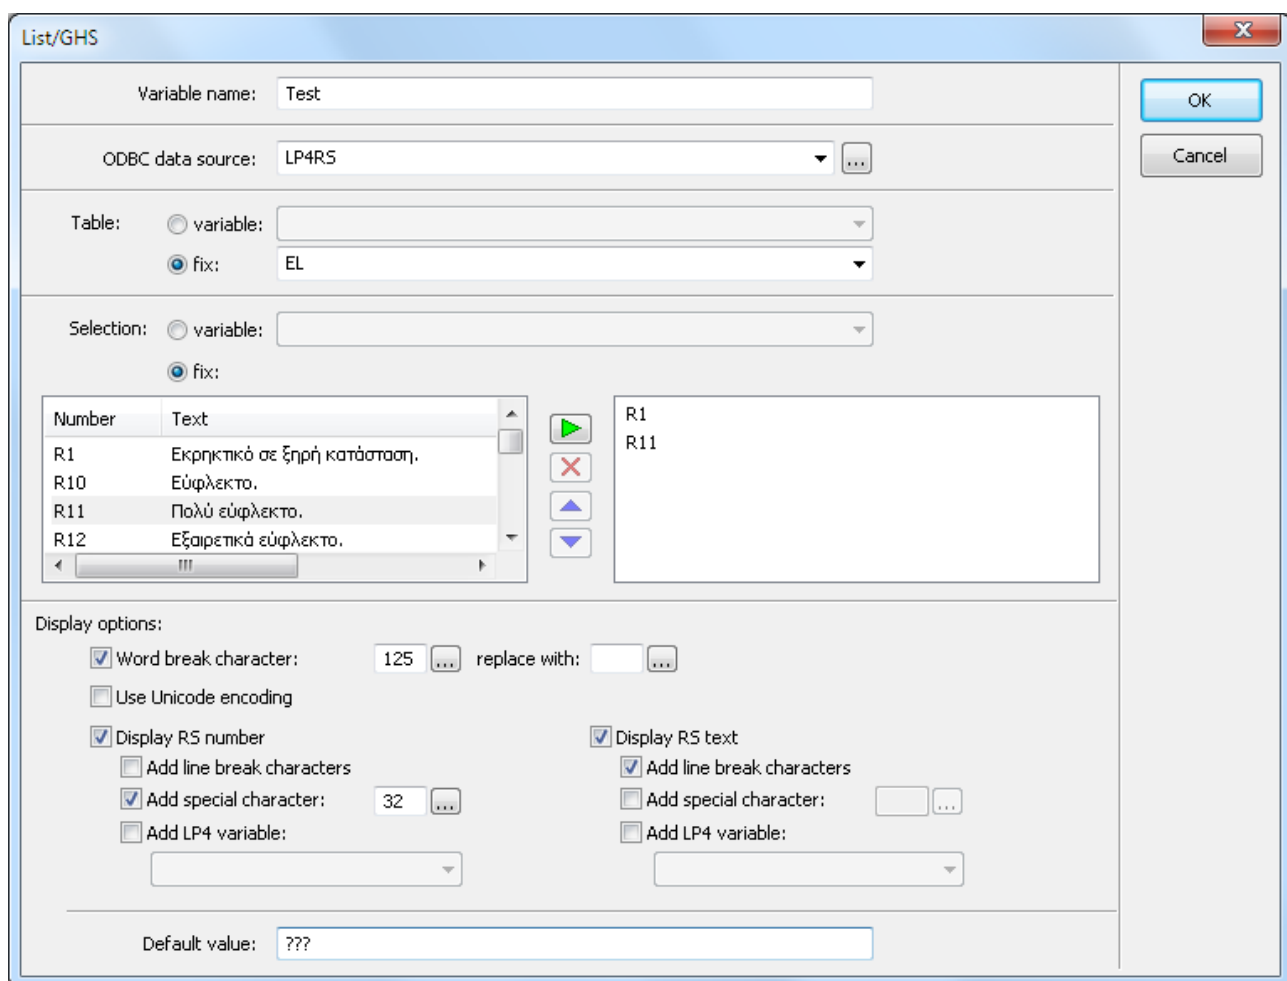

The screenshot shows the 'List/GHS' dialog box with the following fields and options:

- Variable name:** Text
- ODBC data source:** LP4RS
- Table:**
 - ☐ variable:
 - ☒ fix: EL
- Selection:**
 - ☐ variable:
 - ☒ fix:
- Table List:**

Number	Text
R1	Εκρηκτικό σε ξηρή κατάσταση.
R10	Εύφλεκτο.
R11	Πολύ εύφλεκτο.
R12	Εξαιρετικά εύφλεκτο.
- Display options:**
 - ☒ Word break character: 125 replace with:
 - ☐ Use Unicode encoding
 - ☒ Display RS number
 - ☐ Add line break characters
 - ☒ Add special character: 32
 - ☐ Add LP4 variable:
 - ☒ Display RS text
 - ☒ Add line break characters
 - ☐ Add special character:
 - ☐ Add LP4 variable:
- Default value:** ???

Name of variable

The unique name of the variable

ODBC source

As with the database variable, you can select an existing ODBC connection here. By default the connection “LP4RS” will be used.

If you want to use your own database, please note that it needs the following structure: each language is a separate table. The table name should be related to the language (like “ENG” = englisch, “IT”= italian).

Language

Fixed: all available table names (=languages) will be listed here, you can select one of them.

Variable: a LP4 variable containing the table name can be selected here.

List selection

Fixed: you can select multiple numbers from the table

Variable: you can select a LP4 variable containing the numbers, separated by a “;”. For example : “R 1;S 4;S 23c”. You can also specify Alias texts, like “R1=ABC;S1=EFG;...”.

Display options

Here you specify the display details. For example if only the texts should be displayed, you simply deactivate the number display. You can also define how the texts are separated, etc. The “Wordbreak” option should always be used with the “LP4RS” database, since it will contain texts using the “}” character as word break. If you want you can remove this character, or replace it with another one: the formatted special text field will use the ASCII character 31 as wordbreak, for example.

5.13 Marker/Allergen variable

5.13.1 Description – Marker/Allergen variable

The Marker/Allergen variable can be used to highlight key words in continuous texts. The variable searches inside a given input text for key words, and places commands for changing font properties (bold/italic/underline/extra wide) at the detected positions. The result of the variable is typically used in continuous text fields, text type “float text”, property “variable font size = yes (format commands)”.

The key words can be defined in a database table, or directly as a fixed text list inside the variable. LP4 is coming with a proper MSAccess database (LP4MA), which can be adjusted/enhanced for specific needs.

You will need a Premium version of LP4 to use this type of variables.

5.13.2 Properties – Marker/Allergen variable

Marker/Allergen

Variable name:

Input text (continuous):

Words/lines, which have to be marked in the input text:

ODBC data source (empty=text list):

Table: ☐ variable:
☒ fix:

Table column: ☐ variable:
☒ fix:

☐ SQL filter: ☐ variable:
☒ fix:

Type of text format marker:

☒ Bold ☐ Italic ☐ Underline

Change font height by: % ☒ Change font width by: %

☒ Additional text at the start of the marker text ☐ Additional text at the end of the marker text

☐ Add line break characters ☐ Add line break characters

☐ Add special character: ... ☐ Add special character: ...

☒ Add LP4 variable: ☐ Add LP4 variable:

Default value:

OK Cancel

Name of variable

The unique name of the variable

Input text (continuous)

Variable containing the text which should get changed. The key words will be searched inside this text, and format commands are added to highlight the found words.

The key words are defined with the following settings:

ODBC source

Name of the ODBC database source, which contains a table with the key words. By pressing „...” it is possible to specify a user name and password for accessing the database. The default database is the LP4MA MSAccess database, which contains various tables with allergen texts in different languages, but you can also select a different database.

It is even possible to use the variable without any database at all. Leave the ODBC source field empty, and press the ENTER key to use a “text list”, simply a text containing all key words separated by a divider (like “;”).

Table / Text list

If you have selected an ODBC source, you can select a table (containing the keywords) of the database here, or you specify a variable containing the table name.

If you have no ODBC source (empty), you can enter a text list here (like “egg;milk;wheat”), or specify a variable containing the text list.

Table column / Divider

If you have selected an ODBC source, you can select a table column (containing the keywords) of the database table here, or you specify a variable containing the table column name.

If you have no ODBC source (empty), you can enter the text list divider here (like “;”), or specify a variable containing the divider.

SQL Filter

If you are using your own database, it may be necessary to define a special filter for getting the key words from a database table. If for example your table has two columns, one with a language tag (like “DE”, “EN”, “FR”) and the second one with the key words in different language, you will need to specify which language words you want to use for the variable. In the “SQL filter” you can enter any SQL “WHERE” condition, in our example for getting all English words: **Language_column=‘EN’**.

Type of text format marker

The following types of highlighting can be used.

- Bold (= format command “[Bxxx]”)
- Italic (= format command “[Ixxx]”)
- Underline (= format command “[Uxxx]”)

You can combine the bold/italic/underline options, resulting in the proper format commands.

The font sizes of the highlighted key words are by default the same as the surrounding texts. You can enlarge/shrink the font size with the „change font size by x %“ option. Positive values will enlarge the key words, negative values will reduce the font size. If needed you can specify the size scaling for font height and font width separately by activating the option “change font width by”.

Additional text at start/end of marker text

You can put additional text at the start or at the end of the marker texts. The additional text is not getting changed by the Marker/Allergen variable.

This can be helpful if you want to put special characters in front/back of the marker words, or to add special font commands like the [F:...] tags for changing the font name.

Example for a continuous float text field using a Marker/Allergen variable:

Zutaten: 42% Tomatenketchup (Tomatenmark (60%), Branntweinessig, Zucker, Salz, **Ei**, modifizierte Stärke, Zitronensaftkonzentrat, Verdickungsmittel: Xanthan, natürliches Aroma), 33% Fleischsalatgrundlage (Schweinefleisch, Speck, Wasser, Salz, **Weizenmehl**, Stärke, Gewürze), Stabilisator: Natrium-citrate, Dextrose, Antioxidationsmittel: Natriumisoascorbat, Saccharose, Farbstoffe: Echtes Karmin, Gurken, Zwiebeln, Rapsöl, Mehl, Senfsaat, Zucker, Gewürze (Curry, Sellerie, Tomaten), Gewürzextrakte, **Vollei und Milch und Nüsse**, Säureregulator: Natriumacetate.

6 The LP4 Print Tool


6.1 Generic

The LP4 Print Tool is an external application which will get installed with the main LP4 application. It offers an easy way to print existing labels. The user cannot edit labels that way, but he can adjust all parameters needed for printing the labels.

It's also possible to get print-only licenses which will only allow the usage of the LP4 Print Tool (for example for production lines).

6.2 Usage

The print tool short cut can be found after installation in the Labels Platform 4 program group. The print tool has the same features and controls as the LP4 print dialog, it just offers the possibility to select a label (including a label file preview):

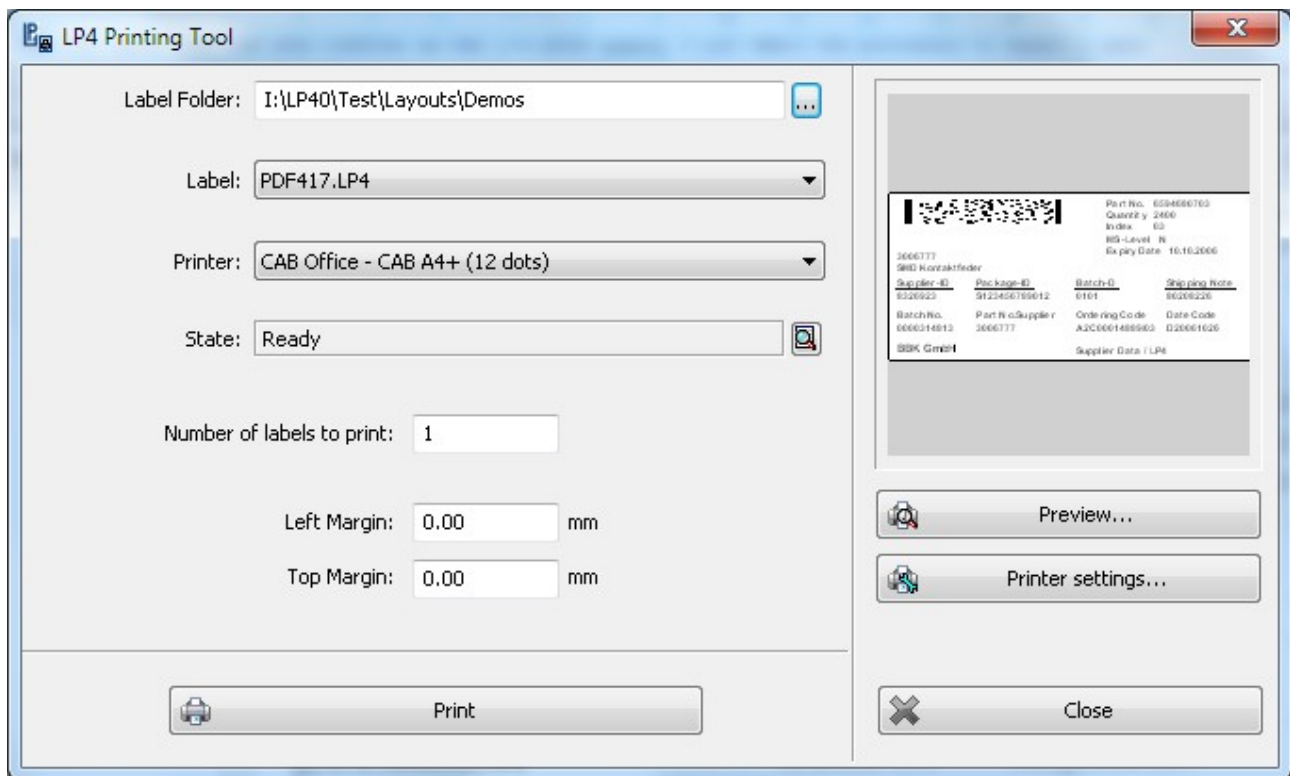

The user can select the label file, adjust the printer (if needed), and start the job by pushing the „Print“ button.

If there are input variables defined on the selected label, the LP4 input window will show up, otherwise the label download will start.

7 The LP4 Printjob Manager


7.1 Generic

The Printjob Manager is like the LP4 Print Tool an application for starting printing jobs. Instead of selecting one label for printing, you can define whole label lists in the Manager. Such a list can be started by pressing a button, all print jobs of the list will be generated. The LP4 Spooler will now work in the background, and activate the jobs after each other on the given printers (please note: the printers have to be connected bi-directional).

It is possible to save a job list, and to load it later on demand.

7.2 Usage

After installation the Printjob Manager can be found as an icon in the LP4 program group. You can also start the Manager from the LP4 label editor, by selecting the menu item „Addons“ -> „Printjob Manager“. Now the application will start and display the following window:

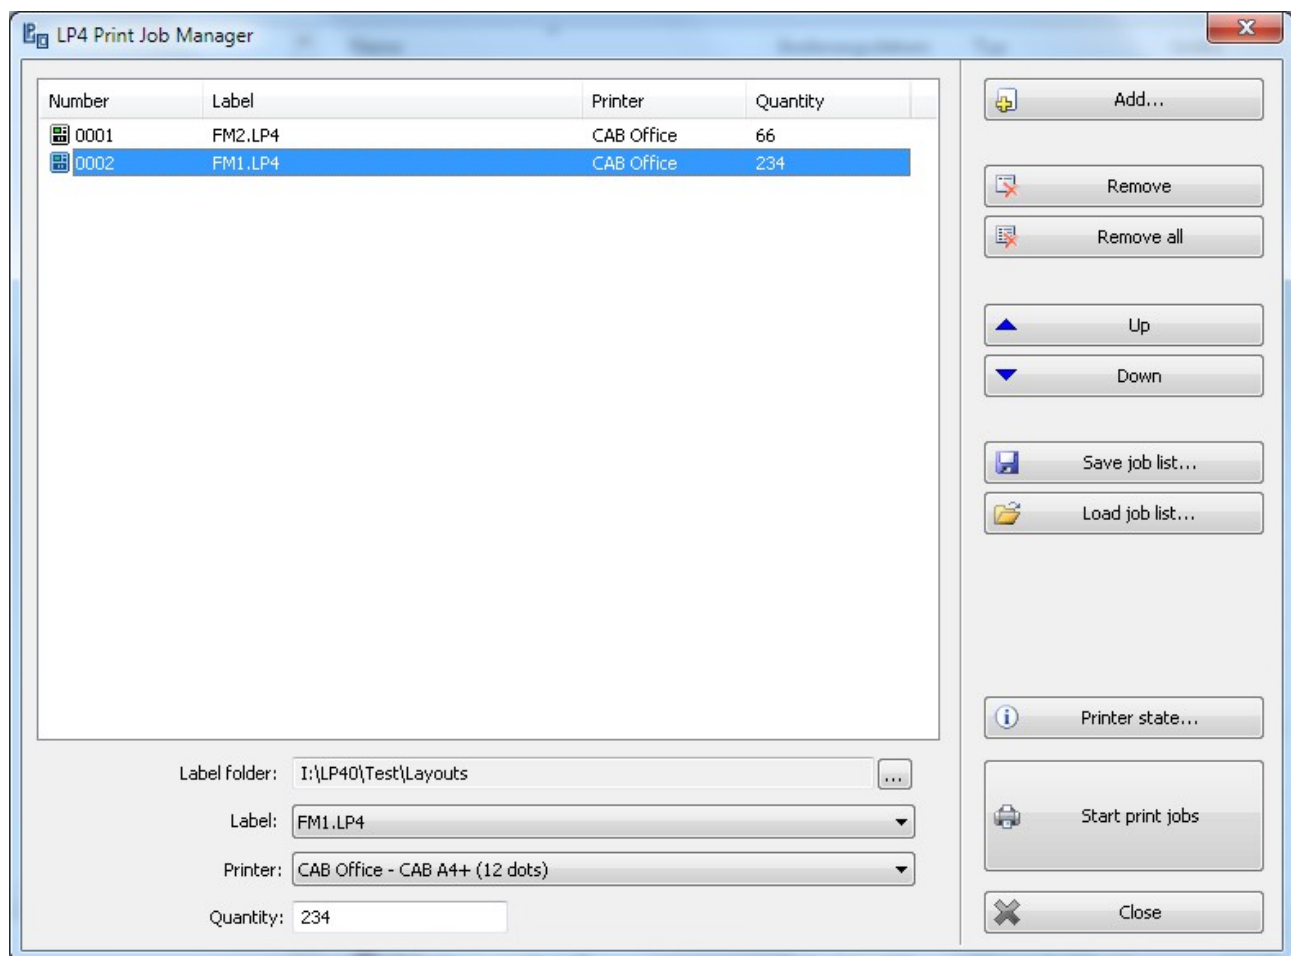

By using the „Add“ button you can select one or more label files and put them into the list. Those entries can be changed by the edit fields below the job list: the label, the printer and the batch count can be selected/edited here.

If you want to change other existing entries, you can select them by mouse or keyboard, and use the edit fields to enter the new values. It is possible to select multiple entries (by using the SHIFT or CTRL keys), and to change all entries at once.

To remove existing entries, or to change the job order, you can use the buttons on the right side of the window.

For a fast change in the batch counts of existing entries, you can simply click on one of the counts in the list. Now an edit field will appear there, simply enter the new value and click on the next entry you want to change.

After you have defined your list, you can save it into a text file (button „save list“). With the button „Load list“ you can load the list at a later time. The current list will also be saved each time you close the application, in a file called „LP4PJManager.INI“. This list will also get loaded automatically each time you start the application again.

By pressing „Start print jobs“ all jobs in the list will be generated and put into the LP4 Printer Spooler. The Spooler will now transfer the first job to a printer, then wait until it is finished, and start the next job, and so on. Please note: the LP4 Spooler will only be active as long as at least one LP4 application (for example the Printjob Manager, or the label editor) is still up and running. If you close all LP4 applications before the print jobs are done, the LP4 Spooler will also close, and the remaining jobs will be lost.

The button „Printer states“ will show you the state of all connected printers. You can also control all started print jobs in this window.

Command line parameters

There are two available command line parameters with the Printjob Manager. „/p“ means: start the Manager invisible, and generate all jobs in the current job list. After this, the Manager will close automatically. Therefore it is important, that still another LP4 application is active (usually this parameter is be used with a LP4 Commander project, to start a job list).

The second parameter is simply a free selectable file name. The Manager will load this file as a job list on start up. Please note: always use quotation marks around the filename!

The following example will show the usage of both command line parameters together. It starts the Printjob Manager invisible with the list „C:\Jobs\Joblist1.ini“, all containing jobs will be generated, and the Manager will close afterwards automatically:

```
LP4PJManager.exe /p "C:\Jobs\Joblist1.ini"
```

8 LP4 Remote

8.1 Generic

LP4 Remote is an external application which will get installed with the main LP4 application. LP4 Remote is only usable if a PREMIUM license of LP4 is active.

LP4 works in combination with CAB & Intermec printers. The user can enter directly a job number at the printer keyboard/panel (Intermec) or an external keyboard (CAB). LP4 Remote detects such user inputs and starts a proper print job at this printer.


This way you have the advantage of a direct input on the printer with the PC advantages like a near unlimited amount of space to store labels and data. And every PC with LP4 Remote can manage multiple printers at once, so you don't need one PC for one printer.

8.2 Usage

LP4 Remote can get startet parallel to any other LP4 application (like the label editor or the LP4 Database Manager). LP4 Remote will use the printer definitions from the main LP4 system, all defined CAB & Intermec printers with a bidirectional connection will get under control of LP4 Remote. Alternatively you can use a native TCP connection for starting print jobs.

If you minize the LP4 Remote application, the icon will be moved from the MSWindows taskbar to the tray area. A double-click on the tray icon will show the main window again.

After the startup from LP4 Remote the following window will appear:

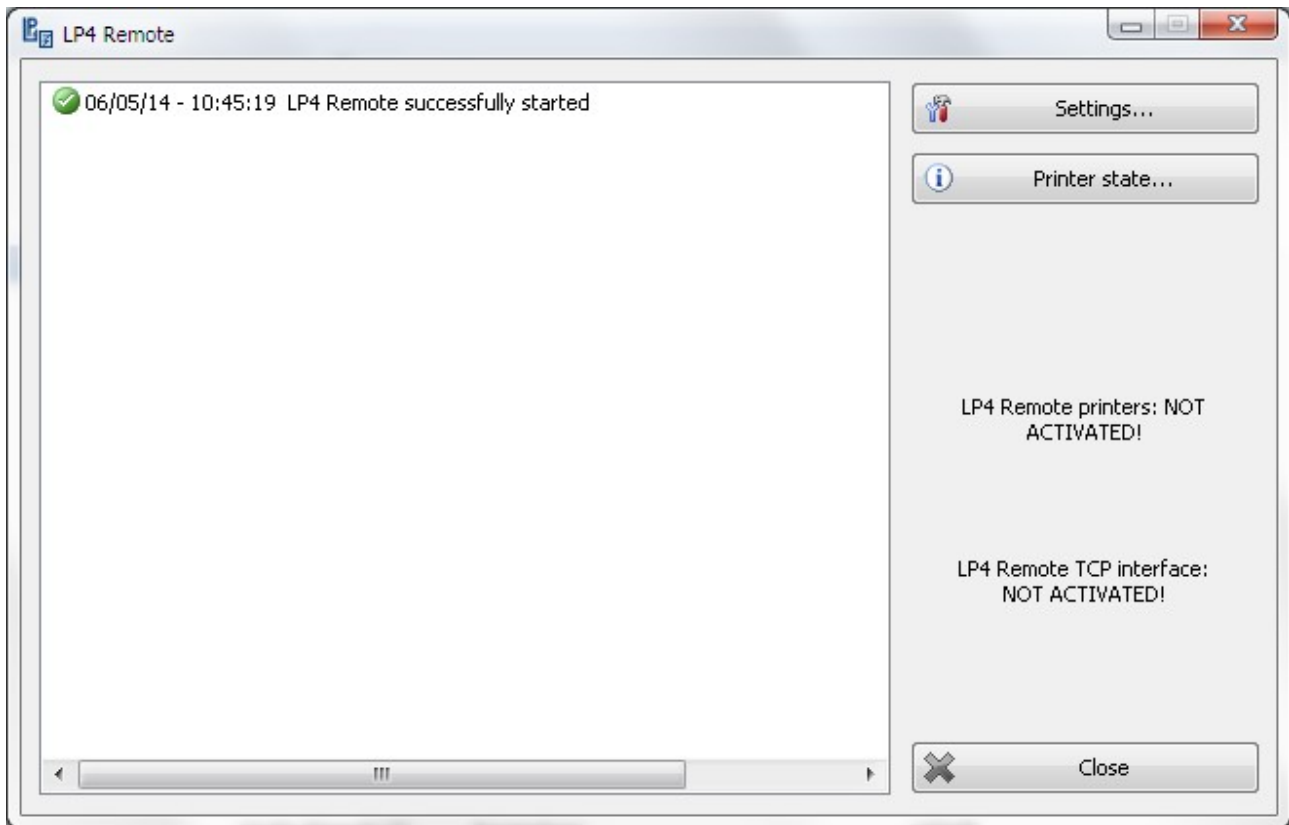


The right part of the window contains an information, if LP4 Remote is currently active, and two buttons: „Settings“ and „Printer state“

The left part shows a protocol list. This list will inform you which printer has started a job at which time, or if the job has failed.

The „Printer states“ button will bring up the LP4 printer states window, showing if all printers are connected and ready.

The „Settings“ are controlling if and how LP4 Remote is working:

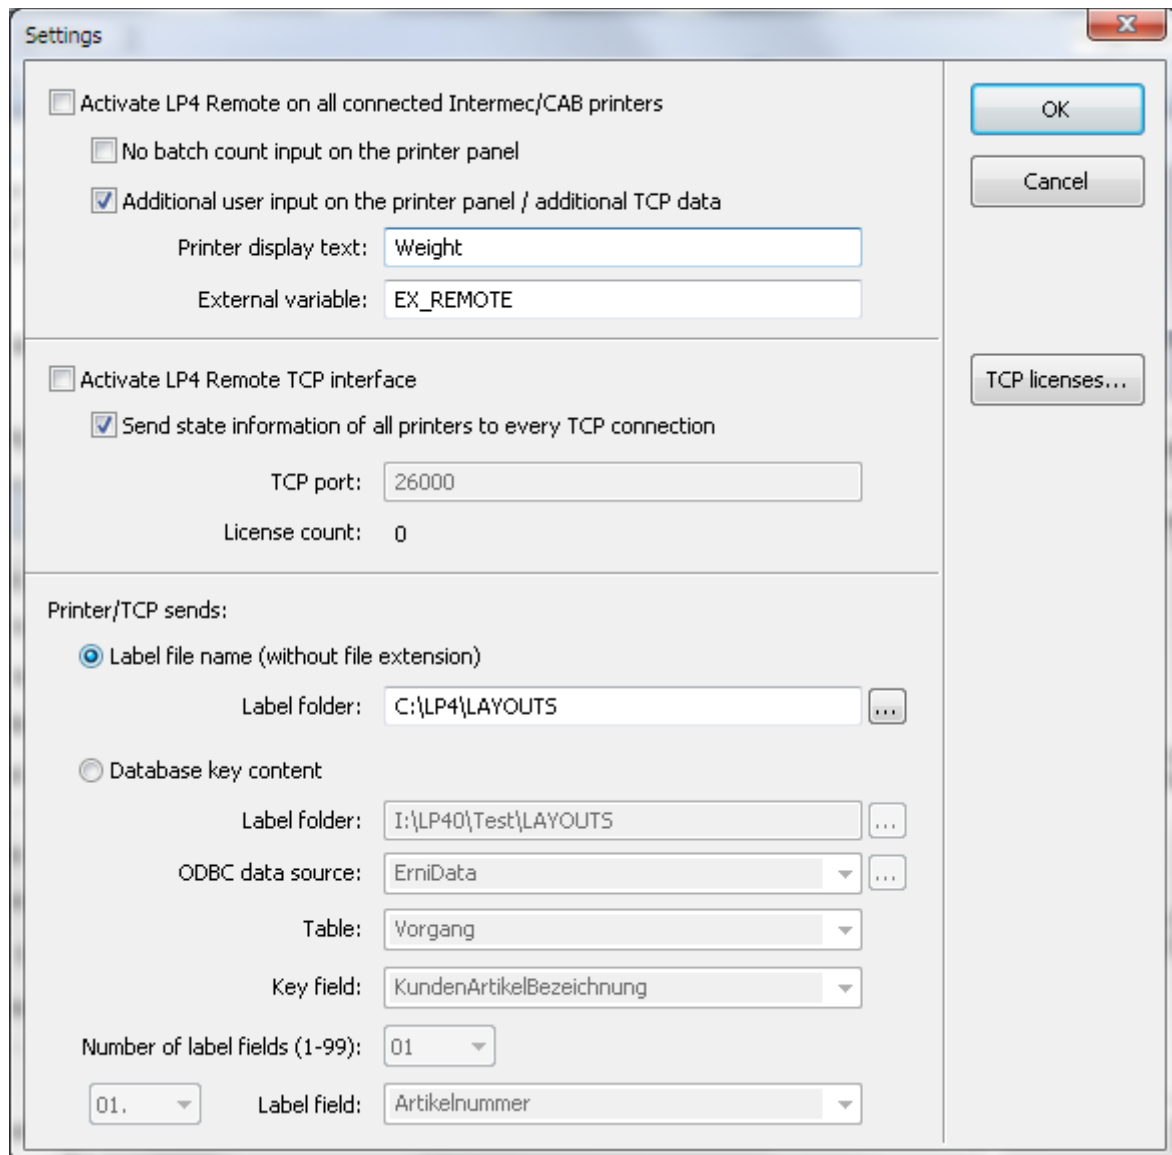

The screenshot shows the 'Settings' window for LP4 Remote. It is divided into three main sections. The first section contains checkboxes for 'Activate LP4 Remote on all connected Intermec/CAB printers', 'No batch count input on the printer panel', and 'Additional user input on the printer panel / additional TCP data'. Below these are text fields for 'Printer display text' (set to 'Weight') and 'External variable' (set to 'EX_REMOTE'). The second section has checkboxes for 'Activate LP4 Remote TCP interface' and 'Send state information of all printers to every TCP connection'. It includes a 'TCP port' field (set to '26000') and a 'License count' field (set to '0'). The third section, titled 'Printer/TCP sends:', has two radio buttons: 'Label file name (without file extension)' (selected) and 'Database key content'. Under the first radio button is a 'Label folder' field (set to 'C:\LP4\LAYOUTS'). Under the second radio button are fields for 'Label folder' (set to 'I:\LP40\Test\LAYOUTS'), 'ODBC data source' (set to 'ErniData'), 'Table' (set to 'Vorgang'), and 'Key field' (set to 'KundenArtikelBezeichnung'). At the bottom, there are dropdowns for 'Number of label fields (1-99)' (set to '01') and 'Label field' (set to 'Artikelnummer'). On the right side of the window are buttons for 'OK', 'Cancel', and 'TCP licenses...'. The window title is 'Settings'.

The first option activates the LP4 Remote functions. Only if this option is turned on the user will be able to enter a new job number by pressing the printer's „F1“ key (Intermec) or „F1/ENTER“ key (CAB).

Additional printer settings are available: the first setting will control if the user should enter a batch count when starting a new print job, or if LP4 should create the job with maximal possible label count.

With the second setting it is possible to define an additional user input at the printer. This input will be stored into an external LP4 variable which can get used at the label layouts. The display text and the name of the external variable can be chosen as needed.

It is possible to use LP4 Remote with just a TCP connection to a different system as well. You need to specify the TCP port number, and you can specify if all connections should get the printer states automatically. For running the TCP option, additional licenses are needed, you can purchase a license number from BBK and enter the number by using the “TCP licenses” button. The TCP commands are described in the section below.

The lower part of the settings window defines the internal handling of remote print jobs:

The first possibility is to interpret the user input as a label file name (without file extension). If this option is active, and the user enters for example „12345“ at the printer keyboard, LP4 Remote will search for a label file named „12345.lbf“. If the label file can be found, it will get transferred to the printer, and the printing starts. If the label file does not exist, the printer will ask the user again to enter a job number, no printing will occur.

The second possibility is by using a database. You can select the ODBC datasource name, the table name, the key field (contains the unique values the user can enter on the printer) and the label name field (contains the label file name, like „format 1.lbf“ – the field can also contain the filename without the „.lp4“ extension). If the database table has more than one label field (meaning: for the same article exist for example 5 different label layouts), up to 9 label fields can be defined. There will be a special user input at the printer, asking for the label field number (1-9) if more than one label field will be used,

Special INI settings: there exist a few INI entries in the file LP4.INI, section [LP4Remote] for some special adjustments.

„CloseDB=1“ will tell LP4 Remote, to open and close the database connection on each new printer job request (by default LP4Remote will open the database on startup and close it on exit). Please note: this setting can cause slower reaction times, if the opening/closing of the database requires much time. On the other hand it can be useful, since database maintenance (backup, replacements) are easier when the database is closed.

Another INI-Option is „DBPrefix“, with this key you can specify a prefix for the table name. „DBPrefix=pub“ would tell LP4Remote to access the table „pub.Printjob“ internally, instead of „Printjob“. (this setting was required by a special ODBC driver, and should not be needed in usual installations).

If your table does not contain a label field, and you want to use just one layout with LP4Remote, you can use another INI entry: „LabelDefault=xyz.lbf“ specifies the layout file name, which will be used if no label field is specified in LP4 Remote.

Additionally it is possible to define for each printer an individual layout directory in the INI file. Simply create entries called „LayoutDirPRINTERNAME=c:\xyz\layouts“, PRINTERNAME has to be replaced with the LP4 printer name. If now a label request is coming from one of this printers, the layout folder from the INI file will be used instead of the global directory. If you have not entered a special directory for one printer, the global directory will be used for this printer. Please note: after you have set at least one printer to an individual directory, you cannot change the global label directory in the „Settings“ dialog window: in this case you have to change the global directory in the INI file as well (entries „FileDir“ and „FileDir2“).

You can also specify in the INI file, if some of the database fields should be read as Unicode. You can define this by adding „DBUnicode1=Column name A“ entries to the [LP4Remote] section.

Usage on the Intermec printer:

Now the user can select a new print job at the printer by pressing “F1”. On the printer display the text “Number:” will appear, the user has to enter the proper article number (key field of database table). If more than one label field is defined, the next printer question will be “Labelversion:”, here the user has to give the proper label field index (1-9). If an additional external variable input is defined, it will appear next. The last question (if not deactivated) will be the batch count.

After giving all prompted informations, LP4 Remote will search inside the database for this job number. If the number is inside of one data set, the connected label file will get loaded internally, all database variables will get updated with the found data, the optional external variable will be filled with the user input, and the label download is starting.

If the user input cannot be found in the database, or if the label name in the found data set is wrong, no printing will happen, the printer will only ask the user again to enter a valid number.

Hint: it is also possible to connect the printer serial com port (if not used for PC communication) with an input device like a barcode scanner. After pressing F1, all user input (article number, batch count, etc) can come from wither the printer keyboard or this external device. By default the device has to send the data frame in a start- and stop-character. Start is “#”, stop is “*”, for example:

#123456*

Usage on the CAB printer:

The CAB printer needs an additional USB keyboard to work with LP4 Remote. The “abc” widget inside the CAB display (if available) will show the text “LP4” as soon as LP4 Remote is activated. The user can now

press “F1” or “Enter” to start the format selection. Up to three user inputs are to be done (format, print count, additional data), the input is send to LP4Remote which will generate and transfer the label.

Additional user input can be defined in the label layout by using CAB printer variables. Those user prompts are shown as soon as the new label is downloaded.

„F5“ will stop the LP4 Remote function inside the printer, if also the LP4 Remote application has been closed.

Usage with TCP connections:

The other system needs to act as a TCP client, and connect to the specified TCP port. A new connection is only established, if the current connection count has not reached the number of purchased TCP licenses.

The TCP client can send the following sequence to activate a print job:

#P:printer name;key or label name;print count;additional data for external variable*

The print count and the external variable data are optional. If no print count is sent, a print job with 99999 labels is created. Example: #P:Cab1;ABC* creates a print job on printer Cab1 using label layout ABC.LP4, 99999 labels are printed.

The TCP client can also ask for the current printer state by sending:

#I:printer name*

LP4 Remote will answer the request with the following sequence:

#S:printer name;currently active key/layout;LP4 printer state text *

The TCP client can also ask LP4 Remote to send this state information every time when the state is changing:

#A:printer name*

If you activate the „Send state information of all printers to every TCP connection” option, LP4 Remote will send the “#S...” information automatically to every established connection.

An advanced TCP protocol can be used with the LP4Socket module. This module is described in the LP4 Commander manual.

9 LP4 Format manager


All available Formatmanager applications can be started from the label editor (menu item „Addons“), or by using a desktop shortcut. With a shortcut you can define a command line containing the configuration file (FM...INI) you want to load on startup of the Formatmanager. If you specify “/p” in the command line, the format manager will start invisible, create all formats, and start the download to the printer. After this the application will close again. Therefore this mode is useful in combination with the LP4 Commander, to create applications with automatic format transfer.

9.1 LP4 Formatmanager Intermec Standard

The LP4 Format manager Intermec Standard is the standard solution to download label formats into an Intermec/UBI printer once, and recall this labels without any PC directly on the printer panel (or by sending a serial command, or by IO signals).

Up to 20 labels can be stored in a printer, and it is possible to use an optional text database inside the printer, or to send variable data by RS232, so the printer can easily get integrated into an existing production line.


Format manager Intermec Standard:

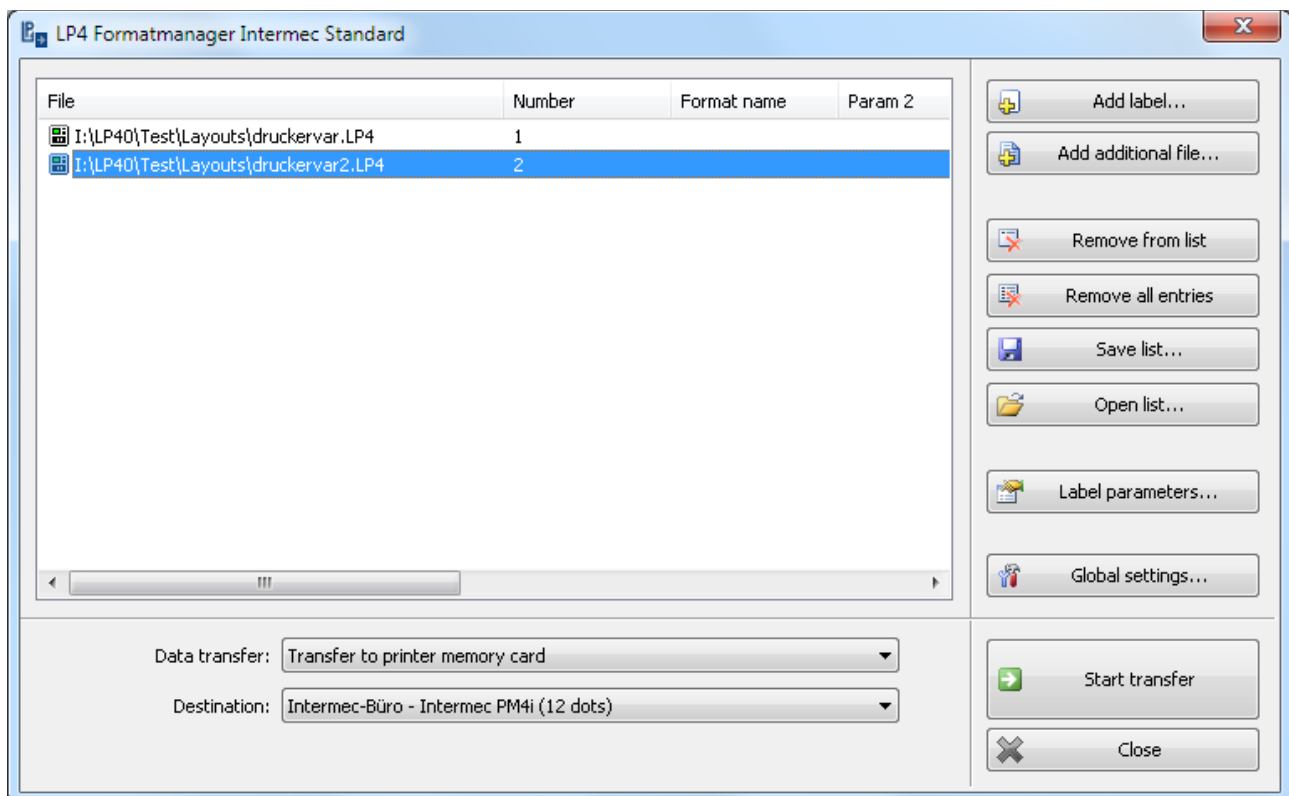

By using „Add labels...” up to 20 labels can be selected. Each label has an unique number (used to recall the label on the printer), and up to 8 additional parameters which can be used in the label layouts by defining the printer variables VPA\$(CURRLAB%-1)(1..8). To change the number or optional parameters, use the button “Label parameters...”.

The application will automatically store the last list of labels you have defined, and all of the parameters, and will load it automatically on the next start up. If you have multiple printers with individual label list, you can manually save/load the list into/from a file by using the “Save list...” and “Open list...” buttons.

In the „Global settings“ the main function settings can be changed:

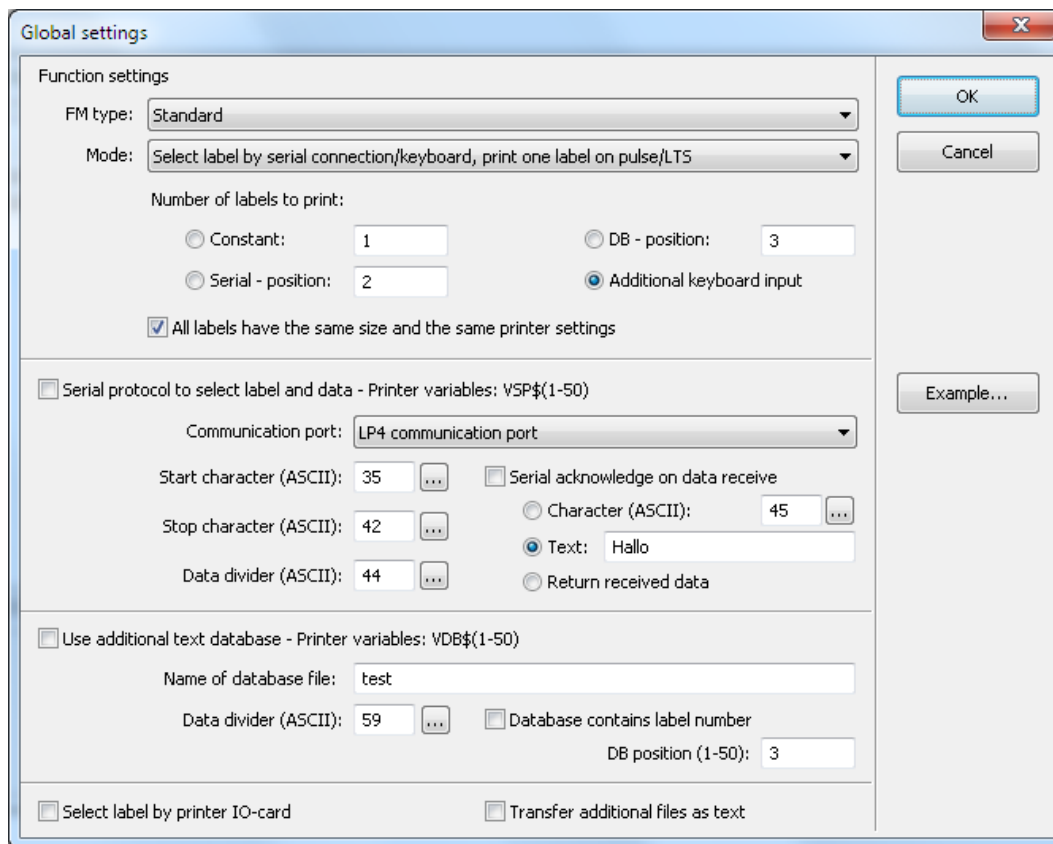

FM type

Sometimes special label functions are needed, and BBK will offer customized solutions which are not covered in the “Standard” function set. If those special solutions are installed, the list “FM type” will show them. By default only the “Standard” functionality is available.

Mode

The printing mode will decide if a label should be printed immediately, or if the printer should wait for a printing pulse, or maybe even a combination of both (after a printing pulse n labels should be printed). Also available: a special FIFO (first in, first out) mode, which is storing label jobs received on the printer’s RS232 (up to 40 jobs can be stored), and print them one after each other.

Number of labels to print

On each print job a certain number of labels will be printed. This batch count can be constant (for example one label on each print pulse), or variable (defined in an optional text database, or given by the RS232 connection, or entered by the user at the printer panel).

To gain an higher print speed, it is possible to activate the “all labels have the same size and printer settings” option, of course then all selected label layouts really have to use the same sizes and settings.

Serial protocol to select label and data

If a printer should get added to an existing production line, it is often needed to get data from the production line unto the printed labels, or that the production should automatically tell the printer which label layout should be used.

Therefore it is possible to connect a PC/PLC by RS232 to the printer, and to send label informations by this connection. The information has to be formatted in the following way:

<STARCHAR>labelNumber <DATADIVIDER>Data1< DATADIVIDER >Data2....<ENDCHAR>.

The start-, end- and divider-character can be easily defined in the Formatmanager settings. If an acknowledge answer is needed (the printer should send back a sequence that the data have been received), it is possible to activate that as well, even by defining what kind of data should be returned.

The received data can be used in the label layouts by defining the printer variables VSP\$(1) to VSP\$(50).

Additional text database

Beside the label layouts you can also transfer a special textfile inside the printer as well, containing additional informations, a "text database". Each line in the file will be a data set, with up to 50 data contents each set.

```
KEY1<DIVIDER>Data1-1<DIVIDER>Data1-2 etc
KEY 2<DIVIDER>Data2-1<DIVIDER>Data2-2 etc
KEY 3<DIVIDER>Data3-1<DIVIDER>Data3-2 etc
....
```

Again it is possible to select a special divider character, and to define if the text database holds the layout number. If yes, the user only has to enter the dataset key on the printer panel to activate a print job, the related label number will be read from the data set.

The data of the selected dataset can be used in the label layouts, by defining the printer variables VDB\$(1) to VDB\$(50).

Select label by printer IO-card

If the printer has an IO-card installed, it is also possible to select a label number by setting the correct input signals before the print pulse get set.

For example, if layout number 19 should be selected, the inputs 1, 2 and 5 ($1+2+16=19$) has to be set.

Transfer additional files as text

If you are transferring additional files with the Format Manager, you can speed up the transfer with this option, if the files only contain text data. Please note: the double quotation marks (") will be translated in single quotation marks (') during the transfer.

Commad line options

You can use two command line options with the Format Manager:

First, you can specify an INI file name. This file will be used as configuration file instead of the default "LP4FMISstandard.INI".


Also, you can use "/p" in the command line. This switch will tell the Format Manager to start invisible, load the configuration file, and press internally the "Start transfer" button. After this action the application will close again. Therefore you can start a format transfer from an external application.

This two command line switches can also be used in the other LP4 Format Managers (Zebra Standard and Intermec Multi-Boot).

9.2 LP4 Formatmanager Zebra Standard

It is possible to store different label layouts on Zebra printers as well (in the RAM, in the internal FLASH memory or on a PCMCIA card), and the number of labels is just limited by this storage. This labels can be started by sending the printer a special sequence by RS232 or network. This sequence holds the layout name, and (if needed) additional variable data which should be printed.

To transfer the label layouts to the printer, the Formatmanager Zebra Standard can be used:

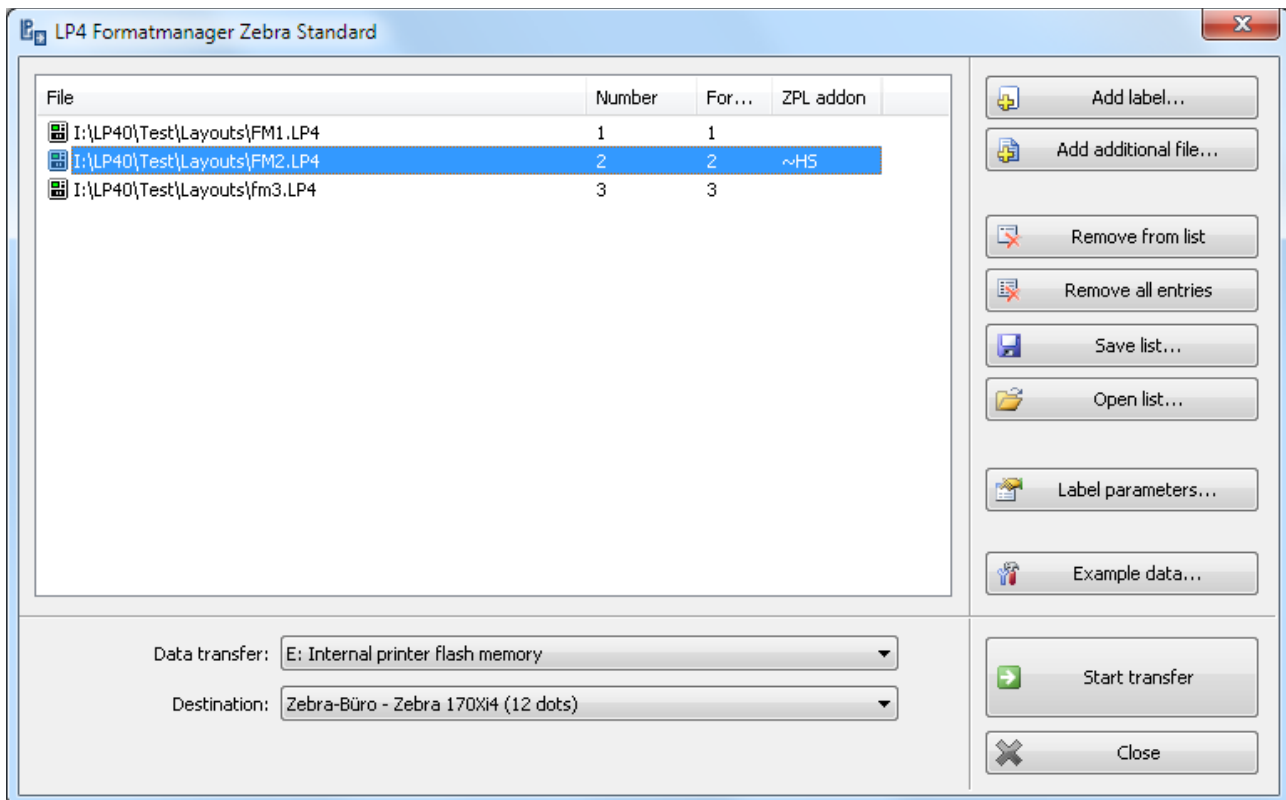

The basic functions are identical to the Formatmanager Intermec Standard, but there are no “Global settings” available, the printer will only work in the following way:

To start a stored label, a sequence has to be send to it, here an example to start the label „EXAMPLE“ from the printer flash memory, setting a variable text and printing it 5 times:


```
^XA
^XFE:EXAMPLE.ZPL
^FN1^FDTest^FS
^ILE: EXAMPLE.GRF
^PQ5
^XZ
```

The variables (here the number “1” one) have to be defined in the label layout as printer variables, and connected to text/barcode fields.

Such start sequences can easily be build, as an help the formatmanagert has an „Example“ button. But of course the commands are also described in your printer’s ZPL manual.

9.3 LP4 Formatmanager Intermec Multi-Boot

This Formatmanager can be used with Intermec/UBI printers. It can store much more different label formats inside the printer as the Standard formatmanager, but it is more limited in how to start a format: the user can only select a new label format on the printer panel, after the selection the printer will reboot and activate the chosen label.

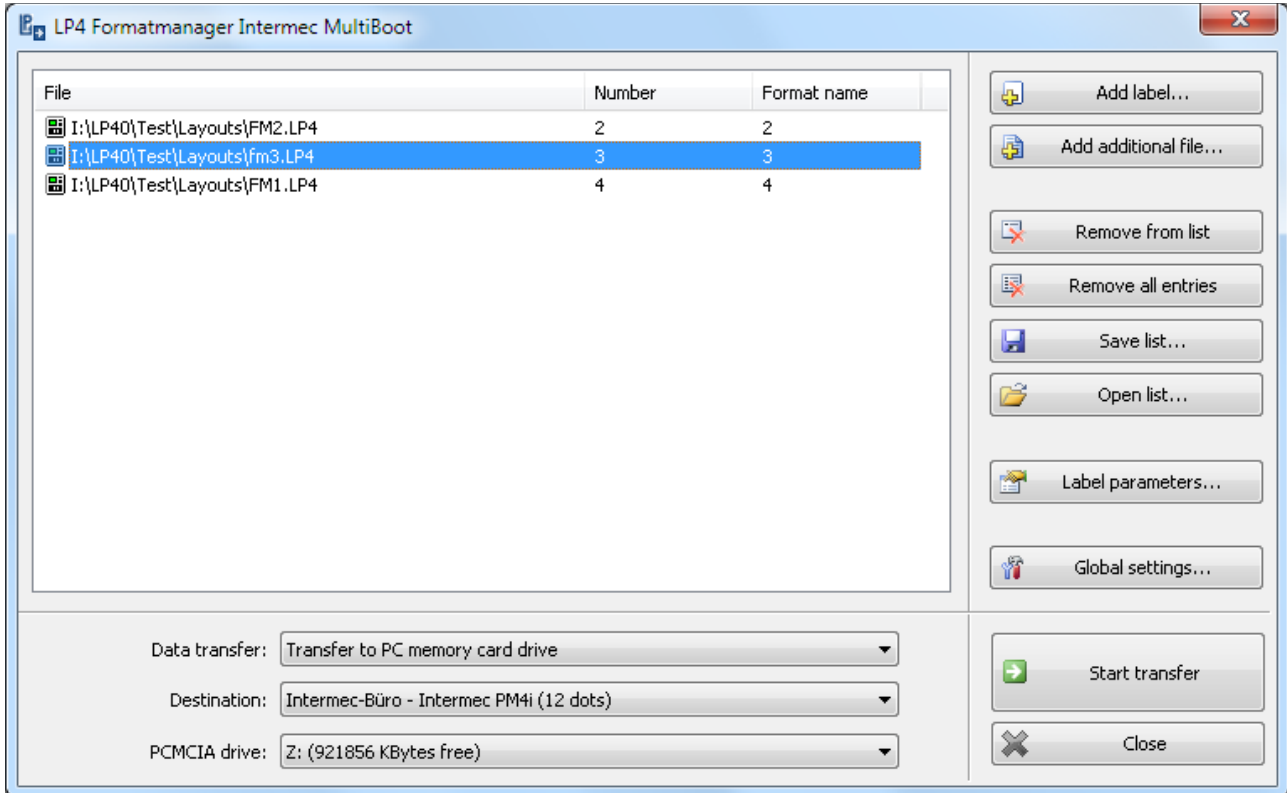


Therefore the „Multi-Boot“ Formatmanager is used in production lines, where the user should have the choice of many different label formats, but the labels will not change very often during production (since a reboot takes some seconds before the printing can start).

BBK offers also customized versions of this format manager, if such a special solution is installed, it is selectable in the “Global settings” window.

9.4 LP4 Formatmanager CAB Standard

CAB printer can store label layouts at the internal flash file system, or at optional memory systems (PCMCIA cards, compact flash cards, USB memory sticks/hard drives). The layouts can be started by by sending the printer a special command sequence, or directly at the printer control panel.

To transfer the label layouts to the printer, the Formatmanager CAB Standard can be used:

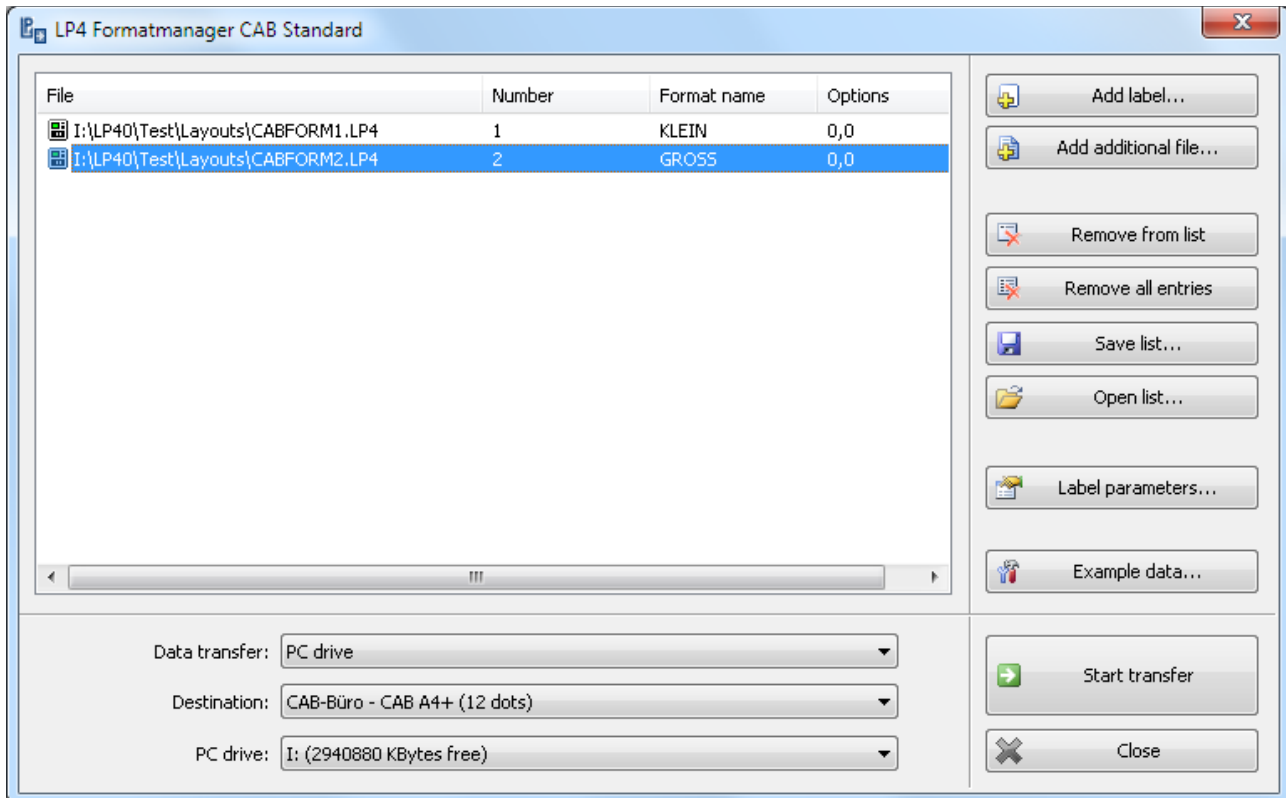

The basic functions are identical to the Formatmanager Zebra Standard: select you labels, change the format name (if needed, by pressing the button “Label parameters”), select a data transfer type and printer destination, and press the “Start transfer” button. LP4 will generate all formats from the list, send them to the printer, and the printer will store the formats as specified. It is also possible to select a PC drive (for example an USB memory stick) as destination, LP4 will create the needed CAB folders on the drive (Labels, Images and Misc), and store the format files into those folders. Now the memory stick can be inserted and used in the CAB printer (please check the printer documentation for supported memory types).

To start a stored label, a sequence has to be send to the printer, here an example to start the label „EXAMPLE“ from the printer flash memory, setting a variable “Test” to the text “ABC” and printing it 5 times:

```
MI LBL;EXAMPLE
R Test;ABC
A5
```

The variables need to be defined in the label layout as printer variables, and connected to text/barcode fields.

Such start sequences can easily be build, as an help the formatmanager offers an „Example“ button. But of course the commands are also described in your printer's programming manual.

10 LP4 Productmanager Standard DB

10.1 Generic

LP4 Productmanager are stand-alone applications which are usually used in production areas with specific tasks.

The LP4 Productmanager Standard DB is included in the main LP4 setup and can be used with a LP4 Premium version. It features an easy and flexible way to start print jobs from a connected database, and it is highly configurable. It is also possible to give the user additional input fields to edit certain values before printing or to define a text file import, to update the jobs in the database from an external source like SAP. Also available: an "automation mode" in which the application will automatically print imported data.

The LP4 Productmanager Standard DB can be used with any printer type, a bidirectional connection can be used to queue print jobs.

10.2 Configuration

The LP4 Productmanager Standard DB can be configured in many ways by changing settings in its configuration file (LP4StandardDB.INI). The settings and their meaning are listed in this chapter:

```
[DATABASE]
Name=LP4DB
User=
PW=
Table=LP4StandardDB
MoveTable=LP4Protocol
KeepOpen=0
ShowKeyList=1
AutoIndex=0
```

The [DATABASE] section is used to define the ODBC datasource connection. "Name" is the ODBC datasource name, "User" and "PW" are the optional username and password settings for this connection.

"Table" is giving the name of the table inside the database, in this table all the print job informations are stored.

"MoveTable" is an optional setting. It is possible to enter the name of a second table from the database, which needs to be identical to the main print job table. Now on every print stop (Start/Stop mode) or on every print start (normal printing mode) the currently selected data set will be moved from the main table to this protocol table.

"KeepOpen" is a special option, telling the Productmanager application to open the database at startup, and closing it on shutdown (KeepOpen=1) or to do just temporary open/close sessions each time when the database gets accessed. Always opened databases are faster to handle, temporary opened databases are more secure (if a PC crash problem occurs) and it is recommended if many users want to use the database at the same time.

„ShowKeyList“ affects the application window: if this setting is „1“ a small list showing all datasets from the job table will be visible, making it easier for the user to see the valid job keys. Attention: this list will be automatically refreshed if the user deletes/moves or imports data from/to the main table, but it will not be refreshed if another application will change the table contents! Therefore it should be turned off, if

applications beside the Productmanager will write data into the main table. Alternatively the “Import” options can be used to refresh the list after a given time or button press.

If the table is using an automatical indexing field, its number has to be put into the “AutoIndex” entry. Only then the Productmanager can do a proper data import into such a table.

```
[DBEXTVARS]
ArtikelID=LP4_VAR_ARTID
Etikett=LP4_VAR_LABEL
Stückzahl=LP4_VAR_NUM
Bezeichnung=LP4_VAR_BEZ
```

The section [DBEXTVARS] is used to tell the Productmanager which table column should be mapped to which LP4 external variable. Each time when a print job gets started the content of the table columns will be copied to the given variables. Hint: the usage of space characters or special characters in the table column names can cause problems and should be avoided.

It is also possible to not map the data to external variables, but to LP4 Database Manager variables. This will be activated by setting “UseDBManagerVars=1” in the [GENERIC] section. Then the [DBEXTVARS] definitions will be ignored!

```
[MAINFIELDS]
KeyColumn=ArtikelID
LabelColumn=Etikett
BatchColumn=Stückzahl
PrinterColumn=
CounterColumn=
OrderColumn=
```

The section [MAINFIELDS] is storing informations about special table columns:

- 1) KeyColumn : Here the table key column name has to be entered. This entry is required! 2) LabelColumn : This entry is optional. If the table contains a column which is storing the label layout name (like XYZ.LBF) you can tell the productmanager to use it to initialize the label selection box.
- 3) BatchColumn : This entry is optional. If the batch count is stored in the table, you can enter this column name here.
- 4) PrinterColumn : This entry is optional. If there are multiple printers connected to the PC, it may be needed to print certain jobs at certain printers. If the database table has a column with the wanted printer name, you can specify it here.
- 5) CounterColumn : This entry is optional. The column needs to be of a „number“ type, not a „text“ type! If set, the Productmanager will read the data content on each print start, add the current batch count to it, and write the sum back into the data record. That way a job related label counter can be defined. If the “Start/Stop” mode gets used, another option (AdjustCounterStop, see below) can be used to adjust this sum on each job end, so only the real printed labels will be counted in this column.
- 6) OrderColumn : This entry is optional. It will influence the display of the optional job list, and also the order of the automation mode. If this entry is not set, the list and automation order will be defined by the KeyColumn in ascending order, otherwise the entered column will be used for sorting. If the sort order should be descending, a small addition “DESC” can be done to the column name (for example „CounterColumn=JOBDATE DESC“)

Additional [MAINFIELDS] settings:

```
LabelDefault=LP4_ET1.lp4
BatchDefault=1000
PrinterDefault=UBI
```

The „Default“ settings are used if no database table column is available or if the specified column entry of the data record is empty. If you don't specify default values as well, the values stored inside the label (batch count, printer) are used.

Further [MAINFIELDS] settings:

```
LabelEdit=1
BatchEdit=1
PrinterEdit=1
MarginEdit=0
```

It may be useful to prevent the user from changing the initialized values of the label/batch/printer/margin fields. In this case, just put the proper values to "0". Special for "LabelEdit": if set to "2", the user can still change the label, but not the label folder anymore.

With some ODBC drivers the productmanager may fail to detect if the key field is a text or a number. Therefore, if you have a number as key, you may need to add the setting "KeyType=2" to your [MAINFIELDS] section, to tell the application that your key is a numeric one.

```
[OPTIONALFIELDS]
1=Gewicht::5.0 Kg;LP4_EXTVAR_WEIGHT;
2=Preis::;LP4_EXTVAR_PREIS;Preis
3=Artikel::;LP4_EXTVAR_ATEXT;Artikeltext
4=
5=
6=
7=
8=
9=
10=
```

It is possible to show up to 10 additional fields in the productmanager window. The user can edit/enter values here, and since each field is connected to an external LP4 variable, this input can be used on the label. The structure of an optional field entry is like:

N=display text;default value;external LP4 variable;optional table column name

Therefore you can also specify a connection between a database table field and the input field: if a print job gets selected from the user, the optional edit field will be initialized with the table column's value. He can still change the data, on print start the edited text will be copied to the specified external variable.

You can disable the edit fields (so they are just showing the values, but the user cannot change them) by setting "EditX=0".

```
[IMPORT]
ImportActive=0
ImportFile=C:\SAP\*.TXT
ImportFileType=0
ImportChar=;
ImportTime=0
ImportButton=0
ImportDeleteFile=0
DeleteChar1=
...
DeleteChar9=
ReplaceChar1=
...
ReplaceChar9=
```

```

ImportSerial=COM2,9600,n,8,1,2
ImportSerialStartChar=*
ImportSerialStopChar=#
ImportSerialAnswer=@ECHO
ImportSerialClearTable=
ImportSerialCancelPrint=

```

It is possible to configure the productmanager to import data from existing text files into the database. That is useful if for example the table should always have the current SAP jobs. To activate the import function the entry „ImportActive“ has to be set to „1“ or „2“. Both settings will activate the import functionality, but „1“ will also try an import on application start, while „2“ will not do an import on startup.

The entry „ImportFile“ is giving the information where the file is located (by using wildcards it is even possible to specify a range of files as shown in the examples above). If this entry is empty, there will be no text file import, of course, but the database key list will be refreshed. Therefore the import functionality can be used, if the database is changed by an external application, to refresh the key list.

„ImportFileType“ is specifying the file structure. There are two supported structures: a space filled text row (type „0“), and a character divided text row (type „1“). A space filled file must have exact the same structure as the table fields, for example if a field has 20 characters the text file field must also hold 20 characters for its position. The database „number“ type must have 10 characters in the text file.

Example: table with the three following fields: „ID“ [7 characters], „Count“ [number] and „Remark“ [8 characters] would need the following file structure:

```

AB12 500      Test1
AB23 100      Test2
...

```

Is „ImportFileType“ set to „1“, the file would need to look like this:

```

AB12;500;Test1
AB23;100;Test2
...

```

Please note that here the order and number of fields is also important, but there is no need to know how big the table fields are. If another character instead „;“ should be used, it can be specified in the „ImportChar“ setting. It is also possible to specify ASCII-values by using the syntax „backslash-ascii value“. For example the space character (ascii 32) would be „ImportChar=\32“. Tab characters can be written as „\t“. This syntax can also be used with the DeleteCharX/ReplaceCharX settings (see below).

But when should the data get imported to the database? There are two possibilities: a) whenever the user pushes an „import...“ button, and b) automatically after a given time span. Both ways (even together) can be used in the productmanager. If „ImportButton“ is set to „1“, a button in the productmanager window will appear. If „ImportTime“ is set to a number not equal to 0, it means: after n seconds to an automatic import (for example „ImportTime=60“ will look for new data every 60 seconds).

It is often necessary to delete imported files, to avoid to import them again. That can be specified by setting „ImportDeleteFile“ to „1“, but be aware that all files matching the „ImportFile“ filter will get deleted!

Last but not least it is possible to tell the productmanager to ignore or replace up to nine special characters while doing the text file import. You can specify this characters by adding a „DeleteCharX=...“ / „ReplaceCharX=...“ line to the [IMPORT] section. For example, DeleteChar1=@ will ignore all @ characters and ReplaceChar1=@,# would replace all @ characters by # characters.

Additionally it is possible to import data from the RS232. In this case the „ImportSerial“ entry has to be set in the following form:

```

COMx,Baud,Parity(n,e,o),Data,Stop,Protocol(0=none,1=xon/xoff,2=hardware)
For example: ImportSerial=COM2,9600,n,8,1,2

```

The productmanager also has to know, which character is at the beginning of the data, and which character is the ending of the data ("ImportSerialStartChar" and "ImportSerialStopChar"). It is also possible to specify a reply, whenever new data is received ("ImportSerialAnswer"), either by setting a constant text, or by using the special keyword "@ECHO" for sending back the received text.

The RS232 import is working like the file import (same divider characters, it is also possible to send multiple datasets in one telegram), but the receive buffer is limited for 2048 bytes each telegram.

There are two special commands which can be used with RS232 communication: one is for resetting the printer (to cancel the current printing job), the other can be used to delete all datasets in the database table. To use the commands, the command sequences have to be entered into the "ImportSerialClearTable" and "ImportSerialCancelPrint" entries. Please note: you have to send the entered sequence and the given start-/stop-characters by RS232. If you want to clear the table and reset the printer with the same command, you simply enter the same sequence into both entries.

[GENERIC]

ShowDeleteButton=0
ShowPreviewButton=1
ShowPrintSetButton=1
ShowSpecialTitle=
StartStopMode=0
AdjustCounterStop=0
AutomationMode=0
LabelPath=
UseDBManagerVars=0
ShowPrinterList=1

The last section can be used to change the application's behaviour and to show or hide special buttons in the productmanager window, by setting the values to "0" (hide) or "1" (show). The "Delete" button is useful if the user should be able to delete already printed jobs from the database. The "Preview" button allows the user to see the complete label at the screen, and the "Print Sets" button can be used to change the printer settings for the currently selected label.

With "ShowSpecialTitle" you can change the main Window title as needed.

"LabelPath" will have the latest selected label directory.

Setting "UseDBManagerVars=1" will cause the print data to be copied to LP4 database manager variables instead of external variables.

"ShowPrinterList=1" replaces the combobox-printer list with a bigger list of printers, showing up to 6 entries at the same time. A double click at one entry will bring up the port job list for this printer.

If the „Start/Stop“ mode is active (=1), the Productmanager will work different compared to the standard mode: instead a „Print“ button a „Start“ button will appear, which also begins a print job, but also prevents any further actions on this printer until the "Stop" button gets pushed. This mode is important, if a label counter column needs to be used (CounterColumn=....) and only the number of really printed labels should be stored here. In that case the option „AdjustCounterStop=1“ has to be set, and now the application will adjust the label number on "Stop", by taking the reported number of printed labels from the printer. ATTENTION: such a justage only works correctly if this job will not be started twice (or more) at the same time on different printers/PCs.

Example for a start/stop mode with adjusted label counters (StartStopMode=1, AdjustCounterStop=1, CounterColumn=COUNTCOL):

Job „12345“ containing „125“ in COUNTCOL gets started, the number of to-be printed labels is „100“. On start the new label counter „225“ (=125 + 100) will be written into this job's COUNTCOL. 90 labels get printed, after this the user is pushing the "Stop" button. Now the COUNTCOL content will be adjusted: 10 labels have not been printed, so the application will take the current content "225", and subtract the label and writes the final number "215" into the data set.


This way there is no “waste” in numbers, if not all labels get printed, but this will only work correctly (especially if the counter column is used to initialize for example a field in the label layout) if no other print job using the same data set gets started while this job is running!

If the main table contains jobs which should be printed automatically one after each other, the „automation mode“ can be enabled by setting „AutomationMode“ to „1“. Now a new button appears, called “Start automation”. By pushing this button the automation gets started (if the automation should begin whenever the Productmanager gets started, the “AutomationMode” can be set to “2”): the application will look if there are data sets into the main table, and if yes, the first data set (depending on the “OrderColumn”) will be activated and transferred to the printer. If this job has been printed, the next data set will be activated, and so on. The printed data will be deleted from the main table (and moved to the “MoveTable”, if activated). If there are no more data sets in the table, the application will wait until new data will be imported (see the import settings for details). The application will not auto-detect, if some other application is adding data to the table! But it is possible to define an import timer, and some dummy import file, to also detect such external changes (the application will try to import the dummy data and after that re-reading the table content, and therefore it will find also data added by a different application).

The automation can be stopped by pushing the „Stop automation“ button.

10.3 Usage

If all settings has been specified (the initial values match the LP4 example database for a first quick look at the functionality), the application is ready to start:

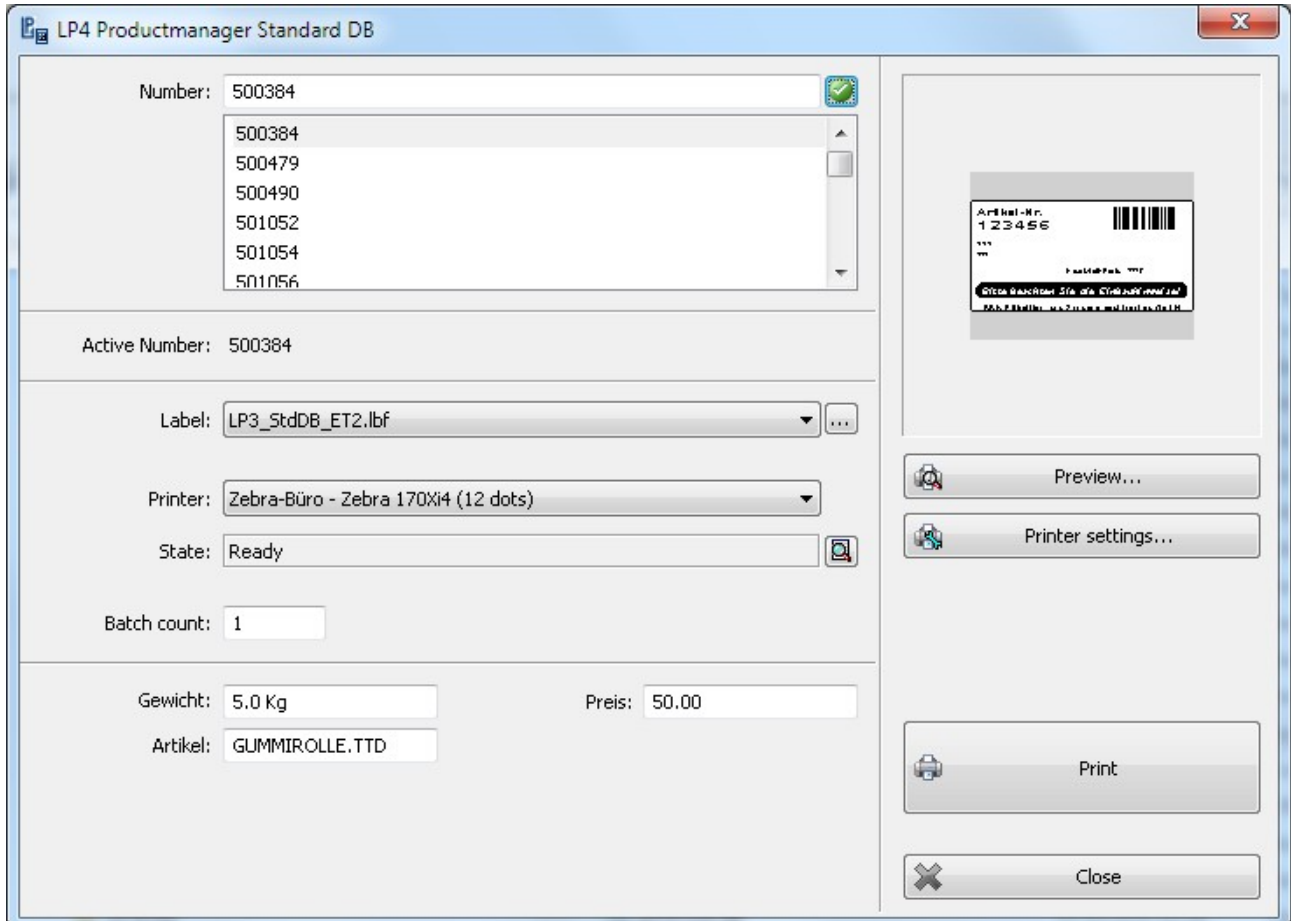

The screenshot shows the 'LP4 Productmanager Standard DB' application window. It features a list of product numbers on the left, with '500384' selected. Below the list, the 'Active Number' is also '500384'. The 'Label' field is set to 'LP3_StdDB_ET2.lbf', the 'Printer' is 'Zebra-Büro - Zebra 170Xi4 (12 dots)', and the 'State' is 'Ready'. The 'Batch count' is '1'. At the bottom, the 'Gewicht' (Weight) is '5.0 Kg', the 'Preis' (Price) is '50.00', and the 'Artikel' (Article) is 'GUMMIROLLE.TTD'. On the right side, there is a preview of a label with a barcode and text. Below the preview are buttons for 'Preview...', 'Printer settings...', 'Print', and 'Close'.

In the top edit field the user is entering the database key number he wants to print. The data will be loaded as soon as he pushes the “Enter” key or by hitting the small button on the right side of the field. If the job list is visible, he can also do a double-click on an available entry.

If the key cannot be found in the database, an error message will appear. If the key is fine, the proper data set will be loaded, and all fields will be initialized.

Now the user can change the fields as needed, as soon as he pushes the “Print” / “Start” button the print job will be downloaded to the printer.

If more than one printer is available, the user can start a job on each printer: in “Start/Stop” mode one job per printer is possible (the job has to get stopped before a new job can be activated for this printer, of course), in standard mode it is even possible to start multiple jobs at once, this jobs will be spooled one after each other.

11 LP4 Spool Server

11.1 Generic

The LP4 Spool Server is doing a similar job as the MSWindows printer network sharing: it allows using label printers which are connected to one PC with every other PC in the network.


11.2 Configuration

It is easy to install such a label printer sharing: define your LP4 printer ports as usual on the PC which should act as server. Now start the LP4 Spool Server (“LPSpoolServer.exe” in the main LP4 directory). Done, now all active label printers (means: all printers with a “bidirectional” or “unidirectional” LP4 spool mode) can be accessed from other PCs as well.

Important: if you are using a network firewall, you have to enable UDP telegrams on port 40094 and TCP telegrams on port 40095. Otherwise the LP4 Spool Server will not work.

It is possible to activate the Spoolserver in “service” mode, this way the Spoolserver functionality is active even without a logged in Windows user. Please note: only activate the service mode, if you have installed LP4 to a local harddisk drive!

On the Client PCs simply define the same ports and printers, the port name and settings need to be identical to the ones at the server PC. The only difference: instead of specifying the specific connection settings, activate the “Spool Server” option, and enter the IP address of the Spool Server PC:

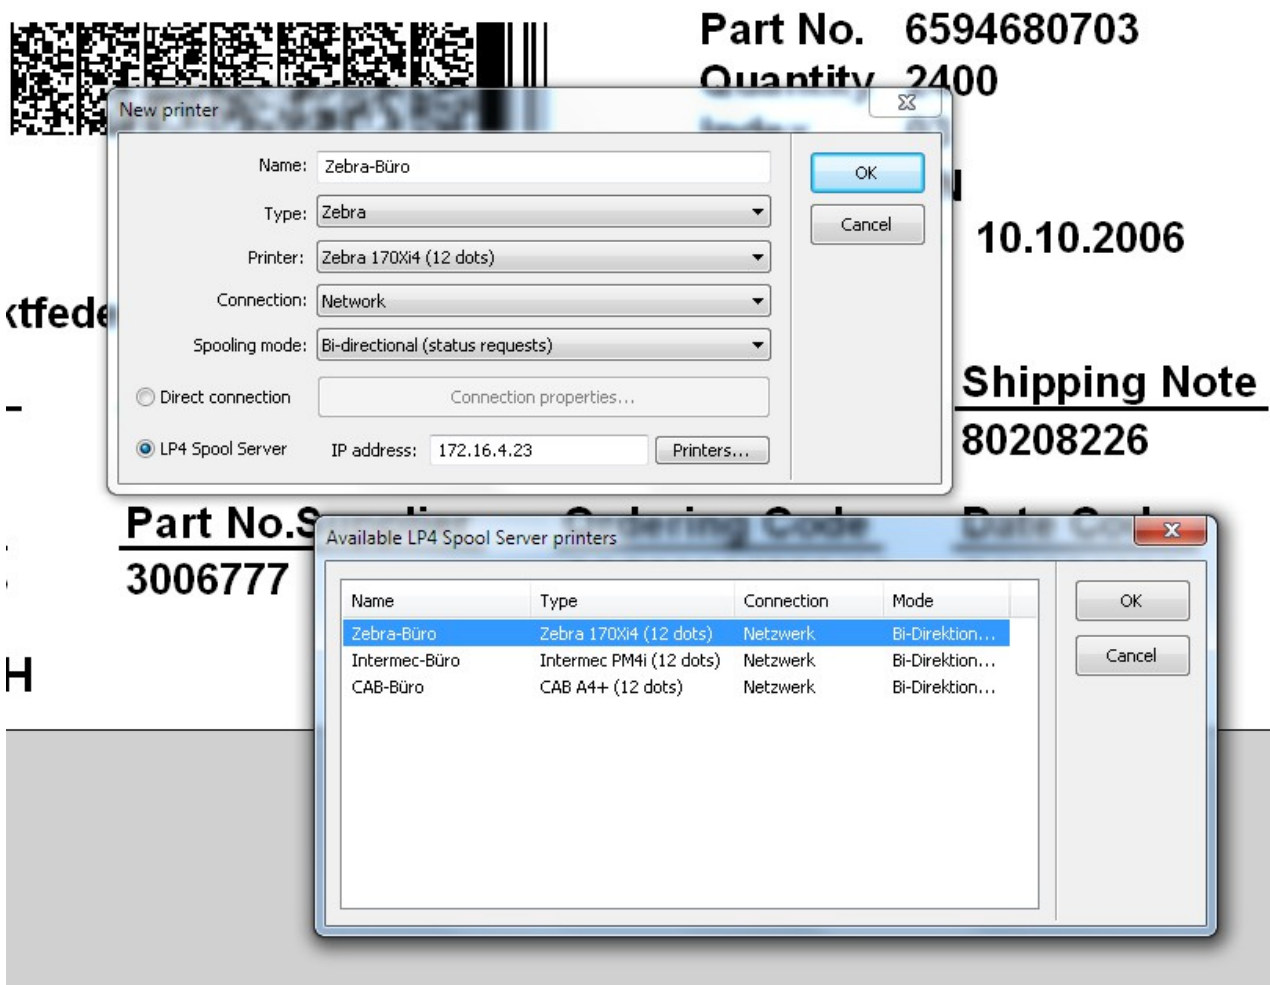

By pushing the “Printers...” button you can do a test connection to the Spool Server, if the Server is up and running all shared printers will be displayed in a new window (see picture above). If you select a printer and press “OK”, all the printer settings will be used at your client PC.

11.3 Usage

The Spool Server connection is now up and running. You can now print on the Client PC just as fine as on the Server PC: up to 512 printer shares can be handled by one LP4 Spool Server (the shares will be displayed in the LP4 Spool Server main window).

If you are using the “bidirectional” spool mode, even the print job queue will be handled fine: Client PC “A” can start a print job on the printer, and while it is printing another client “B” can start another one. As soon as the running job gets finished, the next waiting job will be downloaded to the printer. The LP4 print job windows will of course show correctly all waiting jobs, it is possible to see which PC has started each job (IP address is visible). Also deleting single jobs or resetting the complete printer is possible from each client.

And of course it is still possible to work directly on the Spool Server PC with any LP4 application as well.

Please note:


- The LP4 Spool Server application can only be started on PCs owning a Star or Premium license of LP4. The Client PC can be of any license (including ECO, Print or even Demo versions).

- If the LP4 Spool Server is not started or not reachable by network, it is of course not possible to print from the Client PCs! The Client PC will show an error message in the printer state if this condition is happening.

12 Using VBScript Programs

12.1 Overview

You can configure LP4 to run your own VBScript program before each printing or preview. Each layout can be attached to a different VBScript, by selecting the Script file in the property window of the layout (right-click on the layout, select "Properties" and the layout property window appears). The Script .VBS files are best stored into the default "Data" subdirectory of the LP4 folder.

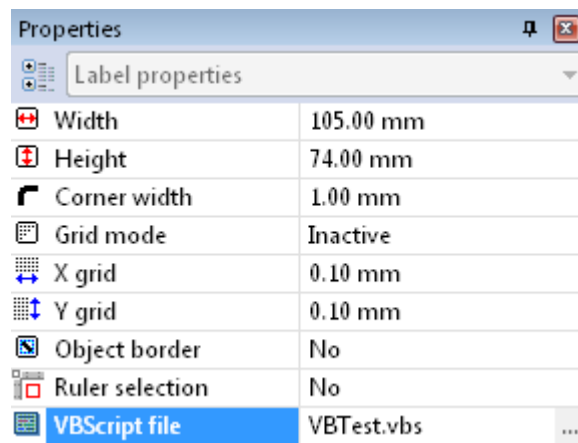

On each print start or label preview the VBScript program will be started, after all LP4 variables and label objects have been updated. Therefore you can use the VBScript program to adjust access the current variable data, and to readjust and reposition all label objects. Since the LP4 variables already have been validated, it is not possible to change the content of a variable in VBScript! But it is possible to change the content of a label field (text or barcode) by setting new data from VBScript.

12.2 The additional LP4 VBScript commands

The main purpose of the LP4 VBScript option is to rearrange the label objects, to change the positions and sizes depending on the current variable data. Therefore you can adjust your labels automatically, if needed. The adjustment is only used in the current printing or preview, all objects will stay on their positions in the label layout in LP4 editor.

All position and size values are in units of 1/100 mm. The value 100 is equal to 1 mm.

GetLPVar : Read current variable content

Syntax: value = GetLPVar("Variable")

This function returns the current variable content of the given variable as text.

SetLPObjData : Set new data into text and barcode fields

Syntax: Call SetLPObjData("Object name","data")

This function will change the content of a text or barcode field. The new content will be used by the following print / preview action,.

GetLPObjPos : Get current positions of label object

Syntax: Call GetLPObjPos("Object name",X1,Y1,X2,Y2)

The VB variables X1/Y1 will be filled with the upper left coordinates of the field, the X2/Y2 will get the lower right coordinates of the given label object (text, barcode, rectangle,...). The field width can be calculated by X2-X1, the field height is Y2-Y1.

SetLPObjPos : Moving a label object

Syntax: Call SetLPObjPos("Object name",X1,Y1)

With this function you are setting a new upper left X1/Y1 coordinate for the given object. The width and the height of the field are unchanged, so the object simply moves to the given point..

SetLPObjSize : Resizing a label object

Syntax: Call SetLPObjSize("Object name",DX,DY)

This function is changing the field width and height. DX is giving the new width, DY is the new height. The upper left position (X1/Y1) of the field will not be affected by the resize.

LPObjAutoSize : Automatic resize of text fields by variable content

Syntax: Call LPObjAutoSize("Object name")

Typically a LP4 text object will not change its size if it gets a new variable content which does not fit into the field area. This default behaviour is fine for static labels, when you don't want to print over other fields in the label. But if you want to readjust field positions depending on the current variable text, you usually want to change the text object sizes to show all the new data. You can easily do that with this function, simply call it with the name of the text object, and the object will adjust its size depending on its current data.

GetLPObjProp : Get detail information of a label object

Syntax: value = GetLPObjProp("Object name", Property-ID)

Depending on the property ID, this function will return the requested detail information.

ID=0 X1 position of the label object

ID=1 Y1 position of the label object

ID=2 X2 position of the label object

ID=3 Y2 position of the label object

ID=4 Field type: 1=Rectangle, 2=Line, 3=Cross, 4=Circle, 5=Graphic, 6=Deadzone,
7=Barcode, 8=Text, 9=Special text, 10=OLE object

ID=5 Line width. Only available with Rectangles, Lines, Crosses and Circles

ID=6 Rotation. Only available with Texts, Barcodes and Graphics. 0=0°, 1=90°, 2=180°, 3=270°

13 Specific printer settings/informations

13.1 Intermec/UBI printers

Old LP3 versions (V3.19 or older) did send a „stop“ command to all connected Intermec/UBI printers when the application has been closed. With LP4, the stop will not be sent anymore, only if you specify the following entry in the LP4.INI file:

```
[UBI]
NoStopOnExit=0
```

To change the state poll time in bidirectional spooling mode you can add the following entry:

```
[UBI]
StatusPollTime=10
```

„10“ is the default value of 1 second, values ranging from 5 (=half a second) to 30 (=3 seconds) are possible.

Using SHIFT+F5 you also can stop a running Intermec/UBI-programm manually. Please note: if LP4 is still running, and connected bi-directional to the printer, it will detect a printer failure, and re-send a new status program to the printer after a few seconds.

An user can see the latest printer error code on the printer display panel by pressing SHIFT+F4. List of possible error codes:

Error code – Error text	Error code – Error text
0 No error	53 Bad store checksum.
1 Syntax error.	54 Bad store record end.
2 Unbalanced parenthesis.	55 Remove in ROM.
3 Feature not implemented.	56 Illegal communication channel.
4 Evaluation syntax error.	57 Subscript out of range.
5 Unrecognized token.	58 Field overflow.
6 Tokenized line too long.	59 Bad record number.
7 Evaluation stack overflow.	60 Too many strings.
8 Error in exectab.	61 Error in setup file.
9 Undefined token.	62 File is list protected.
10 Non-executing token.	63 ENTER function.
11 Evaluation stack underflow.	64 FOR without NEXT
12 Type mismatch.	65 Evaluation overflow.
13 Line not found.	66 Bad optimizing type.
14 Division with zero.	67 Error from communication channel.
15 Font not found.	68 Unknown execution entity.
16 Bar code device not found.	69 Not allowed in immediate mode.
17 Bar code type not implemented.	70 Line label not found.
18 Disk full.	71 Line label already defined.
19 Error in file name.	72 IF without ENDIF.
20 Input line too long.	73 ENDIF without IF.
21 Error stack overflow.	74 ELSE without ENDIF.
22 RESUME without error.	75 ELSE without IF.
23 Image not found.	76 WHILE without WEND.
24 Overflow in temporary string buffer.	77 WEND without WHILE
25 Wrong number of parameters.	78 Not allowed in execution mode.
26 Parameter too large.	79 Not allowed in a layout.
27 Parameter too small.	80 Download timeout
28 RETURN without GOSUB	81 Exit to system
29 Error in startup file.	82 Invalid cont environment
30 Assign to a read-only variable.	83 ETX Timeout
31 Illegal file number.	1001 Not implemented.
32 File is already open.	1002 Memory too small.
33 Too many files open.	1003 Field out of label.

34 File is not open.	1004 Wrong font to chosen direction.
37 Cutter device not found.	1005 Out of paper.
38 User break.	1006 No field to print.
39 Illegal line number.	1007 Lss too high.
40 Run statement in program.	1008 Lss too low.
41 Parameter out of range.	1009 Invalid parameter.
42 Illegal bar code ratio.	1010 Hardware error.
43 Memory overflow.	1011 I/O error.
44 File is write protected.	1012 Too many files opened.
45 Unknown store option.	1013 Device not found.
46 Store already in progress.	1014 File not found.
47 Unknown store protocol.	1015 File is read-only.
48 No store defined.	1016 Illegal argument.
49 NEXT without FOR	1017 Result too large.
50 Bad store record header.	1018 Bad file descriptor.
51 Bad store address.	1019 Invalid font.
52 Bad store record.	1020 Invalid image.

Error code – Error text	Error code – Error text
1021 Too large argument for MAG.	1201 Insufficient font data loaded.
1022 Head lifted.	1202 Transformation matrix out of range.
1023 Incomplete label.	1203 Font format error.
1024 File too large.	1204 Specifications not compatible with output module.
1025 File does not exist.	1205 Intelligent transform not supported.
1026 Label pending.	1206 Unsupported output mode requested.
1027 Out of transfer ribbon.	1207 Extended font not supported.
1028 Paper type is not selected.	1208 Font specifications not set.
1029 Printhead voltage too high.	1209 Track kerning data not available.
1030 Character is missing in chosen font.	1210 Pair kerning data not available.
1031 Next label not found.	1211 Other Speedo error.
1032 File name too long.	1212 No bitmap or outline device.
1033 Too many files are open.	1213 Speedo error six.
1034 Not a directory.	1214 Squeeze or clip not supported.
1035 File pointer is not inside the file.	1215 Character data not available.
1036 Subscript out of range.	1216 Unknown font.
1037 No acknowledge received within specified timeout.	1217 Font format is not supported.
1038 Communication checksum error.	1218 Correct mapping table is not found.
1039 Not mounted.	1219 Font is in the wrong direction.
1040 Unknown file operating system.	1220 Error in external map table.
1041 Error in fos structure.	1221 Map table was not found.
1042 Internal error in mcs.	1222 Double byte map table is missing.
1043 Timer table full.	1223 Single byte map table is missing.
1044 Low battery in memory card.	1224 Character map function is missing.
1045 Media was removed.	1225 Double byte font is not selected.
1046 Memory checksum error.	1301 Index outside collection bounds.
1047 Interrupted system call.	1302 Collection could not be expanded.
1051 Dot resistance measure out of limits.	1303 Parameter is not a collection.
1052 Error in printhead.	1304 Item not a member of the collection.
1053 Unable to complete a dot measurement.	1305 No compare function, or compare returns faulty value.
1054 Error when trying to write to device.	1306 Tried to insert a duplicate item.
1055 Error when trying to read from device.	1601 Reference Font Not Found.
1056 O_BIT open error.	1602 Error in Wand-Device.
1057 File exists.	1603 Error in Slave Processor.
1058 Transfer ribbon fitted.	1604 Print Shift Error.
1059 Cutter does not respond.	1605 No Hardware Lock.
1060 DC motor to ribbon save did not start/stop.	1606 Testfeed not done.
1061 Wrong type of media.	1607 General Print Error.
1062 Not Allowed.	1608 Access Denied.
1081 Timer expired	1609 Specified Feed Length Exceeded.
1082 Unsupported protocol	1610 Illegal Character Map File.
1083 Ribbon Low	1701 Cutter Error1 (EasyCoder F-series only1)
1101 Illegal character in bar code.	1702 Cutter Error2 (EasyCoder F-series only1)
1102 Illegal bar code font.	1703 Cutter Error3 (EasyCoder F-series only1)
1103 Too many characters in bar code.	1704 Cutter open (EasyCoder F-series only1)
1104 Bar code too large.	
1105 Bar code parameter error.	

1106 Wrong number of characters. 1107 Illegal bar code size. 1108 Number or rows out of range. 1109 Number of columns out of range.	
--	--

13.2 Zebra printers

Some Zebra firmware versions will not print variable fields/counters correctly. LP4 has a workaround for that issue, which can get activated in the connection settings of the Zebra printer:

Firmware correction: FieldBlock yes/no

If "yes" is activated, the fields will not be printed distorted anymore, but please note: it's not possible to print centered/right aligned variable fields/counters while the workaround is activated.

Another workaround influences the automatic code-selection in Code128/EAN128 barcodes: LP4 uses a Zebra feature, which will enable the printer to select the best code by itself. This feature is available from Zebra firmware x.11.x (or newer). If you are using an older printer, you can activate the following connection setting:

Firmware correction: EAN128 yes/no

It is also possible to influence the time between state requests. By default LP4 is using 1 second between each request. You can add the following entry to the local LP4.INI file:

```
[ZEBRA]
...
StatusPollTime=10
...
```

„10“ is the default value of 1 second, values ranging from 5 (=half a second) to 30 (=3 seconds) are possible.

13.3 CAB printers

Some CAB printers are using a different horizontal/vertical resolution with graphical objects. LP4 adjusts the resolution automatically when generating the print job, the adjustment type can be configured in the LP4.INI file:

```
[CAB]
...
GfxStretch=1
...
```

„1“ (=default, if no entry) means an upscaling of graphical objects, „-1“ a downscaling, and „0“ is turning off the scaling (please note that if you turn off the scaling, a slight distortion will happen on graphical objects).

CAB printers support powerful internal variables, which can be accessed by the LP4 „Printer variables“.

LP4 CAB Printer variables

:Varname=Default

Defines a variable field inside the CAB print job. This variable should not be connected directly to any label field! The default value is optional, you can specify a constant value or use the content of LP4 variables by using [SVAR]...[EVAR] tags.

[Varname]

Content of the CAB variable "Varname".

[I{:condition}]

Field invisible (optional condition)

[?:Display,Default,z{,D}{,Lx}{,Mx}{,R}{,J}]

LCD user input

[TIME{:+HH{,+MM{,+SS}}}]

Printer time (including optional offset), tags: [H024],[MIN],[SEC]

[DATE{:+DD{,+MM{,+YY}}}]

Printer date (including optional offset), tags: [DAY02],[DOFY],[WEEK02],[MONTH02],[YY]

[ISOWDAY{:+DD{,+MM{,+YY}}}]

Day of week 1-7 (including optional offset)

[+:op1,op2,...]

Addition, or other math functions (-,*,/,%,&,|)

[=:op1,op2]

Compare two values, other compare operations (>,<) possible

[==:text1,text2]

Compare text, result 0 or 1

[MOD10:x]

Modulo10 check sum, other check sums possible (MOD36,MOD43)

[C:0{,base}]

Leading zeroes

[D:m,n]

Number of digits before/after sparator

[DBF:Schlüssel,Wert,Datenfeld]

DBF-database field

[Varname,Start{,Anzahl}]

Part of a content from given variable

14 License Agreement

BBK ETIKETTIER- UND SONDERMASCHINENBAU GMBH GEWÄHRT IHNEN EINE LIZENZ FÜR DIE IN DIESEM PAKET ENTHALTENE SOFTWARE AUSSCHLIESSLICH UNTER DER VORAUSSETZUNG, DASS SIE DIE BEDINGUNGEN DIESER LIZENZVEREINBARUNG IN VOLLEM UMFANG ANERKENNEN. BITTE LESEN SIE DIE BESTIMMUNGEN SORGFÄLTIG, BEVOR SIE DIESE VERPACKUNG ÖFFNEN ODER MIT DER INSTALLATION FORTFAHREN. MIT DEM ÖFFNEN DER VERPACKUNG ODER FERTIGSTELLUNG DER INSTALLATION ERKLÄREN SIE SICH MIT DEN BESTIMMUNGEN DES LIZENZVERTRAGES EINVERSTANDEN. SOLLTEN SIE NICHT EINVERSTANDEN SEIN, GEBEN SIE BITTE DIE UNGEÖFFNETE DISKETTENPACKUNG ZUSAMMEN MIT ALLEN ZUM LIEFERUMFANG GEHÖRENDE GEGENSTÄNDEN UNVERZÜGLICH GEGEN ERSTATTUNG DES KAUFPREISES AN DIE STELLE ZURÜCK, VON DER SIE DIESE BEZOGEN HABEN.

LIZENZ UND GARANTIE

Die mit dieser Lizenz erworbene Software (im folgenden als "Software" bezeichnet) ist Eigentum der Firma BBK oder deren Lizenzgeber und ist durch nationale Gesetze und internationale Verträge urheberrechtlich geschützt. Mit der Annahme der Lizenzbedingungen erhalten Sie das Recht zur Benutzung der Software. Sofern nicht durch eine mit dieser Lizenz ausgelieferte Zusatzvereinbarung andere Regelungen getroffen werden, unterliegt die Nutzung der Software folgenden Bestimmungen:

Sie sind berechtigt:

- a) Verwenden Sie eine Kopie der Software nur für einen einzigen Computer; falls der Datenträger in diesem Paket mehrere Software-Titel enthält, gilt Ihre Lizenz nur für einen Software-Titel auf dem Datenträger und Sie sind nicht berechtigt, solche andere Versionen an andere Personen weiterzuleiten oder anderen Personen die Benutzung solcher Versionen zu gestatten;
- b) eine Kopie der Software zu Archivierungszwecken anzufertigen oder die Software auf die Festplatte Ihres Computers zu kopieren und die Originaldisketten zu archivieren.
- c) die Software in einem Netzwerk einzusetzen, vorausgesetzt, daß Sie über eine lizenzierte Kopie der Software für jeden Computer verfügen, der über das Netzwerk auf die Software zugreifen kann.
- d) nach schriftlicher Benachrichtigung an BBK die Software dauerhaft einem Dritten zu überlassen, vorausgesetzt, daß Sie alle Kopien der Software und der Begleitdokumentation übergeben und der Empfänger der Software sich mit den Bestimmungen dieser Lizenzvereinbarung einverstanden erklärt.

Sie sind nicht berechtigt:

- a) die Software ganz oder teilweise zu verleihen oder zu vermieten oder Unterlizenzen zu vergeben.
- b) die Software zurückzuentwickeln (reverse engineering), zu dekompile, zu disassemblieren oder auf andere Weise zu versuchen, den Quellcode der Software zugänglich zu machen, die Software zu ändern, zu übersetzen oder davon abgeleitete Produkte zu erstellen.
- c) nach Erhalt eines Austauschdiskettensatzes oder einer Upgrade-Version als Ersatz für eine frühere Version die vorher erhaltene Kopie oder die frühere Version der Software zu benutzen.

Beschränkte Garantie

BBK gewährleistet für sechzig (60) Tage ab Empfangsdatum, daß das Medium, auf dem die Software ausgeliefert wird, keine Material- und/oder Herstellungsmängel aufweist. Im Falle, daß das gelieferte Produkt dieser Garantie nicht genügt, besteht Ihr alleiniger Anspruch nach Wahl von BBK entweder im Ersatz der zusammen mit einem Kaufnachweis an BBK innerhalb der Garantiezeit zurückgegebenen fehlerhaften Erzeugnisse oder in der Erstattung des bezahlten Kaufpreises.

DIESE BESCHRÄNKTE GARANTIE IST AUSSCHLIESSLICH UND ANSTELLE ALLER ANDEREN GARANTIE, SOWOHL AUSDRÜCKLICHER ALS AUCH IMPLIZIERTER ART, EINSCHLIESSLICH DER IMPLIZIERTEN GARANTIE DER VERKÄUFLICHKEIT, DER EIGNUNG FÜR EINEN BESTIMMTEN ZWECK UND DER NICHTÜBERTRETUNG. DIESE GARANTIE GIBT IHNEN BESTIMMTE GESETZLICHE

RECHTE. SIE HABEN MÖGLICHERWEISE ANDERE RECHTE, DIE VON STAAT ZU STAAT
UNTERSCHIEDLICH SIND.

Haftungsausschluß

EINIGE STAATEN, EINSCHLIESSLICH MITGLIEDSSTAATEN DER EUROPÄISCHEN UNION, ERLAUBEN
DIE UNTEN AUFGEFÜHRTEN BESCHRÄNKUNG ODER DEN AUSSCHLUSS DER HAFTUNG FÜR
BEGLEIT- UND FOLGESCHÄDEN NICHT, SO DASS DIE UNTEN ANGEFÜHRTE BESCHRÄNKUNG
ODER DER AUSSCHLUSS FÜR SIE MÖGLICHERWEISE NICHT ZUTRIFFT.

UNTER MAXIMALER AUSDEHNUNG DES GELTENDEN RECHTS UND UNABHÄNGIG DAVON, OB
EINES DER HIERIN DARGELEGTE RECHTSMITTEL SEINEN WESENTLICHEN ZWECK NICHT
ERFÜLLT, IST BBK IN KEINEM FALLE ERSATZPFLICHTIG FÜR IRGENDWELCHE INDIREKTEN,
FOLGE- ODER ÄHNLICHEN SCHÄDEN (EINGESCHLOSSEN SIND SCHÄDEN AUS ENTGANGENEM
GEWINN ODER VERLUST VON DATEN), DIE AUFGRUND DER BENUTZUNG DER SOFTWARE ODER
DER UNFÄHIGKEIT, DIE SOFTWARE ZU VERWENDEN, ENTSTEHEN, SELBST WENN BBK VON DER
MÖGLICHKEIT SOLCHER SCHÄDEN UNTERRICHTET WORDEN IST.

IN JEDEM FALLE IST DIE HAFTUNG VON BBK AUF DEN FÜR DIE SOFTWARE BEZAHLTEN
KAUFPREIS BESCHRÄNKT. Der oben dargelegte Ausschluß und die Beschränkung sind unabhängig von
Ihrer Annahme der Software.

Beschränkte Rechte der U.S.-Regierung

Erklärung beschränkter Rechte. Benutzung, Vervielfältigung oder Offenlegung durch die Regierung
unterliegen den Beschränkungen des Unterparagraphen (c) (1) (ii) der Klausel über die Rechte an
technischen Daten und Computer-Software unter DFARS 252.227-7013 oder den Unterparagraphen (c) (1)
und (2) der Klausel über die beschränkten Rechte in bezug auf kommerzielle Computer-Software unter CFR
52.227-19, wie anwendbar.

Allgemein

Diese Vereinbarung unterliegt den Gesetzen von Deutschland und kann nur durch eine mit dieser Lizenz
ausgelieferte Zusatzlizenzvereinbarung oder durch ein anderes, sowohl von Ihnen als auch von BBK
unterzeichnetes schriftliches Dokument geändert werden. Sollten Sie Fragen zu dieser Vereinbarung haben
oder sich aus anderen Gründen mit BBK in Verbindung setzen wollen, wenden Sie sich bitte an:

BBK Etiketier- und Sondermaschinenbau GmbH

Dieselstrasse 18

64743 Beerfelden, Deutschland

Fax.: +49 / 6068 / 9310-95 oder -99.