




GP295
Command Gaming Headset
USER'S MANUAL

EN

Command Wired Headset with Microphone (GP295) – EN User Manual

Thank you for purchasing the Logic3 Command Wired Headset with Microphone. As with all Logic3 products it has been built to the highest manufacturing standards and tested throughout its development, to ensure you get the best possible product. Please read through and familiarize yourself with this manual before you use the Wired Command Headset with Microphone.

Product Overview

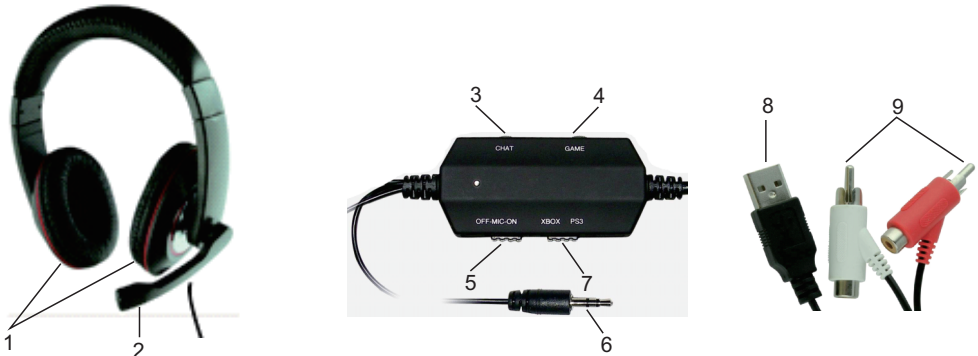

1. Ear cups
2. Adjustable Boom Microphone
3. Chat Volume Controls
4. Game Volume Controls
5. Microphone ON/OFF
6. 2.5mm Xbox/Xbox 360 Jack
7. Format Switch
8. USB Connection
9. Left/Right RCA

Set up of Command Wired Headset with Microphone

No drivers are needed to set up the Command wired headset with PC/MAC/Xbox or PS3

PC/MAC

1. Select PC format on the 'Format Switch'
2. Connect the USB connector to a spare USB port on your PC/MAC.
3. The PC will go through its own installation/setting up process (Macs will vary)
4. Your Command Wired Headset is now ready to use, please set up the PC/MAC (Audio Set up) to use the Wired Command headset:-

PC

- a. Right click 'Speaker' icon (Bottom right hand corner of Screen)
- b. Select 'Playback devices'
- c. A new Window will open
- d. Select 'Command Wired Headset' and 'Apply'
- e. Next go to the 'Recording' Tab
- f. Select 'Command Wired Headset' and 'Apply'

Above instructions are based on Windows 7, other Operating Systems may differ

MAC

Note: Game volume control will be de-activated while in PC / Mac mode

PS3



1. Select PS3 format on the 'Format Switch'
2. Connect the USB connector to a spare USB port on your PS3 console
3. Connect the Command headset male RCA connectors Left/Right (White/Red) to the A/V Input of your TV
4. Connect the PS3 A/V cable Left/Right (White/Red) into the Command headset RCA connectors.
5. Your Command headset is now ready to use.
6. Please ensure you have chosen the correct settings in your PS3 menu to allow you to use the Command Headphones.
7. Your Command Wired Headset is now ready to use, please set up the PS3 (Audio Set up) to use the Command Wired headset:-
 - a. Press the PS button on your PS3 controller to access the menu on the PS3
 - b. Go to the 'Settings' menu on the PS3
 - c. Select 'Accessory Devices'
 - d. Select 'Audio Device Settings'
 - e. Select 'Input Devices'
 - f. Select the 'Command Wired Headset'
 - g. Press 'X' to confirm
 - h. Move to 'Output Devices'
 - i. Select the 'Command Wired Headset'
 - j. Press 'X' to confirm
 - k. Select OK

Above instructions are based on firmware ver. 4.46, other firmware versions may differ

Xbox / Xbox 360



1. Select Xbox/Xbox360 format on the 'Format Switch'
2. Connect the USB connector to a spare USB port on your Xbox
3. Connect the Command headset male RCA connectors Left/Right (White/Red) to the A/V Input of your TV
4. Connect the Xbox A/V cable Left/Right (White/Red) into the Command headset RCA connectors.
5. Connect the 2.5mm jack to your Xbox/Xbox360 controller.
6. Your Command headset is now ready to use.
7. Please ensure you have chosen the correct settings in your Xbox/Xbox360 menu to allow you to use the Command Headphones.

Trouble Shooting

Problem	What Should I do?
Game volume not functioning	Game volume control will be de-activated while in PC / Mac mode
Chat volume not functioning	Chat volume control will be de-activated while in PC / Mac mode or connected to a TV
Sound is coming through the PC not the headphones	You will need to set the audio properties on the PC. <ol style="list-style-type: none">1. At the bottom right corner of your PC screen, right click the speaker icon to enter the audio properties2. Select playback devices..3. Windows will then pop up, select the Command headset in the list.4. Select the 'Recording' tab and choose the Command headset. Note: The above instruction is for windows 8 other OS formats may vary.

Specifications:

1. Plug type: USB/RCA/ Φ 2.5mm
2. Speaker dimensions: Φ 40mm
3. Speaker frequency response: 20Hz - 20KHz
4. Microphone sensitivity: -58dB
5. Microphone direction: Omni directional
6. Microphone impedance: \leq 2.2K Ω
7. Microphone frequency response: 50Hz - 15KHz
8. Cable length: 3.6M
9. XBOX controller cable length: 0.5M



L3i Ltd
Rhodes Way, Watford Herts
WD24 4YW UK
Tel: +44 (0)1923 471020
<http://www.gamespower.com>
E-mail: support@l3-i.com

