

# ezeio™ Controller and the 2400-A16 input expansion.



**Important Supplementary Manual -  
to be read in conjunction with the  
eze User Manual: <http://ezesys.com/manual>**

# ezeio Controller and the 2400-A16 input expansion Manual Index.

Product Liability.	Page 2
Description.	Page 3
Ordering Information.	Page 3
ezeio Controller Compatibility with Intech Micro Stations.	Page 3
ezeio Ethernet TCP/IP Connection.	Page 3
Using a data GSM/3G SIM in the ezeio-GSM Controller.	Page 4
Section 1 - ezeio Controller.	Page 5
<i>Configuring the ezeio Controller local inputs.</i>	Page 5
<i>Getting started with configuration.</i>	Page 5
<i>Easy steps for Calibration.</i>	Page 6
Section 2 - 2400-A16.	Page 8
<i>Intech Micro 2400-A16 Station</i>	Page 8
<i>Adding a 2400-A16 station to an ezeio Controller.</i>	Page 8
<i>Getting started with configuration.</i>	Page 9
<i>Configuring the ezeio Controller.</i>	Page 10
<i>Example 1: eze temperature input scaling for RTD's and thermocouples.</i>	Page 11
<i>Example 2: For all other analogue values the 2400-A16 outputs to eze...</i>	Page 12
<i>Example 2.1: Analogue Flow meter.</i>	Page 12
<i>Example 2.2: Analogue Pressure sensor.</i>	Page 13
<i>Example 2.3: Digital Flow Meter.</i>	Page 14
<i>Example 2.4: State On/Off.</i>	Page 15
<i>On Site Calibration Trim.</i>	Page 15
Section 3 - Alarms.	Page 16

Note: The eze System uses US English, so some spelling/terminology differs.

ezeio™ is a trademark of **eze System, Inc.**

Please Note: **Intech Instruments Ltd** are the **New Zealand** representative for eze System, Inc products. Please contact the eze System representative in your country if you require sales or service support for eze System, Inc products.

**Product Liability.** This information describes our products. It does not constitute guaranteed properties and is not intended to affirm the suitability of a product for a particular application. Due to on-going research and development, designs, specifications, and documentation are subject to change without notification. Regrettably, omissions and exceptions cannot be completely ruled out. No liability will be accepted for errors, omissions or amendments to this specification. Technical data are always specified by their average values and are based on Standard Calibration Units at 25C, unless otherwise specified. Each product is subject to the 'Conditions of Sale'.

**Warning:** These products are not designed for use in, and should not be used for patient connected applications. In any critical installation an independent fail-safe back-up system must always be implemented.

# ezeio™ Controller and the 2400-A16 input expansion.

4 Analogue Inputs.  
Interface with 2400-A16 for Input Expansion.  
Internet Based Setup and Monitoring.

## Description.

The ezeio™ Controller comes ready to start monitoring, logging and controlling over the Internet.

As soon as the controller is connected to power and an Internet connection, it will start communicating with the eze System servers. There is no need for special software or network setup. The ezeio connection is encrypted, bi-directional and very efficient.



ezeio™ Controller and the 2400-A16 input expansion.

## Ordering Information.

ezeio-STD	ezeio Controller with Ethernet port, 4 analogue inputs and Modbus-RTU RS-485 Comms.
ezeio-GSM	ezeio Controller with GSM/3G transceiver, Ethernet port, 4 analogue inputs and Modbus-RTU RS-485 Comms.

## ezeio Controller Compatibility with Intech Micro Stations.

The Modbus-RTU RS-485 port on the ezeio controller can be used to connect to **Intech Micro Stations: 2400-A16, 2400-M-R** and **2100-A16**. This allows the controller to be expanded to log up to 40 channels max per ezeio controller. If additional relay outputs are required, the **2400-R2** can be connected to the **2400-A16** for relay expansion - refer to the 2400-A16 Installation Guide for more information.

## ezeio Ethernet TCP/IP Connection.

Ensure that you connect the Ethernet cable with the Ethernet port on the ezeio controller only. **Do NOT plug into the Modbus 485 port.**

Typically the ezeio controller should automatically connect once plugged into the Ethernet TCP/IP network. You may need to power cycle the ezeio (turn the power off/on).


See pages 11/12 of the ezeio User Manual for Ethernet TCP/IP connection information: <http://ezesys.com/manual>

**Please note that Intech will not be able to help with the setup and operation of an Ethernet TCP/IP network and assigning of IP addresses.**

## Using a data GSM/3G SIM in the ezeio-GSM Controller.

This section is for the **ezeio-GSM** controller model only.

1. Obtain a data GSM/3G SIM with no password. (Note: the ezeio-GSM controller takes a standard size SIM card.)
2. Place SIM in a mobile phone to activate as per the providers instructions, or get the provider to do this at the time of purchase.
3. Place the SIM in the ezeio-GSM Controller with the chisel edge of the SIM at the top left (as shown circled below).
4. Follow the instructions in the ezeio-GSM Controller Instruction Manual starting page 21.

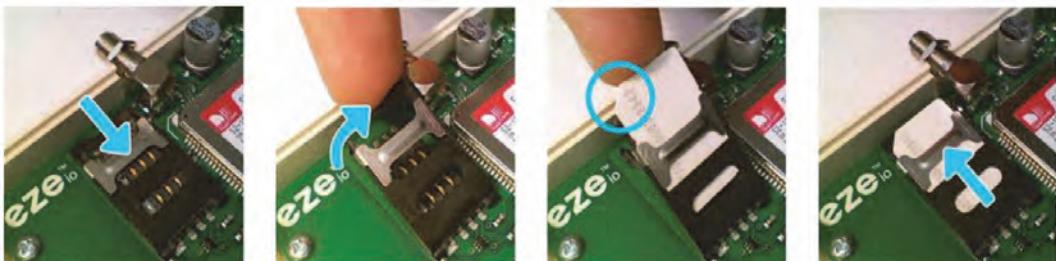

5. Connect via Ethernet and login to [www.ezecontrol.com](http://www.ezecontrol.com)

6. In the eze Configuration area, click on "System":

Setting required for New Zealand - **GPRS APN** (leave all other areas blank) - match to your provider as listed below:

GSM/GPRS radio settings	
Phone module PIN	<input type="text"/>
SIM card PIN	<input type="text"/>
GPRS APN	vodafone
GPRS login name	<input type="text"/>
GPRS password	<input type="text"/>

Vodafone APN:	vodafone
Spark (was Telecom) APN:	internet
2degrees APN:	internet

7. Click 'Save changes'. Remove the Ethernet connection and turn the Power off/on. Check that a connection via GSM/3G has been established in the eze System.

If you are outside New Zealand please contact your local GSM/3G provider for the data GSM/3G SIM and the APN settings needed.

**Note:** Initial connection via Ethernet is required for ezeio setup before the GSM/3G connection can be used.

**Important:** We strongly recommend having the **data GSM/3G SIM on account**.

**Using Prepay will result in no connection if the credit runs out** (if this happens, then once more credit has been added, the eze system will need to have the power turned off/on in order to re-establish a connection). This is not an issue with on account data plans.

### GSM/3G Network Coverage:

For GSM/3G connection, the ezeio-GSM needs to be within the network coverage area where it will be used. Check on your GSM/3G providers website for their network coverage maps.

**Please note that Intech is unable to guarantee connection, even if the ezeio-GSM is within the network coverage area.**


**Section 1** covers the ezeio Controller 4 local inputs, and **Section 2** covers adding the power of the 2400-A16, to expand the inputs up to 40, plus adding more outputs.

## Section 1 - ezeio Controller.

### Configuring the ezeio Controller local inputs.

The ezeio™ controller has four standard inputs. Each input may be configured individually in one of the four ways described here:

Jumper setting	Description
	0~5Vdc. Input impedance is >70kOhm. Raw reading is about 10000 at 5.0V (0.5V per count).
	0~10Vdc. Input impedance is >70kOhm. Raw reading is about 10000 at 10.0V (1mV per count).
	0~30mA (suitable for 4~20mA transducers). An internal 100 Ohm resistor connects the input terminal to Common. Raw reading is about 10000 at 30mA (3uA per count).
	Contact, Pulse or Resistive (0~50Ohm). An Internal 10K resistor will hold the input to 5V. <i>This is the factory default setting.</i>

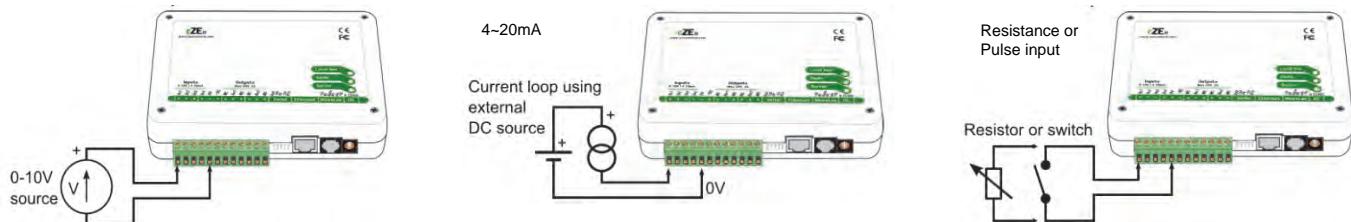

To access the input jumper settings, open the ezeio™ by removing the four black screws.

Read the eze User Manual pages 13 through to and including page 16, covering input connections.  
<http://ezesys.com/manual>

### Getting started with configuration.

Account sign in

Sign-In  
Account:  
Login:  
Password:  
Sign in  
Forgot password  
Create a new account

Go to [www.ezecontrol.com](http://www.ezecontrol.com)

Enter your Account number, Login and Password.

Click on the 'Configure' tab

And then the + by the Inputs:

Now select which input you wish to configure. Select the 'Input type' to match the configuration of the 'Jumper' setting in the table above. Always remember to select 'Save Changes' after making a change.

**Important Note:** The analogue inputs have a nominal calibration only (ex factory), and where accuracy is required, individual calibration of each channel is required. This is done with the use of an accurate signal calibrator.

## Easy steps for Calibration.

- As an example: on the ezeio Controller Input 2, the analogue input is set to 0~10Vdc. Apply an accurate 10Vdc signal to this input and on the eze 'Status Page', note the 'Raw' reading on channel 2. In this example below the Raw reading = 9798.



- Now go to the eze Configure page and click on 'Input type' and select 'Custom' as shown.

Configuration of AAC-600 ::

**Input 2**

**Input display settings**

- Input name: Input 2
- Unit: V
- Decimals to show: 2
- Max value in graphs: 10
- Min value in graphs: 0

**Input type and conversion**

- Input type: Custom
- Calculate: Linear analog Pulse
- Input Raw to unit: x9798
- Unit to input Raw: x979.8
- Verification: OK - equations match
- Digital pulse input:  value is time between pulses in ms

Note: Do not use the percentage symbol in the 'Input name' and 'Unit' text boxes, as this will result in an error.

- Now click on 'Linear analog' and enter the values as shown next:

Two point calibration for analog input

Enter the values from the raw column on the status page for two known measurements.

**Point 1**

Raw value 1: 0  
Value: 0

**Point 2**

Raw value 2: 9798  
Value: 10

**Result**

Raw to Real: \_\_\_\_\_  
Real to Raw: \_\_\_\_\_

Use Cancel

Point 1 and Point 2 are what we want this input to read, which in this example is '0~10Vdc'.

Point 1 is the zero point, which is 0 for the Raw Value and 0 for the Value.

Point 2 = 9798 which is the Raw Value from step 1 at 10Vdc input, and the 'Value' for this example we want to read 10.

If you wish this to actually read another value, for example 100% then enter 100.

Click on 'Use'.

- Now click on 'Save changes' and go back to the eze 'Status' tab.

Configuration of AAC-600 ::

**Save changes**

**Input 2**

**Input display settings**

- Input name: Input 2
- Unit: V
- Decimals to show: 2
- Max value in graphs: 10
- Min value in graphs: 0

**Input type and conversion**

- Input type: Custom
- Calculate: Linear analog Pulse
- Input Raw to unit: x9798
- Unit to input Raw: x979.8
- Verification: OK - equations match
- Digital pulse input:  value is time between pulses in ms

5. The Status screen now displays input 2 at exactly 10.00 (or whatever value you have entered).

Dashboard	Status	Configure	Account																																																
Status of AAC-600 ::																																																			
<table><thead><tr><th>Input</th><th>Graph</th><th>Value</th><th>Unit</th><th>Count</th><th>Set</th><th>Raw</th><th>Alarms</th></tr></thead><tbody><tr><td>Input 1</td><td></td><td>5</td><td>0.01 V</td><td>0</td><td>-1</td><td>19</td><td></td></tr><tr><td>Input 2</td><td></td><td>10</td><td>10.00 V</td><td>-1</td><td>9798</td><td></td><td></td></tr><tr><td>Input 3</td><td></td><td>0</td><td>0.06 mA</td><td>-1</td><td>19</td><td></td><td></td></tr><tr><td>Input 4</td><td></td><td>200</td><td>1.6 m3/Hr</td><td>108738</td><td>2290493</td><td></td><td></td></tr><tr><td>Supply voltage</td><td></td><td>7</td><td>11.7 V</td><td>-1</td><td>11702</td><td></td><td></td></tr></tbody></table>				Input	Graph	Value	Unit	Count	Set	Raw	Alarms	Input 1		5	0.01 V	0	-1	19		Input 2		10	10.00 V	-1	9798			Input 3		0	0.06 mA	-1	19			Input 4		200	1.6 m3/Hr	108738	2290493			Supply voltage		7	11.7 V	-1	11702		
Input	Graph	Value	Unit	Count	Set	Raw	Alarms																																												
Input 1		5	0.01 V	0	-1	19																																													
Input 2		10	10.00 V	-1	9798																																														
Input 3		0	0.06 mA	-1	19																																														
Input 4		200	1.6 m3/Hr	108738	2290493																																														
Supply voltage		7	11.7 V	-1	11702																																														

6. If you require good accuracy at a particular point of the span, then calibrate at that point instead of the full span point.
7. For the best average accuracy calibrate the scale between 0~75% of span.
8. Apply this procedure (as applicable) to all other analogue inputs on the ezeio Controller inputs to achieve accurate calibration.

## Section 2 - 2400-A16.

### Intech Micro 2400-A16 Station.

The **2400-A16** is a high quality, high accuracy I/O station (input/output expansion station), designed for a wide variety of applications.

**Up to 16 Isolated Universal Analogue Inputs**, with Plug In Terminals. Each Input is fully Isolated and Individually Selected & Scaled.

**RTD, T/C, mA, mV, V & Pulse/Digital** as follows:

RTD: Pt100/Pt1000, -200~320°C to -200~800°C.

T/C: B, E, K, J, N, R, S, T, with CJC.

mA: 4~20mA, 0~2.5mA.

mV: -25~25mV to -200~200mV.

V: 0~1V to 0~15V.

Pulse/Digital: Meter pulses, Counting and Frequency.

Max speed 2500Hz.

**Four Isolated Digital Inputs.**

State or Count.

Max speed 8000Hz.

**Two Analogue, Isolated, 4~20mA Outputs.**

**Two Isolated, Relay Outputs for alarm or control.**

Comms Ports (connecting to eze):

**Port 1:** Isolated RS485.

**Port 2:** Isolated RS485.

**USB programming port** via XU-USB programming key.



### 2400-A16 Notes:

1. More than one 2400-A16 can be added to a ezeio controller.
2. The ezeio Controller will accept up to **40 inputs total** per ezeio controller (this also includes the 4 analogue inputs on the ezeio controller if they are used).
3. The 2400-A16 is available with 2 options for the number of analogue inputs: 8 inputs or 16 inputs.

### Adding a 2400-A16 station to an ezeio Controller.


#### Follow these steps to add one or more 2400-A16's:

Disconnect both the ezeio Controller and 2400-A16 from the power supply.

First is to connect the 2400-A16 to the ezeio Controller's 'ModBus 485' port. The 2400-A16's comms ports 1 & 2 are both Modbus RTU RS485 capable.



#### ezeio Controller

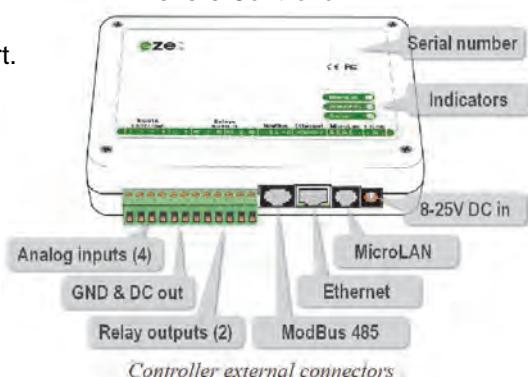


Connection to the ezeio Controller 'ModBus 485' port is by using a standard Ethernet cable plugged into the ezeio Controller and broken out to twisted pairs.

Two of these pairs are used to connect to one of the 2400-A16 RS485 ports, to the 'ModBus 485' port of the ezeio Controller as follows:

Blue pair:	Blue	= 70 on 2400-A16 comms.
	Blue/White	= 71 on 2400-A16 comms.
Brown pair:	Brown	= 74 on 2400-A16.
	Brown/White	= not connected.

## Getting started with configuration.


The first task is to configure the 2400-A16.

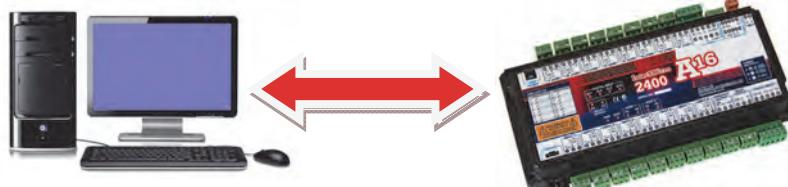


Connect the 2400-A16 to a computer as covered bottom of page 16 in the '2400-A16 Installation Guide'. If you do not already have a copy of the 'Intech Micro Station Programmer Software', download and install from this link:

[www.intech.co.nz/downloads/Install-StationProgrammer.html](http://www.intech.co.nz/downloads/Install-StationProgrammer.html)

Run the 'Intech Micro Station Programmer Software'.

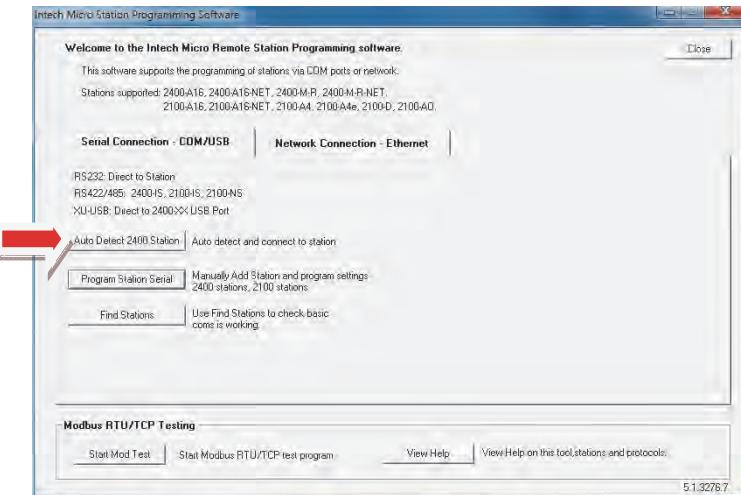


Click on the 'Auto Detect 2400 Station' button.

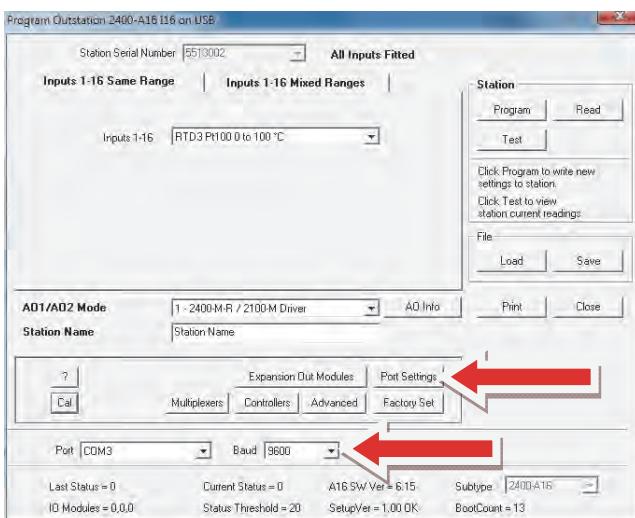

Configure the required input channel settings as shown.

The 2 important areas to make the same as the eze is the **Baud** rate and the **'Port Settings'**. This 2400-A16 configuration screen (left) displays the parameters the 2400-A16 should be set to, with special attention to the **'Address'** which is referred to on the ezeio Controller as the **'Polling address'**.

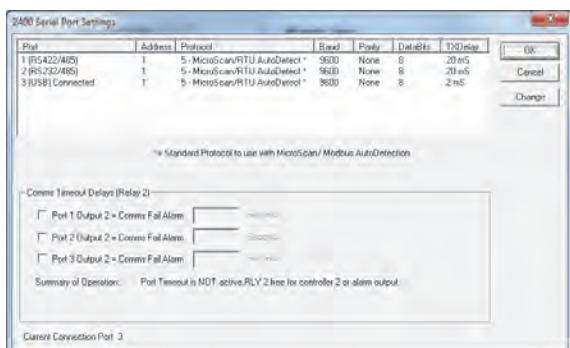

Note that on the 2400-A16, the 'Address' number can be set differently for each (comms) port, so make sure the 2400-A16 port used for the ezeio Controller is the same as that used in the ezeio Controller.

Configuration of AAC-595 ::

Device 6659

Device settings

Device name: 2400-A16 Station 01  
Polling address: 1  
Thermostat schedule: {no schedule}

Remember that if two or more 2400-A16's are connected to the ezeio Controller, the 2400-A16 '**Address**' and corresponding eze '**Polling address**' on the additional unit(s) must be set to a different number.  
**Never use the same number twice.**

For example, the 2<sup>nd</sup> 2400-A16 'Address' and eze corresponding 'Polling address' may be set to 2.

## Configuring the ezeio Controller.

Go to [www.ezecontrol.com](http://www.ezecontrol.com)

Account sign in

Sign-In

Account:

Login: \_\_\_\_\_

Password: \_\_\_\_\_

**Sign in**

[Forgot password](#)

[Create a new account](#)

Enter your Account number, Login and Password.

The first task is to add the 2400-A16 onto the ezeio Controller. Click on the 'Configure' tab and wait for the Configure screen to appear:

Configuration of AAC-600 ::

Devices

ID	Name	Type	Address
5360	eZE Controller	ezeio Controller	1

Add device

Click on 'Devices' and then click on 'Add device'.

Select type of new device

Microlan devices and sensors are automatically detected on startup.

New device

Device type: Intech A16

Serial/Modbus address: \_\_\_\_\_

**Add device** **Cancel**

Select '**Intech A16**' in the drop down list.

Next, enter the 'Serial/ModBus address', which must be set the same in the 2400-A16 as well. In this example, 1 has been entered:

Select type of new device

Microlan devices and sensors are automatically detected on startup.

New device

Device type: Intech A16

Serial/Modbus address: 1

**Add device**

Click on 'Add device'.

**Configuration of AAC-600 ::**

- Save changes
- Inputs
- Outputs
- Schedules
- Timers
- Thermostats
- Devices
- Script
- System

**Informational settings**

Controller name: [ ]  
Controller location: [ ]  
System info email: [ ]  
Time zone: US/Samoa [UTC-11:00]  
Note: [ ]

**Access control settings**

Read passcode: [ ]  
Control passcode: 538-CSO  
Registration code: 1220-NIYM-1660  
Allow firmware update:   
Allow config update:   
Allow dealer access:  (Intech)  
Service add:  only by dealer

**Device clone**

Clone controller: AAC-268

**Modbus setting**

Modbus speed: 9600 bps  Use slow polling  Custom protocol [ ] (full control from script)

Next, click on 'System'.

Set the 'Modbus speed' (i.e. Baud rate) to the same as that of the 2400-A16 (as shown). It is recommended to also tick the 'Use slow polling' box.

Note: Not all the options are shown.

Next task is to add the 2400-A16 inputs onto the ezeio Controller:

**Configuration of AAC-600 ::**

- Save changes
- Inputs
- Outputs
- Schedules
- Timers
- Thermostats
- Devices
- Script
- System

**Inputs**

#	Input name	Unit	Alarms	Log
1	Input 1	V	0	5 min
2	Input 2	V	0	no logging
3	Input 3	mA	0	no logging
4	Input 4	m3/Hr	0	no logging
5	Supply voltage	V	0	no logging

Add input

This controller saves 288 samples per day.

Click on 'Inputs' and then click on 'Add input'.

**Important!** eze System inputs cannot be re-ordered, so the **initial setup is critical!**

### Example 1: eze temperature input scaling for RTD's and thermocouples.

**Input 6**

**Input display settings**

Input name: Control Rm Ambient temperature  
Unit: C  
Decimals to show: 1  
Max value in graphs: 100  
Min value in graphs: 0

**Input type and conversion**

Input type: Custom

Calculate: Linear analog, Pulse  
Input Raw to unit: x/1000

Unit to Input Raw: x\*1000

Verification: OK - equations match  
Digital pulse input:  value is time between pulses in ms

**Logging**

Log interval: 1 min

**Hardware/device setting**

Input location: new Intech A16 1, Input 1 (x1000) [17]

**Alarm setting summary**

Alarm name:  Alarm  Restore  Actions

Add alarm:

Select 'Custom' for all 2400-A16 input configurations.

Type in these 2 calibration details for all listed temperature probes, both RTD and Thermocouple.

The 2400-A16 sends the exact temperature to the ezeio Controller.

Chose a 'Logging' time.

Note: Failure to select a Logging time will result in this input not being viewable on eze.

In this case, the Ambient Temperature Probe is wired in the 2400-A16, input 1.

Configuration of AAC-600 ::

Input name	Unit	Alarms	Log
1 Input 1	V	0	5 min
2 Input 2	V	0	no logging
3 Input 3	mA	0	no logging
4 Input 4	m3/Hr	0	no logging
5 Supply voltage	V	0	no logging

Add input  
This controller saves 288 samples per day.

Click on 'Save changes'.

Dashboard Status Configure Account

Click on the 'Status' tab to see the Temperature.

**Example 2:** For all other analogue values the 2400-A16 outputs to eze, 0~100% over the range selected on the 2400-A16 as per the table shown, which makes configuration very easy.

The ezeio controller displays input values from the selected range.

Table of how eze scales this input:	
2400-A16 output value to eze	eze Raw value
0	0
100	100,000

Input 7

Input display settings

Input name	Water Flow Meter
Unit	m3/Hr
Decimals to show	2
Max value in graphs	60
Min value in graphs	0

Input type and conversion

Input type	Custom
Calculate	Linear analog_Pulse
Input Raw to unit	x
Unit to input Raw	x
Verification	OK - equations match
Digital pulse input	<input type="checkbox"/> value is time between pulses in ms

Select 'Custom'.

Click on 'Linear analog'.

Two point calibration for analog input

Enter the values from the raw column on the status page for two known measurements.

Point 1

Raw value 1	0
Value	0

Point 2

Raw value 2	100000
Value	60

Result

Raw to Real	[ ]
Real to Raw	[ ]

Use Cancel

Point 1 is the zero point. As the flow meter range is 0~60m3/Hr, at zero flow, the Raw value and the flow meter value = 0.

Point 2 is Full Scale, which in this case is 60m3/Hr. At full scale input, the Raw value will be 100000, and the flow meter value = 60.

Click on 'Use' to enter this calibration setting.



Configuration of AAC-600 ::

**Inputs**

Input name	Unit	Alarms	Log
1 Input 1	V	0	5 min
2 Input 2	V	0	no logging
3 Input 3	mA	0	no logging
4 Input 4	m3/Hr	0	no logging
5 Supply voltage	V	0	no logging

Add input  
This controller saves 288 samples per day.

Click on 'Save changes'.



Click on the 'Status' tab to see the flow meter reading.

**Example 2.2:** This next example is a compound range such as a pressure transmitter that has a span of -1~9Bar.

**Input 8**

**Input display settings**

Input name	Compressor Suction Pressure
Unit	Bar
Decimals to show	1
Max value in graphs	9
Min value in graphs	-1

**Input type and conversion**

Input type	Custom
Calculate	Linear analog Pulse
Input Raw to unit	x
Unit to input Raw	x
Verification	OK - equations match
Digital pulse input	<input type="checkbox"/> value is time between pulses in ms

Select 'Custom'.

Click on 'Linear analog'.

**Two point calibration for analog input**

Enter the values from the raw column on the status page for two known measurements.

Point 1	Raw value 1	0	Value	-1
Point 2	Raw value 2	100000	Value	9
Result	Raw to Real	x/10000-1	Real to Raw	(x+1)*10000

**Use** **Cancel**

Point 1 is the zero point. As the pressure transmitter range is -1 at minimum range, the Raw value and the pressure sensor value = 0, but the Value = -1Bar.

Point 2 is Full Scale, which in this case is 9Bar. At full scale input, the Raw value will be 100000, and the Value = 9.

Click on 'Use' to enter this calibration setting.



Configuration of AAC-600 ::

**Inputs**

Input name	Unit	Alarms	Log
1 Input 1	V	0	5 min
2 Input 2	V	0	no logging
3 Input 3	mA	0	no logging
4 Input 4	m3/Hr	0	no logging
5 Supply voltage	V	0	no logging

Add input  
This controller saves 288 samples per day.


Click on 'Save changes'.



Click on the 'Status' tab to see the pressure.

**Example 2.3:** This example is a pulse output from a flow meter or energy meter.

In this example, the water flow meter has a range of 0~80Hz = 0~1000 l/sec (litres per second), and this signal is wired into one of the 16 analogue inputs on the 2400-A16.

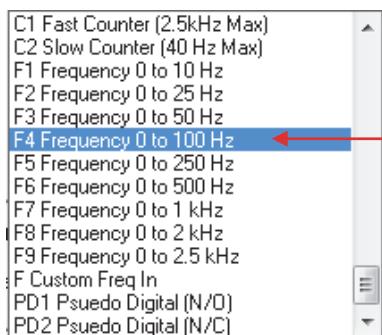


The closest range on the 2400-A16 is 0~100Hz.

By using simple maths, we calculate that the flow at 100Hz = 1250 l/sec.


Therefore 1250 will be value used for full scale reading.

The 2400-A16 calculates this Hz input the same as the normal analogue input: 0Hz = 0% and 100Hz = 100%

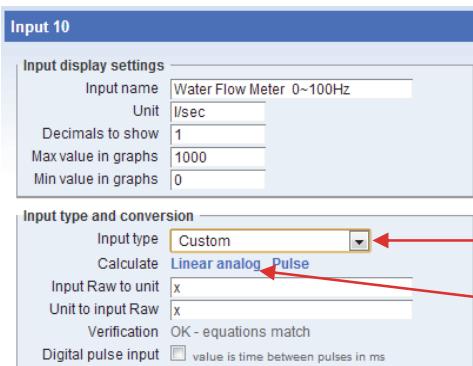

Select 'Custom'.

Click on 'Linear analog'.

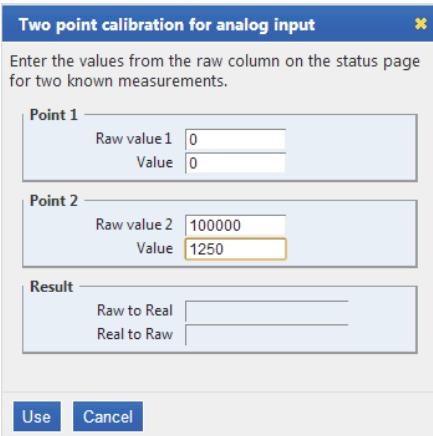

Point 1 is the zero point. As the flow meter range is 0~1000Hz, at zero flow, the Raw value and the flow meter value = 0.

Point 2 is Full Scale, which in this case is 1250l/sec. At full scale input, the Raw value will be 100000, and the flow meter value = 1250.

Click on 'Use' to enter this calibration setting.

**Configuration of AAC-600 :**

**Inputs**

#	Input name	Unit	Alarms	Log
1	Input 1	V	0	5 min
2	Input 2	V	0	no logging
3	Input 3	mA	0	no logging
4	Input 4	m3/Hr	0	no logging
5	Supply voltage	V	0	no logging

Add input

This controller saves 288 samples per day.

Click on 'Save changes'.


**Dashboard**   **Status** (highlighted with a red circle)   **Configure**   **Account**

Click on the 'Status' tab to see the pressure.


**Example 2.4:** This example is displaying an on/off state e.g. motor run/stop, valve open/closed, alarm on/off.

### Using a spare analogue input.


Using the ‘Intech Micro Station Programmer Software’, setup a spare analogue channel as a PD1 Pseudo Digital (N/O) or PD2 Pseudo Digital (N/C).

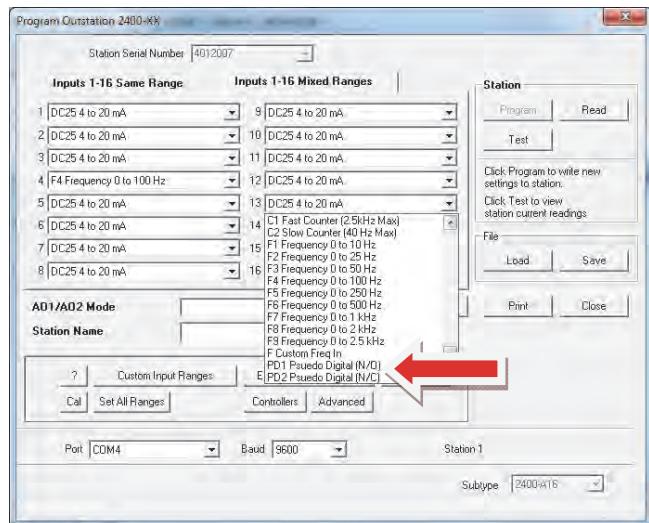

Actual connection onto the spare 2400-A16 channel looks like this using a clean contact:

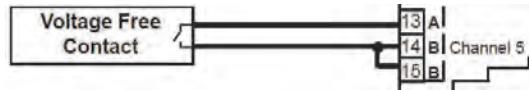

On eze, setup the input configuration for this 2400-A16 channel as below:

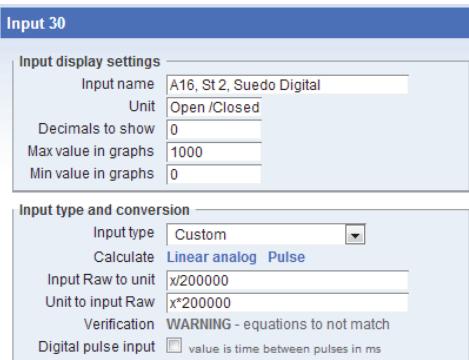

This will display on easy as ‘0’ or ‘100%’.

In the above example, it is logging a valve which is 0% closed or 100% open.

The four Digital inputs on the 2400-A16 are also available, but need to be initialised by eze.

### On Site Calibration Trim.

When an onsite calibration offset or zero adjustment is required to correct the reading on the eze web, follow this procedure:

With a Laptop or Tablet running Windows 7/8/8.1/Vista or XP, connect to the 2400-A16 using the **XU-USB programming key** available from an Intech Instruments Ltd distributor.



You will also need to install the “Station Programmer” software (free to download) from the following link:

[www.intech.co.nz/downloads/Install-StationProgrammer.html](http://www.intech.co.nz/downloads/Install-StationProgrammer.html)

Use the “Cal” button on the “Station Programmer” software to individually offset the input channels to the desired reading.

For further information, please refer to the 2400-A16 Installation Guide - pages 8, 16 and 19.

## Section 3 - Alarms.

The eze system provides a powerful mix of alarm outputs including: alarm relay actuation on the ezeio controller and 2400-A16 relay outputs, email alarm messages, SMS text messages. All of this is covered in the eze User Manual starting on page 35.

**Supplementary notes:** Terminology varies a little compared to SCADA but is easy to follow.

1. **Almaction 1 for Alarm 1 on Input 2**

Action display settings  
Action name: Station 1 High Alarm

Action settings  
Action type: Set output  
Output: A16-1 RE 1  
Cadence: on  
Cutoff: 0 seconds

Conditions  
First condition: no condition  
Second condition: no condition  
Do action if:  both conditions are true (AND)  
 either or both are true (OR)

When in this alarm configuration screen,  
leave the configuration as it is shown here.

2. Two set point settings are required, one for setting the alarm, and the 2<sup>nd</sup> for unsetting the alarm as per this screen shot:

**Alarm 1 on Input 2**

Alarm display settings  
Alarm name: Station 1 High alarm

Alarm settings  
Threshold for alarm: 25 C  
Holdoff: 5 seconds (0.1 - 6000)

Restore settings  
Threshold for restore: 19 C  
Holdoff: 5 seconds (0.1 - 6000)

3. Example for configuration of a SMS text alarm message:

**Almaction 1 for Alarm 2 on Input 2**

Action display settings  
Action name: txt alarm

Action settings  
Action type: Send message  
Destination: +6421  
Message: ALARM on #VAL02#

**Important note:** The monthly 'Service plan' fee you chose from eze has a monthly limit on SMS text messages. Be careful when configuring and saving configuration changes, as this resets the alarm code and will generate another text message on any text alarms that have been activated.

Move the alarm set point clear of any alarm point to prevent wasting text messages when editing.

The mobile phone number for the text message.

**Note:** International format of mobile phone number is required.  
i.e. New Zealand = +642xxx