

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

DVP3350V/05



**PHILIPS**

# Safety Precautions



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**




This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

**WARNING: Do not install this equipment in a confined space such as a book case or similar unit. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction have been adhered to.**

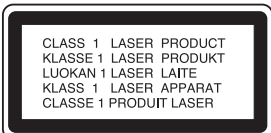

**CAUTION:**

**This Digital Video Disc Player employs a Laser System. VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED**

**To ensure proper use of this product, please read this owner's manual carefully and retain for future reference, should the unit require maintenance, contact an authorized service location-see service procedure.**

**Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.**

**To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.**

**CAUTION: The apparatus shall not be exposed to water, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.**

**CE This product is manufactured to comply with the EEC DIRECTIVE 89/336/EEC, 93/68/EEC and 2006/95/EC.**

**Notes on copyrights:**

It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyright material without permission. This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

"The making of unauthorized copies of copy-protected material, including computer programmes, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes."

**SERIAL NUMBER:** The serial number is found on the back of this unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase.

Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 625p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.

**Features:**

- Complete versatility to play DVD, DivX, VCDs, audio CDs or VHS Tapes.
- Watch a DVD while recording a TV show to the VCR.
- Remote controls DVD and VCR decks.
- Records from DVD to VHS (unless DVD is copy protected with Macrovision).
- Hi-Fi Stereo VCR.

**VIDEO Plus+**  
VIDEO Plus+ and PlusCode are registered trademarks of Gemstar Development Corporation. The VIDEO Plus+ system is manufactured under license from Gemstar Development Corporation.

"Official DivX® Certified product"  
"Plays all versions of DivX® video (including DivX® 6) with standard playback of DivX® media files"  
"DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license."

## Important Note

### DK

#### Advarsel:

Laserradstråling ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå u tsættelse for stråling.

#### Bemærk:

Netafbryderen POWER er sekundært indkoblet og afbryder ikke strømmen fra nettet. Den indbyggede netdel er derfor tilsluttet til lysnettet så længe netstikket sidder i stikkontakten.

### N

#### Observer:

Nettbryteren POWER er sekundært indkoblet. Den indbyggede netdel er derfor ikke frakoplet nettet så længe apparatet er tilsluttet nettkontakten.

### S

Klass 1 laserapparat

#### Varning!

Om apparaten används på annat sätt än i denna bruksanvisning specificerats, kann användaren utsättas för laserstrålning, som överskrider gränsen för läserklass 1.

#### Observera!

Strömbrytaren POWER är sekundärt kopplad och inte bryter strömmen från nätet. Den inbyggda nät delen är därför ansluten till elnätet så länge stickproppen sitter i v ägguttaget.

### SF

Luokan 1 laserlaite + Klass 1 laserapparat Varoitus!

Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle lasersäteille.

#### Huom.

Toiminnanvalitsin POWER on kytketty toisipuolelle, eikä se kytke laitetta irti sähköverkosta. Sisäänrakennettu verkko-osa on kytkettynä sähköverkkoon aina silloin, kun pistoke on pistorasiassa.

## Important Note for Users in the UK

### Mains plug

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- 1 Remove fuse cover and fuse.
- 2 Fix new fuse which should be a BS1362 5 Amp, A.S.T.A. or BSI approved type.
- 3 Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.

Note: The severed plug must be disposed of to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

### How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L).

As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug, marked E (or e) or coloured green (or green and yellow).

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

### Copyright in the U.K.

Recording and playback of material may require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

# Contents

## Introduction

Safety Precautions .....	2
Index .....	3
Contents .....	4
Before Use .....	5-6
Playable Discs .....	5
Remote Control Operation Range .....	5
Precautions .....	6
Notes on Discs .....	6
About Symbols .....	6
Selecting the Viewing Source.....	6
Front Panel and Display Window .....	7
Remote Control .....	8
Rear Panel .....	9

## Preparation

Connections.....	10-11
Connecting to a TV & Decoder.....	10
Connecting to Optional Equipment .....	11
Before Operation - VCR part.....	12-16
Tuning in a video channel on your TV .....	12
Using your DVD+VCR for the very first time.....	12
Setting the clock Manually.....	13
To set the colour system.....	13
How to using the main menu.....	14
Tuning in TV stations Automatically .....	14
Tuning in TV stations Manually .....	15
Changing the order of TV stations .....	16
Deleting TV stations .....	16
Before Operation - DVD part .....	17-20
General Explanation .....	17
On-Screen Display.....	17
Initial Settings .....	18-20
● General Operation .....	18
● Language .....	18
● Display .....	18
● Audio .....	19
● Others .....	19
● LOCK (Parental Control) .....	20

## Operation

Operation with Tape .....	21-24
Playing a tape .....	21
● SKIP .....	21
● OPR (Optimum Picture Response) .....	21
Instant Timer Recording (ITR) .....	22
VIDEO Plus+ Programming.....	23
Timer recording using On Screen Display .....	24
Operation with DVD and Video CD .....	25-27
Playing a DVD and Video CD .....	25
General Features .....	25
● Moving to another TITLE .....	25
● Moving to another CHAPTER/TRACK .....	25
● Search.....	25
● Still Picture and Frame-by-Frame Playback.....	25
● Slow Motion .....	26
● Repeat .....	26
● Repeat A-B .....	26
● Time Search .....	26
● Screen Saver .....	26
● Zoom .....	27
● Marker Search .....	27

Special DVD Features.....	27
● Title Menu .....	27
● Disc Menu .....	27
● Camera Angle.....	27
● Changing the Audio Language .....	27
● Changing the Audio Channel .....	27
● Subtitles .....	27

## Operation with Audio and MP3/Windows Media™

Audio Disc .....	28-29
Playing an Audio CD and MP3/Windows Media™ Audio Disc.....	28-29
● Notes on MP3/Windows Media™ Audio Recordings.....	28
● Pause .....	29
● Moving to another Track .....	29
● Repeat Track/All/Off.....	29
● Search.....	29
● Shuffle.....	29
● Repeat A-B .....	29

## Operation with JPEG Disc.....

Viewing a JPEG disc .....	30
● Slide Show .....	30
● Moving to another File.....	30
● Still Picture .....	30
● Zoom .....	30
● To rotate Picture .....	30
● To listen to MP3/Windows Media™ Audio music watching picture.....	30
● Notes on JPEG Recordings.....	30

## Programmed Playback.....

Programmed Playback with Audio CD and MP3/Windows Media™ Audio Disc .....	31
● Repeat Programmed Tracks .....	31
● Erasing a Track from Program list .....	31
● Erasing the Complete Program list.....	31

## Operation with DVD VR Disc .....

Playing a DVD VR format Disc .....	32
Maintenance and Service .....	32
● Handling the unit.....	32

## Operation with DivX Disc.....

Playing a DivX Movie Disc .....	33
---------------------------------	----

## Additional Operation .....

On Screen Display.....	34
Tape Counter Memory Stop .....	34
Video Doctor (Self-Diagnosis) .....	34
Hi-Fi Stereo Sound System .....	35
Wide Screen Compatibility 16:9 .....	35
To set the decoder .....	35
Last Condition Memory.....	35




## Special Recording .....

Copying from DVD to VCR .....	36
Recording from another video recorder.....	36

## Reference

Troubleshooting .....	37
Language Code List .....	38
Country/Area Code list .....	39
Specification .....	40

### Playable Discs

	<b>DVD</b> (8 cm / 12 cm disc)
	<b>Video CD (VCD)</b> (8 cm / 12 cm disc)
	<b>Audio CD</b> (8 cm / 12 cm disc)

In addition, this unit can play **DVD±R, DVD±RW, SVCD, and CD-R or CD-RW that contains audio titles, MP3/Windows Media™ Audio and/or JPEG files.**



This indicates a product feature that is capable of playing DVD-RW discs recorded with Video Recording format.

#### Notes

- Depending on the conditions of the recording equipment or the CD-R/RW (or DVD±R/±RW) disc itself, some CD-R/RW (or DVD±R/±RW) discs cannot be played on the unit.
- Do not attach any seal or label to either side (the labelled side or the recorded side) of a disc.
- Do not use irregular shaped CDs (e.g., heart-shaped or octagonal). It may result in malfunctions.

#### Notes on DVDs and Video CDs

Some playback operations of DVDs and Video CDs may be intentionally fixed by software manufacturers. As this unit plays DVDs and Video CDs according to disc content designed by the software manufacturer, some playback features of the unit may not be available, or other functions may be added.

Refer also to the instructions applied with the DVDs and Video CDs. Some DVDs made for business purposes may not be played on the unit.

#### Regional code of the DVD player and DVDs

This DVD player is designed and manufactured for playback of region “2” encoded DVD software.



The region code on the labels of some DVD discs indicates which type of player can play those discs. This unit can play only DVD discs labelled “2” or “ALL”. If you try to play any other discs, the message “Check Regional Code” will appear on the TV screen. Some DVD discs may not have a region code label even though their playback is prohibited by area limits.

#### Disc-related terms

##### Title (DVD only)

The main film content or accompanying feature content or additional feature content, or music album. Each title is assigned a title reference number enabling you to locate it easily.

##### Chapter (DVD only)

Sections of a picture or a musical piece that are smaller than titles.

A title is composed of one or several chapters. Each chapter is assigned a chapter number, enable you to locate the chapter you want. Depending on the disc, no chapters may be recorded.

##### Track

Sections of a picture or a musical piece on a video CD or an audio CD. Each track is assigned a track number, enabling you to locate the track you want.

##### Scene

On a video CD with PBC (Playback control) functions, moving pictures and still pictures are divided into sections called “Scenes”. Each scene is displayed in the menu screen and assigned a scene number, enabling you to locate the scene you want. A scene is composed of one or several tracks.

##### DivX

DivX is the name of a revolutionary new video codec which is based on the new MPEG-4 compression.

DivX, DivX Certified, and associated logos are trademarks of DivX Networks, Inc and are used under license.



#### Types of video CDs

There are two types of video CDs:

##### Video CDs equipped with PBC (Version 2.0)

PBC (Playback control) functions allow you to interact with the system via menus, search functions, or other typical computer-like operations. Moreover, still pictures of high resolution can be played if they are included in the disc.

 
##### Video CDs not equipped with PBC (Version 1.1)

Operated in the same way as audio CDs, these discs allow playback of video pictures as well as sound, but they are not equipped with PBC.



### Remote Control Operation Range

Point the remote control at the remote sensor and press the buttons.

- **Distance:** About 23 ft (7 m) from the front of the remote sensor
- **Angle:** About 30° in each direction of the front of the remote sensor



##### Remote control battery installation

Detach the battery cover on the rear of the remote control, and insert two (size AAA) batteries with  and  aligned correctly.

##### Caution

Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).

## Before Use (Cont'd)

### Precautions

#### Handling the unit

##### When shipping the unit

The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packed at the factory.

##### When setting the unit

The picture and sound of a nearby TV or radio may be distorted during playback. In this case, position the unit away from the TV or radio, or turn off the unit after removing the disc.

##### To keep the surface clean

Do not use volatile liquids, such as insecticide spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface.

#### Cleaning the unit

##### To clean the cabinet

Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents, such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

##### To obtain a clear picture

The DVD player is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn down, the picture quality will be poor. Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.) For details, please contact your nearest dealer.

### Notes on Discs

#### Handling discs

Do not touch the playback side of the disc.  
Hold the disc by the edges so that fingerprints will not get on the surface.  
Do not stick paper or tape on the disc.




#### Storing discs

After playing, store the disc in its case.  
Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

#### Cleaning discs


Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.

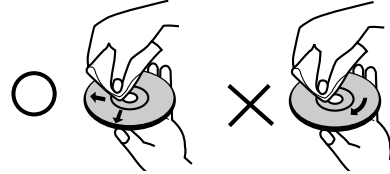

 Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.








### About Symbols

#### About the symbol display

"" may appear on the TV screen during operation. This icon means the function explained in this owner's manual is not permitted by the DVD+VCR or is not available on that specific DVD video disc.

#### About the disc symbols for instructions

A section whose title has one of the following symbol is applicable only to the disc represented by the symbol.

-  DVD
-  Video CDs with the PBC (playback control) function.
-  Video CDs without the PBC (playback control) function.
-  Audio CDs.
-  MP3 disc.
-  JPEG disc.
-  DivX disc.

### Selecting the Viewing Source



You must select one of your output sources (DVD or VCR) to view on the TV screen.

- **If you want to view DVD deck output source:**  
Press DVD on the remote or SOURCE on the front panel and output source of DVD deck is viewed on the TV screen.
- **If you want to view VCR deck output source:**  
Press VCR on the remote or SOURCE on the front panel and output source of VCR deck is viewed on the TV screen.

#### Notes

- If you insert a disc while the DVD+VCR is in the VCR mode, the DVD+VCR will switch to DVD mode automatically.
- If you insert a cassette tape without prevention tab while the DVD+VCR is in the DVD mode, the DVD+VCR will switch to VCR mode automatically.

# Front Panel and Display Window

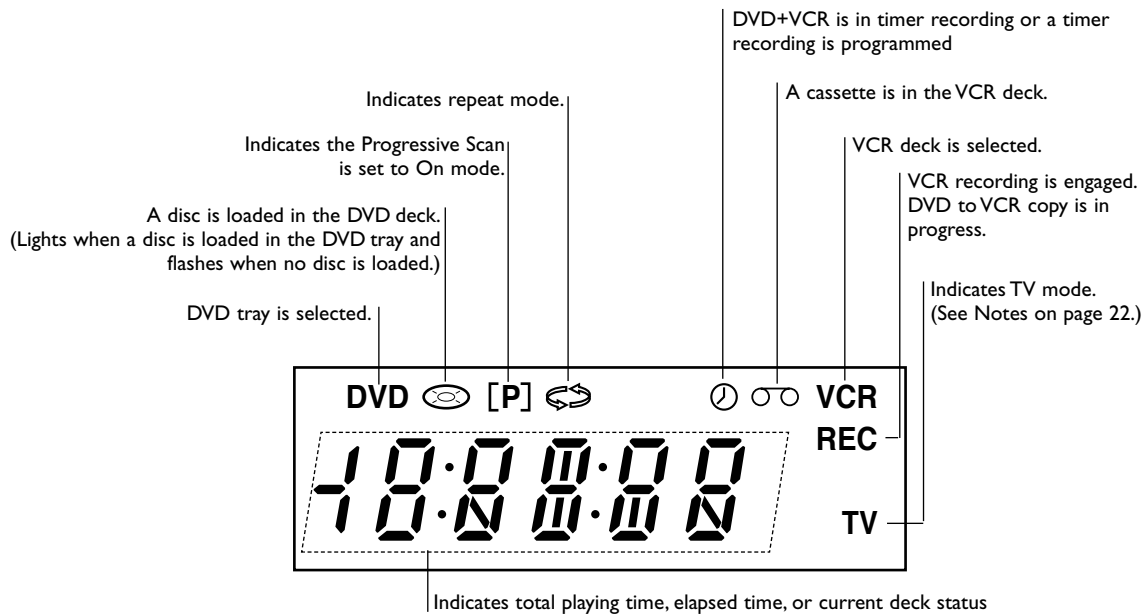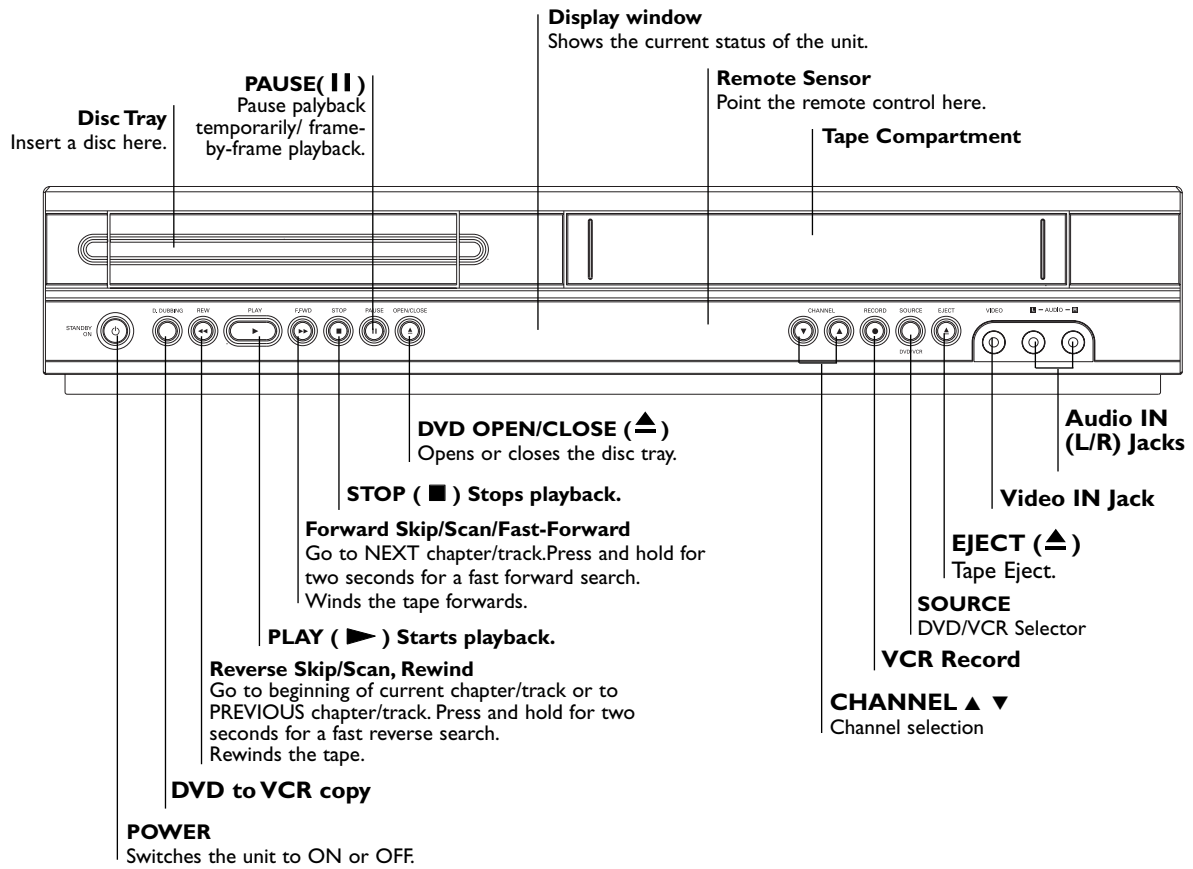

# Remote Control

**EJECT, OPEN/CLOSE**  
 - Opens and closes the disc tray.  
 - Ejects the tape in the VCR deck.

**SETUP**  
 Accesses or removes DVD setup menu and VCR menu.

**DISC MENU**  
 Accesses menu on a DVD disc.

**◀/▶/▲/▼ (left/right/up/down)**  
 Select an item in the menu.

**PR/TRK(+/-)**  
 Select channel programme of VCR.  
 To adjust tracking.  
 To control vertical tremble during picture still.

**OK**  
 Acknowledge menu selection.

**DISPLAY**  
 Accesses On-Screen display.  
 Switches among the clock, tape counter and tape remaining modes.

**BACK (↶)**  
 Displays the menu of a Video CD with PBC.

**0-9 numerical buttons**  
 Selects numbered options in a menu.

**PROGRAM**  
 Accesses or removes Program menu.

**CLEAR**  
 - Resets tape counter to M 0:00:00  
 - Removes a track number on the program menu or a mark on the MARKER SEARCH menu.

**AUDIO**  
 Selects an audio language (DVD).

**SUBTITLE**  
 Selects a subtitle language.

**ANGLE**  
 Selects a DVD camera angle if available.

**ZOOM**  
 Enlarges DVD/VCD video image.


**SHUFFLE/SKIP**  
 Plays tracks in random order.  
 SKIP.


**SEARCH**  
 Displays MARKER SEARCH menu.

**TITLE**  
 Displays the disc's Title menu, if available.

**SPEED**  
 Select the recording speed of the tape.

**VIDEO Plus+**  
 To display the programme menu for VIDEO Plus+ programming.

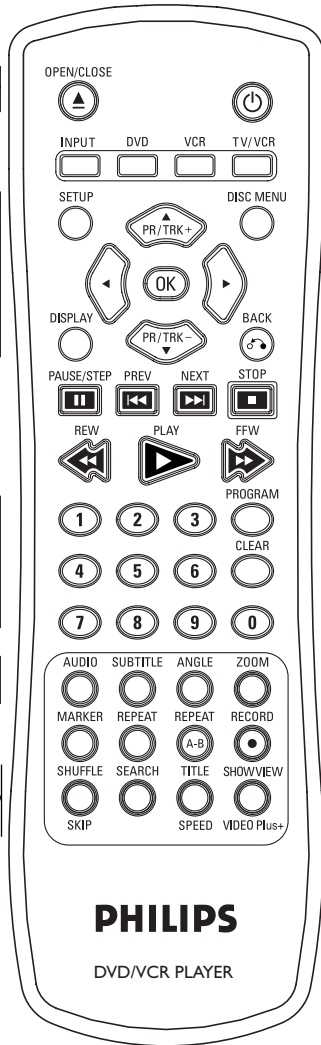

**POWER**   
 Switches DVD+VCR ON and OFF.

**INPUT**  
 To select the VCR deck's source (Tuner, AV1, AV2 or AV3).

**DVD/VCR select button**  
 Select the output source (DVD or VCR) to view on the TV screen.

**TV/VCR**  
 To view channels selected by the VCR tuner or by the TV tuner.

**PAUSE/STEP (II)**  
 Pause playback or recording  
 Press repeatedly for frame-by-frame playback during pause.

**PREV/NEXT (◀◀/▶▶)**  
 Go to next chapter or track.  
 Returns to beginning of current chapter or track or go to previous chapter or track

**STOP (■)**  
 Stops playback.

**REW/FWD (◀◀/▶▶)**  
 DVD: Search backward or forward.  
 VCR: Rewinds the tape during the STOP mode, for fast reverse picture search and Advances the tape during the STOP mode, fast forward picture search.

**PLAY (▶)**  
 Starts playback.

**MARKER**  
 Marks any point during playback.

**REPEAT**  
 Repeat chapter, track, title, all.

**REPEAT A-B**  
 - Repeats sequence.  
 - This button also controls the speed of the VCR recording. For more info, please refer to page 22.


**RECORD (●)**  
 Records normally or activates Instant Timer Recording with repeated presses.

**Note**

This remote control use the same buttons for VCR and DVD functions (ex. PLAY).  
 When using a VCR, first press the VCR button.  
 When using a DVD, first press the DVD button.



## Rear Panel

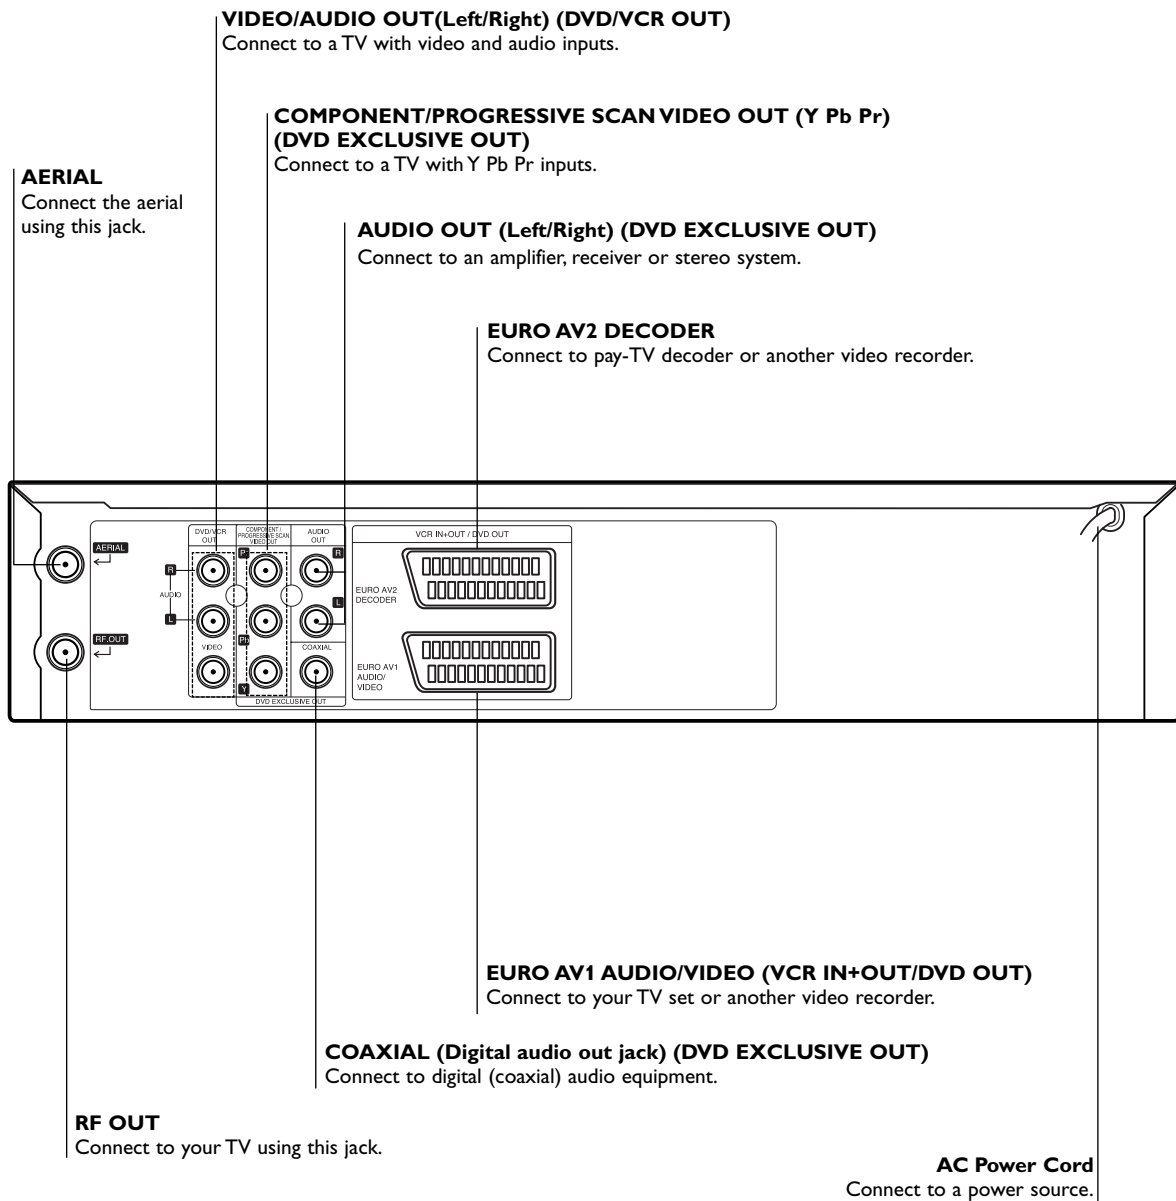

### Caution

Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.

# Connections

## Tips

- Depending on your TV and other equipment you wish to connect, there are various ways you could connect the unit.
- Please refer to the manuals of your TV, Stereo System or other devices as necessary to make the best connections.
- For better sound reproduction, connect this unit's AUDIO OUT jacks to the audio in jacks of your amplifier, receiver, stereo or audio/video equipment. See "Connecting to optional equipment" on page 11.

## Caution

- Make sure this unit is connected directly to the TV. Set the TV to the correct video input channel.
- Do not connect this unit's AUDIO OUT jack to the phono in jack (record deck) of your audio system.

## Connecting to a TV & Decoder

- Make one of the following connections, depending on the capabilities of your existing equipment.

### Basic connection (AV)

**1** Connect the **EURO AV1 AUDIO/VIDEO** on the rear panel of this unit to the **SCART** input socket on the TV using a SCART lead.

**2** Some TV broadcasters transmit encoded television signals which you can only see with a purchased or rented decoder. You can connect such a decoder (descrambler) to the DVD+VCR.

### Note:

The encoded television signals (**CANAL+ or PREMIERE**) are not decoded in the **1W Mode** (see p. 34).

### Basic connection (RF)

**1** Connect the RF antenna cable from your indoor/ outdoor antenna to **AERIAL** jack on the rear panel of this unit.

**2** Connect the supplied RF antenna cable from the **RF OUT** jack on the rear panel of this unit to your television's Antenna Input.

### DVD exclusive out connection

- **Component Video (Color Stream®) connection**

**1** Connect the **COMPONENT/PROGRESSIVE SCAN VIDEO OUT** jacks on the DVD Player to the corresponding in jacks on the TV using the Y Pb Pr cable.

**2** Connect the Left and Right **AUDIO OUT** jacks of the DVD Player to the audio left/right in jacks on the TV using the audio cables.

### Progressive Scan (ColorStream® Pro) connection


- If your television is a high-definition or "digital ready" television, you may take advantage of the DVD Player's progressive scan output for the highest video resolution possible.
- If your TV does not accept the Progressive Scan format, the picture will appear scrambled if you try Progressive Scan on the DVD Player.

**1** Connect the **COMPONENT/ PROGRESSIVE SCAN VIDEO OUT** jacks on the DVD Player to the corresponding in jacks on the TV using the Y Pb Pr cable.


**2** Connect the Left and Right **AUDIO OUT** jacks of the DVD Player to the audio left/right in jacks on the TV using the audio cables.

## Notes

Rear of this unit (DVD exclusive out connection)

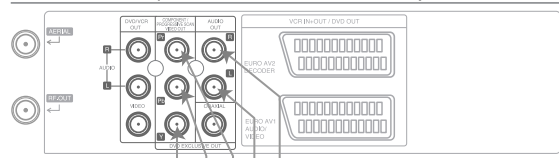

Rear of TV

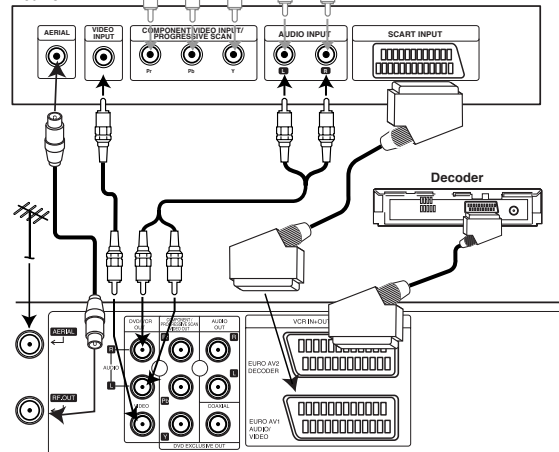

Rear of this unit (Basic connection)

- Set the Progressive to "On" on the setup menu for progressive signal, see page 18.
- Progressive scan does not work with the analog video connections (yellow VIDEO OUT jack).

### Connecting to Optional Equipment

**Connecting to an amplifier equipped with two channel analog stereo or Dolby Pro Logic II/ Pro Logic**

Connect the Left and Right **DVD/VCR AUDIO OUT** or **AUDIO OUT (DVD EXCLUSIVE OUT)** jacks on this unit to the audio left and right in jacks on your amplifier, receiver or stereo system, using the audio cables.


**Connecting to an amplifier equipped with two channel digital stereo (PCM) or to an Audio/ Video receiver equipped with a multi-channel decoder (Dolby Digital™ or MPEG 2)**

- 1** Connect one of this unit's DIGITAL AUDIO OUT jack (**COAXIAL**) to the corresponding in jack on your amplifier. Use an optional digital (coaxial) audio cable.
- 2** You will need to activate this unit's digital output. (See "Audio" on page 19).

### Digital Multi-channel sound

A digital multi-channel connection provides the best sound quality. For this you need a multi-channel Audio/Video receiver that supports one or more of the audio formats supported by your unit (MPEG 2 and Dolby Digital). Check the receiver manual and the logos on the front of the receiver.

#### Rear of this unit

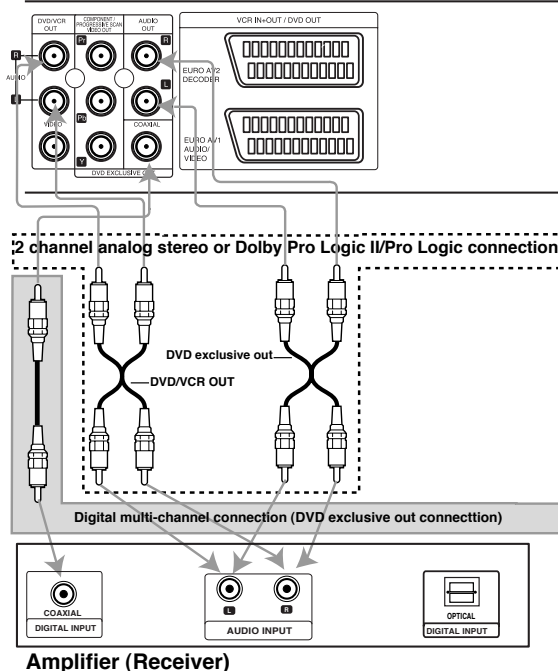

#### Notes

- If the audio format of the digital output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.
- To see the audio format of the current DVD in the On-Screen Display, press **AUDIO**.


## Before Operation - VCR part

### Tuning in a video channel on your TV


Video channel (RF output channel) is the channel on which your TV receives picture and sound signals from the DVD+VCR through the RF cable.


If you have used a **SCART** lead you will not have to tune your TV, simply select the **AV** channel. The **AV** channel is already pre-tuned for optimum video playback on your TV.

Perform the following steps only if interference appears in the TV picture after you have moved to a different area or a new station has started broadcasting in your area, or if you change the connection from RF connection to AV connection, or vice versa.

- 1 Turn on DVD+VCR and TV.
- 2 Set the vacant position 36 on your TV.
- 3 Press  on the remote control to enter the standby mode (the clock indicator will be dimmed).
- 4 Press and hold **CHANNEL ▲** or **▼** on the DVD+VCR for more than 4 secs.

**RF 36** will appear in the DVD+VCR display. The following picture will be displayed on the TV screen.

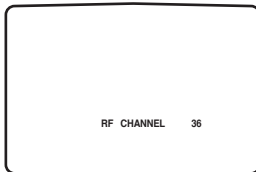

If the picture is snowy, move to step 5. If the picture is clean, press  on the DVD+VCR to finish.

- 5 Press **CHANNEL ▲** or **▼** on the DVD+VCR to set the video channel to a vacant position between 22 and 68 which is not occupied by any local station in your area.

#### Note

The RF channel will not change until step 6 has been executed.

- 6 Press  to store the new RF video channel into the DVD+VCR memory.

Now tune your TV set to the new DVD+VCR RF channel.

#### Note

If the TV picture was clear in step 4, do not retune your TV.


### Using your DVD+VCR for the very first time

For the following steps we assume that you have just connected your DVD+VCR for the very first time. To make tuning TV stations an easy task your DVD+VCR incorporates the **Automatic Channel Memory System (ACMS)**. This system will automatically tune, store TV channels and set the clock (date & time) in your DVD+VCR.


- 1 Make sure that you have correctly installed your DVD+VCR.

Press  to turn on your DVD+VCR.

If the initial Menu Screen doesn't appear on screen, make sure that you have tuned your TV to a video channel. Or if this is correct it may mean that your DVD+VCR is already tuned.

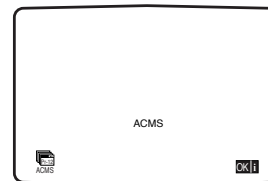

- 2 Press **OK** to start the automatic tuning process.

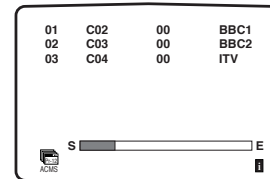

Programme number	TV Station
PR01	<b>BBC1</b>
PR02	<b>BBC2</b>
PR03	<b>ITV</b>
PR04	<b>CH4</b>
PR05	<b>CH5</b>
PR06	<b>Satellite</b>

The TV station shown above may vary according to the area you live in.

- 3 Press **SETUP** to remove the menus from the TV screen.


## Before Operation - VCR part

### Setting the clock Manually


The clock in your DVD+VCR controls time and date settings for your DVD+VCR.

The clock is set automatically during **ACMS** (Automatic Channel Memory System) when your DVD+VCR detects a channel that broadcasts a Teletext signal. If the broadcast signal is weak the clock will not be set and will require setting manually.

- 1 Press **SETUP**.  
Press ◀ or ▶ to select **SET**.  
Press **OK**.  
The auto adjust mode can be set to 'OFF' by pressing **OK** if you want to set the time manually.

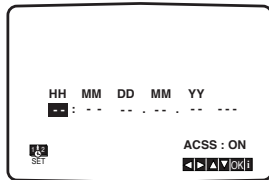


- 2 Use ▲ or ▼ on the remote control to alter the **HOURS, MINUTES, DAY, MONTH** and **YEAR**. Please note your DVD+VCR uses a 24 hour clock. e.g. 1pm will be displayed as 13:00. The day of the week will appear automatically when you enter the year.

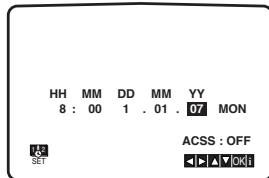


- 3 If you make a mistake press ◀ or ▶ and enter the correct details.
- 4 Press **SETUP**.

### To set the colour system

- 1 Press **SETUP**.
- 2 The main menu will appear on the TV screen.
- 3 Press ◀ or ▶ to select the **SYS** and press **OK**.
- 4 Press ▲ or ▼ to select according to the **COLOUR** system used.

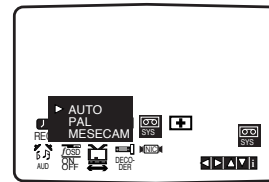

- 5 Press ▶ to select the **RF AUDIO**. Press ▲ or ▼ to select according to the **RF AUDIO** used.

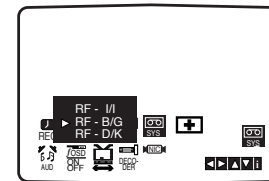


- 6 Press **SETUP** to remove the menus from the TV screen.


## Before Operation - VCR part

### How to using the main menu

This VCR can easily be programmed by using the menus displayed on screen.

The menus are controlled from the Remote Control Handset.

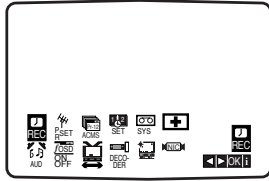



- 1 Switch on your TV set and video recorder by pressing the  button.
- 2 Press **SETUP** button.  
The main menu will appear on the TV screen.



 - **REC** - Timer recording setting (see p. 24).
- **PR SET** - Manual tuning setting (see p. 15).
- **ACMS** - ACMS (Automatic Channel Memory System) (see p. 14).
- **SET** - Date & clock setting (see p. 13).
- **SYSTEM** - To set the Colour TV System (see p. 13).
- **RF AUDIO** - To select the channel of audio output according to your TV type ("I/I" for PAL I/I TV, "B/G" for PAL B/G TV, "D/K" for PAL D/K TV) (see p. 13).
- **Dr.** - To check a problem with your VCR (see p. 34).
- **AUDIO** - To select the channel for audio output (see p. 35).
- **FOSD ON/OFF** - To display the operational mode of your VCR (see p. 34).
- **16:9/4:3** - To select the aspect ratio of your TV (see p. 35).
- **DECODER** - To use a pay-TV decoder (or Satellite) with your VCR (see p. 35).
- **OPR** - To improve the playback picture (see p. 21).
- **NIC** - To activate or deactivate the NICAM digital sound (see p. 35).


 
 
#### Tip



You can change the menu language on the DVD setup menu. (See the Menu Language on page 18.)

- 3 Press  and  to select the desired menu.  
Press **OK** and use  or  to select.
- 4 Press **SETUP** to return to a TV picture.


### Tuning in TV Stations Automatically

If the TV broadcast signal is weak your VCR may not detect the necessary information and will not be able to store them correctly. To overcome this problem please turn to the MANUAL TUNING section on page 15.


- 1 Press  to turn on your VCR.
- 2 Press **SETUP** button.  
The main menu will appear on the TV screen.  
Press  or  to select the **ACMS**.  
Press **OK**.

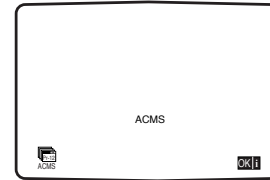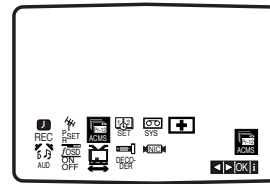

- 3 Press **OK** again to start the automatic tuning process. The VCR's clock will be set automatically when automatic tuning has finished. If the clock is wrong, see "Setting the clock manually" on page 13).

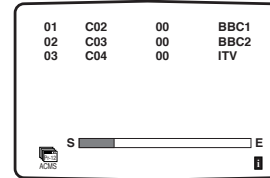

- 4 The **TV STATION TABLE** will appear when tuning is complete.  
Press **SETUP** to save your settings.


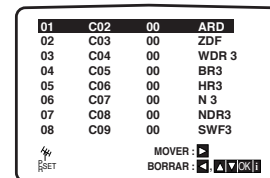


## Tuning in TV Stations Manually

In certain areas of the country broadcast signals may be too weak for your VCR's automatic tuning process to find or assign TV stations correctly.

You must tune in these weaker broadcast stations manually in order for your VCR to store them.

- 1 Press **SETUP**.  
The main menu will appear on the TV screen.  
Press **◀** or **▶** to select the **PR SET**.  
Press **OK**.

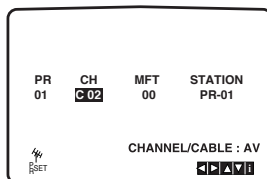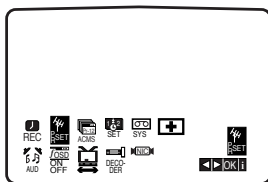


- 2 Press **SETUP**.  
The station table will appear.  
Press **▲** or **▼** to select the programme number that you want to tune (for example, PR 09).


PR	CH	MFT	STATION
01	C02	00	PR-01
02	C03	00	PR-02
03	C04	00	PR-03
04	C05	00	PR-04
05	C06	00	PR-05
06	C07	00	PR-06
07	C08	00	PR-07
08	C09	00	PR-08

MOVE: **▶**  
DELETE: **◀** **▶** **OK**

- 3 Press **OK**.  
Press **INPUT** to select **C** (Standard stations) or **S** (Cable stations): C02 - C69, S01 - S41.  
Enter the channel number of station that you want to tune with **the numbered buttons** or use **▲** or **▼** to find the required station.

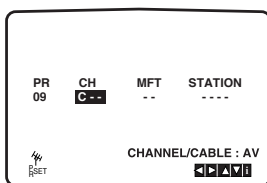


- 4 Searching will stop when it locates a stations.  
Press **▶** to select **MFT**.  
Control the fine tuning of the station by using **▲** or **▼**.

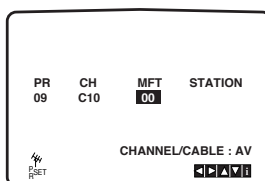


## Before Operation - VCR part

- 5 Press **▶** to select **STATION** so that you may name your TV station.  
Press **OK**.

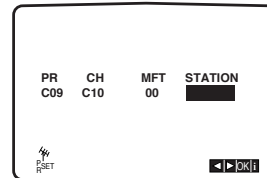

- 6 Use **▲** or **▼** to select **letters** and **numbers** for the new station name.  
Use **◀** or **▶** to move back and forth between characters.  
Press **OK**.

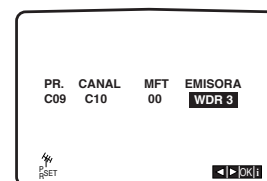

- 7 Press **SETUP**, confirm the station placement.  
Press **SETUP** again.  
Your new TV station has now been tuned into your VCR.  
If you wish to manually tune other stations repeat stages 1 - 7.

PR	CH	MFT	STATION
09	C10	00	WDR 3
10	--	--	----
11	--	--	----
12	--	--	----
13	--	--	----
14	--	--	----
15	--	--	----
16	--	--	----



MOVER: **▶**  
BORRAR: **◀** **▶** **OK**

## Before Operation - VCR part



### Changing the order of TV Stations

After tuning TV stations into your VCR you may wish to change the order in which they are stored without having to retune them again. The instructions given on this page will show you how you can simply move them into your desired order.


- 1 Press **SETUP**.  
The main menu will appear on the TV screen.  
Press **◀** or **▶** to select the **PR SET**.  
Press **OK**.

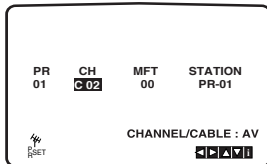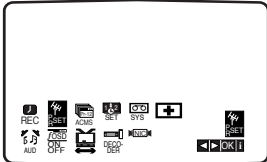


- 2 Press **SETUP**.  
Use **▲** or **▼** to select the **programme number** you want to move (for example, PR 03).  
Press **▶**.

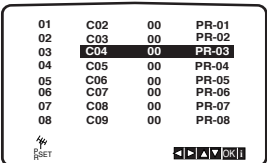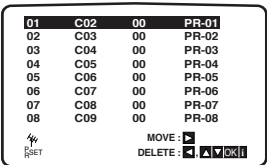

- 3 Use **▲** or **▼** to select the **programme number** you want to move to (for example, PR 05).

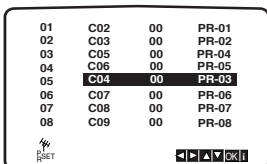

- 4 Press **OK**.  
The selected **programme** will be moved to the **new programme number**.  
If you wish to move other TV stations repeat stages 1 - 4.  
Press **SETUP** to remove the menus from the TV screen.


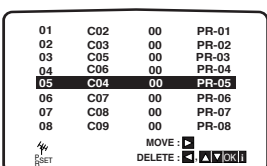


### Deleting TV Stations


After tuning TV stations into your VCR you may wish to delete a station.

The instructions given on this page will show you how you can easily delete any unwanted TV stations.


- 1 Press **SETUP**.  
The main menu will appear on the TV screen.  
Use **◀** or **▶** to select the **PR SET**.  
Press **OK**.

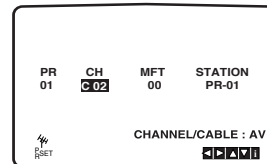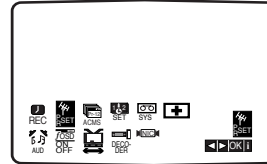

- 2 Press **SETUP**.  
Press **▲** or **▼** to select the **programme number** you want to delete. (for example, PR 03)

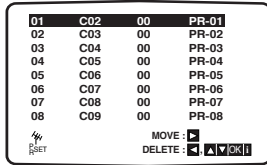

- 3 Press **◀**.  
After a short while, the selected station will be deleted.

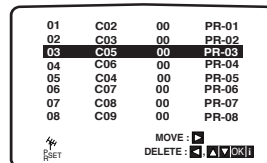

- 4 Press **SETUP** to remove the menus from the TV screen.  
If you wish to delete other TV stations repeat stages 1 - 3.

#### How to select Stored TV stations:


Stored TV stations can be selected in either of two ways.  
Use **▲** or **▼** to select different stations that are tuned into your DVD+VCR.

You may also directly select stations using the **numbered buttons** on the remote control.



## Before Operation - DVD part

### General Explanation

This manual gives the basic instructions for operating the DVD+VCR. Some DVDs require specific operation or allow only limited operation during playback. When this occurs, the symbol  appears on the TV screen, indicating that the operation is not permitted by the DVD+VCR or is not available on the disc.







#### On-Screen Display

The general playback status can be displayed on the TV screen. Some options can be changed on the menu.




#### On-screen display operation

- 1** Press **DISPLAY** during playback.
- 2** Use **▲/▼** to select an item.  
The selected option will be highlighted.
- 3** Use **◀/▶** to change the setting of an item.  
The number buttons can also be used for setting numbers (e.g., title number). For some functions, press **OK** to execute the setting.





#### DVD

Options	Function (Use ▲/▼ to select desired option)	Selection Method
Title Number	 1 / 3	◀/▶, or Numeric, OK
Chapter Number	 1 / 12	◀/▶, or Numeric, OK
Time search	 0:20:09	Numeric, OK
Audio language and Digital Audio Output mode	 1 ENG 3/2.1 CH	◀/▶, or AUDIO
Subtitle language	 OFF	◀/▶, SUBTITLE
Angle	 1 / 1	◀/▶, ANGLE

 

 





#### VCD2.0 VCD1.1

Items	Function (Use ▲/▼ to select desired option)	Selection Method
Track Number	 1 / 4	◀ / ▶, or Numbers, OK
Time search	 0:20:09	Numeric, OK
Audio Channel	 <STEREO>	◀ / ▶, or AUDIO

#### DivX

Items	Function (Use ▲/▼ to select desired option)	Selection Method
Track Number	 1 / 3	◀/▶, or Numeric, OK
Time search	 0:20:09	Numeric, OK
Audio language and Digital Audio Output mode	 MP3 2/0 CH	◀/▶, or AUDIO
Subtitle language	 OFF	◀/▶, SUBTITLE
 
#### Temporary Feedback Field Icons

	Repeat Title
	Repeat Chapter
	Repeat Track (non-PBC Video CDs and Audio CD only)
	Repeat Disc (non-PBC Video CDs and Audio CD only)
	Repeat A-B
	Repeat Off
	Resume play from this point
	Action prohibited or not available

#### Notes

- Some discs may not provide all of the features on the on-screen display example shown below.
- If no button is pressed for 10 seconds, the on-screen display disappears.

## Before Operation (Continued) - DVD part


### Initial Settings

- You can set your own Personal Preferences on the player.
- To display and exit the Menu:**  
Press **SETUP** to display the menu. Press **SETUP** again to return to the initial screen.
- To go to the next level:**  
Press **▶** on the remote control.
- To go back to the previous level:**  
Press **◀** on the remote control.

### General Operation

- 1** Press **SETUP**.  
The setup menu appears.
- 2** Use **▲/▼** to select the desired option then press **▶** to move to the second level.  
The screen will show the current setting for the selected option, as well as alternate setting(s).
- 3** Use **▲/▼** to select the second desired option then press **▶** to move to the third level.
- 4** Use **▲/▼** to select the desired setting then press **OK** to confirm your selection.  
Some items require additional steps.
- 5** Press **SETUP** or **PLAY ▶** to exit the setup menu.

### LANGUAGE

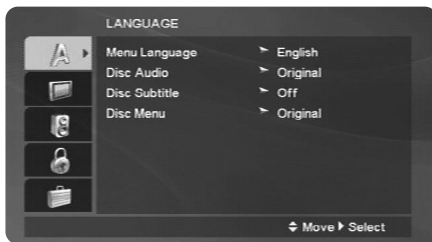

#### Menu Language

Select a language for the setup menu and on-screen display.

#### Disc Audio / Subtitle / Menu **(DVD)**

Select a language you prefer for the audio track (disc audio), subtitles, and the disc menu.

**Original** :The original language set for the disc is selected.


**Other** :To select another language, press number buttons to enter the corresponding 4-digit number according to the language code list on page 38. If you enter the wrong language code, press **CLEAR**.

Please refer to following notice when the DivX subtitle does not display properly.

Find a suitable language for the DivX subtitle on the figure below.

Disc Subtitle Language	Available DivX Subtitle
Hungarian	Czech, Hungarian, Polish,
Czech	Romanian, Croatian, Slovak,
Polish	Slovene, Serbian
Other 8482	Western European & Turkish

### DISPLAY

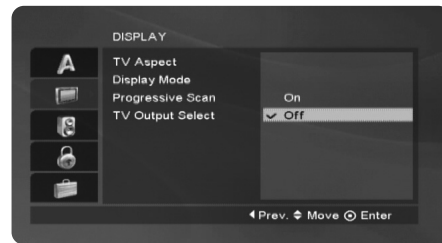

#### TV Aspect **(DVD)**

**4:3** : Select when a standard 4:3 TV is connected.

**16:9** : Select when a 16:9 wide TV is connected.

#### Display Mode **(DVD)**

Display Mode settings is only available when the TV Aspect mode is set to "4:3".

**Letterbox**: Displays a wide picture with bands on the upper and lower portions of the screen.

**Panscan**: Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit.

#### Progressive Scan

Progressive Scan Video provides the highest quality pictures with less flickering. If you are using the Component Video jacks for connection to a TV or monitor that is compatible with a progressive scan signal, set Progressive Scan to On.

#### To turn on progressive scan:

Connect component out of this unit to the input of your monitor/television, set your television or monitor to component Input.

- 1** Select "Progressive Scan" on the "DISPLAY" menu then press **▶**.
- 2** Select "On" using the **▲ / ▼** buttons.
- 3** Press **OK** to set to progressive scan mode.

#### TV Output Select

Set this unit's TV Output Select options according to the TV connection type.


**YPbPr**:When your TV is connected with the COMPONENT/PROGRESSIVE SCAN VIDEO OUT jacks on this unit.

**RGB**:When your TV is connected with the SCART (RGB signal) jack.

## Before Operation (Continued) - DVD part

### AUDIO

Each DVD disc has a variety of audio output options. Set the DVD+VCR's AUDIO according to the type of audio system you use.

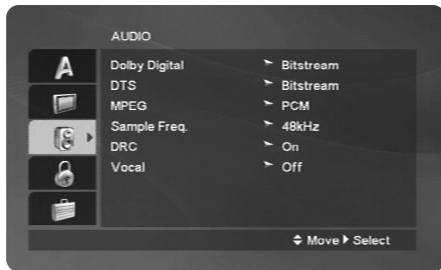

### Dolby Digital / MPEG **DVD** **DivX**

**Bitstream:** Select "Bitstream" if you connected the DVD+VCR's DIGITAL AUDIO OUT jack to an amplifier or other equipment with a Dolby Digital decoder or MPEG decoder.

**PCM (for Dolby Digital / MPEG):** Select when connected to a 2 channel digital stereo amplifier. DVD discs encoded in Dolby Digital or MPEG will automatically downmixed to two-channel PCM audio.

### Sample Freq. (Frequency) **DVD**

To change the Sample Frequency setting, first select the desired Digital Audio Output as indicated as above.

If your receiver or amplifier is NOT capable of handling 96KHz signals, select 48KHz. When this choice is made, this unit will automatically convert any 96KHz signals to 48KHz so your system can decode them.

If your receiver or amplifier is capable of handling 96KHz signals, select 96KHz. When this choice is made, this unit will pass each type of signal through without any further processing.

### Dynamic Range Control (DRC) **DVD** **DivX**


With the DVD format, you can hear a program's soundtrack in the most accurate and realistic presentation possible, thanks to digital audio technology. However, you may wish to compress the dynamic range of the audio output (the difference between the loudest sounds and the quietest ones). Then, you may listen to a movie at a lower volume without losing clarity of sound. Set DRC to On for this effect.

### Vocal **DVD**

Set Vocal to On only when a multi-channel karaoke DVD is playing. The karaoke channels on the disc will mix into normal stereo sound.

### OTHERS

The PBC and DivX(R) VOD settings can be changed.

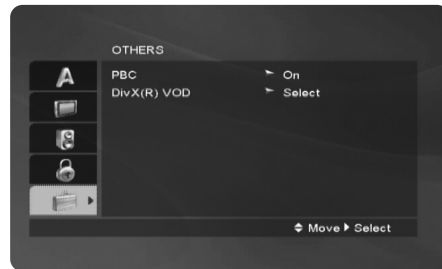

### PBC **VCD 2.0**

Set Playback Control (PBC) to On or Off.

**On:** Video CDs with PBC are played according to the PBC.

**Off:** Video CDs with PBC are played the same way as Audio CDs.

### DivX(R) VOD registration code

Philips provide you the DivX® VOD (Video On Demand) registration code that allows you to rent and purchase videos using the DivX® VOD service. For more information, visit [www.divx.com/vod](http://www.divx.com/vod).


- 1 Select "DivX(R) VOD" on the "OTHERS" menu then press **▶**.
- 2 Press **OK** and the registration code will appear.
- 3 Use the registration code to purchase or rent the videos from DivX® VOD service at [www.divx.com/vod](http://www.divx.com/vod). Follow the instructions and download the video onto a CD-R for playback on this DVD player.

### Note

All the downloaded videos from DivX® VOD can only be played back on this DVD player.

## Before Operation (Continued) - DVD part

### LOCK (Parental Control)

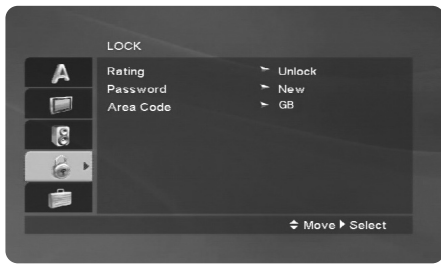

### Rating **DVD**

Movies on DVDs may contain scenes not suitable for children. Therefore, discs may contain Parental Control information that applies to the complete disc or to certain scenes on the disc. These scenes are rated from 1 to 8, and alternatively, more suitable scenes are available for selection on some discs. Ratings are country dependent. The Parental Control feature allows you to prevent discs from being played by your children or to have certain discs played with alternative scenes.

- 1** Select "Rating" on the "LOCK" menu then press **▶**.
- 2** To access the Rating, Password and Area Code features, you must input the 4-digit security code you created. If you have not yet entered a security code you are prompted to do so. Input a 4-digit code and press **OK**. Enter it again and press **OK** to verify. If you make a mistake before pressing **OK**, press **CLEAR** and enter 4-digit security password again.
- 3** Select a rating from 1 to 8 using **▲/▼** buttons.  
**Rating 1-8:** Rating one (1) has the most restrictions and rating eight (8) is the least restrictive.  
**Unlock:** If you select Unlock, Parental Control is not active. The disc will play in full.

#### Note:

If you set a rating for the DVD+VCR, all disc scenes with the same rating or lower will be played. Higher rated scenes will not be played unless an alternative scene is available on the disc. The alternative must have the same rating or a lower one. If no suitable alternative is found, playback will stop. You must enter the 4-digit password or change the rating level in order to play the disc.

- 4** Press **OK** to confirm your rating selection, then press **SETUP** to exit the menu.

### Password (Security Code)

You can enter or change password.

- 1** Select "Password" on the "LOCK" menu then press **▶**.
- 2** Follow step 2 of "Rating" on left. "Change" or "New" is highlighted.
- 3** Enter the new 4-digit code, then press **OK**. Input it again to verify.
- 4** Press **SETUP** to exit the menu.

### If you forget your Security Code

If you forget your security code you can clear it using the following steps:

- 1** Press **SETUP** to display the Setup menu.
- 2** Input the 6-digit number "210499" and the security code is cleared.
- 3** Enter a new code as described above.

### Area Code **DVD**

Enter the code of a country/area whose standards were used to rate the DVD video disc, referring to the list (See "Country/Area Code List", page 39).

- 1** Select "Area Code" on the "LOCK" menu then press **▶**.
- 2** Follow step 2 of "Rating" on left.
- 3** Select the first character using the **▲/▼** buttons.
- 4** Shift the cursor using **▶** button and select the second character using **▲/▼** buttons.
- 5** Press **OK** to confirm your country code selection.

## Operation with tape

### Playing a tape

You will only be able to load and eject video cassettes when your VCR is plugged into the mains. Your VCR may also playback recordings from NTSC tapes (on PAL TV).

### Getting a better picture

When a cassette is inserted and playback started, the automatic tracking function works to get the best possible picture automatically. If the quality of the recording is poor, repeatedly press ▲ or ▼ on the remote control to manually adjust the tracking until any distortions have been removed.

Press numbered 0 on the remote control to switch automatic tracking back on again.

- 1 Make sure that you have correctly connected your VCR as described earlier in this book.  
Turn on your TV.  
Press **⏻** to turn on your DVD+VCR.  
Insert the video cassette into your DVD+VCR.  
The video cassette should have the window side facing up and the arrow facing away from you.

- 2 Press **▶** to start playing your tape.  
If you load a video cassette which has had its record protection tab removed, playback of the cassette will start automatically.

### AUTO TRACKING

Your DVD+VCR will automatically adjust the tracking to give the best picture quality.

- 3 Press **⏸** to still a picture.  
Press **⏸** repeatedly to advance the tape frame by frame.  
If you press **▶▶**, the picture will be slowed down at about 1/19 times the normal playback.  
Tapes can be paused for up to 5 minutes. After 5 minutes your DVD+VCR will stop the tape to prevent damaging the tape or your DVD+VCR.  
Still picture quality can be improved slightly by using ▲ or ▼.

- 4 Press **▶** to continue playing your tape.

### Double speed playback

Press "**▶**" during normal playback.

The tape will play back at double speed and without sound. Press "**▶**" to return to playback at normal speed.

### Picture search:

During playing back press either **◀◀** or **▶▶** **FWD** to this will enable you to rapidly wind the tape (7 times normal playback) see where you are on the tape.

### Logic search:

During fast forwarding or rewinding press and hold **◀◀** or **▶▶** **FWD** the picture will be played back at 7 times normal playback speed.

### 5 Slow motion playback, Shuttle :

During playing back or still picture press ◀ or ▶.  
You can reach the following playback speeds. (REV, PB 5-, PB 1-, Still, SLW, PLAY, 2PLY, CUE)  
To switch off the slow motion and shuttle, press the desired function.

During slow motion and shuttle, the noise bars may appear on the picture according to the status of tape. If distortions can be seen in the picture, reduce them with ▲ or ▼.

### 6 Press STOP ■ to end playback.

Press ▲.

If the end of the tape is reached, your DVD+VCR will stop playback automatically, rewind, stop, eject the tape.

### SKIP:

This feature enables you during playback of a tape to skip a commercial break in a few seconds, then resume normal playback.

While tape is playing press **SKIP** on the remote control to skip commercial (or another programme material).


Repeatedly press **SKIP** to skip:

- 1 Press 30 seconds
- 2 Press 60 seconds
- 3 Press 90 seconds
- 4 Press 120 seconds
- 5 Press 150 seconds
- 6 Press 180 seconds

### OPR (Optimum Picture Response)

This feature automatically improves playback picture quality by adjusting your DVD+VCR to the condition of the tape.

- 1 Press **SETUP**.

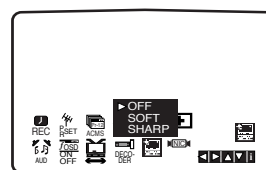

- 2 Press ▲ or ▼ to select **OPR**.

- 3 Press **OK**.

- 4 Press ▲ or ▼ repeatedly to select: **OFF, SOFT** or **SHARP**.  
Please note you may only set OPR when playing a tape.

- 5 Press **SETUP** return to screen.




## Operation with tape (Continued)

### Instant Timer Recording (ITR)

Your VCR allows you to make recordings using a variety of simple methods:

**Instant Timer Recording (ITR)** start recording immediately for a set period of time or until the video cassette runs out.

Your DVD+VCR incorporates Long Play (LP) which enables you to record up to twice the amount of time on a video cassette. For example an E-180 will record up to 180 minutes using Standard Play (SP); using LP you will be able to record up to 360 minutes. Please note there will be a slight loss in picture and sound quality when using LP.

- 1** Make sure that you have correctly connected your VCR as described earlier in this book.  
Press  to turn on your VCR.
- 2** Insert a video cassette with protection tab into your VCR.  
The video cassette should have the window side facing up and the arrow facing away from you.
- 3** Press  or  to select the **programme number** you wish to record.  
You may also directly select programme number using the **numbered buttons** on the remote control.
- 4** If you wish to record directly from the SCART or RCA sockets repeatedly press **INPUT** until the socket you wish to record from is displayed.

**AV 1** for recording from EURO AV1 SCART socket on the rear of your unit.

**AV 2** for recording from EURO AV2 SCART socket on the rear of your unit.

**AV 3** for recording from VIDEO IN and AUDIO IN (Left & Right) sockets on the front of your unit.

- 5** Press **REPEAT A-B** if you wish to record in Long Play or Standard Play.

SP will produce improved picture and sound quality, however LP will provide twice as much recording time as SP.


#### Note

Before pressing REPEAT A-B button, do the following steps:

1. Set the remote control to DVD mode by pressing "DVD" on the remote control.
2. Set the DVD+VCR combi in VCR mode by pressing the "SOURCE" button in the front panel until the display window shows "VCR".

- 6** Press **RECORD** on the remote to start recording. RECORD will appear on the TV screen.  
Press **RECORD** on your unit or press **RECORD** on the remote several times. Each successive press will increase the record time by 30 minutes until you reach a maximum of 9 hours.

- 7** Press **PAUSE/STEP II** to avoid recording unwanted scenes.  
Press **PAUSE/STEP II** to continue recording.  
If you press **PAUSE/STEP II** during ITR, the DVD/VCR will enter the record pause mode and ITR is cancelled. Tapes can be paused for up to 5 minutes; RECP will be displayed when a tape is paused. After 5 minutes your DVD+VCR will stop recording to prevent damaging the tape or your DVD+VCR.

- 8** Press **STOP**  to end recording.  
STOP will appear on the TV screen for a few seconds.

#### Notes


- If you do not wish to record on a tape (this can happen quite easily by accident!) remove the protection tab on the back edge of the video cassette.
- It is possible to record on a video cassette with the record protection tab removed by covering the hole with self adhesive tape.
- Remember you can record one programme while watching another by starting your instant recording, press **TV/VCR** to appear **TV** indicator in the display window and then selecting a different channel on your TV.

## Operation with tape (Continued)


### VIDEO Plus+ Programming

VIDEO Plus+ greatly simplifies entering the date, channel, start and end times of a Timer Recording by simply entering a PlusCode. PlusCodes are published in most TV guide magazines; they can vary one to nine numbers in length.


- 1 Make sure that TV channels have been tuned. Insert a video cassette with protection tab into your VCR.
- 2 Press **VIDEO PLUS+**.

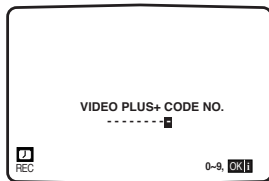


- 3 Press the **numbered buttons** to enter the **PlusCode** of the TV programme that you wish to record. If you make a mistake press **◀** then enter the revised number.

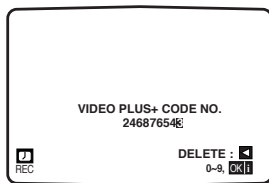


- 4 Press **OK**. If **PLEASE CHECK** is displayed it means that you have entered the wrong PlusCode, entered the PlusCode incorrectly. If “- -” is displayed, you have to enter the programme number of the station, you want to record from.

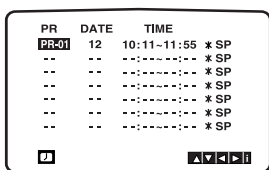

- 5 Press **◀** or **▶** to select the settings that you wish to revise. (PR, DATE, TIME and SP). Press **▲** or **▼** to enter the correct information.

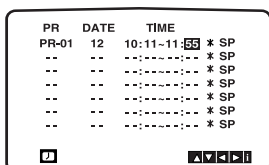

- 6 Press **▲** or **▼** to switch PDC on or off. Press **▶** to select the recording speed. Press **▲** or **▼** to select the desired tape speed (SP, IP, or LP). IP mode determines how much tape is left and switches speed from SP to LP, if necessary, to complete recording the program. IP mode cannot be selected when PDC is ON. Check that the timer event details are correct. If you wish to record from AUDIO IN and VIDEO IN on the front or from either of the EURO SCART sockets on the back of VCR, press INPUT to select for correct display (AV1, AV2 or AV3).

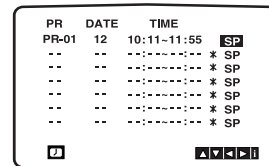

- 7 If you want to make another VIDEO Plus+ recording repeat stages 2 - 6. Press **SETUP** twice. If **PLEASE CHECK** is displayed, you have entered incorrect information and will need to re-enter the data. Press **⏻** to switch your VCR power off mode. **Ⓜ** will appear in the video recorder's display while your VCR waits to make the recording. To watch a DVD during timer recording standby mode, press **POWER** and **DVD** to switch to DVD mode.
- 8 Press **POWER** **⏻** to end recording.

#### Note

#### Programme Delivery Control (PDC)

The Programme Delivery Control (PDC) ensures that the TV programmes that you have programmed for timer recording will be recorded exactly from their beginning to end, even if the actual broadcasting time differs from the scheduled time due to delayed start, or if the programme is extended beyond its scheduled time. Also, if a programme is interrupted, for example, if a news flash is inserted, the recording will also be interrupted automatically and resumed when the programme continues.

The PDC signal is broadcast by the TV station and this controls the timer in the video recorder.

PDC should be set ON for all timer recordings from TV stations broadcasting these signals. It should be set OFF for all timer recordings from TV stations that are not broadcasting these signals.

## Operation with tape

### Timer recording using On Screen Display


You may set up to seven timer record events within one month of the current date.

#### Note


Before setting the timer make sure that you have set the DVD+VCR clock correctly and you know which PR numbers have been assigned to the TV stations you have tuned on your DVD+VCR.

**Timer Recording function will only active if the DVD+VCR is in Standby mode.**


- 1 Insert a video cassette with protection tab into your DVD+VCR.  
The video cassette should have the window side facing up and the arrow facing away from you.
- 2 Ensure that the set is in VCR mode.
- 3 Press **SETUP**.  
Press **◀** or **▶** to select **REC**.  
Press **OK**.
- 4 Press **OK** to start setting the timer record event.  
If all timer record events are full press **▲** or **▼** to select the event that you wish to remove and replace.  
Press **◀** to delete the event.

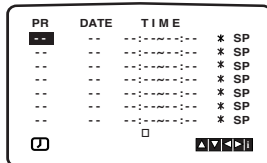


- 5 Press **▲** or **▼** to enter the station that you wish to record.  
Once selected press **▶**.  
You may also press **▲** or **▼**.  
If you wish to record from AUDIO IN (L/R) and VIDEO IN on the front or from the EURO SCART sockets on the back of your unit, See Notes (AV1, AV2 or AV3).

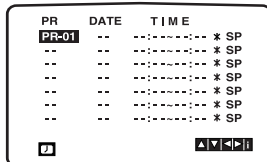


- 6 Press **▲** or **▼** to enter the date of the programme.  
If you press **OK** before entering the date you may select one of the following automated recording features. Use **◀** or **▶** to select, then press **OK** to confirm.  
**DLY** To record every day (except Saturday and Sunday) at the same time.  
**SU ~ SA** To record at the same time every week.

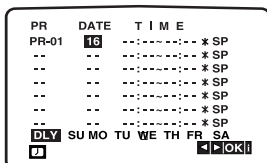

- 7 Press **▲** or **▼** to enter the recording start and end times of the programme that you wish to record.  
Please note your DVD+VCR uses a 24 hour clock. e.g. 1pm will be displayed as 13:00.  
You may also select the start and end times by using **▲** or **▼**.

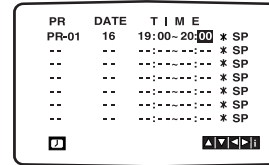

- 8 Press **▲** or **▼** to switch PDC on or off.  
Press **▶** to select the recording speed.  
Press **▲** or **▼** to select the desired tape speed (SP, IP, or LP).  
IP mode determines how much tape is left and switches speed from SP to LP, if necessary, to complete recording the program. IP mode cannot be selected when PDC is ON.

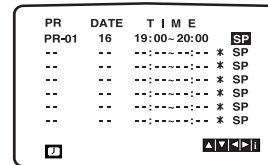

Press **SETUP** to set another timer record event and follow steps 4 to 8.

- 9 Check that the timer event details are correct.  
Press **SETUP** twice.  
If **PLEASE CHECK** is displayed, you have entered incorrect and will need to re-enter the data.  
**Press ⏻ to switch your DVD+VCR Standby mode.**  
⏻ will appear in the display window while your DVD+VCR waits to make the recording.  
To watch a DVD during timer recording standby mode, press **POWER** and **DVD** to switch to DVD mode.

- 10 Press **POWER** ⏻ to end recording.

#### Notes

- You can obtain the PR number assigned to each station by pressing **DISPLAY** when you are watching the respective channel.
- If at a later date you wish to **delete** or **change** any of the settings in timer event memory you may do so without having to enter all the timer event information again. Simply display the timer event screen. Use **▲** or **▼** to select the event that you wish to **delete** or **change**. Press **◀** to delete the event...or  
Press **OK** to change; then press **◀** or **▶** to select; Station, Date, Start and End times and LP. Press **▲** or **▼** to enter the correct information.
- **If Timer record events Overlap...**  
Make sure that the preset times of the timer recording events do not overlap. If they do, the earlier programme will always be given priority.

#### Example:

Programme 1 is programmed to start at 16:00 and end at 17:00.

Programme 2 is programmed to start at 16:30 and end at 17:30.

(In this case, Programme 1 will be recorded in its entirety, but only the last 30 minutes of Programme 2 will be recorded.)



## Operation with DVD and Video CD

### Playing a DVD and Video CD

#### Playback Setup **DVD** **VCD2.0** **VCD1.1**

- Turn on the TV and select the video input source connected to the DVD player.
- Audio system: Turn on the audio system and select the input source connected to the DVD player.

- 1 Press OPEN/CLOSE to open the disc tray.**
- 2 Load your chosen disc in the tray, with the playback side down.**  
When a double-sided DVD is inserted, make sure the side you want to play is facing down.
- 3 Press OPEN/CLOSE to close the tray.**  
Playback starts automatically. If playback does not start, press **PLAY** ▶.  
In some cases, the disc menu might appear instead.

#### If a menu screen is displayed

The menu screen may be displayed first after loading a DVD or Video CD which offer a menu.

#### **DVD**

Use the ◀▶ ▲▼ buttons to select the title/chapter you want to view, then press **OK** to start playback.  
Press **TITLE** or **DISC MENU** to return to the menu screen.

#### **VCD2.0**

- Use the number buttons to select the track you want to view.  
Press **BACK** (↶) to return to the menu screen.
- Menu setting and the exact operating procedures for using the menu may differ depending on the disc. Follow the instructions on the each menu screen.  
You also may set PBC to Off under setup. See page 19.

#### Notes

- If Parental Control is set and the disc is not within the Rating settings (not authorized), the 4-digit code must be entered and/or the disc must be authorized (see "LOCK (Parental Control)", on page 20).
- DVDs may have a region code.  
Your player will not play discs that have a region code different from your player. The region code for this player is 2 (two).
- To watch a DVD during timer recording standby mode, press **POWER** ⏻ and **DVD** to switch to DVD mode.

### General Features

#### Note

Unless stated otherwise, all operations described use the remote control. Some features may also be available on the Setup menu.

#### Moving to another TITLE **DVD** 1/3

When a disc has more than one title, you can move to another title as follows:

- Press **DISPLAY**, then press the appropriate numbered button (0-9) to select a title number.

#### Moving to another CHAPTER/TRACK

#### **DVD** **VCD1.1** **DivX** 1/12 1/3

When a title on a disc has more than one chapter or a disc has more than one track, you can move to another chapter/track as follows:

- Press ◀◀ or ▶▶ briefly during playback to select the next chapter/track or to return to the beginning of the current chapter/track.
- Press ◀◀ twice briefly to step back to the previous chapter/track.
- To go directly to any chapter during DVD playback, press **DISPLAY**. Then, press ▲/▼ to select chapter/track icon. Then, enter the chapter/track number using the numbered buttons (0-9).

#### Note

For two-digit numbers, press the numbered buttons (0-9) in rapid succession.

#### Search **DVD** **VCD2.0** **VCD1.1** **DivX**

- 1 Press ◀◀ or ▶▶ during playback.**  
Or, press and hold ◀ or ▶ for about four seconds during playback.  
The player will now go into SEARCH mode.
- 2 Press ◀◀ or ▶▶ repeatedly to select the required speed:**  
Or, press and hold ◀ or ▶ repeatedly for about four seconds to select the required speed.  
◀◀X2, ◀◀X4, ◀◀X16, ◀◀X100 (backward) or  
▶▶X2, ▶▶X4, ▶▶X16, ▶▶X100 (forward).  
With a Video CD, DivX disc, the Search speed changes:  
◀◀X2, ◀◀X4, ◀◀X8 (backward) or  
▶▶X2, ▶▶X4, ▶▶X8 (forward).
- 3 To return to playback, press PLAY ▶.**

#### Still Picture and Frame-by-frame playback

#### **DVD** **VCD2.0** **VCD1.1** **DivX**

- 1 Press PAUSE/STEP (II) during playback.**  
The player will now go into PAUSE mode.
- 2 You can advance the picture frame-by-frame by pressing PAUSE/STEP (II) repeatedly on the remote control.**

## Operation with DVD and Video CD

### General Features (continued)

#### Slow Motion **DVD VCD2.0 VCD1.1 DivX**

- 1 Press **II** during playback.
- 2 Press **▶▶** during still mode.  
The player will enter SLOW mode.
- 3 Press **▶▶** to select the required speed : **▶▶ 1/7**, **▶▶ 1/6**, **▶▶ 1/4** or **▶▶ 1/2** (forward).
- 4 To exit slow motion mode, press **PLAY ▶**.

#### Repeat **DVD VCD2.0 VCD1.1 DivX**



##### DVD Video Discs - Repeat Chapter/Title/Off

- 1 To repeat the currently playing chapter, press **REPEAT**.  
The Repeat Chapter icon appears on the TV screen.
- 2 To repeat the title currently playing, press **REPEAT** a second time.  
The Repeat Title icon appears on the TV screen.
- 3 To exit Repeat mode, press **REPEAT** a third time.  
The Repeat Off icon appears on the TV screen.

##### Video CDs, - Repeat Track/All/Off

- 1 To repeat the track currently playing, press **REPEAT**.  
The Repeat Track icon appears on the TV screen.
- 2 To repeat the disc currently playing, press **REPEAT** a second time.  
The Repeat All icon appears on the TV screen.
- 3 To exit Repeat mode, press **REPEAT** a third time.  
The Repeat Off icon appears on the TV screen.

#### Note

On a Video CD with PBC, you must set PBC to Off on the setup menu to use the Repeat function. See page 19.

#### Repeat A-B **DVD VCD2.0 VCD1.1 DivX**



To repeat a sequence in a title:

- 1 Press **REPEAT A-B** at your chosen starting point.  
A \* appears briefly on the TV screen.
- 2 Press **REPEAT A-B** again at your chosen end point.  
A B appears briefly on the TV screen, and the repeat sequence begins.
- 3 To cancel the sequence, press **REPEAT A-B**.

#### Time Search **DVD VCD2.0 VCD1.1 DivX**



The Time Search function allows you to start playing at any chosen time on the disc.

- 1 Press **DISPLAY** during playback. The on-screen display appears on the screen.  
The Time Search box shows the elapsed playing time of the current disc.
- 2 Within 10 seconds, press **▲/▼** to select the Time Search icon in the on-screen display.  
The “-:-:-” appears in the Time Search box.
- 3 Within 10 seconds, use the number buttons to enter the required start time. Enter hours, minutes, and seconds from left to right in the box.  
If you enter the wrong numbers, press **CLEAR** to remove the numbers you entered. Then enter the correct numbers.
- 4 Within 10 seconds, press **OK** to confirm the start time.  
Playback starts from the selected time on the disc. If you enter an invalid time, playback will continue from the current point.

#### Screen Saver

A screen saver image appears when you leave the DVD Player in stop mode for about fifteen minutes.

## Operation with DVD and Video CD

### General Features (continued)

#### Zoom **DVD** **VCD2.0** **VCD1.1** **DivX**

The Zoom function allows you to enlarge the video image and to move through the enlarged image.

- 1 Press **ZOOM** during playback or still playback to activate the Zoom function.  
The square frame appears briefly in the right bottom of the picture.
- 2 Pressing **ZOOM** each time will change the TV screen in the sequence: 100% size → 200% size → 400% size → 900% size → 100% size
- 3 Use the ◀▶ ▲ ▼ buttons to move through the zoomed picture.
- 4 To resume normal playback, press **ZOOM** repeatedly or **CLEAR** button.

#### Note

- The zoom function may not work for some DVDs.

#### Marker Search **DVD** **VCD2.0** **VCD1.1** **DivX**



You can start playback from a memorized point. Up to nine points can be memorized.

To enter a mark, follow these steps.

- 1 During disc playback, press **MARKER** when playback reaches the spot that you want to memorize.  
The Marker icon will appear on the TV screen briefly.
- 2 Repeat step 1 to enter up to nine Marker points on a disc.

#### To Recall a Marked Scene

- 1 During disc playback, press **SEARCH**.  
The MARKER SEARCH menu will appear on the screen.
- 2 Within 10 seconds, press ◀▶ to select a Marker number that you want to recall.
- 3 Press **OK**.  
Playback will start from the Marked scene.
- 4 To remove the MARKER SEARCH menu, press **SEARCH**.

#### To clear a Marked Scene

- 1 During disc playback, press **SEARCH**.  
The MARKER SEARCH menu will appear on the screen.
- 2 Within 10 seconds, press ◀▶ to select a Marker number that you want to erase.
- 3 Press **CLEAR**.  
The Marker number will be erased from the list.
- 4 Repeat steps 2 and 3 to erase additional Marker numbers.
- 5 To remove the MARKER SEARCH menu, press **SEARCH**.

### Special DVD Features **DVD**

#### Checking the contents of DVD Video discs: Menus

DVDs may offer menus that allow you to access special features. To use the disc menu, press **DISC MENU**.

Then, press the appropriate number button to select an option. Or, use the ◀▶/▲/▼ buttons to highlight your selection, then press **OK**.

#### Title Menu **DVD**

- 1 Press **TITLE**.  
If the current title has a menu, the menu will appear on the screen. Otherwise, the disc menu may appear.
- 2 The menu can list camera angles, spoken language and subtitle options, and chapters for the title.
- 3 To remove the title menu, press **TITLE** again.

#### Disc Menu **DVD**

- 1 Press **DISC MENU**.  
The disc menu is displayed.
- 2 To remove the disc menu, press **DISC MENU** again.

#### Camera Angle **DVD**

If the disc contains sequences recorded from different camera angles, the angle icon blinks on the TV screen. You can then change the camera angle if you wish.

- Press **ANGLE** repeatedly during playback to select a desired angle.  
The number of the current angle appears on the display.

#### Changing the Audio Language **DVD** **DivX**

Press **AUDIO** repeatedly during playback to hear a different audio language or audio track.  
With DVD-RW discs recorded in VR mode that have both a main and a Bilingual audio channel, you can switch between Main (L), Bilingual (R), or a mix of both (Main + Bilingual) by pressing **AUDIO**.

#### Changing the Audio Channel **VCD2.0** **VCD1.1**

Press **AUDIO** repeatedly during playback to hear a different audio channel (STEREO, LEFT or RIGHT).

#### Subtitles **DVD** **DivX**

Press **SUBTITLE** repeatedly during playback to see the different subtitle languages.

#### Notes

- The subtitle file of the DivX file is displayed only smi, srt and sub.
- If there is no information or there is a code that can not read in the DivX file, "1" or etc. are displayed.

## Operation with Audio and MP3/Windows Media™ Audio Disc

### Playing an Audio CD and MP3/Windows Media™ Audio Disc



The DVD Player can play MP3/Windows Media™ Audio formatted recordings on CD-ROM, CD-R or CD-RW discs. Before playing MP3/Windows Media™ Audio recordings, read the notes on MP3/Windows Media™ Audio Recordings on right.


#### Audio CD

Once you insert an audio CD a menu appears on the TV screen. Press ▲/▼ to select a track then press **PLAY ►** or **OK** and playback starts.



#### MP3/Windows Media™ Audio

- 1 Press ▲/▼ to select a folder, and press **OK** to see the folder contents.
- 2 Press ▲/▼ to select a track then press **PLAY ►** or **OK**. Playback starts.

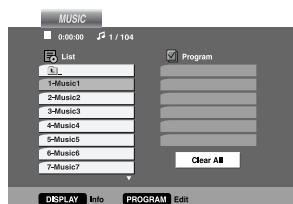

#### ID3 TAG

When playing a file containing information such as track titles, you can see the information by pressing **DISPLAY**.  
[ Song, Artist, Album, Comment, Genre ]

#### Tips

- If you are in a file list on the “MUSIC” menu and want to return to the Folder list, use the ▲/▼ to highlight and press **OK**.
- On a CD with MP3/Windows Media™ Audio and JPEG you can switch MP3/Windows Media™ Audio and JPEG. Press **TITLE** and “MUSIC” or “PHOTO” word on top of the menu is highlighted.
- When playing a file containing information such as track titles, you can see the information by pressing **DISPLAY**.

### Notes on MP3/Windows Media™ Audio Recordings

MP3/Windows Media™ Audio Disc compatibility with this player is limited as follows:

- 1 Sampling Frequency / within 8 - 48 kHz (MP3)  
within 32 - 48 kHz (Windows Media™ Audio)
- 2 Bit rate / within 8 - 320 kbps (MP3)  
within 32 - 192 kbps (Windows Media™ Audio)
- 3 The player cannot read an MP3 file that has a file extension other than “.mp3” .
- 4 CD-R physical format should be “ISO 9660”
- 5 If you record MP3/Windows Media™ Audio files using the software which cannot create a file system, for example “Direct-CD” etc., it is impossible to playback MP3/Windows Media™ Audio files. We recommend that you use “Easy-CD Creator”, which creates an ISO9660 file system.
- 6 File names should be named using 8 letters or less and must incorporate “.mp3” or “.wma” extension.
- 7 Do not use special letters such as “/ : \* ? “ < > ” etc.
- 8 The total number of files in a folder should be less than 1,000 files.
- 9 Multi session CD containing Windows Media™ Audio may not be supported.

This DVD player requires discs/recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 or Windows Media™ Audio files). That require certain pre-existing conditions (see above) to insure compatible playback.

**Customers should also note that permission is required in order to download MP3/Windows Media™ Audio files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.**

## Operation with Audio and MP3/Windows Media™ Audio Disc (Continued)

### Pause **CD** **MP3**

- 1 Press **PAUSE/STEP II** during playback.
- 2 To return to playback, press **PLAY ►**, **OK** or press **PAUSE/STEP II** again.

### Moving to another Track **CD** **MP3**

- Press **◀◀** or **▶▶** briefly during playback to go to the next track or to return to the beginning of the current track.
- Press **◀◀** twice briefly to step back to the previous track.
- You can play any track by inputting its number.

### Repeat Track/All/Off **CD** **MP3**

- 1 To repeat the track currently playing, press **REPEAT**.  
The Repeat icon and "Track" appears on the menu screen.
- 2 To repeat all tracks on a disc, press **REPEAT** a second time.  
The Repeat icon and "All" appears on the menu screen.
- 3 To cancel Repeat mode, press **REPEAT** a third time.

### Search **CD** **MP3**

- 1 Press **◀◀** or **▶▶** during playback.  
The player will now go into SEARCH mode.
- 2 Press **◀◀** or **▶▶** repeatedly to select the required speed: **◀◀X2**, **◀◀X4**, **◀◀X8** (backward) or **▶▶X2**, **▶▶X4**, **▶▶X8** (forward).  
Search speed and direction are indicated on the menu screen.
- 3 To exit SEARCH mode, press **PLAY ►**.

### Shuffle **CD** **MP3**

- 1 Press **SHUFFLE** during playback or when playback is stopped.  
The unit automatically begins Random Playback and "Random" appears on the menu screen.
- 2 To return to normal playback, press **SHUFFLE**.  
"Random" disappears on the menu screen.

### Note

By pressing **▶▶** during shuffle playback, the unit selects another track and resumes shuffle playback.

### Repeat A-B **CD**

To repeat a sequence.


- 1 During disc playback, press **REPEAT A-B** at your chosen starting point.  
The Repeat icon and "A-" appears on the menu screen.
- 2 Press **REPEAT A-B** again at your chosen end point.  
The Repeat icon and "A-B" appears on the menu screen, and the sequence begins to play repeatedly.
- 3 To exit the sequence and return to normal play, press **REPEAT A-B** again.

## Operation with JPEG Disc

### Viewing a JPEG disc **JPEG**

This DVD+VCR can play discs with JPEG files. Before playing JPEG recordings, read the notes on JPEG Recordings on right.

- 1 Insert a disc and close the tray.**  
The PHOTO menu appears on the TV screen.

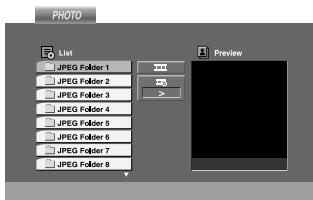

- 2** Press **▲/▼** to select a folder then press **OK**.  
A list of files in the folder appears. If you are in a file list and want to return to the Folder list, use the **▲/▼** buttons on the remote to highlight “**⋮**” and press **OK**.
- 3** If you want to view a particular file, press **▲/▼** to highlight a file and press **OK** or **PLAY ▶**.  
Viewing the file proceeding starts.  
While viewing a file, you can press **STOP** to move to the previous menu (PHOTO menu).

### Slide Show **JPEG**

Use **◀▶▲▼** to highlight the **⏮** (Slide Show) then press **OK**.

#### Tips

- There are three Slide Speed options **⏮** : >>> (Fast), >> (Normal) and > (Slow).
- On a disc with MP3/Windows Media™ Audio and JPEG you can switch MP3/Windows Media™ Audio and JPEG. Press **TITLE** and MUSIC or PHOTO word on top of the menu is highlighted.
- Press **BACK (⏪)**, information of file is hidden.

### Moving to another File

Press **◀◀** or **▶▶** once during viewing a picture to advance to the next file or to the previous file.

### Still Picture

- 1** Press **PAUSE/STEP II** during slide show.  
The player will now go into PAUSE mode.
- 2** To return to the slide show, press **PLAY ▶** or press **PAUSE/STEP II** again.

### Zoom **JPEG**

Use zoom to enlarge the photo image. (see page 27)

### To rotate picture

Press **▲/▼** during showing a picture to rotate the picture clockwise or counter clockwise.

### To listen to MP3/Windows Media™ Audio music watching picture **JPEG**

You can display files while listening to MP3 music files recorded on the same disc.

- 1** Insert the disc containing the two types of file in the player.
- 2** Press **TITLE** to display PHOTO menu.
- 3** Press **▲/▼** to select a photo file.
- 4** Use **▶/▼** to select **⏮** icon then press **OK**.  
Playback starts. The playback will continue until **STOP ■** is pressed.

### Tip


To listen to only desired music watching picture, programme the desired tracks from the “MUSIC” menu and then proceed as above.

### Notes on JPEG Recordings


- Depending upon the size and number of the JPEG files, it could take a long time for the DVD+VCR to read the disc's contents. If you don't see an on-screen display after several minutes, some of the files are too big — reduce the resolution of the JPEG files to less than 5760 (Horizontal)x4608 (Vertical) pixels and burn another disc.
- The total number of files in a folder should be less than 1,000 files.
- Some disc may be incompatible due to different recording format or condition of disc.
- Ensure that all the selected files have the “.jpg” extensions when copying into the CD layout.
- If the files have “.jpe” or “.jpeg” extensions, please rename them as “.jpg” files.
- File names without “.jpg” extension will not be able to be read by this DVD+VCR. Even though the files are shown as JPEG image files in windows explorer.

## Programmed Playback with Audio CD and MP3/Windows Media™ Audio Disc


The Program function enables you to store your favorite tracks from any disc in the player memory. Program can contain 30 tracks.

- 1 Press PROGRAM during playback or in the stop mode to enter the Program Edit mode.**  
The  mark will appear to the right of the word "Program" on the right side of the menu screen.

**Note**

Press **PROGRAM** to exit the Program Edit mode; the  mark will disappear.

- 2 Select a track, then press OK to place the selected track on the Program list.**
- 3 Repeat step 2 to place additional tracks on the Program list.**

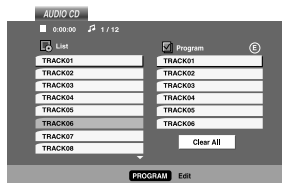

**Audio CD menu**




**MP3/Windows Media™ Audio menu**

- 4 Press ►.**  
The programmed track you selected last is highlighted on the program list.
- 5 Use ▲/▼ to select the track you want to start playing.**
- 6 Press PLAY ► to start.**  
Playback begins in the order in which you programmed the tracks.  
Playback stops after all of the tracks on the Program list have played once.
- 7 To resume normal playback from programmed playback, then select a track of Audio CD (or MUSIC) list and then press PLAY ►.**




**Repeat Programmed Tracks**

- To repeat the track currently playing, press **REPEAT**.  
The Repeat icon and "TRACK" appears on the menu screen.
- To repeat all tracks on the program list, press **REPEAT** a second time.  
The Repeat icon and "ALL" appears on the menu screen.
- To cancel Repeat mode, press **REPEAT** a third time.


 
**Note**

If you press  once during Repeat Track playback, the repeat playback cancels.

**Erasing a Track from Program List**

- Press **PROGRAM** in the stop mode to enter the Program Edit mode.
- Press  to move to the Program list.
- Use / to select the track that you wish to erase from the Program list.
- Press **CLEAR**.  
The track will be erased from the Program list.

**Erasing the Complete Program List**

- Follow steps 1-2 of "Erasing a Track from Program List" as above.
- Use / to select "Clear All", then press **OK**.  
The complete Program for the disc will be erased.  
The programs are also cleared when the disc is removed.


## Operation with DVD VR Disc

### Playing a DVD VR format Disc

This DVD+VCR can play DVD-R/RW discs recorded using the DVD-Video format that have been finalized using the DVD-recorder.

This unit will play DVD-RW discs recorded using the Video Recording (VR) format.

- 1** Insert a disc and close the tray, It start playing automatically.
- 2** The DVD-VR menu appears on the TV screen when you press **DISC MENU** buttons while playing.

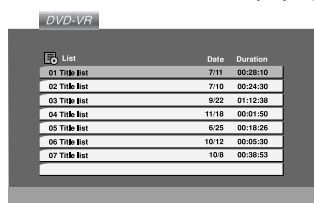

- 3** Press **▲/▼** to select a track then press **OK** or **PLAY ►** and playback starts.
- 4** Press **DISC MENU** to move to the list menu.

#### Notes

- Unfinalized DVD-R/RW discs cannot be played in this player.
- Some DVD-VR disc are made with CPRM data by DVD RECORDER. Player does not support these kind of discs.

#### What is 'CPRM'?

CPRM is a copy protection system (with scramble system) only allowing the recording of 'copy once' broadcast programs. CPRM stands for Content Protection for Recordable Media.

### Maintenance and Service

Refer to the information in this chapter before contacting a service technician.

#### Handling the Unit

##### When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

##### Keeping the exterior surfaces clean

- Do not use volatile liquids such as insecticide spray near the unit.
- Do not leave rubber or plastic products in contact with the unit for a long period of time since they leave marks on the surface.

##### Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution.

Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

##### Maintaining the Unit

The DVD player is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished.

Depending on the operating environment, regular inspection and maintenance are recommended after every 1,000 hours of use.

For details, please contact your nearest authorized service center.




## Operation with DivX Disc

### Playing a DivX Movie Disc

This DVD+VCR can play DivX movie disc.

- 1 Insert a disc and close the tray.**  
The MOVIE menu appears on the TV screen.

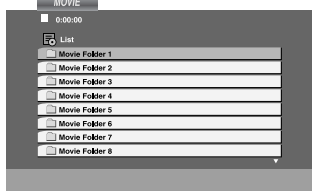

- 2** Press **▲/▼** to select a folder then press **OK**.  
A list of files in the folder appears. If you are in a file list and want to return to the Folder list, use the **▲/▼** buttons on the remote to highlight "**⏪**" and press **OK**.
- 3** If you want to view a particular file, press **▲/▼** to highlight a file and press **OK** or **PLAY ▶**.
- 4** Press **STOP ■** to exit.

#### Tips:

- If you are in a file list and want to return to the previous Folder list, use the **▲ / ▼** buttons on the remote to highlight **⏪** and press **ENTER**.
- Press **DISC MENU** to move to the next page.
- On a CD with MP3/Windows Media™ Audio, JPEG and MOVIE file, you can switch MUSIC, PHOTO and MOVIE menu. Press **TITLE** and MUSIC, PHOTO and MOVIE word on top of the menu is highlighted.
- The picture may not displayed properly while DivX playback. Set your TV system to AUTO or PAL-60 mode to restore the picture, if available.
- The disc subtitle may not be displayed properly, if a DivX subtitle is downloaded through the internet.
- If the Disc Subtitle setup menu does not have the DivX subtitle language you are going to play, the subtitle may not be displayed properly.

#### Notice for displaying the DivX subtitle

If the subtitle does not display properly during playback, press and hold **SUBTITLE** about 3 seconds then press **◀ / ▶** to select another language code until the subtitle is displayed properly.

DivX disc compatibility with this player is limited as follows:

- Available resolution size of the DivX file is under 720x576 (W x H) pixel.
- The file name of the DivX subtitle is available by 56 characters.
- If there is impossible code to express in the DivX file, it may be displayed as " \_ " mark on the display.
- If the number of the screen frame is over 30 per 1 second, this unit may not operate normally.**
- If the video and audio structure of recorded file is not interleaved, either video or audio is outputted.**
- If the file is recorded with GMC, the unit supports only 1-point of the record level.**

\* GMC?

GMC is the acronym for Global Motion Compensation. It is an encoding tool specified in MPEG4 standard. Some MPEG4 encoders, like DivX, have this option. There are different levels of GMC encoding, usually called 1-point, 2-point, or 3-point GMC.

#### Playable DivX file

.avi, .mpg, .mpeg

#### Playable Subtitle format

SubRip(\*.srt/\*:txt)  
SAMI(\*.smi)  
SubStation Alpha(\*.ssa/\*:txt)  
MicroDVD(\*.sub/\*:txt)  
SubViewer 1.0(\*.sub)  
SubViewer 2.0(\*.sub/\*:txt)  
TMPlayer(\*.txt)

#### Playable Codec format

"DIVX3.xx ", "DIVX4.xx ", "DIVX5.xx ",  
"MP43 ", "3IVX "

## Additional Operation

### On Screen Display

You may easily display the current time or tape counter, amount of tape left, day, month, year, day of week, programme channel, tape speed and operational mode of your VCR on the TV screen. If a recording is taking place these On Screen Displays will not be recorded onto the tape.

- 1 Press **DISPLAY** to display.  
Press **DISPLAY** repeatedly to cycle through the display options. The tape counter and amount of tape left will appear if there is a tape loaded.
- 2 After 3 seconds the majority of the On Screen Displays will clear leaving only the clock or tape counter and the amount of tape left on the screen.  
Press **DISPLAY** again to remove all displays from the TV screen.

### Tape Counter Memory Stop



The **Digital Tape Counter** can be displayed on the display window instead of the time by pressing **DISPLAY** on the remote control. The Digital Tape Counter indicates the relative positions of recordings on the tape.

- 1 Press **DISPLAY**.  
Press **CLEAR** to set the counter to 0:00:00.  
Press **PLAY** ► or start recording.  
The tape counter will display the actual play time in hours, minutes and seconds.
- 2 Press **STOP** ■ when playback or recording is complete.  
Press **REW** ◀◀.  
The tape will rewind and automatically stop when the counter returns to 0:00:00.

### Video Doctor (Self-Diagnosis)

This feature informs you that there is a problem with your VCR. These error messages will appear on the TV screen.

- 1 Press **SETUP**.  
Press ◀ or ▶ to select .  
Press **OK**.

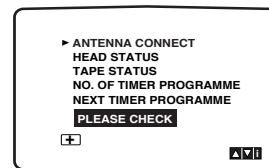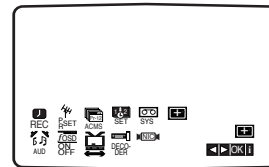

- 2 Press ▲ or ▼ to check a problem.  
**ANTENNA CONNECT**  
● **PLEASE CHECK:**  
Connect the aerial into the jack securely.  
**HEAD STATUS**  
● **PLEASE CLEAN:**  
Clean your video heads.  
**TAPE STATUS**  
● **NOT RECORDABLE:**  
Insert a tape with its protection tab in place  
**NO. OF TIMER PROGRAMME**  
● **2**  
Shows the number of timer recording.  
**NEXT TIMER PROGRAMME**  
● **PR-01 26 10:00~11:00 SP**  
Shows the current status of timer recording.
- 3 Press **SETUP**.

## Additional Operation (Continued)

### Hi-Fi Stereo Sound System

Your VCR will record and playback Hi-Fi stereo sound. In addition it has a stereo NICAM digital stereo sound decoder. This allows you to record and playback the sound in several different ways. Video cassettes recorded on your VCR will have a normal mono audio track and two VHS Hi-Fi stereo audio tracks. These stereo tracks allow you to make audio recordings in Hi-Fi stereo or bilingual mode from a TV broadcast, stereo audio system, video disc or another Hi-Fi VCR.

- 1 Your VCR's NICAM digital sound decoder allows you to enjoy broadcasts with NICAM sound, as well as standard stereo, bilingual and mono sound. The particular type of sound received or that recorded will be briefly displayed on the TV screen for a couple of seconds:

#### STEREO NICAM

Sound is automatically recorded on the Hi-Fi stereo and mono tracks of the video tape.

#### BIL NICAM

Both audio channels will be recorded on the Hi-Fi stereo tracks. The primary language channel (left) will be recorded on the mono track of the video tape.

#### MONO

The sound is recorded on the Hi-Fi tracks and the mono track of the video tape without any separation.

- 2 Press **SETUP**. Press ◀ or ▶ to select **AUD**.
  - 3 Press ▲ or ▼ to select **STEREO, LEFT, RIGHT** and **MONO**.
- In **BIL NICAM** playback the primary language is output on the left channel and the secondary channel is output simultaneously from the right channel when audio output is set to **STEREO**. The primary language will be output from both channels when the audio setting is **MONO**.


Please note that when adjusting the tracking control Hi-Fi stereo sound may revert to **MONO**.



#### Changing TV Audio Channel

Some TV programs are broadcast with a bilingual audio program (BIL). Press ▲ or ▼ to select **STEREO/MAIN**, **STEREO/SUB** and **MONO/MAIN**.

### Wide Screen Compatibility 16:9

Your VCR can record and play back wide screen aspect ratio programmes (16:9). To record a wide screen format programme successfully the correct type of wide screen signal must be broadcast by the TV station.

- 1 Switch on your VCR.  
Press **SETUP**.  
Press ◀ or ▶ to select   
Press **OK**.

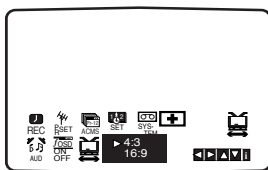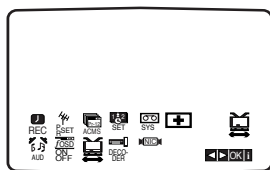

- 2 Press ▲ or ▼ repeatedly to select: **AUTO, 4:3** or **16:9**.

#### **AUTO (Playback mode only):**


Automatically plays back Wide-Screen programmes as Wide-Screen and Normal programmes as normal.

#### **4:3**

Only for playing back and recording Normal format recordings (4:3).

#### **16:9:**

Only for playing back and recording Wide-Screen format recordings (16:9).

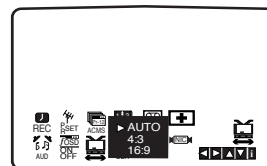

- 3 Press **SETUP** to remove the menus from the TV screen.

To enjoy Wide-Screen playback you must connect your VCR to the TV using a SCART cable.

### To set the decoder

We have already described, how to connect a decoder for pay-TV station as **CANAL+** or **PREMIERE** on page 10. For the recording of an encoded station you do not have to control anything. You just select the station and wait shortly until the decoding will start.

- 1 Press **SETUP**.  
The main menu will appear on the TV screen.  
Press ◀ or ▶ to select the **DECODER**.  
Press **OK**.
- 2 Press ▲ or ▼ to select.  
**ON:** When the decoder is connected to the AV2 socket.  
**OFF:** When another VCR is connected to the AV2 socket.  
Press **SETUP** to return to a TV picture.

### Last Condition Memory

#### **VCD1.1**

This player memorizes the last condition for the last disc you have watched. Settings remain in memory even if you remove the disc from the player or switch off the player. If you load a disc that has its settings memorized, the latest stop position is automatically recalled.

#### Notes

- Settings are stored in memory for use any time.
- This player does not memorize settings of a disc if you switch off the player before commencing to play it.

## Special Recording

### Copying from DVD To VCR

This unit allows you to copy the contents of a DVD to a VHS tape with a press of the **D.DUBBING** button.

#### Notes

- Be sure to set 'Progressive Scan' to "Off" on the setup menu.
- If the DVD you are attempting to copy is copy protected, you may not be able to copy the disc.

#### 1 Insert Disc

Insert the disc you wish to copy in the DVD deck and close the disc tray.

#### 2 Insert VHS Tape

Insert a blank VHS videotape into the VCR deck.

#### 3 Copy the DVD to VHS Tape

Press the **D.DUBBING** button or **RECORD ●** on the unit front panel or press the **RECORD** on the remote control.

- The DVD will go into Play mode and the VCR will go into Record mode.
- If the DVD disc menu appears, you may need to press the Play button manually to begin copying.

#### Note

If you press **RECORD ●** button, make sure the player is in DVD mode.

#### 4 Stop the Copy Process.

When the DVD has finished playing, press the **STOP ■** button to end the copy.

- You must stop the Copy process manually when the DVD movie ends, or the unit may replay and record over and over again.

### Recording from another video recorder

With this video recorder you can make recordings from an external source, such as copying from another video recorder or a camcorder.

#### Note

In the following description, this video recorder will be one used for recording and will be referred to as VCR B. The other appliance will be used for playback and will be referred to as VCR A.

**1** VCR A should be connected to the SCART socket on the rear panel of your unit or the AV sockets on the front panel of your unit.

**2** Insert the recorded tape into VCR A and a blank tape into VCR B.

**3** Press **INPUT** until the socket you wish to record from is displayed. (VCR B).

**AV 1** for recording from EURO AV1 SCART socket on the rear of your unit.

**AV 2** for recording from EURO AV2 SCART socket on the rear of your unit.

**AV 3** for recording from VIDEO IN and AUDIO IN (Left & Right) sockets on the front of your unit.

**4** To start recording, press the **RECORD ●** on VCR B and **PLAY ►** on VCR A.

**5** When you want to finish copying, press the **STOP ■** on both video recorders.

## Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

Symptom	Cause	Correction
DVD or VCR do not work properly.	<ul style="list-style-type: none"> <li>● DVD or VCR button is not switched properly.</li> </ul>	<ul style="list-style-type: none"> <li>● Refer to page 6.</li> </ul>
No power.	<ul style="list-style-type: none"> <li>● The power cord is disconnected.</li> </ul>	<ul style="list-style-type: none"> <li>● Plug the power cord into the wall outlet securely.</li> </ul>
The power is on, but the DVD player does not work.	<ul style="list-style-type: none"> <li>● No disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>● Insert a disc.</li> </ul>
No picture.	<ul style="list-style-type: none"> <li>● The TV is not set to receive DVD signal output.</li> </ul>	<ul style="list-style-type: none"> <li>● Select the appropriate video input mode on the TV so the picture from the DVD player appears on the TV screen.</li> </ul>
	<ul style="list-style-type: none"> <li>● The video cable is not connected securely.</li> </ul>	<ul style="list-style-type: none"> <li>● Connect the video cable into the jacks securely.</li> </ul>
No sound.	<ul style="list-style-type: none"> <li>● The equipment connected with the audio cable is not set to receive DVD signal output.</li> </ul>	<ul style="list-style-type: none"> <li>● Select the correct input mode of the audio receiver so you can listen to the sound from the DVD player.</li> </ul>
	<ul style="list-style-type: none"> <li>● The audio cables are not connected securely.</li> </ul>	<ul style="list-style-type: none"> <li>● Connect the audio cable into the jacks securely.</li> </ul>
	<ul style="list-style-type: none"> <li>● The power of the equipment connected with the audio cable is turned off.</li> </ul>	<ul style="list-style-type: none"> <li>● Turn on the equipment connected with the audio cable.</li> </ul>
	<ul style="list-style-type: none"> <li>● The Digital Audio Output is set to the wrong position.</li> </ul>	<ul style="list-style-type: none"> <li>● Set the Digital Audio Output to the correct position, then turn on the DVD player again by pressing POWER.</li> </ul>
The picture is poor.	<ul style="list-style-type: none"> <li>● The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>● Clean the disc.</li> </ul>
	<ul style="list-style-type: none"> <li>● The TV channels are not tuned in properly.</li> </ul>	<ul style="list-style-type: none"> <li>● Check tuning, carry out tuning again.</li> </ul>
The DVD player does not start playback.	<ul style="list-style-type: none"> <li>● An unplayable disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>● Insert a playable disc. (Check the disc type and Regional code.)</li> </ul>
	<ul style="list-style-type: none"> <li>● The disc is placed upside down.</li> </ul>	<ul style="list-style-type: none"> <li>● Place the disc with the playback side down.</li> </ul>
	<ul style="list-style-type: none"> <li>● The disc is not placed within the guide.</li> </ul>	<ul style="list-style-type: none"> <li>● Place the disc on the disc tray correctly inside the guide.</li> </ul>
	<ul style="list-style-type: none"> <li>● The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>● Clean the disc.</li> </ul>
	<ul style="list-style-type: none"> <li>● The Rating level is set.</li> </ul>	<ul style="list-style-type: none"> <li>● Cancel the Rating function or change the rating level.</li> </ul>
The remote control does not work properly.	<ul style="list-style-type: none"> <li>● There is an obstacle in the path of the remote control and this unit.</li> </ul>	<ul style="list-style-type: none"> <li>● Remove the obstacle.</li> </ul>
	<ul style="list-style-type: none"> <li>● The batteries in the remote control are exhausted.</li> </ul>	<ul style="list-style-type: none"> <li>● Replace the batteries with new ones.</li> </ul>
Video tape cannot be inserted.	<ul style="list-style-type: none"> <li>● Is the cassette compartment empty?</li> </ul>	<ul style="list-style-type: none"> <li>● Eject the tape in.</li> </ul>
No Hi-Fi sound	<ul style="list-style-type: none"> <li>● Audio mode is not set properly.</li> </ul>	<ul style="list-style-type: none"> <li>● Switch 'AUDIO' in the main menu to 'STEREO'.</li> </ul>
No NICAM sound recording	<ul style="list-style-type: none"> <li>● NICAM mode is not set properly.</li> </ul>	<ul style="list-style-type: none"> <li>● Make sure NICAM in the menu is set to AUTO for the station to be recorded.</li> </ul>

## Language Code List

Enter the appropriate code number for the initial settings "LANGUAGE" (See page 18).

Code	Language	Code	Language	Code	Language	Code	Language
6566	Abkhazian	7074	Fiji	7678	Lingala	8373	Singhalese
6565	Afar	7073	Finnish	7684	Lithuanian	8375	Slovak
6570	Afrikaans	7082	French	7775	Macedonian	8376	Slovenian
8381	Albanian	7089	Frisian	7771	Malagasy	8379	Somali
6577	Ameharic	7176	Galician	7783	Malay	6983	Spanish
6582	Arabic	7565	Georgian	7776	Malayalam	8385	Sudanese
7289	Armenian	6869	German	7784	Maltese	8387	Swahili
6583	Assamese	6976	Greek	7773	Maori	8386	Swedish
6588	Aymara	7576	Greenlandic	7782	Marathi	8476	Tagalog
6590	Azerbaijani	7178	Guarani	7779	Moldavian	8471	Tajik
6665	Bashkir	7185	Gujarati	7778	Mongolian	8465	Tamil
6985	Basque	7265	Hausa	7865	Nauru	8484	Tatar
6678	Bengali; Bangla	7387	Hebrew	7869	Nepali	8469	Telugu
6890	Bhutani	7273	Hindi	7879	Norwegian	8472	Thai
6672	Bihari	7285	Hungarian	7982	Oriya	6679	Tibetan
6682	Breton	7383	Icelandic	8065	Panjabi	8473	Tigrinya
6671	Bulgarian	7378	Indonesian	8083	Pashto, Pushto	8479	Tonga
7789	Burmese	7365	Interlingua	7065	Persian	8482	Turkish
6669	Byelorussian	7165	Irish	8076	Polish	8475	Turkmen
7577	Cambodian	7384	Italian	8084	Portuguese	8487	Twi
6765	Catalan	7465	Japanese	8185	Quechua	8575	Ukrainian
9072	Chinese	7487	Javanese	8277	Rhaeto-Romance	8582	Urdu
6779	Corsican	7578	Kannada	8279	Rumanian	8590	Uzbek
7282	Croatian	7583	Kashmiri	8285	Russian	8673	Vietnamese
6783	Czech	7575	Kazakh	8377	Samoan	8679	Volapük
6865	Danish	7589	Kirghiz	8365	Sanskrit	6789	Welsh
7876	Dutch	7579	Korean	7168	Scots Gaelic	8779	Wolof
6978	English	7585	Kurdish	8382	Serbian	8872	Xhosa
6979	Esperanto	7679	Laothian	8372	Serbo-Croatian	7473	Yiddish
6984	Estonian	7665	Latin	8378	Shona	8979	Yoruba
7079	Faroese	7686	Latvian, Lettish	8368	Sindhi	9085	Zulu

## Country/Area Code List

Enter the appropriate code number for the initial setting "Country Code" (See page 20).

Code	Country/Area	Code	Country/Area	Code	Country/Area	Code	Country/Area
AD	Andorra	ER	Eritrea	LC	Saint Lucia	SC	Seychelles
AE	United Arab Emirates	ES	Spain	LI	Liechtenstein	SD	Sudan
AF	Afghanistan	ET	Ethiopia	LK	Sri Lanka	SE	Sweden
AG	Antigua and Barbuda	FI	Finland	LR	Liberia	SG	Singapore
AI	Anguilla	FJ	Fiji	LS	Lesotho	SH	Saint Helena
AL	Albania	FK	Falkland Islands	LT	Lithuania	SI	Slovenia
AM	Armenia	FM	Micronesia	LU	Luxembourg	SJ	Svalbard and Jan Mayen Islands
AN	Netherlands Antilles	FO	Faroe Islands	LV	Latvia	SK	Slovak Republic
AO	Angola	FR	France	LY	Libya	SL	Sierra Leone
AQ	Antarctica	FX	France (European Territory)	MA	Morocco	SM	San Marino
AR	Argentina	GA	Gabon	MC	Monaco	SN	Senegal
AS	American Samoa	GB	Great Britain	MD	Moldavia	SO	Somalia
AT	Austria	GD	Grenada	MG	Madagascar	SR	Suriname
AU	Australia	GE	Georgia	MH	Marshall Islands	ST	Saint Tome and Principe
AW	Aruba	GF	French Guyana	MK	Macedonia	SU	Former USSR
AZ	Azerbaijan	GH	Ghana	ML	Mali	SV	El Salvador
BA	Bosnia-Herzegovina	GI	Gibraltar	MM	Myanmar	SY	Syria
BB	Barbados	GL	Greenland	MN	Mongolia	SZ	Swaziland
BD	Bangladesh	GM	Gambia	MO	Macau	TC	Turks and Caicos Islands
BE	Belgium	GN	Guinea	MP	Northern Mariana Islands	TD	Chad
BF	Burkina Faso	GP	Guadeloupe (French)	MQ	Martinique (French)	TF	French Southern Territories
BG	Bulgaria	GQ	Equatorial Guinea	MR	Mauritania	TG	Togo
BH	Bahrain	GR	Greece	MS	Montserrat	TH	Thailand
BI	Burundi	GS	S. Georgia & S. Sandwich Isls.	MT	Malta	TJ	Tadjikistan
BJ	Benin	GT	Guatemala	MU	Mauritius	TK	Tokelau
BM	Bermuda	GU	Guam (USA)	MV	Maldives	TM	Turkmenistan
BN	Brunei Darussalam	GW	Guinea Bissau	MW	Malawi	TN	Tunisia
BO	Bolivia	GY	Guyana	MX	Mexico	TO	Tonga
BR	Brazil	HK	Hong Kong	MY	Malaysia	TP	East Timor
BS	Bahamas	HM	Heard and McDonald Islands	MZ	Mozambique	TR	Turkey
BT	Bhutan	HN	Honduras	NA	Namibia	TT	Trinidad and Tobago
BV	Bouvet Island	HR	Croatia	NC	New Caledonia (French)	TV	Tuvalu
BW	Botswana	HT	Haiti	NE	Niger	TW	Taiwan
BY	Belarus	HU	Hungary	NF	Norfolk Island	TZ	Tanzania
BZ	Belize	ID	Indonesia	NG	Nigeria	UA	Ukraine
CA	Canada	IE	Ireland	NI	Nicaragua	UG	Uganda
CC	Cocos (Keeling) Islands	IL	Israel	NL	Netherlands	UK	United Kingdom
CF	Central African Republic	IN	India	NO	Norway	UM	USA Minor Outlying Islands
CG	Congo	IO	British Indian Ocean Territory	NP	Nepal	US	United States
CH	Switzerland	IQ	Iraq	NR	Nauru	UY	Uruguay
CI	Ivory Coast	IR	Iran	NU	Niue	UZ	Uzbekistan
CK	Cook Islands	IS	Iceland	NZ	New Zealand	VA	Vatican City State
CL	Chile	IT	Italy	OM	Oman	VC	Saint Vincent & Grenadines
CM	Cameroon	JM	Jamaica	PA	Panama	VE	Venezuela
CN	China	JO	Jordan	PE	Peru	VG	Virgin Islands (British)
CO	Colombia	JP	Japan	PF	Polynesia (French)	VI	Virgin Islands (USA)
CR	Costa Rica	KE	Kenya	PG	Papua New Guinea	VN	Vietnam
CS	Former Czechoslovakia	KG	Kyrgyzstan	PH	Philippines	VU	Vanuatu
CU	Cuba	KH	Cambodia	PK	Pakistan	WF	Wallis and Futuna Islands
CV	Cape Verde	KI	Kiribati	PL	Poland	WS	Samoa
CX	Christmas Island	KM	Comoros	PM	Saint Pierre and Miquelon	YE	Yemen
CY	Cyprus	KN	Saint Kitts & Nevis Anguilla	PN	Pitcairn Island	YT	Mayotte
CZ	Czech Republic	KP	North Korea	PR	Puerto Rico	YU	Yugoslavia
DE	Germany	KR	South Korea	PT	Portugal	ZA	South Africa
DJ	Djibouti	KW	Kuwait	PW	Palau	ZM	Zambia
DK	Denmark	KY	Cayman Islands	PY	Paraguay	ZR	Zaire
DM	Dominica	KZ	Kazakhstan	QA	Qatar	ZW	Zimbabwe
DO	Dominican Republic	LA	Laos	RE	Reunion (French)		
DZ	Algeria	LB	Lebanon	RO	Romania		
EC	Ecuador			RU	Russian Federation		
EE	Estonia			RW	Rwanda		
EG	Egypt			SA	Saudi Arabia		
EH	Western Sahara			SB	Solomon Islands		

# Specification

---

## General

Power requirements	AC 220-230V, 50Hz
Power consumption	17W
Dimensions (approx.)	430 X 78.5 X 265 mm (w/h/d)
Mass (approx.)	4.06 kg
Operating temperature	5°C to 35°C (41°F to 95°F)
Operating humidity	5 % to 90 %
Timer	24 hours display type
RF Modulator	UHF 22-68 (Adjustable)

## System

Laser	Semiconductor laser, wavelength 650 nm
Video Head system	Double azimuth 6 heads, helical scanning.
Signal system	PAL
Frequency response	DVD (PCM 96 kHz): 8 Hz to 44 kHz DVD (PCM 48 kHz): 8 Hz to 22 kHz CD: 8 Hz to 20 kHz
Signal-to-noise ratio	More than 100dB (ANALOG OUT connectors only)
Harmonic distortion	Less than 0.008%
Dynamic range	More than 100 dB (DVD) More than 95 dB (CD)

## Inputs (VCR)

Audio	-6.0dBm, more than 10 kohms (SCART) -6.0dBm, more than 47 kohms (RCA)
Video	1.0Vp-p, 75 ohms, unbalanced (SCART/RCA)

## Outputs (DVD)

VIDEO OUT	1 Vp-p 75 ohms, sync. negative
COMPONENT/PROGRESSIVE SCAN	(Y) 1 Vp-p 75 ohms, negative sync., RCA jack x 1
VIDEO OUT	(Pb)/(Pr) 0.7 Vp-p 75 ohms, RCA jack x 2
RGB output	0.7 Vp-p 75 ohms
COAXIAL (digital audio)	0.5 V (p-p), 75 ohms, RCA jack x 1
Audio output (analog audio)	2.0 Vrms (1 kHz, 0 dB), 600 ohms, RCA jack (L, R) x 2/SCART (TO TV)

## Outputs (VCR)

Audio	-6.0dBm, less than 1 kohms (SCART)
Video	1.0Vp-p, 75 ohms, unbalanced (SCART)
RGB output	0.7 Vp-p 75 ohms
Audio output (analog audio)	2.0 Vrms (1 kHz, 0 dB), 600 ohms, RCA jack (L, R) x 2/SCART (TO TV)

**Design and specifications are subject to change without notice.**

**Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.**



**PHILIPS NORGE AS**

Sandstuveien 70,  
PO Box 1, Manglerud  
N-0612 Oslo  
NORWAY  
Phone: 2274 8250

**OY PHILIPS AB**

Sinikalliontie 3,  
02630 Espo  
Helsinki  
FINLAND  
puh. 09 615 80 250

**PHILIPS KUNDTJÄNST**

Kollbygatan 7,  
Akalla,  
16485 Stockholm  
SWEDEN  
Phone: 08-598 52 250

**PHILIPS POLSKA**

AL. Jerozolimskie 195B  
02-222 Warszawa  
POLSKA  
Tel.: (022)-571-0-571

**PHILIPS SERVICE**

V Mezihori 2  
180 00 Prague  
CZECH REPUBLIC  
Phone: (02)-3309 9240

**PHILIPS Iberia, S.A.**

C/Martinez Villergas, 49  
28027 MADRID  
SPAIN  
Phone: 902-11 33 84

**PHILIPS**

Österreichische Philips Industrie GmbH  
Triesterstrasse 64  
1101 Wien  
AUSTRIA  
Tel: 0810 001 203

**PHILIPS INFO CENTER**

Alexanderstrasse 1  
20099 Hamburg  
GERMANY  
Tel: 0180-53 56 767

**SERVICE CONSOMMATEURS**

**PHILIPS**  
BP 0101  
75622 Paris Cédex 13  
FRANCE  
Phone: 0825-889 789

**PHILIPS ELECTRONICS IRELAND LIMITED**

Consumer Information Center  
Newstead, Clonskeagh  
DUBLIN 14  
Phone: 01-7640292

**PHILIPS CONSUMER ELECTRONICS**

Servizio Consumatori  
Via Casati 23  
20052 Monza - Milano  
ITALY  
Phone: 800 820026

**PHILIPS MÁRKASZERVIZ**

Kinizsi U 30 - 36  
Budapest 1092  
HUNGARY  
Phone: (01)-2164428

**PHILIPS PORTUGUESA, S.A.**

Consumer Information Center  
Rua Dr. António Loureiro Borge, nr:5  
Arquiparque, Miraflores  
P-2795 L-A-VEHLA  
PORTUGAL  
Phone: 021-4163063

**PHILIPS CE, The Philips Centre,**

420 - 430 London Road,  
Croydon, Surrey  
CR9 3QR  
UNITED KINGDOM  
Phone: 0208-665-6350

**CONSUMER SERVICES**

Prags Boulevard 80. PO Box 1919,  
DK-2300 Copenhagen S  
DANMARK  
Tlf: 32 88 32 00

**PHILIPS REPRESENTATION OFFICE**


Ul. Usacheva 35a  
119048 MOSCOW  
RUSSIA  
Phone: 095-937 9300

**PHILIPS INFO CENTER**


Fegistrasse 5  
8957 Spreitenbach  
SUISSE  
Tel.: 0844-800 544

**PHILIPS CUSTOMER CARE CENTER**

Twee Stationsstraat 80/  
80 Rue des Deux Gares  
1070 BURSEL/BRUXELLES  
BELGIUM (for BENELUX)  
Tel: 070-222303

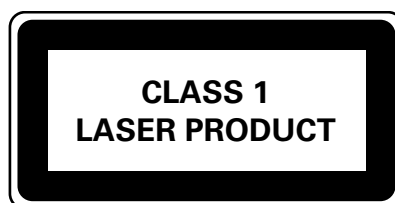

 Meet Philips at the Internet  
<http://www.philips.com/welcome>



The products and services described herein are not necessarily available in all countries. Due to continuous product improvements this document is subject to change without notice.

P/NO: MFL46896804