

LIMITED WARRANTY

JAMAR Technologies, Inc. warrants the JAMAR Echo against defects in material and workmanship for a period of one (1) year limited warranty on parts and labor from the date of purchase. For information on extended warranty call 1-800-776-0940.

JAMAR Technologies, Inc. warrants each new instrument manufactured by the company to be free from defective material and workmanship and agrees to remedy any such defect. At its option, it may furnish a new part in exchange for any part of any instrument of its manufacture which, under normal installation, use and service discloses such defect. The instrument must be returned to our factory or authorized service agent intact, for examination, with all transportation charges prepaid.

This warranty does not extend to any products which have been subject to misuse, neglect, accident, vandalism or incorrect wiring not our own. This warranty does not extend to water damage caused by improper installation in disregard of the instructions furnished by us. This warranty does not extend to products which have been repaired or altered outside our factory or authorized service agent.

In no event shall JAMAR Technologies, Inc. be liable for any damages arising from the use of this product including damages arising from the loss of information.

This warranty is in lieu of all other warranties expressed or implied and no representative or person is authorized to assume for us any other liability in connection with the sale or use of our products.

JAMAR Technologies, Inc. reserves the right to make improvements on the product and/or specifications at any time without notice.

Questions concerning this warranty or any JAMAR Technologies, Inc. product should be directed by mail or telephone to:

JAMAR Technologies, Inc.
151 Keith Valley Road
Horsham, PA 19044
215-491-4899

COPYRIGHT NOTICE

This manual is copyrighted. All rights are reserved. This document may not be, in whole or part, photocopied, reproduced, translated, or reduced to any electronic medium or machine readable form without prior consent, in writing, from JAMAR Technologies, Inc.

Copyright 2007 by JAMAR Technologies, Inc.

If you have any questions about the use of the JAMAR Echo, please call the following number:

215-491-4899

Monday - Friday 8:00 AM to 5:00 PM Eastern time

You may also contact us by e-mail at:

sales@jamartech.com

Address any correspondence to:

**JAMAR Technologies, Inc.
151 Keith Valley Road
Horsham, PA 19044-1411**

Table of Contents

Technical Support **iii**

Initial Setup Guide for the JAMAR Echo **v**

Quick Programming Guide for the JAMAR Echo **vi**

Chapter 1: Using The JAMAR Echo..... **1-1**

- What is The JAMAR Echo? 1-2
- How it Works 1-2
- Setting Up The JAMAR Echo 1-3
 - Main Screen 1-4
 - Selecting Options 1-5
 - Reset Screen 1-5
 - Start Time-stamped Study Screen 1-6
 - GPS Screen 1-7
 - Clear Memory Screen 1-8
 - Sensitivity Screen 1-8
- Uploading Information to the JAMAR Echo..... 1-9
- Downloading the JAMAR Echo 1-13

Chapter 2: Using the JPDA Software..... **2-1**

- Introduction to JPDA 2-2
- Installing the Software 2-3
- Getting Started 2-6
 - Main Screen 2-6
 - Preferences Screen 2-7
 - Setup Screen 2-8
 - Status Screen 2-9
- Retrieving Data from the Echo 2-11
- View Downloaded Files 2-13
- Transferring Data from JPDA with JRead 2-14

Chapter 3: Installing The JAMAR Echo **3-1**

- Installing the Mounting Bracket 3-2
- Installing the JAMAR Echo in the Field..... 3-4
- What Makes for a Good Location?..... 3-4

Chapter 4: Battery Care **4-1**

Chapter 5: Troubleshooting **5-1**

Appendix **A-1**

Initial Setup Guide for the JAMAR Echo

Step 1

Remove the faceplate of the Echo and remove the paper tab from the battery holder to allow the batteries to connect. This will provide power.

Step 2

At this point, if you are only interested in recording overall totals, you can proceed to installing the Echo in the field, as discussed in Step 4. Overall totals can be read directly off the display of the Echo. If, however, you would like to use some of the other options the Echo has, like storing GPS coordinates or starting a time-stamped study, go to Step 3.

Step 3

Familiarize yourself with the JPDA software, which is covered in Chapter 2 of this manual. This program can be used to configure the settings of the Echo. These settings include the time and date, which you should set for your location if you will be doing time-stamped studies. JPDA can also be used to start & stop studies, and retrieve data from the Echo.

Step 4

Install the Echo in the field. Refer to Chapter 3 for information on how to pick a good location and how to physically install the Echo.

Step 5

Start a new study using either the JPDA software or the programming guide listed on the next page.

Quick Programming Guide for the JAMAR Echo

To start the JAMAR Echo, install 4 D-Cell batteries and the Main Screen will appear. This screen shows the battery voltage and the count total.

5.8V	00000000	When powered on, the JAMAR Echo automatically begins counting.
-------------	-----------------	--

TAB

Reset?	00000000	DO	Resets Count Total to zero.
---------------	-----------------	-----------	-----------------------------

TAB

Start?	00000000	DO	Started!	00000000
---------------	-----------------	-----------	-----------------	-----------------

Starts time-stamped study.

OR

Stop?	00000000	DO	Stopped!	00000000
--------------	-----------------	-----------	-----------------	-----------------

Stops time-stamped study.

TAB

GPS	00000000	DO	Waiting
------------	-----------------	-----------	----------------

Connect GPS receiver.

TAB

CLR MEM?00000000	DO	CLR? N	00000000
-------------------------	-----------	---------------	-----------------

Pressing DO will cancel clear.
Press TAB, then DO to clear.

TAB

Sen:Def	00000000	DO	Sen:L	00000000
----------------	-----------------	-----------	--------------	-----------------

Press DO multiple times to scroll Sensitivity settings.

Chapter 1

Using the JAMAR Echo

What is the JAMAR Echo?

The JAMAR Echo is an acoustic data recorder that has been specifically designed to count vehicles without the use of invasive sensors on lower volume roadways. This unit will register at distances up to 40-50 feet.



The Echo can collect data in two modes: overall volume or individual time-stamped recording. These two modes allow you to use the same piece of equipment to go from a simple volume count, which can be read off the display, to comprehensive time-stamped data that can be transferred to a computer for generating professional reports.

How It Works

The average vehicle emits a recognizable sound signature. An acoustic detector can recognize the specific signature of this and determine when a vehicle is, or is not, present.

The Echo contains an acoustic detector, located near the bottom of the unit, as shown in the picture to the right. When aimed at a roadway, the Echo will record a count whenever a vehicle enters the detection zone.



Acoustic Detector

Setting Up the JAMAR Echo

To begin using the JAMAR Echo, unscrew the two screws from the front of the Echo and lift off the front cover. Inside you will see the control panel for the unit, along with the battery compartment.



With Front Cover



With Front Cover Removed



Control Panel

The Echo is powered by four D-Cell Alkaline batteries, which are included with the unit when it is shipped.

IMPORTANT: To preserve battery life, a paper tab is located between one of the batteries and the battery contact when new units are shipped. Remove this paper tab before using the unit.

Once the batteries are fully connected in the unit, the Main Screen of the Echo will appear.

Main Screen

A 16-character LCD display, located in the middle of the JAMAR Echo's control panel is used to display the current options and status. **NOTE:** The display of the Echo has a power-saving feature that turns off the screen if the unit has not been disturbed for several minutes. To bring the display back up, simply hit either the TAB or DO key.

Once power is provided to the Echo, the **Main Screen** appears.



This screen shows the battery voltage on the left side of the display, which allows you to monitor the battery status. Generally, fresh batteries should register at 5.8 to 6.0 VDC. Batteries should be replaced when this voltage falls to around 4.5 to 5.0. The unit will stop recording data once the voltage falls to approximately 4.0 volts.

Depending upon use and temperature where the unit is installed, the batteries may last for more than six months before they need to be replaced. Refer to Chapter 4 *Battery Care* for more information on battery maintenance.

When the Echo is powered on, it begins recording counts, which are displayed on the right side of the Main Screen. At this point, if you are only interested in recording overall totals, you can proceed to installing the Echo in the field, as discussed in chapter 3. If, however, you would like to use some of the other options the Echo has, like storing GPS coordinates or starting a time-stamped study, read on.

The remainder of this chapter covers, in a tutorial style, some of the additional options you have in setting up the Echo using the control panel. Note that you can also perform these functions remotely using the JPDA software, which is discussed in Chapter 2.

Selecting Options

There are two buttons on the control panel of the JAMAR Echo that are used to navigate through the various screens and select options. The black TAB key is used for navigation, while the red DO key is used to select an option.

With the Main Screen visible (remember, if the display goes into power saving mode, press either key to bring it back up), go ahead and press the TAB key. Notice that the screen changes to show *Reset?* on the left side of the display rather than the battery voltage. Your current count total is still visible on the right side.

Press TAB again, and the screen changes to show *Start?*. Press TAB again and it shows *GPS*. Press TAB again and it shows *CLR MEM?*. Press TAB again and it shows *Sen:Def*. Press TAB on more time, at it takes you back to the Main Screen, which shows the current battery voltage.

The five screens we just went through are the ones used to select various options in the JAMAR Echo. Press the TAB button repeatedly and notice that you loop through these five screens, always coming back to the Main Screen.

Now we'll take a look at what we can do with the five option screens.

Reset Screen

When at the Main Screen, press the TAB key once and the **Reset Screen** will appear.

Reset?	00000000
---------------	-----------------

This screen is used to reset the current count total visible on the right side of the display. Press the DO key while on this screen and notice that the count total resets to zero and you are taken back to the Main Screen.

Note that if you are in the Reset Screen and decide that you do not want to reset the count total, simply wait a few second without doing anything and the JAMAR Echo will return to the Main Screen on its own. Alternatively, you can press the TAB key until you return to the Main Screen.

Note also that selecting the Reset option will also stop any current time-stamped study being done, and immediately start a new one. We will find out more about time-stamped studies in the next section.

Start Time-stamped Study Screen

When at the Main Screen, press the TAB key twice and the **Start Time-stamped Study Screen** will appear.

Start?	00000000
---------------	-----------------

As we have learned, when you power on the JAMAR Echo it begins counting and shows the count total on the right side of the display. This information is useful if you want an overall count of vehicle volumes. However, what if you want more detailed information, such as specific information on when the volumes are occurring? That's where the Time-stamped study comes in.

The Echo has the ability to record and store a time stamp of *every* individual count it records. These time stamps are stored in memory and can later be downloaded into the TRAXPro or JPDA software for processing. The Echo's internal memory is 256 KB, which will hold approximately 80,000 time stamps before becoming full.

Press the DO key while on the *Start?* screen and the display will change to the one shown below.

Started!	00000000
-----------------	-----------------

The overall count total shown on the display will reset to zero, and the unit will begin storing the time-stamped data internally. The Echo will then return to the Main Screen.

Note: For your time-stamped study to be accurate, it is important that the Echo have the correct time stored in its memory. Refer to the *Uploading Information to the JAMAR Echo* section on page 1-8 for more information on this.

From the Main Screen, hit the TAB key twice and notice that the *Start?* option has now been replaced by *Stop?*. This screen will appear if you currently have a time-stamped study in progress and it gives you the option to stop that study.

Stop?	00000000
--------------	-----------------

Hit the TAB key a few more times and notice that it will loop you through only two options: *Reset?* and *Stop?*. When a time-stamped study is in progress, these are the only two options of the original four that are available for selection. You must end the time-stamped study to access the additional options.

Tab back to *Stop?* showing on the display and press the DO key. The display will change to the one shown below.

Stopped! 00000000

At this point, the time-stamped study is stopped and stored in memory. A little later on we will see how this study can be downloaded and how it can be cleared from memory. After a few seconds, the Echo will reset itself to the Main Screen.

GPS Screen

When at the Main Screen, press the TAB key three times and the **GPS Screen** will appear.

GPS 00000000

GPS coordinates can be loaded into the Echo by connecting a handheld GPS receiver to the serial port on the Echo's control panel.

Note: The GPS receiver must be set to transmit one of the following NMEA messages at 4800 baud: GPRMC, GPGLL or GPGGA.

Press the DO key and the display will change to the one shown below.

Waiting

Plug the GPS receiver into the Echo's serial port and, if the receiver is configured properly, the Echo will receive the coordinates and begin showing them on the display, alternating between showing latitude and longitude. Press the DO key to accept the coordinates and the Echo will return to the Main Screen. Note that if you press the DO key on the *Waiting* screen when no GPS receiver is connected, the Echo will cancel out to the Main Screen.

Clear Memory Screen

When at the Main Screen, press the TAB key four times and the **Clear Memory Screen** will appear.

CLR MEM?00000000

The Clear Memory option can be used to delete time-stamped studies that have been stored in memory. However, to prevent studies from being accidentally deleted, you are required to confirm that you want to clear the memory. Press the DO key and the screen shown below will appear.

CLR? N 00000000

On this screen, the 'N' means *No, do not clear memory*. If you press DO at this point, the Echo will cancel out of the memory clear process and return to the Main Screen. Press TAB instead, and the screen shown below will appear.

CLR? Y 00000000

On this screen, the 'Y' means *Yes, do clear memory*. If you press DO at this point, the Echo will clear all stored time-stamp studies from memory and return to the Main Screen.

Sensitivity Screen

When at the Main Screen, press the TAB key five times and the **Sensitivity Screen** will appear.

Sen:Def 00000000

The Sensitivity option can be used to select how sensitive the acoustic sensor should be when recording data. The initial setting, *Def*, stands for *Default* and will work fine for most applications. However, if you install the Echo at a location where it appears to be overcounting due to extraneous noise, or undercounting due to its distance from the vehicle sounds, this setting can be used to make adjustments.

With the Sensitivity Screen showing on the display, press the DO key and notice that *Sen:Def* changes to *Sen:L*. Press DO again and the display changes to *Sen:VL*. Press it again and it changes to *Sen:VH*. Press it again and it changes to *Sen:H*. Press DO one more time and the display goes back to *Sen:Def*. The table to the right lists what each setting represents.

Sen:Def	Default
Sen:L	Low
Sen:VL	Very Low
Sen:VH	Very High
Sen:H	High

In general, if your Echo is overcounting, the sensitivity should be adjusted to either *Low* or *Very Low*. If it is undercounting, the sensitivity should be adjusted to either *High* or *Very High*.

Note that the Echo will use whatever setting you have selected on the Sensitivity Screen, so be careful when making changes on this screen. As noted before, the *Def* setting should work for most applications.

Uploading Information to the JAMAR Echo

When in Time-stamped count mode, it is important that the Echo have the correct time stored in its memory. The time, along with several other pieces of information, can be uploaded into the Echo using the free TCU software, which can be downloaded from the Software Downloads section of the JAMAR web site, www.jamartech.com.

After downloading the installation file for the program, double click on it and follow the on-screen instructions to install the program on your computer. Once the program is installed, it can be used to upload information into the Echo using the serial port on the Echo and a serial cable, such as the JAMAR universal cable. (It is not required that a JAMAR cable be used. Any compatible RS-232 serial cable will work.)

Note that the upload can also be done using a PDA running the free JPDA software. This can be done by either connecting to the Echo's serial port, or by using the Echo's Bluetooth wireless connection. Using the JPDA software is covered in the next chapter.

To prepare to upload your information to the Echo, connect the serial cable to a serial port on your computer. Most serial ports are a 9 pin plug, and there may be more than one on the computer. The ports may be labeled on the computer itself with COM 1 listed as 1 or A and COM 2 listed as

2 or B. Refer to chapter 5, *Troubleshooting*, for tips on avoiding problems when using a computer's serial port, or what to do if your computer does not have a serial port.


On the Echo itself, you must have the display visible to upload information. If the unit is in power saving mode and the display is not visible, hit either the TAB or DO key to bring it back up. Once the display is visible, start the TCU software.

When you first start the program you will be prompted to select the Comm Port on the computer that will be used by the TCU. Click OK and the program will start.



Once the program is open, select the comm port to be used by clicking on one of the radio buttons in the *Select Comm Port* field in the lower right corner.

If the Echo is properly connected, you will see a message saying that the unit has been found on the comm port selected.

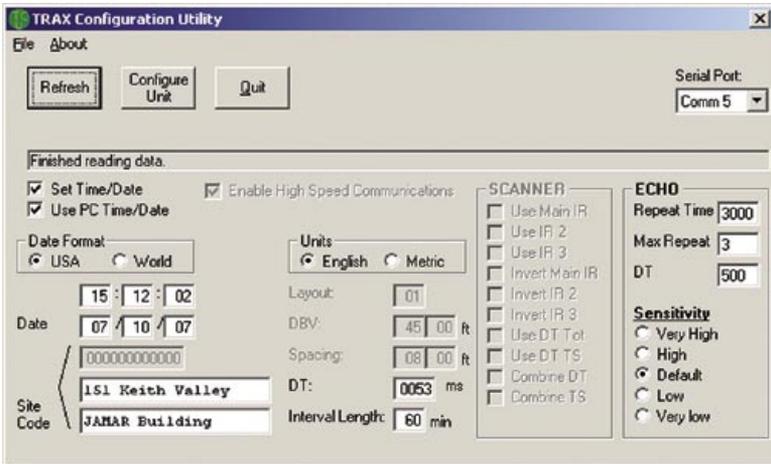

The TCU can be used with several different types of JAMAR equipment, so not all options in the program apply to the Echo. Settings that do not apply are disabled when connected to a Echo. The settings we'll use are Time, Date, Site ID and Site Code.

The Time and Date listings in the TCU can either be manually typed in or read from your computer's clock. To enter a time or date manually, be sure the *Use PC Time/Date* box on the left side is unchecked. If you place a check in this box, the TCU will use the computer's clock for the time and date.

The Date Format field can be used to control how the date is listed in the Echo. The options are USA (month/day/year) or World (day/month/year).

If you want to change the time, date or date format in the Echo, be sure to check the *Set Time/Date* box on the left side of the TCU. If this box is not checked, the TCU will ignore the time, date and format settings when uploading to the Echo.

The Site Code is a description that can be saved with the Time-stamped study to help you identify the location of the data when processing it. These values are part of the Site Code field in TCU. Note that you are not required to use these fields for your studies, they are provided for those users who would like to use them.

The second line of the Site Code field is used to enter the Site ID, while the third line is used for the Station ID. (The first line is not used with the Echo and is disabled.) You can enter any information in these fields that will help you identify the count.

Once you have the Date and Time set the way you want, and have entered any Site information, you are ready to upload this information. First, make sure the display of the JAMAR Echo is visible, then click the *Configure Unit* button in TCU. The '*Finished!*' screen should then appear, which indicates that the upload was successful.



Note that several other settings specific to the Echo can be uploaded using the TCU program. These are in the field on the far right side of the TCU.

The **Sensitivity** level can be set (refer to page 1-8 for more information on this setting), as well as the Repeat Time, Max Repeat and DT.

When multiple vehicles pass the Echo in quick succession, the sound from the two vehicles can merge together. The **Repeat Time** setting allows you to address this.

Enter, in milliseconds, how long the Echo should wait before it assumes the sound it hears is from more than one vehicle and records a second count. The default setting is 3000 ms, which should work well for typical traffic speeds from 25-45 mph. If the Echo appears to be undercounting the vehicles in platoons, decrease the number.

For small platoons, the Repeat Time works well. However, for larger platoons this can cause the Echo to begin overcounting. To reduce the impact of large platoons, the **Max Repeat** setting is used to limit the number of detections from a single platoon. The default value for this is 3.

The **DT**, or Dead Time, setting allows you to enter a period of time, in milliseconds, that the Echo will wait after it records a count before it will accept another one. This setting can help to prevent 'double-counting' of individual vehicles. The default value is 500 ms. If the Echo appears to be double counting vehicles, increase this value. If the Echo appears to be missing vehicles that are close together and undercounting, decrease this value.

Downloading the JAMAR Echo

Time-stamped counts done with the JAMAR Echo can be analyzed with the TRAXPro software, a comprehensive data analysis program from JAMAR. If you do not already own this program, an evaluation copy can be downloaded from the JAMAR web site for trial.

The download of data is done through the serial port on the Echo using a serial cable, such as the JAMAR universal cable. (It is not required that a JAMAR cable be used. Any compatible RS-232 serial cable will work.)

Note that time-stamped data in the Echo can also be retrieved and processed using the free JPDA & JRead software. This can be done through either connecting to the Echo's serial port or wirelessly using the Echo's Bluetooth wireless connection. Using the JPDA & JRead software is covered in the next chapter.

To prepare to download your data, connect the serial cable to a serial port on your computer. Most serial ports are a 9 pin plug, and there may be more than one on the computer. The ports may be labeled on the computer itself with COM 1 listed as 1 or A and COM 2 listed as 2 or B. Refer to chapter 5, *Troubleshooting*, for tips on avoiding problems when using a computer's serial port.

Once the serial cable is plugged into the computer, plug the other end into the Echo.

You cannot download studies that are currently in progress. If you have a count in progress that you would like to download, you must end the study by pressing TAB until *Stop?* is visible, then pressing DO.

On the Echo itself, you must have the display visible to download data. If the unit is in power saving mode and the display is not visible, hit either the TAB or DO key to bring it back up. Once the display is visible, the download will transfer all time-stamped studies currently stored in memory.

At this point, refer to the TRAXPro software manual for information on how to setup the software for downloading. Note that the Echo will automatically sense whatever baud rate you select in the software. The higher the baud rate, the faster your data will be downloaded.

Downloaded counts will remain in the memory of the Echo until they are cleared. Refer to page 1-8 for information on how to clear the memory.

Important: Do not clear the memory of the Echo until you are certain that the data has been successfully downloaded to you computer.

Chapter 2

Using the JPDA Software

Introduction to JPDA

JPDA is free interface software for the JAMAR Echo that runs on a Personal Digital Assistant (PDA). This program is designed to make setup of the JAMAR Echo, and retrieval of data from it, a more convenient process. Data that has been retrieved with JPDA can be transferred to a desktop computer using the free JRead software. JRead allows the data to be processed and output to a TRAXPro or Excel file, along with other formats.

Supported PDAs

JPDA currently runs on Pocket PC based PDAs. It does not currently support Palm PDAs. In general, almost any Pocket PC version PDA made in the last couple of years should work. There are several companies that sell Pocket PC PDAs, with the most popular being those made by Hewlett Packard (the Ipaq series). Regardless of brand, Pocket PC PDAs look very much the same since they run the same operating system.

Choosing which PDA is right for you can be complicated because there are many different features available. However, JPDA will be much more useful if the PDA you use has Bluetooth wireless capability. With JPDA software running on a PDA equipped with Bluetooth wireless capability, it is possible to setup and retrieve data from the Echo without ever having to remove it from the field.

Software Updates

Updated versions of JAMAR software are released periodically and are posted on the JAMAR web site. Users of JPDA may download updates to the program to make sure they always have the latest version of the software on their PDA. To download the latest version of JPDA, go to **www.jamartech.com** and then select Downloads from the list of options.

Software Support

If you encounter any problems while using the program, or have any questions on specific operations, refer first to this manual. For up to the minute information on all known issues with the program, refer to the JPDA support web page at: **www.jamartech.com/JPDAsupport.html**.

Installing The Software

It is a simple process to install JPDA on your PDA. It is required, though, that you have set up an ActiveSync partnership with your desktop computer. If you are unsure of how to do this, consult the instructions that came with your PDA.

It is recommended that you place your PDA into its cradle and allow ActiveSync to run prior to starting the installation procedure. The installation software will use ActiveSync to copy the files to your PDA.


Place the JPDA CD into the CD drive of your computer. The computer should recognize the new CD and show you the Installation Options, including one to **Install JPDA**. Select this option.

Installing .NET Framework

If this is a new installation, you must first install the .NET framework for your PDA's operating system. If you are unsure of what operating system is running on your PDA, on the PDA go to the Start menu, then select *Settings*, select the *System* tab and click on *About*. Note that JPDA only supports the Windows Mobile 5.0 or 2003 operating systems.

Click on the installation button for your PDA's operating system, and the installation of the .NET framework will begin. During installation you'll see a screen similar to the one shown to the left.

Once the installation is complete, you'll see a screen prompting you to check your PDA to see if any additional steps are needed. On the PDA itself, you may be prompted to restart.

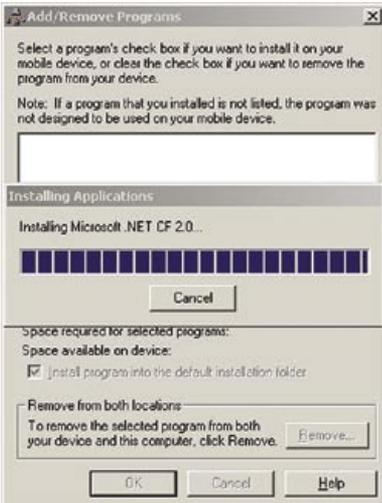

Installing JPDA

Once the .NET framework is installed, you are ready to install JPDA. Click on the *Install JPDA* option on your computer. When the first installation screen appears, click *Next*.

Next you will see the License Agreement displayed on the screen. If you agree to the terms of the agreement, select the *I accept the terms in the licence agreement* option and click the **Finish** button.

Active Sync connects to the PDA and begins installing the program. When complete, you'll see a screen prompting you to check your PDA to see if any additional steps are needed.

Once you've installed your JPDA software, the icon for JPDA has been added to your list of applications on your Programs Screen of the PDA. You tap on the **JPDA** icon to run the software.

Installing JRead

JRead is a utility program whose purpose is to allow you to transfer the data in your PDA to your computer for processing.

The JPDA CD **Installation Options** should still be running on your computer. If not, re-insert the CD.

Select the **Install JRead** option and the installation for the program will begin. When the Welcome screen appears, click *Next*. The next screen details the license information for the program. To accept the license agreement and continue with the installation, click *Yes*.

The Read Me file for the program will then be displayed. Click *Next* to continue.

The Choose Destination Location screen then appears. You can use this screen to select where the program is installed. To use the default location, click *Next*.

The Select Program Folder screen allows you to select the program folder for the installation. To use the default location, click *Next*.

At this point you have provided all the information necessary to start installing the program. A summary of the information is provided. Click *Next* to begin copying files.

Once all the files have been copied, the InstallShield Wizard Complete screen will appear.




Getting Started

Once you have installed JPDA and JRead you are ready to start using JPDA. Tap on the JPDA icon in the Programs menu. This loads the Main screen.

Main Screen

The Main Screen is arguably the most important screen in the software. Nearly all of the software's functions can be accessed from this screen. The main options on this screen are:

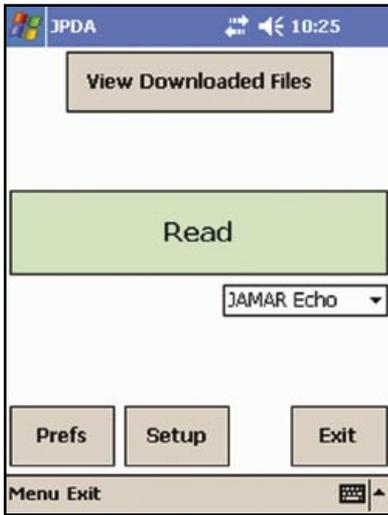

View Downloaded Files - View a list of downloaded files.

Read - Retrieve data from the Echo.

Prefs - Set Preferences for JPDA.


Setup - Upload settings to the Echo.

Once you initiate a task from the Main screen, you will be presented with another screen specific to that particular operation, such as reading the Echo. When the task is completed, you will return to the Main screen.

If this is your first time using JPDA (if you're reading this, it probably is), then you will need to provide JPDA with the proper Preference Settings. Tap the **Prefs** button at the bottom of the screen. This opens the Preference screen.

Preferences Screen

The Preferences screen allows you to adjust the major parameters of JPDA. You can select the port number and baud rate that will be used to communicate with the data recorder by selecting the desired option from each drop-down box.

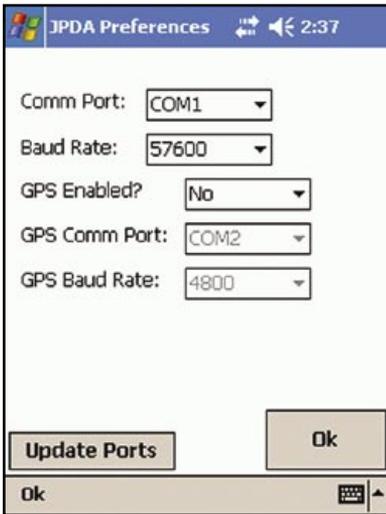

Set the **Comm Port** to **1** if you'll be connecting through your PDA's cradle port connector.

If you'll be connecting via wireless Bluetooth, select the *outbound* bluetooth port of the PDA. This is typically the second port listed with the (BT) suffix in the list of ports.

If you'll be connecting using an adapter plugged into the CF slot, select the port option listed with the (CF) suffix.

Set the **Baud Rate** as desired. This controls the speed of the data transfer.

The higher the number, the faster the transfer. Some older PDA's may not be able to handle baud rates over 19200 baud. For now, select 57,600 as the baud rate.

JPDA allows you to use a GPS receiver to store the exact location of the study along with the data, if you have a GPS receiver plugged into your PDA. Enable this if you are using GPS, otherwise leave it set to 'No'.

Now JPDA's settings are tailored to your equipment and the program is ready to be put to work for you. Tap **Done** to return to the Main screen.

Setup Screen

JPDA can be used to configure a number of settings in the Echo. First, select *JAMAR Echo* from the dropdown list below the big Read button on the Main screen. Next, tap the *Setup* button and the Setup screen will appear.



If you are planning to do a time-stamped study with the Echo, this screen allows you to load information related to that study into the Echo. To do this, you will need to connect to the Echo using either a wireless Bluetooth connection or by plugging into the comm port on the Echo. This tutorial covers using a wireless connection; however, the steps are essentially the same using a hard wire connection.

When the Setup screen comes up, it shows the time and date in the *Set Clock* field at the top. These are read in directly from the time and date on

the PDA. If they are not correct, close JPDA and reset the time and date on the PDA itself.

If the Set Clock checkbox is checked, then JPDA will set this time and date into the Echo when you perform the upload.

Below the clock field are the Site Code and Station ID fields. Whatever you put in here will show up in the corresponding fields when the study is processed, and can be printed on reports with the data. You can fill in the fields however you wish.

Note that it takes a little bit of practice to enter text and numbers into a PDA. The easy way to do it is to use the popup keyboard and tap the letters and numbers to enter the information. You can also learn to enter letters and numbers using the handwriting recognition option that is part of all PDAs. With a little practice you can learn to enter the letters and numbers much faster than with the popup keyboard.




Once you have the information entered that you want, tap the *Upload Info* button to begin the transfer to the data recorder.

If you are using Bluetooth, and the PDA is able to find an available Bluetooth-equipped device nearby, you'll see a screen like the one shown to the left.

This screen allows you to select the Bluetooth device you want to connect to. Each Bluetooth-equipped data recorder is listed with its serial number, so if you have multiple devices you can choose a specific one.

Tap on the Echo you want and the setup info will be transferred. You will then be returned to the Setup screen.

If you ever want to check what information is currently stored in your Echo, the *Get Info* button basically does the reverse of the Upload Info button. Tap *Get Info* and JPDA will read in the Site Code, Station ID and GPS info that is currently stored in the Echo.

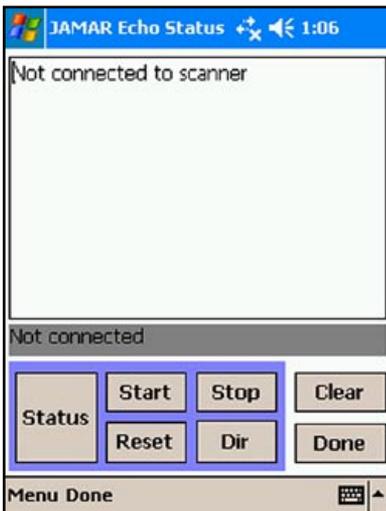


Status Screen

Another option on the Setup screen is Status. Tap this button and you'll be taken to the Status screen, as shown to the left.

The Status screen allows you to control a variety of commands for the Echo, including starting and stopping a time-stamped study (*Start* and *Stop* buttons), resetting the total on the unit's display (*Reset* button), checking to see a list of time-stamped studies stored in memory (*Dir* button) and deleting all studies from the memory of the recorder (*Clear* button).

In addition, this screen can be used to check the current volume total from the Echo's display.

Tap the green Status button at the lower left of the display to check the current status of the Echo. If you are using Bluetooth, you have to select the device you want, as described in the previous section.

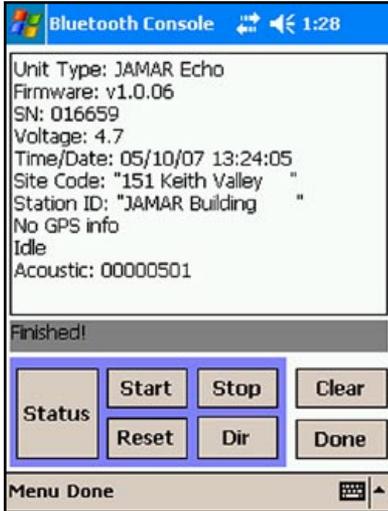

If JPDA is able to connect to the Echo, it will display the unit's status, as shown to the left.


The top line displays the unit type. This is followed by the firmware version. The next line displays the Echo's serial number, which is followed by the current battery voltage. The fifth line displays the Time and Date, which is followed by any Site ID and Station ID information that has been uploaded into the unit. The eighth and ninth lines list any GPS coordinates that have been stored. The next line lists whether the

Echo is recording a time-stamped count or is idle. The final line list the current total on the Echo's display.

Now that we've checked the status of the Echo, we can have it start a new time-stamped count for later downloading. To do this, we tap the *Start* button to begin a new time-stamped count. A confirmation screen then tells us the count has started.

Retrieving Data from the Echo

The main purpose of JPDA is to allow you to retrieve data from a JAMAR data recorder, like the JAMAR Echo. There are many different types of JAMAR equipment that can be used with JPDA, so first use the dropdown menu just below the Read button to select the JAMAR Echo. Once this has been selected, tap the big *Read* button.

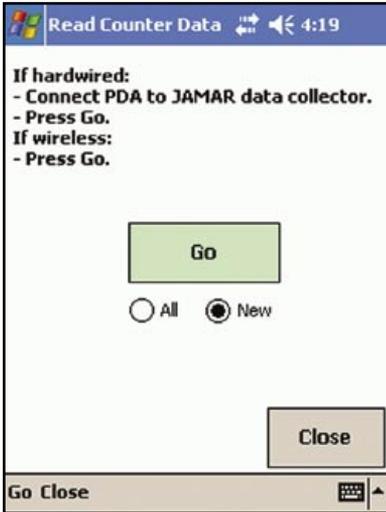

The **Read Counter Data** screen is fairly easy to use. There's just one option on the screen to deal with: whether you want to read *all* the studies in your Echo, or just the *new* studies in the Echo.

The Echo can have multiple studies from different times stored in memory. JPDA is able to recognize which of these studies have already been downloaded and which are new. The All/New option lets you take advantage of this.

When you download your data, if you only want the new studies done since you last downloaded, you should select the *New* option. However, if, for whatever reason, you want to download all the studies stored in memory (both old and new), select the *All* option.

The default option is to download just New studies. We recommend leaving this selected unless you have a specific reason to change it to All.

Note: You cannot download studies that are currently in progress. If you have a study in progress that you would like to download, you must end the study before attempting to download.

Once you have the option you want, you are ready to read your data. If you are using a hardwired connection (a cable connected from the PDA to the Echo), make sure the cable is properly connected, then press Go. If you are using a wireless Bluetooth connection (no cable connected to the data recorder), just press Go.

The rest of this tutorial covers using a wireless connection; however, the steps are essentially the same using a hard wire connection.

Reading Data with Wireless Bluetooth



If you are using a wireless Bluetooth connection to connect to the Echo, when you tap the *Go* button JPDA will attempt to find all the nearby Bluetooth devices. You'll then see a screen similar to the one to the left.

This screen allows you to select the Bluetooth device you want to connect to. Each Echo is listed with its serial number, so if you have multiple devices you can choose a specific one.


Tap the device you want to connect to and JPDA will attempt to connect. If successful, the screen will change to

show the message 'Downloading Block:' followed by a number representing the block of data that is being read in. (Each block represents approximately 1000 characters.) JPDA doesn't know how many blocks the Echo is going to send, it just processes each block until the Echo is done.

Note that if JPDA is not able to connect, the screen will show an error that the download has timed out. In this case, see the troubleshooting chapter for issues to check.

Once the download is complete, the View Downloaded Files screen will appear.

View Downloaded Files

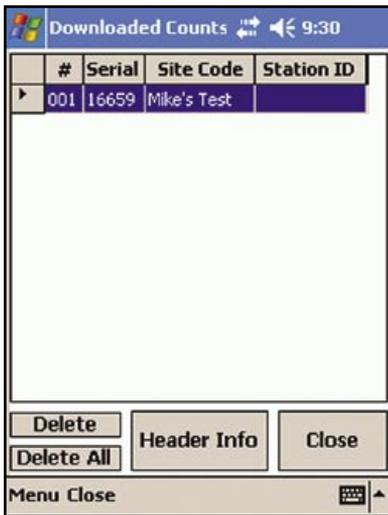


When you have finished downloading data from your Echo, the View Downloaded Files screen appears, as shown to the left.

Note that you can also access this information at any time from the Main screen by tapping the *View Downloaded Files* button.

This screen allows you to see what data files are currently stored in JPDA. The serial number of the data recorder from which the file was read is listed, followed by any Site Code and Station ID that were stored with the file.

Note that this screen can be used if you want to delete any of the data files stored in the JPDA. To delete an individual file, highlight it by tapping on it, then tap the *Delete* button. To delete all the files, tap the *Delete All* button.

If you want to see more details of a particular file, highlight the file by tapping on it, then tap the *Header Info* button.

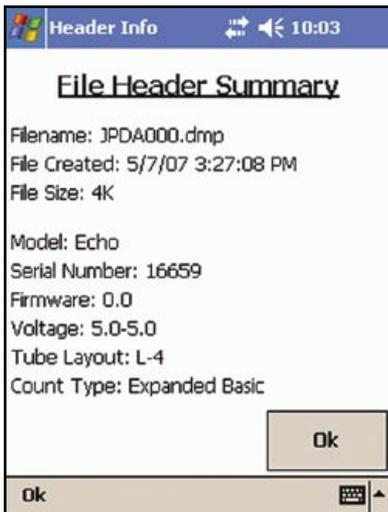

This screen, shown to the left, provides additional information about the file you selected.

The information provided includes the date and time the file was read into JPDA, the type of data recorder it was from, the serial number of the data recorder, and more.


Tap OK when you are done looking at the file details and you'll be returned to the list of downloaded files. Tap Close to return to the Main screen.

Transferring Data from JPDA with JRead


Once you have read the data from your JAMAR Echo into JPDA, you'll need to transfer that data to your laptop or desktop computer for data processing. This transfer is accomplished using the JRead program.

JRead was included with your JPDA CD. If you have not already installed the program, do so now. Directions on how to do this are on page 2-4.

Once JRead is installed, plug your PDA into your computer and let them connect via ActiveSync.

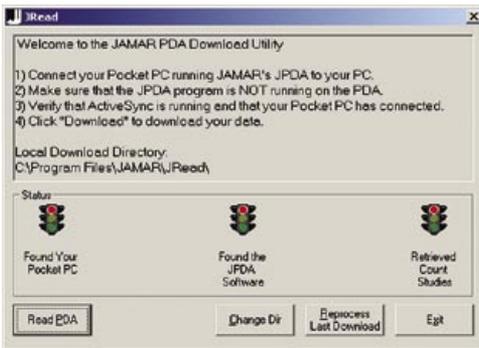

The figure to the left shows the screen you see when you run the software. This screen reminds you to have the PDA in the cradle and to have Active Sync running on your computer.

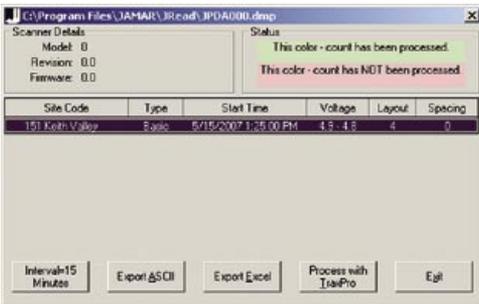

Click the *Read PDA* button when you are ready. The software connects to the PDA using the Active Sync software and copies several temporary files, containing all the data in JPDA, from the PDA into a folder on your computer. You will then see the screen shown to the left.

This screen lists all the studies that have been transferred from JPDA, with the currently selected study highlighted in black. All other studies will be colored light red, indicating that they have not yet been processed. Note that once a study has been processed from the list, it will be colored green.

You are given several options for how to process the studies, the most commonly used being the *Export Excel* and *Process with TRAXPro*. In the Excel format, your data will be converted into a standard Excel spreadsheet file, which you can then open with that program for analysis or reporting.

To export a file into Excel, the first thing you need to do is select the interval length for the data. This is done by clicking on the *Interval=* button on the left of the button row.



When this button is selected, a list of the available interval lengths is shown. The options are: Time Stamp, 1 Minute, 5 Minutes, 10 Minutes, 15 Minutes, 30 Minutes and 60 Minutes.

The Time Stamp option produces a file listing the individual time stamp (to the second) of every recording in the study.

The other options will group the data into the interval time selected. Below are examples of the exported time stamp and 15 minute interval formats.


Event #	Time	Direction
1	12/1/2006 4:09:20 PM	1
2	12/1/2006 4:09:45 PM	1
3	12/1/2006 4:09:55 PM	1
4	12/1/2006 4:12:05 PM	1
5	12/1/2006 4:12:11 PM	1
6	12/1/2006 4:12:27 PM	1
7	12/1/2006 4:12:45 PM	1
8	12/1/2006 4:12:59 PM	1
9	12/1/2006 4:13:13 PM	1
10	12/1/2006 4:13:49 PM	1
11	12/1/2006 4:14:10 PM	1
12	12/1/2006 4:14:32 PM	1
13	12/1/2006 4:14:49 PM	1
14	12/1/2006 4:15:09 PM	1
15	12/1/2006 4:15:40 PM	1
16	12/1/2006 4:16:13 PM	1
17	12/1/2006 4:16:56 PM	1
18	12/1/2006 4:17:13 PM	1

Time	Direction
12/01/2006 04:00:00 PM	13
12/01/2006 04:15:00 PM	16
12/01/2006 04:30:00 PM	19
12/01/2006 04:45:00 PM	24
12/01/2006 05:00:00 PM	26
12/01/2006 05:15:00 PM	26
12/01/2006 05:30:00 PM	28
12/01/2006 05:45:00 PM	26
12/01/2006 06:00:00 PM	19
12/01/2006 06:15:00 PM	17
12/01/2006 06:30:00 PM	14
12/01/2006 06:45:00 PM	10
12/01/2006 07:00:00 PM	6
12/01/2006 07:15:00 PM	7
12/01/2006 07:30:00 PM	6
12/01/2006 07:45:00 PM	5
12/01/2006 08:00:00 PM	4
12/01/2006 08:15:00 PM	3
12/01/2006 08:30:00 PM	3

In the Time Stamp format, each recording in the study is listed with its time stamp. For example, in the Time Stamp study shown above, the first recording occurred at 4:09:20 PM.

In the Interval format, the recordings in the study are grouped together into the interval time period selected. For example, in the 15 Minute study shown above, the first time listed is 4:00:00 PM and the second time listed is 4:15:00 PM. This means that the data in the first listing covers the time from 4:00:00 up to 4:14:59. In our example, we see that there were 13 recordings in this time period.

Once you have selected the Interval Length you want, click OK. Next, click the *Export Excel* button and you will be prompted to assign the file a name and select a folder to save it in.

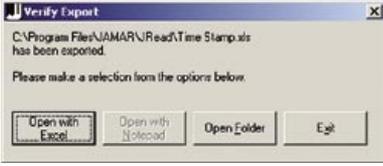

Once you click Save, the Verify Export window will appear, as shown to the left. This window allows you to either directly open the newly created file with Excel, open the folder where the file was

saved, or exit back to the JRead processing screen.

In addition to the Excel format, you also have the option to save the data in an ASCII format. This is a standard comma-delimited text format which can be opened with any word processing program, like Word or Notepad. The interval options and saving process for this format are the same as for the Excel format.

The final option you have for processing the data is with the TRAXPro data analysis program. This is the software also used with JAMAR TRAX traffic data recorders and contains comprehensive analysis and reporting capabilities.

Processing for this format is done directly with TRAXPro, so if you own this program and would like to use it, at this point you would exit the JRead software and start TRAXPro.

In TRAXPro, go to the *Tools* menu and select *Re-process Last TRAX Dump*. Change the directory to the JRead path, then select the *JPDA000.dmp* file from the list. You can then process the files as you normally would with TRAXPro. Refer to the TRAXPro manual for more details.

Chapter 3

Installing the JAMAR Echo

The JAMAR Echo is designed to be mounted to a tree, sign post or pole. For ease of installation, we recommend using the mounting bracket included with the Echo's installation kit. This kit contains all the equipment needed to install the Echo in the field.



Installing the Mounting Bracket

The mounting bracket included with the Echo is designed to help make the installation of the unit as easy as possible. This bracket can be attached to the back of the Echo using the steps described below.

Insert a long screw through one of the screw holes in the front of the Echo. Using the screwdriver included with the kit, attached one of the L clamps to the back of the unit, facing inward.




Repeat the process to attach the second L clamp to the back of the unit.



Chapter 3 — Installing the JAMAR Echo

Insert the long clamp between the L clamps and secure with four screws.

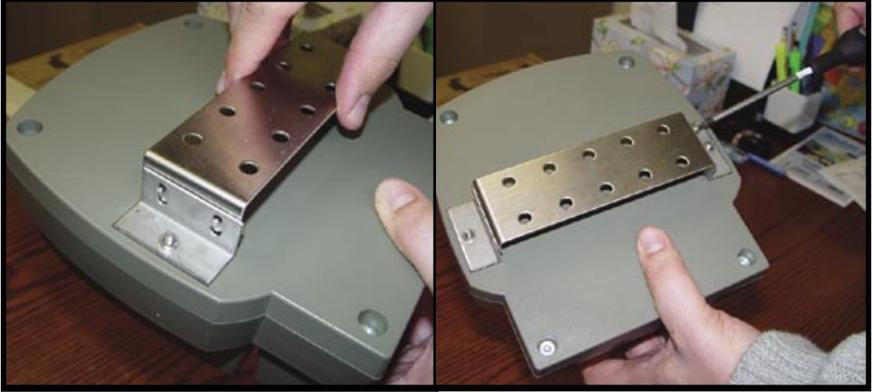

Run the installation cable through two of the holes on the mounting bracket.



The Echo is now ready to be taken into the field for final installation.

Installing the JAMAR Echo in the Field

The JAMAR Echo is designed to be mounted to a tree or pole about 4 to 5 feet from the ground. It should be set about 5-12 feet back from the roadway to be monitored, with the front of the Echo facing the roadway. It should be parallel to the road so that the acoustic sensor is aimed directly across the road.



What makes for a good location?

There are a few question you should ask when choosing a location to install the Echo.

1. Is the area chosen particularly noisy?

To record the most accurate data, the Echo needs to be mounted so that it is not in an overly noisy environment. Do not place the Echo near a playground, near an airport or close to construction zones. All these types of sounds could possibly trigger the Echo to count.

2. Is there anything at the location that will help hide the Echo?

The less visible the Echo is, the less likely it is to be vandalized. If you are planning on mounting the Echo to a tree, look for a tree with a large trunk.

A larger trunk will help hide the outline of the Echo, as well as be more stable in the wind. Mounting the Echo where it will be concealed by a bush or tree branches will hide the Echo very well, but may require that the foliage be trimmed periodically to keep it from blocking the Echo.

3. How easy will it be to reach the Echo?

To retrieve the data, if you are not using a wireless connection (see Chapter 2), you will need to be able to remove the front panel and either read the display or connect a serial cable. For convenience, you will want to be able to access the unit easily. However, to deter vandals, you may want to compromise in that area.

4. How far does the Echo need to record?

The Echo will record data up to a maximum of 45 feet. We do not recommend that you attempt to record data beyond this distance.

Once you have selected the installation location, wrap the installation cable around the pole or tree you have selected, pointing the Echo toward the spot to be counted. Thread each loose end of the installation cable through the cable clamp as shown in the picture below.



Pull the cable ends tight so that the Echo is tight against the tree or pole, then tighten the nuts on the cable clamp using the installation kit's nut driver, as shown in the figure below.



The JAMAR Echo is now installed and ready to begin recording data.

Chapter 4

Battery Care

Battery Care

The JAMAR Echo is powered by four D-Cell batteries. Use of low power electronics in the Echo makes it possible for the batteries to last up to several months, depending on use.

The main screen shows the current battery voltage. Fresh batteries should read from 5.8 to 6.0 volts. Batteries should be replaced when this voltage falls to around 4.5 to 5.0. The unit will stop recording data once the voltage falls to approximately 4.0 volts.

The front compartment of the JAMAR Echo contains the battery holder. The batteries can easily be popped out and replaced. You should use high quality alkaline batteries, which you can get at any convenience store.

The overall volume total shown on the main screen of the Echo will reset if the batteries are removed. However, any data collected in Time-stamped mode will be retained in memory by an internal lithium battery even if the D-cell batteries are removed. Just to be safe, however, we suggest that you download the data in memory to your computer before you replace the batteries, then clear the memory after the new batteries are installed to reset everything properly.

*******IMPORTANT*******

Be very careful to observe the proper polarity when installing new batteries. Prolonged use of the JAMAR Echo with incorrectly installed batteries can cause batteries to burst, damaging the unit.

Do not mix old batteries with new batteries, or mix brands of batteries, when replacing the batteries. This can cause batteries to burst, damaging the unit.

We recommend that you keep track of when you have changed the batteries in the Echo, and establish a regular routine for changing them. This should help to avoid having to change the batteries in the middle of a study.

Chapter 5

Trouble shooting

Troubleshooting

The following are some common questions/problems that can be encountered when using the JAMAR Echo. The possible answers that are stated with them are not necessarily the only answer, but should be checked first before contacting us. If you cannot find the answer to your problem/question, do not hesitate to contact us. Contact information is listed on the first page of this manual.

There is no display visible on the JAMAR Echo.

Check that the unit is not in its power-saving mode. The display automatically goes out when the Echo has not been disturbed for several minutes. To bring the display back up, hit the 'DO' or 'TAB' key.

The display on the JAMAR Echo will not come on.

The battery voltage may have gone too low to power the display. Replace the batteries, then see if the display comes up. Note that this will reset the total to zero on the Echo's display.

The data is not being collected in the format desired.

When turned on, the Echo collects overall volume data, which is shown on the right side of the display. To start the time-stamped data collection format, where each activation is stored in memory with a time stamp, press the 'TAB' key until "Start?" is displayed, then press the 'DO' key.

The data produced is not accurate.

Make sure that you have not installed the Echo in an overly noisy environment. Since the Echo counts by 'listening' to vehicles passing, loud ambient noises can cause it to mis-count. Refer to page 3-4 for more tips to selecting a good location.

A number of settings on the Echo can also be adjusted to improve accuracy, depending on your counting location. The first to check is the Sensitivity Setting, which can be adjusted from the default setting to *High* or *Very High* if the Echo appears to be undercounting, or *Low* or *Very Low* if the Echo appears to be overcounting. Refer to page 1-8 for more information on the Sensitivity setting.

Other adjustment settings include the Repeat Time and Dead Time, which are discussed on page 1-12.

GPS coordinates will not load from a GPS receiver.

Check that the GPS receiver has been configured to transmit in the format required by the Echo. The GPS receiver must be set to transmit one of the following NMEA messages: GPRMC, GPGLL or GPGGA.

Cannot connect to the Echo for upload or download.

First, check your connection between the JAMAR Echo and the computer. A serial cable should be plugged firmly into the serial port of the JAMAR Echo and a serial port on the computer. The following tips should help you to avoid problems when download through a computer's serial port.

1) You must correctly identify what port you are plugging the cable into. The 9 pin connectors used for serial ports are also used for serial or parallel printers, mice, plotters, video cards and other devices. Just because your cable fits into a connector on your computer does not mean it is a serial port. Consult your computer instruction manual if you have any questions on which ports are serial ports on your computer.

2) Many computers have more than one Comm port. You will need to know which Comm port you are configured to use. Comm ports are designated as COMx where x is a number from 1 to 16. You will need to know this number to download the unit.

3) Some devices that are plugged into a computer's Comm port will not allow the Echo to download its data properly. These are devices that require a program (called a device driver) to be running in the computer at all times. These device drivers are very self-centered, and think that all the data coming into the Comm port is for them. Digital cameras, mice, digitizer boards, PDAs and light pens are all devices that require these device drivers to be running. If you have to unplug a device from the serial port to plug the Echo in, or if you are using a switch box, be sure that the device does not have a driver running in memory.

4) If you have a conflict with another device on a Comm port, or if your computer does not have a serial port, you can use a USB port by using a USB to Serial Converter. These devices allow serial peripherals, like JAMAR equipment, to interface with a USB port. There are several of these devices available on-line and at computer stores. Go to the hardware support section of our web site for a link to one of these devices that we have tested and found to work well.

Additional support information can also be found on our web site at www.jamartech.com. If you are unable to find a solution to your problem, contact us using the information located on the first page of this manual.

Appendix

Specifications

Size: 6.5" x 4.7" x 3.2"

Weight: Approximately 3.5 pounds

Power: Four D-Cell alkaline batteries

Interface: RS-232 serial communications port, 9 pin DBS socket or Bluetooth wireless connection

Download Speed: Up to 115200 bps

Memory: 256 KB Internal Memory, capable of recording approximately 80,000 vehicles in time-stamped mode.

Clock: Always active real-time clock

Data Collection Formats: Total Volume, Time-stamped raw data

Input: Acoustic Detector

Temperature Range: Minus 4F (-40C) to 131F (55C)

Display: Wide Temperature, 16-character LCD display

Output: Binary file capable of being read by JAMAR TRAXPro software and JAMAR JPDA software

We are pleased that you have chosen the JAMAR Echo for your data collection needs. We have strived to develop a unit that is easy to use, yet highly accurate. The Echo has undergone extensive testing to verify the accuracy of its operations, and each unit is tested before it leaves our facility. However, just like other complex electronic devices, problems can occur. We always suggest that users verify the continuing accuracy of any device they use. Verification against manual counts should be performed on an annual basis to assure proper operations and results.

Should you detect any problems with any of our products, please notify JAMAR Technologies immediately and discontinue use of the unit until we have verified its operation.

