



AL242C-EVB-A1 Evaluation Board

User Manual Version 0.7

Document Number: 1-M-PAE142-0001



Amendments

Jan. 25, 2005	Preliminary version A0.1			
Feb. 01, 2005	Preliminary version A0.2			
	 Update Evaluation Kit Setup 			
Mar. 29, 2005	Preliminary version A0.3			
	1. Revise Component Input Y0/Y1			
	2. Update Evaluation Kit Setup			
Apr. 21, 2005	Preliminary version A0.4			
	 Update Evaluation Kit Setup 			
	Add a table for function indicator LEDs			
Apr. 29, 2005	Preliminary version A0.5			
	 Add Software Section 			
Aug. 16, 2005	Preliminary version A0.6			
	 Update Evaluation Kit Setup 			
	Add a table for function Binary Switch.			
	Add a table for function Dip Switch.			
	4. Add a table for special function definition of Push Buttons			
Nov. 24, 2005	Preliminary version 0.7			
	 Update title and version number 			
	Update contact information			



TABLE OF CONTENTS

1.	Introd	luction	4
	1.1.	Introduction	4
	1.2.	Product Overview	4
2.	Hardw	vare Section	5
	2.1.	Evaluation Kit Contents & Requirement	5
	2.2.	Evaluation Kit Configuration	5
	2.3.	Evaluation Kit Setup	
3.	Softwa	are Section	
	3.1.	Introduction to the Development Tool and its GUI	11
	3.2.	Interface selection	11
	3.3.	I/O Configuration	12
	3.4.	Decoder	
	3.5.	Debug	13
	3.6.	Encoder	13



1. Introduction

1.1. Introduction

This AL242 Evaluation Kit is specially designed for evaluating the AL242 Adaptive 2D Comb Filter Video Decoder. The Evaluation kit allows maximum flexibility for optimizing various input and output modes for specific applications. Using the hardware and software provided in the Evaluation Kit, Standalone and PC-Based mode can be demonstrated. In addition, there are many new functions that hardware and software provided in this edition.

- 1. Binary Switch
- 2. Fast Channel Switch
- 3. Close Caption VBI detect and display
- 4. Macrovision™ copy-protect signal detect

1.2. Product Overview

AL242 Adaptive 2D Comb Filter Video Decoder

The AL242 is silicon efficient, cost effective high video quality NTSC/PAL/SECAM video decoder with 2D-Comb filter adapted respectively. The AL242 decodes NTSC/PAL/SECAM composite video, S-video or component video and converts it into YUV 4:2:2, 8-bit digital video respectively. Employing adaptive 2D comb filter technology, the AL242 is able to provide the high quality Y/C separation while maintaining excellent frequency response. The result is sharp, high detail video that eliminates unwanted dot crawl and false color effects. Fully programmable video characteristic control, such as hue, contrast, brightness, saturation, are supported. The AL242 decoder incorporates an advanced vertical blanking interval (VBI) data processor to do data slicing, parsing and decoding teletext, closed caption, and other formats. The Macrovision™ copy-protect signal is auto-detected and report to the registers. Two wires of fast channel switching input allow decoder to do an instant alternation of analog CVBS input from one to the other. Up to 4 serial bus addresses can be selected via 2 configuration pins that allows multiple AL242 chips on the design without extra logic.

The AL242 operates under the low power voltages (3.3V and 1.8V) with 64-pin Lead Free (PBF) LQFP package.



2. Hardware Section

2.1. Evaluation Kit Contents & Requirement

The Evaluation Kit includes all of the specific software and hardware required to evaluate the AL242. Included in the Evaluation Kit are:

- AL242 Evaluation Board x 1
- 12V/1A Power Adapter x 1
- Power Core x 1
- ♣ Video Connection Cables x 3 (CVBS, S-Video & Component)
- EVB User Manual
- RS232 Cable x 1 (By request)

2.2. Evaluation Kit Configuration

The AL242 EVB consists of the AL242 video decoder, TV encoder, 8051 MCU and other components. The AL242 accepts four CVBS (Composite), two S-Video (Y/C) or one YPbPr (Component) inputs with adaptive 2D comb filter quality. The video encoder outputs CVBS, S-Video or Component (YPbPr) for TV display. By using an 8051 MCU, this Evaluation Board can be operated in Standalone Mode without connecting to PC.

The default Dip switch and Binary Switch settings should be set as "OFF" and "O"as shown in Figure 1. AverLogic recommends that the default settings be used initially to bring up the evaluation board. The locations and descriptions of jack connectors and push buttons are also shown in Figure 1.



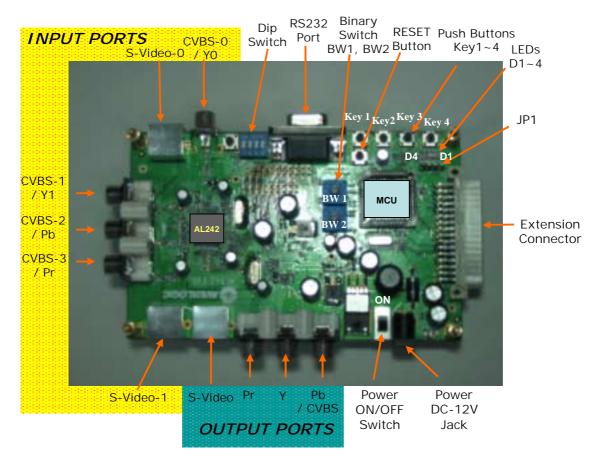




Figure 2. Front Side of Evaluation Kit



2.3. Evaluation Kit Setup

- 1. Verify that all of the switches of Dip Switch (SW1~4) are at "OFF" position. SW1~2 are set the default slave address. SW3~4 are set the Input Source when system enter Fast Channel Switch mode. The function definition of Dip Switch shown in Table 1.
- 2. Verify that all of the switches of Binary Switch (BW1~2) are at "0" position.
- 3. Connect the video cable of required input source to INPUT PORTS. (The default input source is CVBS-0.)
- 4. Verify video system. (The default is Auto-Detection for NTSC or PAL-I video system.)
- Connect S-video (recommend) or CVBS cable from the OUTPUT PORTS of AL242 EVB to a TV display. (The default output mode is S-Video/CVBS.)
- 6. Verify power supply cable is connected to the Power DC-12V jack.
- 7. Turn ON the Power ON/OFF Switch.
- 8. The EVB will go into Default Operating mode. Power indicator LEDs (D10 & D11) will be illuminated RED. Function indicator LEDs (D1~D4) will be illuminated GREEN for NTSC. The descriptions of function indicator LEDs are shown in Table 2.
- 9. If the input video system is other than NTSC or PAL-I, or the EVB cannot output correct video in any case, many default settings can be loaded through changing the settings of BW1~2. Rotate binary switch to the proper position and press "RESET" button, the system will enter Manual-Setting mode. Using the function definition of Binary Switch in Table 3, the flexible combinations can be evaluated.



- 10. When pressing any push button at any time, the system will enter Manual-Setting mode. Using the function definition of Push Buttons and LEDs shown in Table 4, the flexible combinations can be evaluated. All push buttons Key1 to Key4 must be set to enter the right settings.
- 11. How to use Fast Channel Switch?
 - I. Manual Mode
 - (1) Rotate Binary Switch BW1 to Fast Channel Switch Mode and turn on the power.
 - (2) Using Dip Switch SW3~4 to select the Input Source between CVBS-0~CVBS-3.

II. Auto Mode

- (1) Verify that Dip Switch SW3~4 are at "OFF" position.
- (2) Verify that Binary Switch BW1 is at "0" position.
- (3) Press Key3 and Key4 at the same time, system will enter Auto Fast Channel Switch Mode. Once the system enter Auto Fast Channel Switch Mode, input source will be switched continuously between CVBS-0~CVBS-3.

(The function definition of Dip Switch and Binary Switch shown in Table 1 and Table 3.)

- 12. The Macrovision[™] copy-protect signal is auto-detected. Once the system detect the Macrovision[™] copy-protect signal, D4 will glimmer continuously. (Only for Auto-Detection Mode)
- **13**. Using the special function definition of Push Buttons shown in Table 5, the system will enter the proper mode according to the button pushed.
- **14.** Using the PC Programming Utility, more EVB functions can be evaluated.



SW1/SW2	Slave ID Setting Reference		
SW1	SW2 Slave Addres		
OFF	OFF	0x2a	
ON	OFF	0x28	
OFF	ON	0x26	
ON	ON	0x24	
SW3/SW4 Input Source Reference			
for Fast Channel Switch			
SW3	SW4	Input Source	
ON	ON	CVBS-0	
OFF	ON	CVBS-1	
ON	OFF	CVBS-2	
OFF	OFF	CVBS-3	

Table 1. The function definition of Dip Switch at Manual-Setting mode.

	rable in the falletier definition of bip exiter at mandal cetting mede			
D1	D2	D3	D4	Description
ON	ON	ON	ON	NTSC
ON	ON	ON	OFF	NTSC-443
ON	ON	OFF	ON	PAL
ON	ON	OFF	OFF	PAL-M
ON	OFF	ON	ON	PAL-N
ON	OFF	ON	OFF	SECAM
ON	OFF	OFF	ON	PAL-CN

Table 2. The descriptions of function indicator LEDs at Default Operating mode.

Binary switch	BW1	BW2	
	(Video Input Source)	(Video Input Mode)	
Number			
	CVBS-0	Auto-Detection	
О		(NTSC&PAL-I)	
		for CVBS-0 and S-Video-0 Input	
	S-Video-0	Auto-Detection	
1		(7 Standard)	
		for CVBS-0 and S-Video-0 Input	
2	Component	NTSC	
3	CVBS-1	NTSC_443	
4	CVBS-2	PAL_I	
5	CVBS-3	PAL_M	
6	S-Video-1	PAL_N	
7	Fast Channel Switch	SECAM	
	Mode		
8		PAL_CN	

Table 3. The function definition of Binary Switch at Manual-Setting mode.



	D4	D3	D2	D1	Description
Key1	CVBS-0	S-Video-0	Component	NA	Video Input
					Select
Key2	CVBS	S-Video	Component	Test	Video Output
				Pattern	Select
Key3	NTSC-3.58	NTSC-4.43	PAL (BDGHI)) PAL-M	Video System
	(D4)	(D3)	(D2)	(D1)	Select
	PAL-N	SECAM	PAL-CN		
	(D3+D4)	(D1+D2)	(D2+D4)		
Key4	Enter Key				

Table 4. The function definition of Push Buttons and LEDs at Manual-Setting mode.

D1~D4: LED1~LED4

Key-1~4: Push Button 1~4 (Do not need to set again the push buttons Key1 to Key4 when changing to another configuration. For example, you can only push Key 2 to change the output mode.)

Key1	Key2	Key3	Key4
VBI	Mode		
	Debug		
		Auto Fast Channel Switch Mode	

Table 5. The special function definition of Push Buttons at Manual-Setting mode.




3. Software Section

3.1. Introduction to the Development Tool and its GUI

- ✓ Window-Based Graphic User Interface (GUI)
- ✓ Easy to demonstrate AL242/240 features
- ✓ Speed up software development and customization

3.2. Interface selection


Users can select a connection interface and set the slave ID.

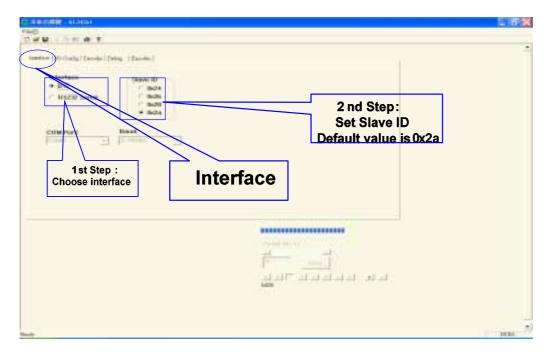




3.3. I/O Configuration

This item helps user to select input source, select output format, and choose the right chip used on their platform.

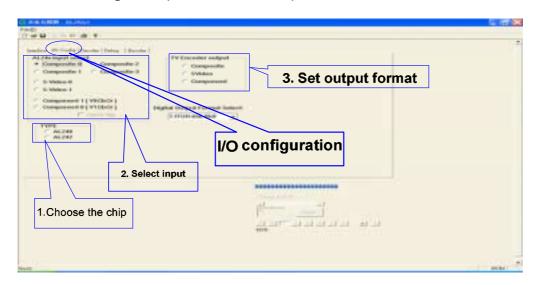

3.4. Decoder


In this item, users can set video system and adjust the value of B/C/S. The additional function is to switch cannel from CVBS1 to CVBS4; this function will benefit the user, especially for the surveillance system. After these setting steps, start up button is required for reset the system.

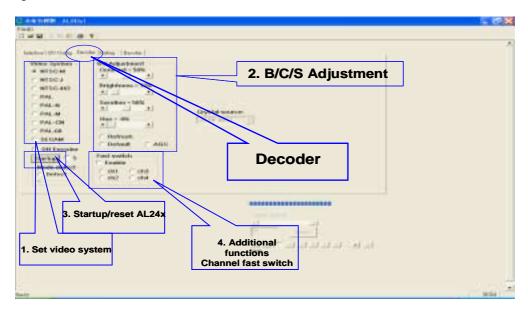




3.5. Debug

The memory window shown at the white block monitors the value of registers. Users can adjust the register value. By moving the address bar, users can move to the address they want to access and adjust the value by turnning on/off the bits.

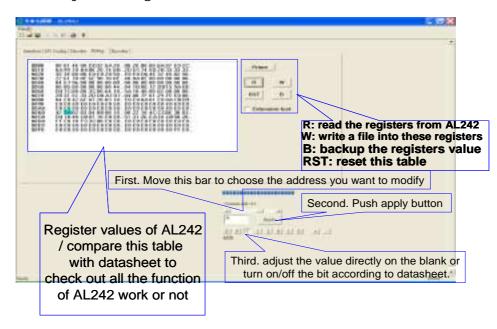

3.6. Encoder

This item is the same as debug item. This memory window monitors the values in the encoder's registers.

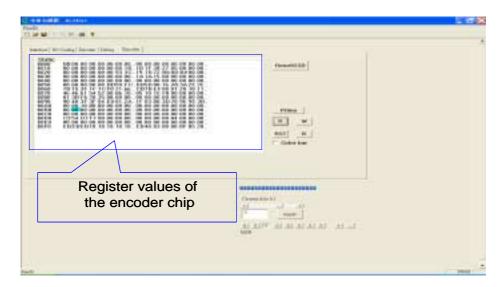



CONTACT INFORMATION

AverLogic Technologies, Corp. URL: http://www.averlogic.com.tw