

# **Egg Boiler User Manual**

## **Important Safeguard**

**Please read the operation instructions carefully to ensure your safety with the appliance before using it.**

- 1) This appliance is only used for the boiling of eggs and is designed for normal domestic use and similar purposes. Do not use outdoor.
- 2) The heating bowl becomes hot during operation and hot steam flows through the openings of the lid. Do not touch the corresponding parts of the appliance to avoid scalds and burns. The appliance may only be transported, moved or cleaned when cooled down completely.
- 3) To protect against electrical shock. Do not immerse the unit in water or other liquid.
- 4) The egg pricker at the bottom of the measuring cup is very sharp. In order to avoid injuries, please be careful keep out of reach of children.
- 5) Close supervision is necessary when appliance is used by or near children.
- 6) Unplug from outlet when not in use. Unplug before putting on, taking off parts or adding water, and allow to cool before cleaning.
- 7) Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
- 8) The use of accessory attachments not recommended by this appliance manufacturing may cause hazards.
- 9) Do not place the device in a heated oven, or close to a heat source including hot gas or electric burner.
- 10) Extreme caution must be used when moving the unit contain hot liquid.
- 11) The units is used for a 230V~AC outlet only.

Description: (Figure 1 / Figure 2)

- |   |                    |
|---|--------------------|
| A) Water bowl and lower part of appliance | B) Lid             |
| C) Push on/off switch                     | D) Indicator light |

## **Instruction For Using Your Egg Boiler**

- 1) Remove the cover and the egg holder. Pull out the cable to the required length.
- 2) Fill cold water into the measuring cup up to the mark of the corresponding number of eggs and according to your personal appetite. Pour the water into the heating bowl.
- 3) Hold the egg with the larger end facing up and prick a hole on the top using the egg pricker. (located at the bottom of the measuring cup).
- 4) Plug in the appliance. Press the on/off switch, the indicator light will go on and the water begins to heat.
- 5) A buzzer will sound when the eggs are ready. Depress the on/off switch, unplug the appliance and lift the lid carefully.
- 6) To prevent further heating and hardening, remove the holder with eggs from the device and place the eggs in cold water for a short time.

## **How To Clean**

- 1) Chalky deposits may accumulate on the heating bowl and can be removed with water and vinegar.
- 2) Do not immerse the unit in water completely for any purpose including cleaning.
- 3) Remove the plug and wipe off the inside of the cooled-down unit with a clean and moist cloth.
- 4) Do not use decalcifying agents. Do not use abrasives, or any pointed or sharp instruments.
- 5) The outer surface of the egg boiler should be wiped clean with a damp cloth.

## **How To Repair**

- 1) Repairs should only be carried out by qualified professionals. Danger of injury exists to any person carrying out unqualified repairs.
- 2) In case the electrical cord needs replacing, it should only be repaired by the service department or an authorized outlet.