

# the doorman™



## USER'S MANUAL

The Doorman™ is a home security device integrated with a doorbell, peephole, and answering machine. When you use it, you can watch and listen to your visitors as they leave messages on the Doorman™. Also, you record your own greeting!

Installation of the Doorman™ is easy and convenient! Just remove your peephole and replace it with the Doorman™. The Doorman™ is digital and uses two AA batteries for power; no need for messy wiring! Protect your privacy and your family! Use it for your spouse and children! Convenient for campus dorms and apartments! Send it to your parents as present!



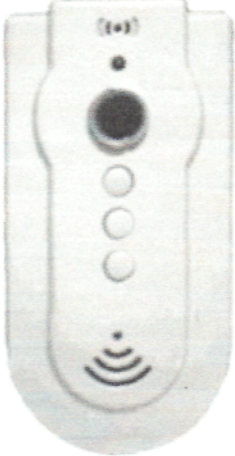
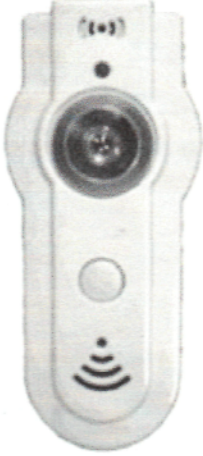

## Specifications

1. Voltage: 3v (2 pieces R6P AA UM-2 batteries, Standard voltage: 1.5V)
2. Static current: 2 $\mu$ A
3. Working current: 50-15mA
4. Load: 16ohm/0.25W
5. Connection: Flat belt wire
6. Indoor unit dimensions: 125x55x25mm
7. Outdoor unit dimensions: 140x70x35mm

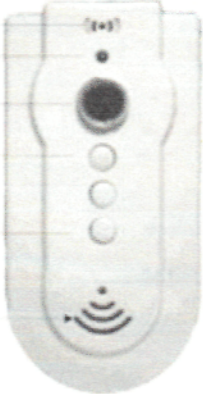

## How to Operate the Doorman™


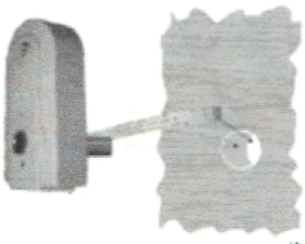
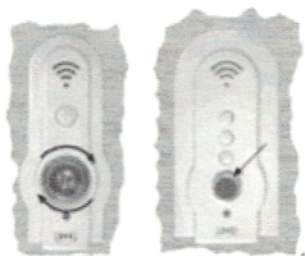
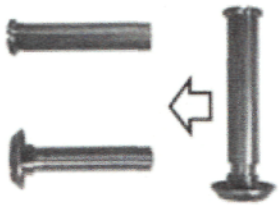
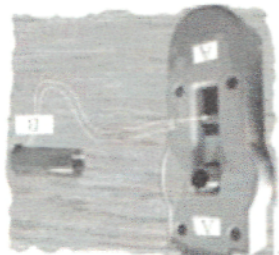



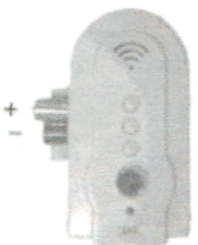
1. Visitor presses the "M" button to ring the doorbell. If the host answers, then the visitor can talk through the microphone. Otherwise, the visitor listens to the pre-recorded greeting(s) until the green light flashes. Then the light flashes, the visitor's voice can be recorded automatically for 20 seconds.
2. For answering: when the doorbell rings press the "P" button. By pressing "P", the host can then talk to his visitor via the intercom. By pressing "P" again, this stops the intercom, or it will stop automatically after 60 seconds.
3. Recording the greeting: Press and hold the "R" for 3 seconds or until the light is on. While the light is on, the host can record. Press "R" again to stop recording and turn the light off. To listen to and check the newly recorded greeting, press "R" once more.
4. Listening to visitors' messages: Press the "P" button.
5. Erasing old messages: Press the "E" button.
6. Recording conversation: Pressing the "R" button.
7. When the visitor is recording or recording during a conversation, the light will flash. The light will also flash if the memory is full and needs to be cleared.
8. The Doorman™ will play the pre-set message if the host has not recorded a message. To record a new message, press the "E" button. To go back to the original pre-set message, press the "R" button.

## Components

Indoor Unit	Outdoor Unit	Peephole
		

## Configuration

Indoor Unit	Outdoor Unit
<p>Microphone ◀</p> <p>Red Light ◀</p> <p>Peep Hole Hollow ◀</p> <p>P ◀</p> <p>R ◀</p> <p>E ◀</p> <p>Speaker ▶</p> 	<p>▶ Microphone</p> <p>▶ Green Light</p> <p>▶ Peephole Lens</p> <p>▶ M</p> <p>▶ Speaker</p> 

<p>1</p> 	<p>Remove old peephole or drill a new hole into place. (Diameter=16 mm wide, Length=60mm)</p>	<p>4</p> 	<p>Insert flat belt wire into peephole hole in door.</p>	<p>7</p>  <p>Screw in peephole lens.</p>
<p>2</p> 	<p>Unassemble Doorman™ peephole.</p>	<p>5</p> 	<p>Insert flat belt wire into indoor unit, and stick two pieces of tape onto the back of outdoor unit.</p>	<p>8</p>  <p>Open battery cover on indoor unit.</p>
<p>3</p> 	<p>Secure indoor unit with rear portion of peep hole</p>	<p>6</p> 	<p>Insert peephole lens into outdoor unit.</p>	<p>9</p>  <p>Insert AA (double A) batteries inside indoor unit and close battery cover.</p>