

Thank you for purchasing the Valore Action Camera.

Capture your best action moments with this compact and waterproof WiFi action camera. High definition image quality and 170° wide-angle shooting ensure you get sharp footage every time.

Important: Please read the user manual thoroughly before using your WiFi action camera.

Specifications:

- Model: V-VMS601
- Image sensor: 12 mega pixels CMOS
- LCD screen: 2.0"
- Lens: 170° wide-angle
- Resolution: 1920 x 1080 at 30fps
1280 x 720 at 60fps
- Input: DC5V/ 1A
- Wifi distance: 10m
- Battery type: 3.7V Lithium battery 900mAh
- Video format: MOV
- Video codec: H.264
- Photo format: JPEG
- Dimension (L x W x D): 59 x 41 x 25mm
- Weight: 43.4g (with waterproof case 151.5g)


Package Contents:

- Sport DV
- Waterproof housing
- Bicycle holder
- Base x 7
- Clip x 2
- Lens cloth
- Protective Backdoor
- USB cable
- Helmet base
- Bandages
- 3M adhesive
- Tethers
- Battery

UNDERSTANDING THE PRODUCT



- ① OK/WiFi button
- ② Status indicator light
- ③ Power button
- ④ Lens
- ⑤ Microphone
- ⑥ Micro SD card slot
- ⑦ USB input
- ⑧ HDMI input

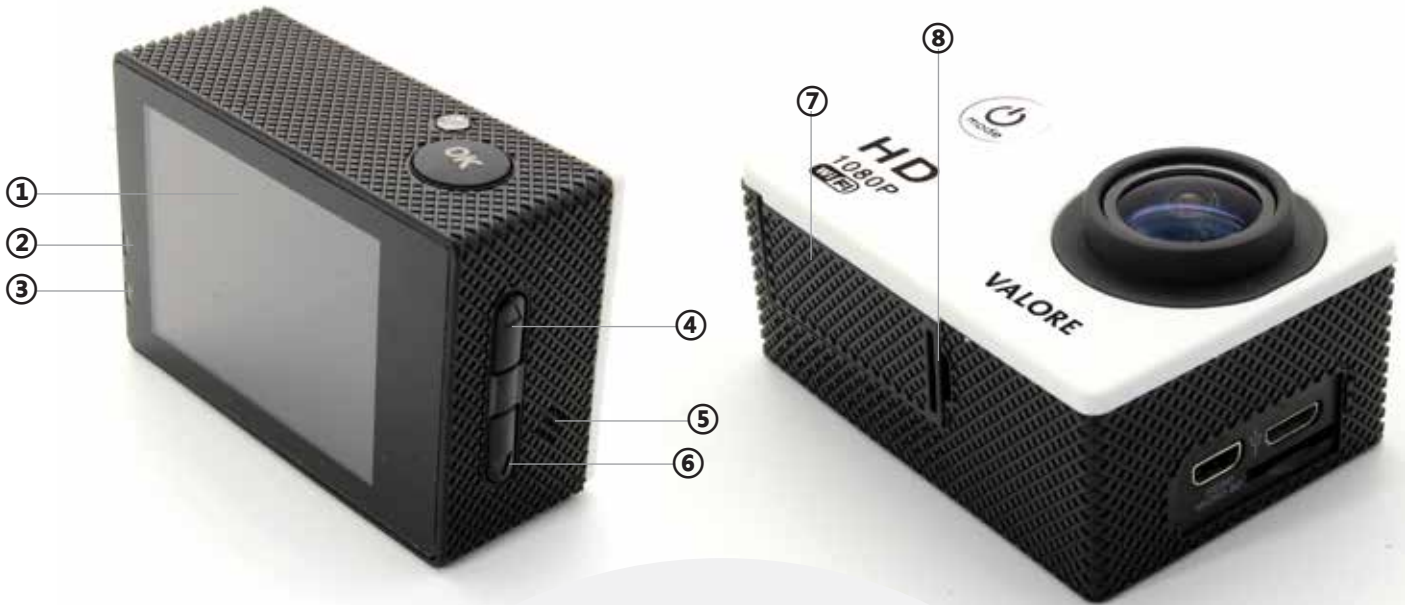

- | | |
|-----------------------|----------------------|
| ① LED Screen | ⑤ Speaker |
| ② Operation indicator | ⑥ Down button |
| ③ Charging indicator | ⑦ Battery cover |
| ④ Up button | ⑧ Battery cover lock |

GETTING STARTED

To power ON:

Press and hold the Power Button.

To power OFF:

Press and hold the Power Button.

OVERVIEW

Mode Selection

Turn camera ON and repeatedly press the Power/Mode Button to cycle through camera modes. The modes will appear in Video mode/Photo mode/Play back mode:

- Video mode - Record Video
- Photo mode - Capture photo
- Play back mode - Event/Video/Jpg

SETTING

Press the 'Down' button to enter the settings menu. Press OK button to select mode setting or general setting. Repeatedly press the Up and Down button to cycle through options and press the Ok/WiFi button to select desired option, press Power button to go back to the previous menu:

Video setting:

- Movie size: 1080p(30fps) / 720p(30fps) / 720p(60fps)
- Video quality: Super Fine / Fine / Normal
- Seamless: OFF / 1min / 3min / 5min
- White balance: Auto / Daylight / Cloudy / Tungsten / Fluor H / Custom
- Motion Detect: Off / On
- Date Stamp: Off / Date / Date & Time

Camera setting:

- Resolution: 12M / 10M / 8M / 6M / 5M / 3M / 2M / VGA
- White Balance: Auto / Daylight / Cloudy / Tungsten / Fluor H / Custom
- Driver Mode: Off / 2S / 10S / Double
- Photo Burst: Off / 10fps / 20fps / 30fps
- Date Stamp: Off / Date / Date & Time

General Setting

- Sound: Beep (on/off) / Volume (0/1/2/3) / Voice Rec (on/off)
- IR Control: On/Off
- Power Save: Off / 1min / 3min / 5min
- Date & Time: YY/MM/DD Time
- Language: English / 简体中文 / 繁體中文 / Français / Español / Italiano / Português / Deutsch / Русский / 日本語 / Polski
- Light Freq: 50Hz / 60Hz
- System: Factory Reset / System info / Card info
- Format: Yes / No

VIDEO MODE

To record video, verify the camera is in video mode. If the video icon on your camera's LCD screen is not showing, press the Power button repeatedly until it appears.

To start recording:

Press the Ok button. The camera status light will flash while recording.

To stop recording:

Press the Ok button. The camera status light stop flashing. This camera automatically stops recording when the battery is out of the power. Your Video will be saved before the camera powers OFF.

PHOTO MODE

To capture a photo, verify the camera is in photo mode. If the photo icon on your camera's LCD screen is not showing, press the Power button repeatedly until it appears.

To take a photo:

Press the Ok button. The camera will emit the camera shutter sound.

PLAYBACK

Playing Back Videos and Photos To enter the Playback menu:

1. Press the Power button until it shows EVENT/VIDEO/JPG to enter the Playback menu.
2. Repeatedly press the Up and Down to cycle through EVENT, VIDEO and JPG.
3. Press the Ok button to select desired option.
4. To exit, hold down the Power button.

STORAGE/MICRO SD CARDS

This camera is compatible with 4GB, 16GB and 32GB capacity micro SD, micro SDHC, and microSDXC memory cards. You must use a micro SD card with a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

BATTERY

Charging The Battery

To charge the battery:

1. Connect the camera to a computer or USB power supply.
2. The charging status light remains ON while the battery is charging.
3. The charging status light will turn OFF when the battery is fully charged.

*Charging Time: 3.5hours

CAMERA APP

Connecting to the iSmart DV App (Wi-Fi Edition Only)

The iSmart DV App lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the iSmart DV App to your smartphone or tablet at the Apple App Store or Google Play.
2. Press the Power button to power camera ON.
3. Press and hold the Ok button for three seconds to turn on Wi-Fi.
4. In your smartphone or tablet's Wi-Fi settings, connect to the network called "Action cam".
5. Enter the password "1234567890".
6. Open the iSmart DV App on your Smartphone or tablet.

The iSmart DV App is compatible with smartphones and table listed below.

For Apple iOS:

iPhone 5,5S,6&6 Plus(iOS 8)

iPad Air & Mini (iOS 8)

For Andriod:

Android 4*Quad-core devices

** Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.*

TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at v.info@valore.sg.
- For Warranty Registration, visit www.valore.sg.

Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not expose this action camera to strong magnetic objects.
- Do not store the action camera in a high temperature environment.
- Do not place the action camera near a fire or other excessively hot environments.
- Do not expose this action camera to moisture or submerge it in liquid. Keep action camera dry at all times.
- Do not attempt to charge the action camera using any other method or connection other than the action camera's provided charging cable.
- Do not disassemble this action camera or attempt to repair or modify it in any manner.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this action camera. If there is any damage to the action camera such as dents, punctures, tears, deformities or corrosion, stop using the action camera and contact us immediately via email at v.info@valore.sg, or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at v.info@valore.sg.

DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes.

The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.

Complies with
IDA standards
DA 103331



Inspired by Valore Singapore

For full range of Valore products visit www.valore.sg