

# kogan

KACOFXXNESA

## USER MANUAL



## IMPORTANT INSTRUCTIONS

 
 
### PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of the fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using.
2. In case of emergency, immediately remove plug from power outlet.
3. Check the voltage indicated on the rating label on the appliance does in fact match that of your electrical system.
4. Extreme caution is necessary when the appliance used by or near children or invalids and whenever it is left in operation and unattended.
5. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Return the appliance to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Always unplug the appliance when not in use or before cleaning. Allow to cool before adding or removing parts, and before cleaning the appliance.
7. To protect against fire, electric shock and personal injury, do not immerse cord, plug or appliance in water or other liquid. Avoid touching the machine with wet hands.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
9. Avoid the use of an extension cord because the extension cord may over heat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be rated not less than 2000 watts. Only use an earthed socket to connect the appliance.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet(receptacle) and plug may cause over heating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
12. The use of accessory attachments not recommend by the appliance manufacture may result in fire, electric shock or personal injury.
13. Use the appliance only as the described in this manual. Any other use not recommend by the manufacture may cause fire, electric shock, or injury to persons.

14. Do not put fingers inside capsule housing(brew chamber), due to sharp edges.
15. Do not touch hot surfaces. Use levers or knobs.
16. Indoor & domestic use only.
17. Hot water, steam, spout and capsule holder are hot. Danger of burning injuries. Do not direct steam or hot water towards the body. Danger of burning injuries.
18. Heat up drinks: Dip the steam nozzle deep into the liquid in order to avoid hot water or steam splashes.
19. Do not operate the appliance when the drip tray and the grille are not in place.
20. Use only water in the appliance! Do not put any other liquids or foods in the Water Reservoir.
21. Steam nozzle is very hot after steaming, be cautious not to touch it by hand but the rubber handle.
22. This appliance is not intended to for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience, and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
23. Children should be supervised to ensure that they do not play with the appliance.
24. If the supply cord is damaged, it must be replaced by the manufacture, it's service agent or similarly qualified persons in order to avoid a hazard.
25. WARNING: The filling aperture must not be opened during use.
26. This appliance is intended to be used in household and similar application such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.

# PRODUCT INSTRUCTION

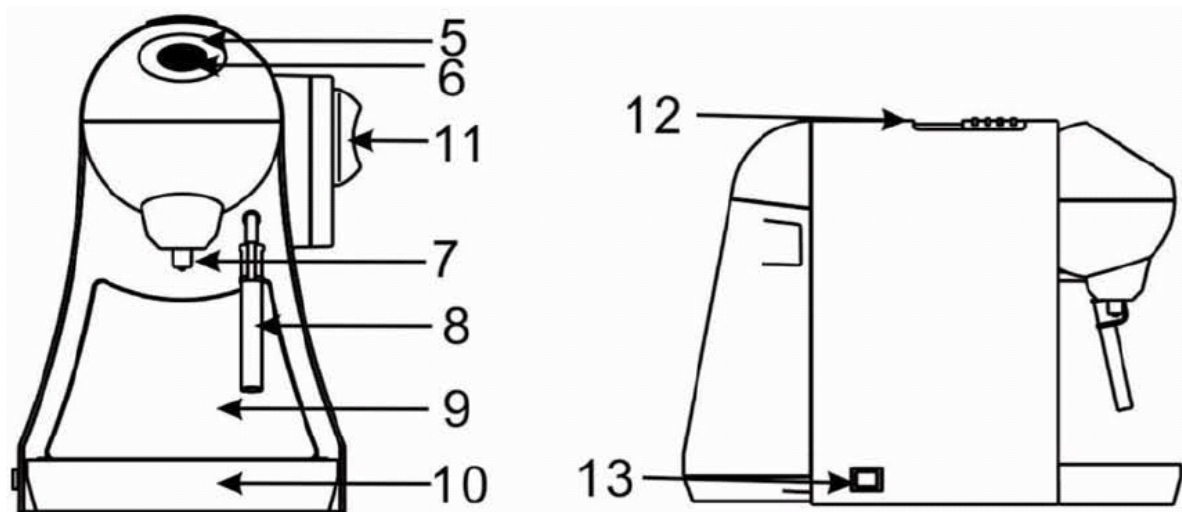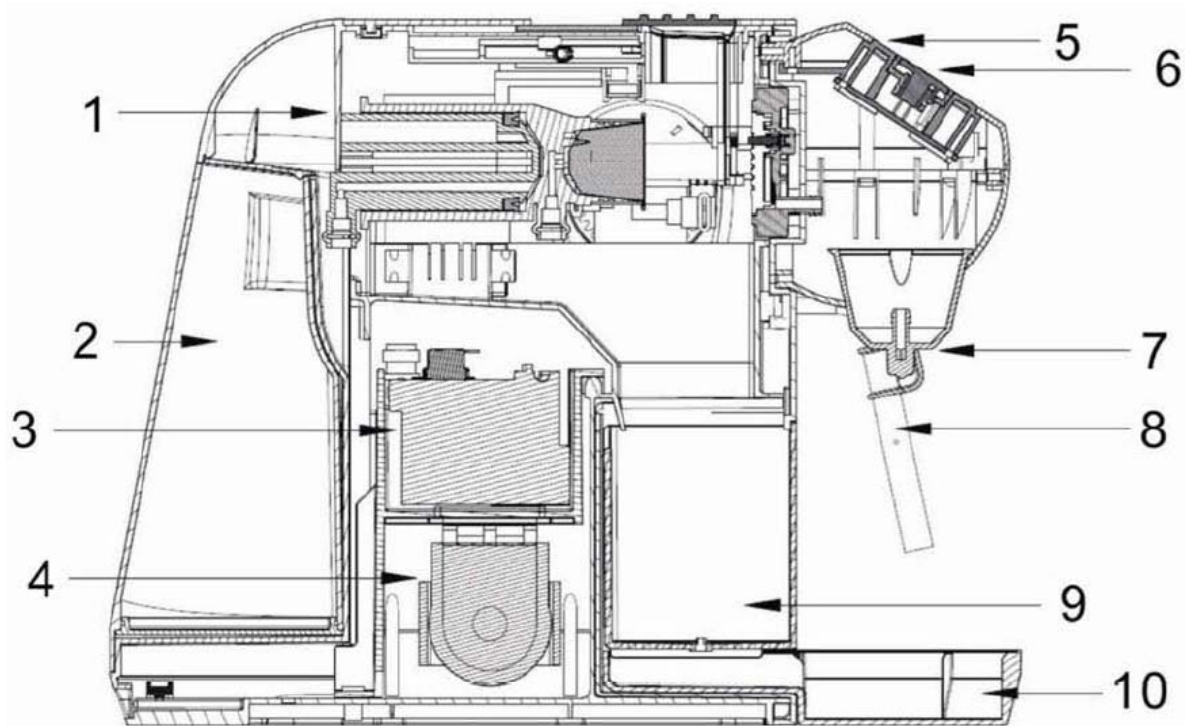

- |   |  |
|---|--|
| 1. Brewing Chamber<br>(Capsule Squeezer for extraction) | 9. Waste capsule collection container        |
| 2. Water tank, reservoir                                | 10. Removable drip tray with detachable grid |
| 3. Thermal block, boiler                                | 1. Coffee/Steam knob                         |
| 4. Solenoid pump  | 12. Brewing chamber cover                    |
| 5. Pre-heating indicator                                | 13. On/Off switch                            |
| 6. Front control button                                 |  |
| 7. Coffee/beverage outlet, hot water outlet             |  |
| 8. Steam nozzle   |  |

# OPERATING INSTRUCTIONS

## 1. Start up

Fill the water tank with fresh clean water, pure water is strongly recommended to avoid scale in the machine, and the water level should no lower than the Min. position and no higher than the Max. position.

Switch on the machine at the On/Off switch and then it will be illuminated.

Check the below procedure of coffee/ espresso brewing or inside system cleaning before first use.

## 2. Coffee/Espresso brewing

To get a cup of coffee, please firstly insert the capsule into the capsule holder according to the shape and direction by moving the slidable cover on the top to open and close.

Turn the Coffee/Steam knob clockwise to the coffee position, and then the system will pre-heat with a blinking round blue indicator on the front control button.

Please press the front control button when the indicator stops blinking to get coffee with a desired volume.

Then press the front control button again or turn back the knob to 0 position to stop outputting the coffee; the round blue indicator goes off.

The capsule will drop into the waste capsule collection container automatically in several seconds only in the case of turning back the Coffee/Steam knob to 0 position.

## 3. Steaming and Frothing

Make sure the capsule holder cover is closed, and turn the Coffee/Steam knob counter-clockwise to the steam position. The Coffee/Steam indicator will change to red color and blink to pre-heating.

 
 
Please press the front control button when the indicator stops blinking, and steam begins to dispense from the steam nozzle continuously.

Please press the front control button again or turn the knob to 0 position to stop steaming; the red indicator goes off.

Please remember to turn back the knob to 0 position finally.

### Note:

Do not wait too long before cleaning the steam wand. Milk deposits are hard to remove. Once the froth has been made, we recommend placing a cup of water under the steam wand and starting the steam dispensing function again for a few 1-2seconds. This way, any residue of milk will be easily removed from the nozzle.

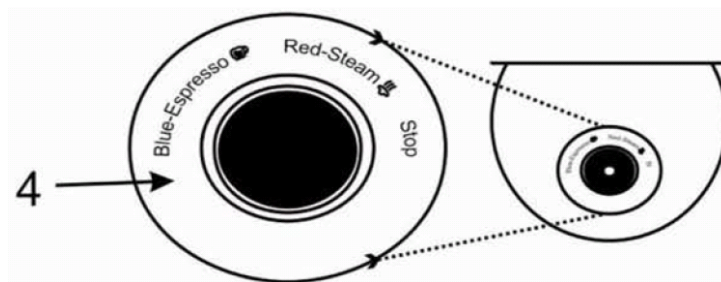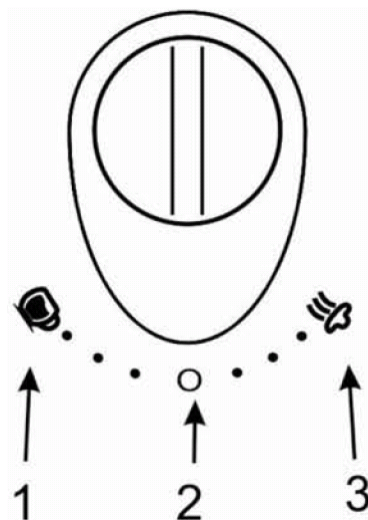

1. Position for Beverage/Coffee or Hot water/  
Self cleaning
2. OFF position
3. Steam position for hot steam and milk frothing
4. Blue color LED indicator for Beverage/Coffee;  
Red color LED indicator for Steam & Milk frothing;  
When blinking, the system is preheating for beverage/  
coffee or steam.

#### 4. To get hot water

Just repeat the coffee brewing procedure without inserting a capsule, you will get hot water.

## TROUBLE SHOOTING

Problem	Solution
On/Off Switch not on	Check plug, main switch and fuses
No coffee dispensed closed,	Make sure the capsule properly positioned, capsule slot not obstructed, brewing chamber cover properly closed, water tank full and properly placed.
Coffee not hot enough	Preheat cup (hot water without capsule) , descale if necessary.
No hot water/steam	Remove steam nozzle and clean, descale if necessary.
Milk does not froth	Check the Coffee/Steam knob position, clean it if necessary.
Milk for cappuccino not frothy enough	Dismantle the steam nozzle and clean all its parts. use only cold, whole milk.
Noisy pump water	Repeat the priming procedure. Make sure the tank is full and properly placed.
Capsule area leaking (water in capsule container)	Position capsule correctly. If leakage: contact the distributor or service

## CLEANING AND MAINTENANCE

### 1. System Cleaning

To refresh the inside parts of the system, you can choose to repeat the procedure of coffee brewing several times and meantime try to brush the inside brewing chamber capsule holder with a soft brush between different times.

Clean the casing, with a soft damp cloth. The water tank, drip tray and used capsule collection container can be washed in warm water.

Note:

Before attempting to clean the appliance, remove the plug from the power outlet.

Do not immerse the machine, and/or power cable in water or other liquids.

Allow the machine to cool before starting the cleaning procedure.

### 2. Descaling

Choose the recommended decalcifier or scale remover from your machine provider and repeat the same procedure as coffee brewing and steaming without inserting any capsule.

## SPECIFICATION

Rate Voltage: 220-240V

Rate Frequency: 50Hz

Rate Power: 1,400W

N.W./G.W.: 3.5/4.0 kgs

Pump Power: 48W

Pump Pressure: 15-19 Bars

Water Tank Capacity: 1.2L

Drip Tray Capacity: 350ml

Protection Class: I

Product Size: 34L \* 18W \* 27H cm

## LIMITED WARRANTY & SERVICE

