

Workswell

Thermal Vision

Thermal Imaging System for UAV

User Manual

Version: 1.1

Compatible with *Workswell Thermal Vision*: 1.0

Release Date: 13.7.2015



Introduction

Workswell Thermal Vision Pro is the thermal imaging system for unmanned aerial vehicles (UAVs, drones). It is a lightweight system equipped with a visible spectrum camera and a thermal imaging camera. The aim of the whole system is the simple transfer, storage and processing of radiometric (temperature) data directly from an unmanned aerial vehicle (drone) and displaying the data on the screen of the UAV remote control in real time. The system also offers a variety of palettes and alarm (security) modes, which can be combined with a visible spectrum camera.

Workswell Thermal Vision Pro is designed in order to allow controlling its functions during a flight. The system has three digital input ports, which are fully compatible with standard RC receivers.

The system supports a wireless video recording from a thermal imaging camera and a wireless image making from both, thermal imaging and visible spectrum camera. Data (video or individual images) can be saved directly using the UAV remote control via the digital input ports on a control unit.

The system offers three image modes (Thermal mode, Alarm mode and Visible Spectrum Camera mode) that can be set by the operator using the keyboard prior to take off. During the flight, the operator can switch between the modes using the UAV remote control.

With the Thermal Mode on, the UAV remote control screen displays the actual thermal imaging aerial video with information on the distribution of surface temperatures according to the one of the fourteen palettes that was set by the operator.

The Alarm (Isothermal) Mode offers a choice between an Above Alarm and a Below Alarm. The operator can set temperature limits for each mode. With the Above Alarm on, the UAV remote control screen displays the actual black and white thermal image and marks areas with higher temperature. With the Below Alarm on, areas with lower temperatures are marked.

Both modes allow the following settings: automatic or manual temperature range, automatic search for the maximum and the minimum temperatures (including cursors) and the display of the temperature value on the screen of the UAV remote control.

Visible Spectrum Camera mode displays the actual visible spectrum video on the screen of the UAV remote control.

Workswell Thermal Vision Pro

User Manual

Legal Disclaimer

All products (software, hardware or firmware) manufactured by Workswell s.r.o. are warranted against defective materials and workmanship for a period of two (2) years, provided such products have been under normal storage and use in accordance with herein instructions.

The warranty extends only to the original purchaser and is not transferable. It is not applicable to any product which has been subjected to misuse, neglect, accident or abnormal conditions of operation.

In the case of a defect in a product covered by this warranty the product must not be further used in order to prevent additional damage. The purchaser shall promptly report any defect to Workswell s.r.o. or its authorized distributor or this warranty will not apply.

Workswell s.r.o. will, at its option, repair or replace any such defective product free of charge if, upon inspection, it proves to be defective in material or workmanship and provided that it is returned to Workswell within the said two-year period.

Nobody but Workswell s.r.o. is allowed to open or modify such product.

Workswell s.r.o. has no other obligation or liability for defects than those set forth above. No other warranty is expressed or implied. Workswell s.r.o. shall not be liable for any direct, indirect, special, incidental or consequential loss or damage, whether based on contract, tort or any other legal theory.

Copyright

© Workswell s.r.o. All rights reserved worldwide. No parts of the software including source code may be reproduced, transmitted, transcribed or translated into any language or computer language in any form or by any means, electronic, magnetic, optical, manual or otherwise, without the prior written permission of Workswell s.r.o.

Names and marks appearing on the products herein are either registered trademarks or trademarks of Workswell s.r.o. All other trademarks, trade names or company names referenced herein are used for identification only and are the property of their respective owners.

Contents

Introduction.....	2
Warnings and Cautions	6
Standard Package Content	7
User Information	8
Help and FAQ.....	9
System Assembly.....	10
System Control	16
FLIR Tools compatibility.....	25
Enviroment Conditions.....	27
Infrared lens replacement.....	28
Maintanance.....	32
Troubleshooting	33

1 Warnings and Cautions

Warnings

Before using the product, please check that there is no visible damage or malfunction. If there are any visible signs of damage or other defect on the device, then on no account should it be installed or put into operation.

Any interference and noncertified service operations into the product leads to an automatic loss of warranty.

Notifications

Do not use or store the device in conflict with the storage and operating conditions laid down in this manual (only for hardware).

- Do not point the infrared camera (with or without the lens cover) at strong energy sources, for example, devices that cause laser radiation, or the sun. This can have an unwanted effect on the accuracy of the camera. It can also cause damage to the detector in the camera.
- Do not use the *Workswell Thermal Vision* system in temperatures more than +45°C (+122°F). High temperatures can cause damage to the camera.
- Do not apply solvents or equivalent liquids to the control unit, the cameras, the cables, or other items. Damage to the items can occur.
- Be careful when you clean the visible camera spectrum lens.
- Be careful when you clean the infrared lens. The lens has an anti-reflective coating which is easily damaged. Do not use too much force to clean the infrared lens. This can cause damage to the anti-reflective coating.
- The encapsulation rating is only applicable when all the openings on the all components of the system are sealed with their correct covers, hatches, or caps. This includes compartments for data storage, batteries, and connectors.

Workswell Thermal Vision Pro is a class A product according to standard ČSN EN 55022 and EN 55022. In a domestic environment this product may cause high-frequency interference (can interfere receivers and other sensitive equipment). In such a case, it may require the user to take appropriate measures (to avoid the interference).

Workswell Thermal Vision Pro uses a Bluetooth technology, which is defined by the IEEE 502.15.1 standard. This technology may interfere UAV (drone) receivers. Therefore, we strongly recommend that you eject the Bluetooth USB dongle prior to the flight.

2 Standard Package Content

Package Content

Inside the *Workswell Thermal Vision Pro* package you will find following items:

- Thermal imaging camera and visible spectrum camera in bicamera case
- Control unit with Windows 7 and *Workswell Control* app
- Focus tool (for thermal imaging camera)
- Mini wireless keyboard
- HDMI/Analog converter
- Set of cables (2xUSB 3.0 A-microB, 1xUSB 2.0 A-miniB, 1xHDMI-RCA, 1xPower cable 80cm)
- Download Card



Control Unit

Inside the standard package you will find the control unit running Windows 7. The control unit has three input ports used to operate the system via the UAV remote control. Installed *Workswell Control* system uses the software of *National Instruments* and other companies software. *Workswell s.r.o.* fully acknowledges all license agreement with *National Instruments* and all charges for the use of the module in the *Workswell Control* system.

Download Card

The Download Card gains the cardholder access to download the relevant documents, including the user manual in electronic form, and software on the website www.workswell.cz.

3 User Information

Typographic Conventions

Following typographic conventions are used in this User Manual:

- UPPER CASE is used for the names of keys, buttons and menu items
- COURIER is used for filenames and paths
- *Italic* is used for important information and document names
- **bold** is used for the links to other sections, for function names or internet sites

Help and Community Forum

For technical questions that were not answered in this User Manual feel free to contact your dealer or visit the product website at <http://www.drone-thermal-camera.com>. Try to find an answer by searching the Community Forum and if there is not such answer please send an email on info@workswell.cz.

Updates

The primary aim of Workswell s.r.o. company is to supply their products in a way to meet the current needs of its users and at the same time to remove all the weaknesses that were found in their use as soon as possible. For this reason, Workswell s.r.o. regularly releases updates for all their products.

Firmware

Firmware is the „internal“ control program of the device. From the user’s point of view, only the current version of the firmware that is loaded in the device at the time of use is essential.

4 Help and FAQ

General Instructions

While looking for a solution of any technical problem we recommend following these steps:

- try to find an answer by searching this User Manual
 - contact your dealer,
 - search Workswell s.r.o. website at <http://www.drone-thermal-camera.com>,
 - send an email to info@workswell.cz.
-


5 System Assembly

General Description

The *Workswell Thermal Vision Pro* system consists of several parts. The system has to be assembled prior the first use. We recommend to check the system prior to any further use.

Follow these steps to commission the system:

- 1) Connect the cameras to the control unit
- 2) Connect the control unit to power supply
- 3) Connect the digital input ports
- 4) Connect the HDMI/Analog video convertor
- 5) Connect the mini wireless keyboard

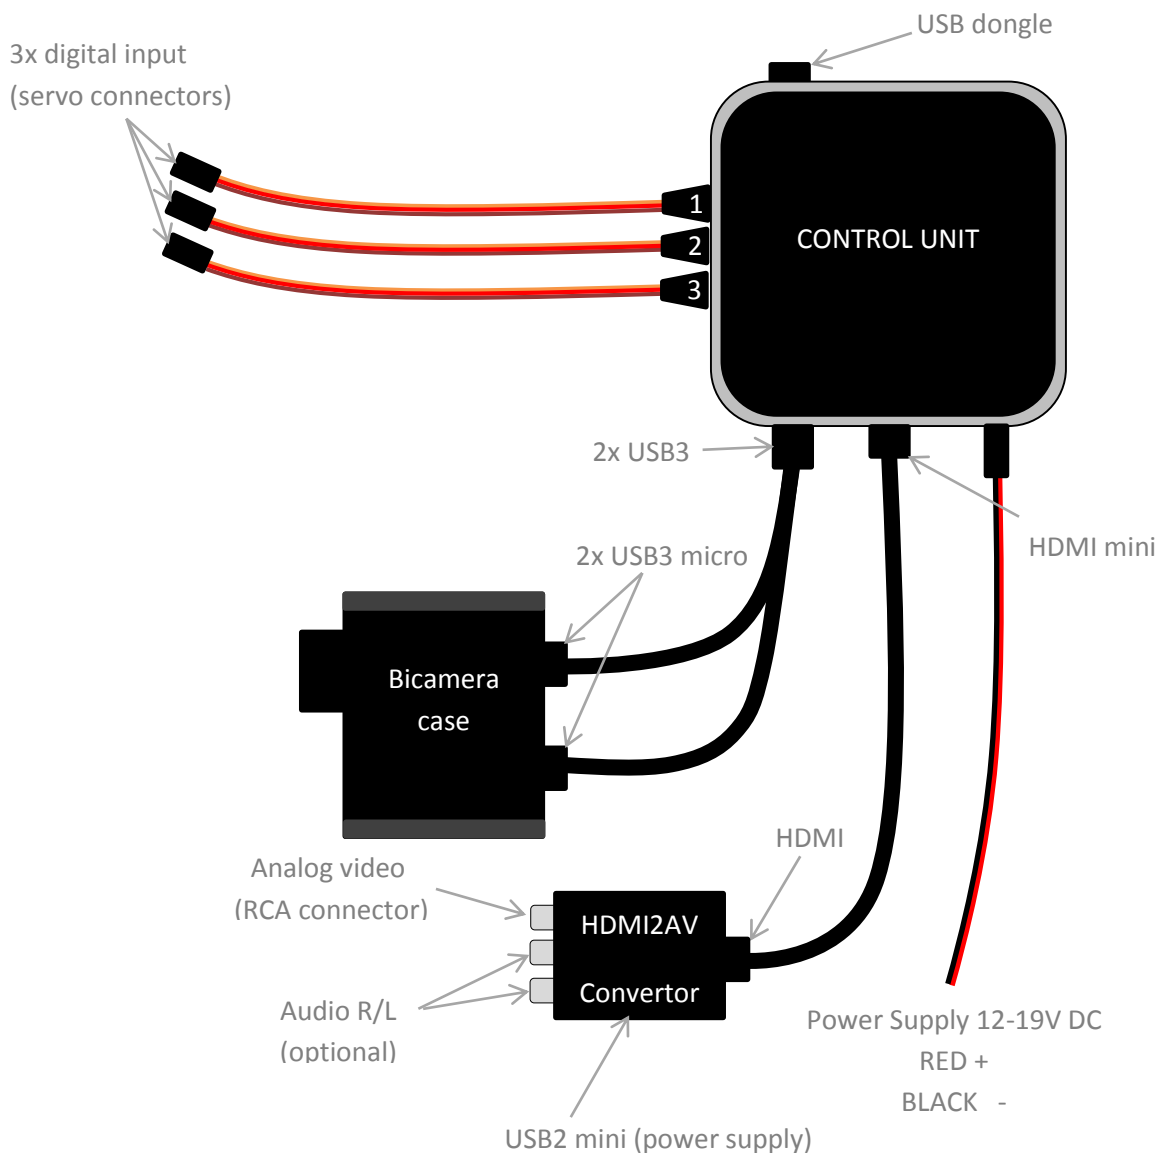



Connecting the cameras to the control unit

The bicamera case including a thermal imaging camera and a visible spectrum camera is connected to the Control Unit using two USB 3.0 A-microB cables, which are supplied. Each camera can be connected to any available USB port on the control unit.



Connecting the control unit to power supply

  The control unit can be powered through a 12-19 V DC connector on the back panel. The back panel DC connector is compatible with a 5.5 mm/OD (outer diameter) and 2.5 mm/ID (inner diameter) plug, where the inner contact is +12-19V ($\pm 10\%$) V DC and the shell is GND.



The control unit can be powered via a power adaptor (optional accessories) or a custom power supply that meets the above parameters. For this purpose, the standard package contains appropriate 5.5x2.5mm coaxial connector with a cable (length of 80 cm).



GND (black wire)

+12-19V DC (red wire)

Input ports


The control unit is equipped with three servo connectors (JR type). These connectors can be connected to any standard RC receiver and used for controlling some functions of *Workswell Thermal Vision Pro* system during a flight. Three channels are needed for controlling all available functions.

The functions, which can be controlled during the flight:

	Input port	Hotkey
Image Mode Switching	1	F5
Image Making	2	F6
Video Recording	3	F7

More information about each function are in **System Control** section.

 Servo connector scheme:



Note: Power supply is not required.

Digital inputs function:

A signal from a standard RC receiver is expected on the digital input. It means that a PWM modulation is used to encode the signal and a pulse with a variable length (from 1ms to 2ms) appears every 2 ms (may vary depending on the type of receiver).

Input 1

Image mode is switched when the length of the pulse gets over 1.7ms. That means that the image mode is changed every time a joystick or a switch (which is controlling the channel that is connected to this input) is set to the appropriate end position. Holding the joystick or a switch in the appropriate end position will cause switching the image mode just once.

Input 2

Images are made when the length of the pulse gets over 1.7ms. That means that the images are saved to the memory every time a joystick or a switch (which is controlling the channel that is connected to this input) is set to the appropriate end position. Holding the joystick or a switch in the appropriate end position will cause making just one set of pictures.

Input 3

Video recording is active when the length of the pulse is greater than 1.7ms. That means that the video is saved to the memory when a joystick or a switch (which is controlling the channel that is connected to this input) is set to the appropriate end position. Video recording is not active when the joystick or the switch is set to the other end position.

HDMI/Analog converter


It is recommended to convert digital video to analog for wireless video transmission. For this purpose the standard package contains a HDMI/Analog converter. The converter is connected to the control unit via the supplied HDMI cable. The HDMI/Analog converter requires its own power supply. The supplied micro USB cable can be used for the power supply. Plug the cable into any free USB port on the control unit.



PAL mode is used in most European imaging devices. NTSC mode is used for equipment from North and Central America and Japan.

Focusing the thermal vision camera

The infrared camera has adjustable focus. The focus can be set using the supplied focus tool.

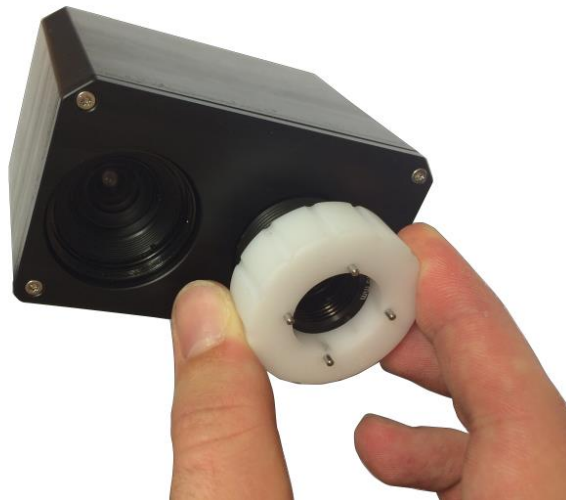

In order to focus on short distance gently rotate the lens counterclockwise. During this movement, the lens extends from the camera body. If the lens can rotate too easily, you probably get on the edge of the focus range. Trying to rotate the lens more may cause the lens to fall out.

In order to focus on long distance (or infinity) gently rotate the lens clockwise. During this movement, the lens retracts to the camera body. If the lens can rotate too hard, you probably get on the edge of the focus range. Trying to rotate the lens more may cause the lens to damage. Infinity focus is recommended for most of the applications.


Mini wirelles keyboard

Inside the *Workswell Thermal Vision Pro* package you will find a mini wireless bluetooth keyboard. This keyboard can be used to set the system before the flight. The keyboard is connected to the control unit through the USB dongle. The USB dongle is located under the keyboard. The keyboard comes with a built-in rechargeable Li-Ion battery. The keyboard can be charged via micro USB port using standard 5V USB adapter. While charging, the Red LED turns on, and gets dimmer as the battery charge increases.




Mounting the bicamera case

The bicamera case can be mounted to the drone using the 4 threaded mounting holes M3x8. Mounting holes are located on the bottom of the case.

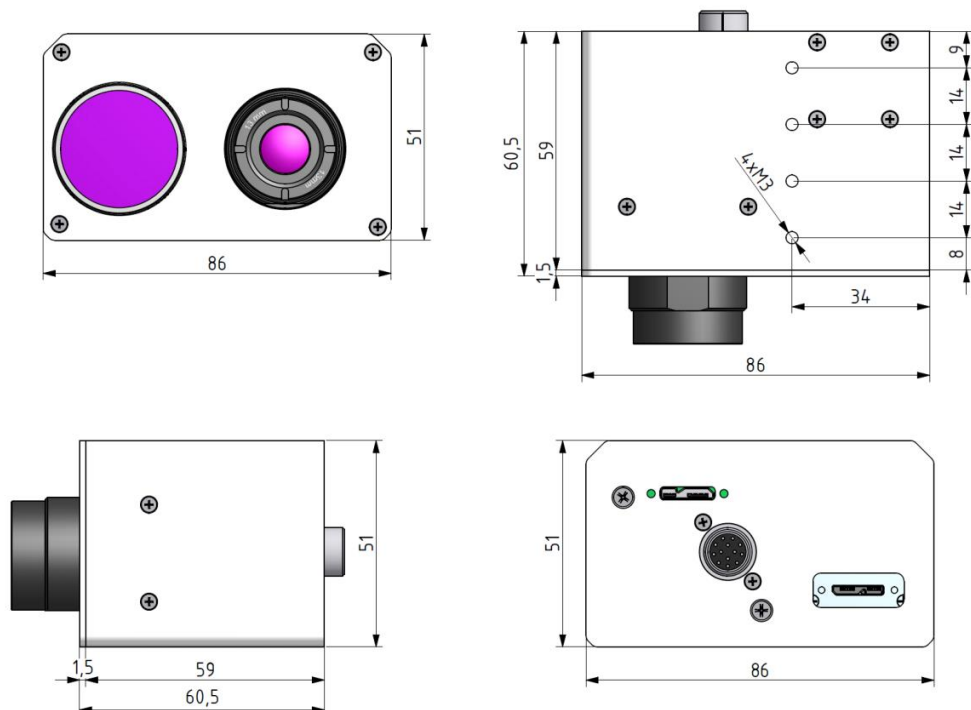

Mounting the control unit

The control unit can be mounted to the drone using the 2 threaded mounting holes M3x6. Mounting holes are located on the bottom of the control unit.

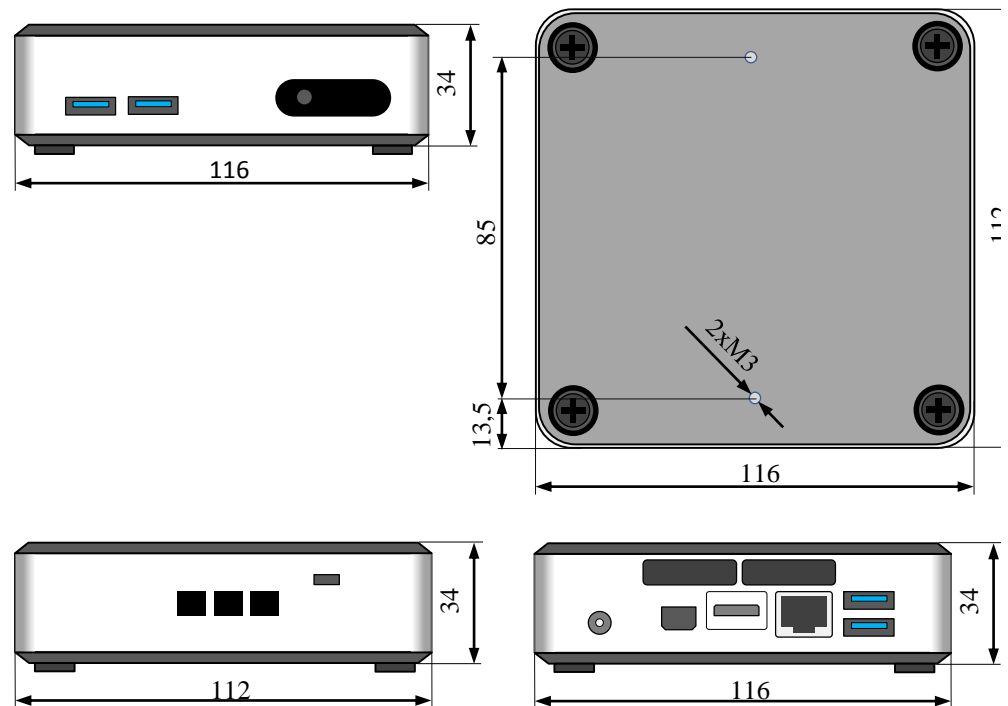

6 System Control

General description


The *Workswell Control* software starts automatically at the start of the Control Unit. User interface appears on the display of the UAV control unit or on the connected monitor soon. The application can display thermal image and visible spectrum image, adjust the measurement parameters and save data (video or individual images).

System Control:

	Input Port	Hotkey
Close the Workswell Control	-	F4
Image Mode Switching	1	F5
Image Making	2	F6
Video Recording	3	F7
Application Settings	-	F8

Starting the application

The *Workswell Control* app starts automatically at the start of the Control Unit. If the application was closed, it can be re-run by double-clicking the *Workswell Control* icon placed on the desktop.

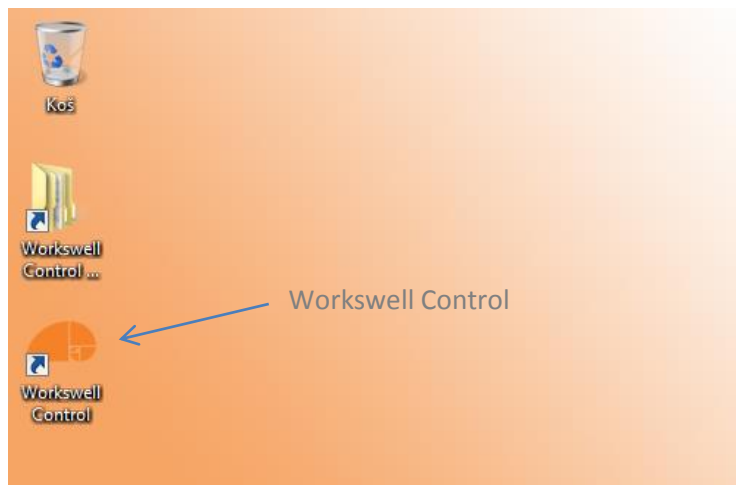

Closing the application

The running application can be closed by clicking F4 key. Any other termination of the application may lead to a temporary failure of the connected devices (see chapter **Troubleshooting**).

Shutting down the control unit

The control unit is turned off the same way as most of the computers running Windows 7 (Start -> Shut down). Start menu is hidden after closing the application. It appears after moving the cursor to the bottom left corner of the screen.

Disconnect the power supply after shutting down the control unit. Supplying the power to the control unit after shutting it down may lead to a temporary failure of the connected devices (see chapter **Troubleshooting**).

Image mode switching

The operator can switch between the image modes via input port (input 1) or by clicking the F5 key. An order of the active image modes can be set in *Application Settings* (see **General Settings** section).

Image Modes:

	Mode description
Thermal Mode	thermal image with information on the distribution of surface temperatures according to the 1 of the 14 pallets
Alarm (Isothermic) mode	displays actual black and white thermal image and marks areas with higher/lower temperature than the user set
Visible spectrum camera mode	Visible spectrum camera image for better orientation

Thermal Mode

Alarm (Isothermic) Mode



Visible spectrum camera mode



Note: The visible spectrum camera lens has a shorter focal length than the infrared camera lens. It means that the visible spectrum camera angle of view is wider than the infrared camera angle of view.

Image making Individual images can be saved via input port (input 2) or by clicking the F6 key. Four images (thermal, alarm, real and radiometric) are saved on the disc each time the F6 key is pressed or the input is activated. The Images can be accessed after closing the application. All images are stored in the *Workswell Control Data* folder placed on the desktop.

Folder path:

C:\Users\Documents\Workswell Control\Logs\

The folder is divided into subfolders named YYYY_MM_DD, where YYYY is the year, MM is the month and DD is the day of the date the images were taken. Images from different days are stored separately.

Names and formats of saved images:

	Image name	Image format
Visible spectrum camera image	HH_MM_SS_mode0	jpg
Thermal image	HH_MM_SS_mode1	png
Alarm (Isothermic) image	HH_MM_SS_mode2	png
Radiometric image	HH_MM_SS_radiometric	jpg

HH – hours, MM – minutes, SS – seconds of the time the image was saved

Video recording

Thermal video recording can be started via input port (input 3) or by clicking the F7 key. Deactivating the input port or clicking the F7 key again stops the recording and saves the video on the disc. Active video recording is indicated with *REC* symbol in the top left corner of the screen. The video consists of image modes that were visible on a screen of a control unit during the recording.

Folder path:

C:\Users\Documents\Workswell Control\Logs\


Name and format of saved video:

	Video name	Video format
Thermal video	HH_MM_SS_video	avi


HH – hours, MM – minutes, SS – second of the time the video was saved

Context menu Context menu can be opened by right-clicking the screen. Context menu displays only in Thermal and Alarm mode. Context menu is different for each image mode.


Context menu in the Thermal Mode, palette list

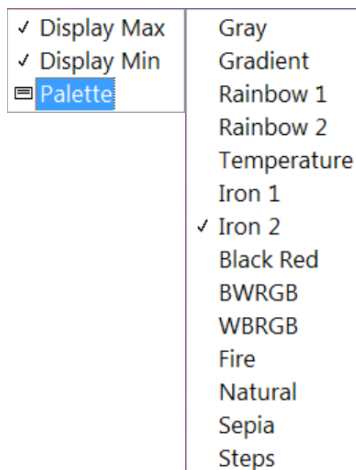


Temperature range setup Temperature Range Setup can be opened by double-left-clicking the temperature range legend. Temperature range can be set only in Thermal and Alarm (Isothermic) mode.

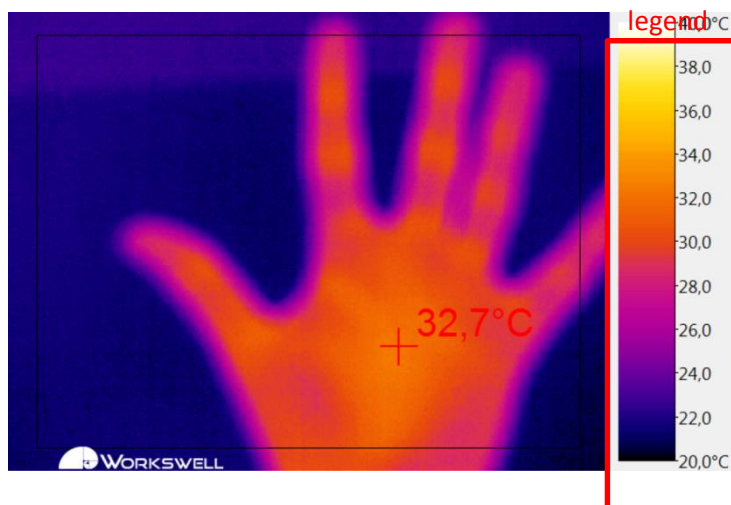

Automatic temperature range fully uses the resolution of the color palette. Image contrast is the maximum possible. Automatic temperature range is update periodically (see section **Display settings**).

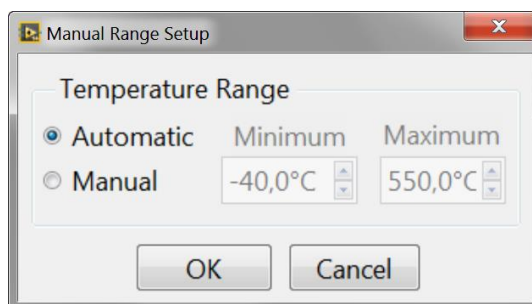


Manual temperature range suitable if constant temperature color is required. Color matching a certain temperature doesn't change in time. Image contrast is generally lower. Manual range can vary from -40°C to +550°C, which is the temperature range of the supplied infrared camera.

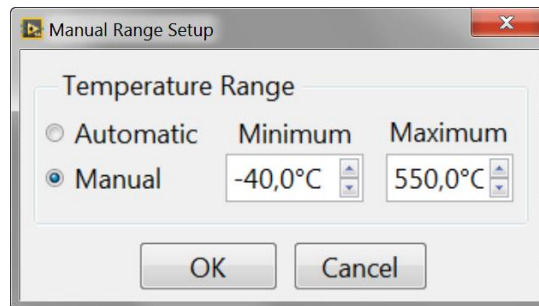

Application settings

Clicking the F8 key opens the following Application Settings. *Workswell Control* application offers a wide range of settings in order to allow the user to customize the application behavior to the specific needs.

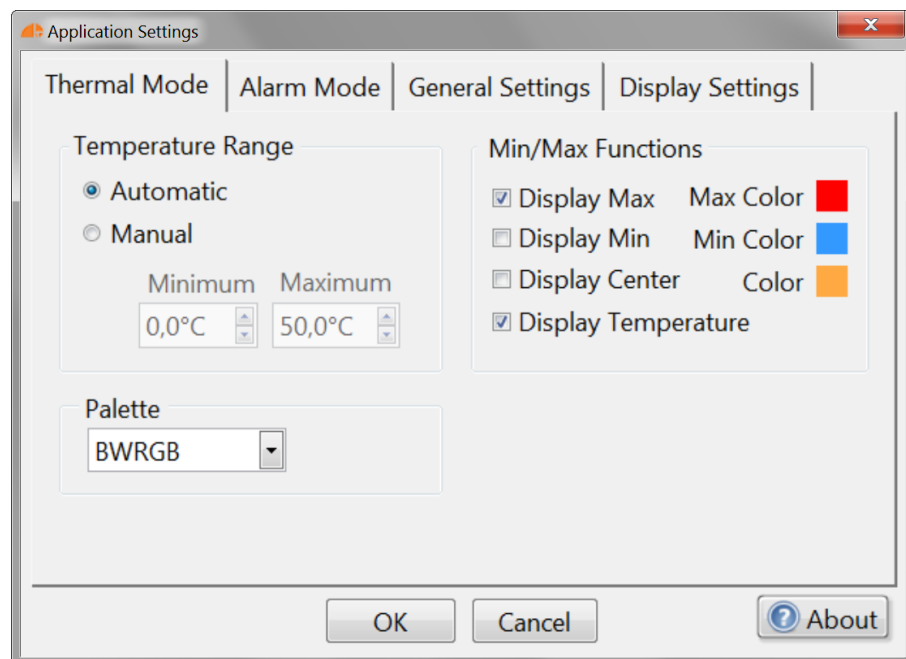


Application settings consists of four tabs that summarize settings for each part of the application.

Tabs description:

- 1) *Thermal Mode* – thermal mode settings
- 2) *Alarm Mode* – alarm mode settings
- 3) *General Settings* – measurement parameters and image modes settings
- 4) *Display Settings* – font size and legend refresh frequency settings

Thermal mode settings

Thermal mode can be edited at *Thermal Mode* tab.

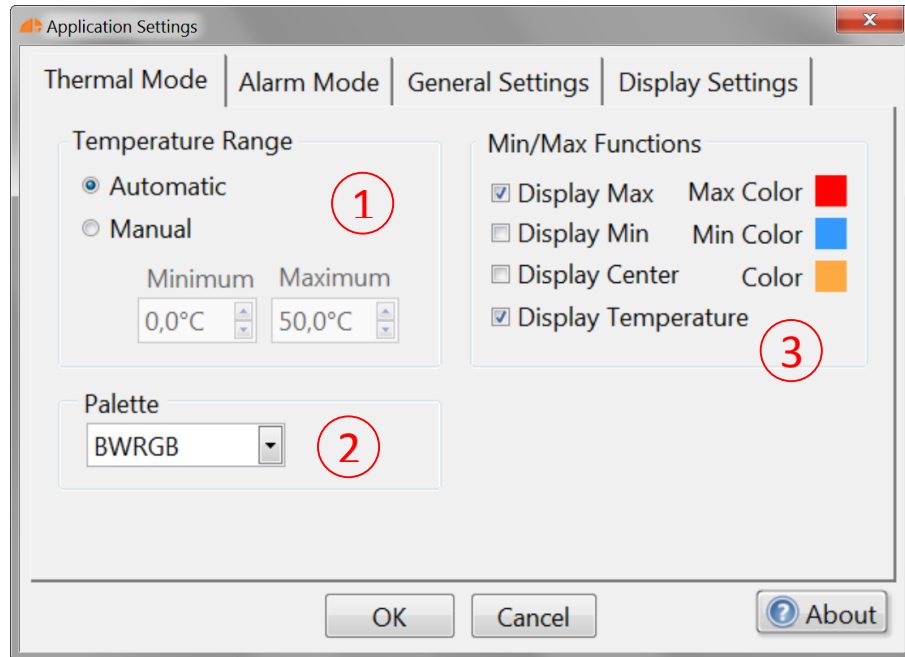


Thermal mode settings consists of three parts:

- 1) *Temperature Range* – automatic or manual temperature range settings
- 2) *Palette* – select on of the fourteen palettes
- 3) *Min/Max functions* – display min/max temperature cursor, display center cursor, set cursors color and display min/max temperature value on the screen

Alarm Mode settings

Alarm (Isothermic) mode can be edited at *Alarm Mode* tab.

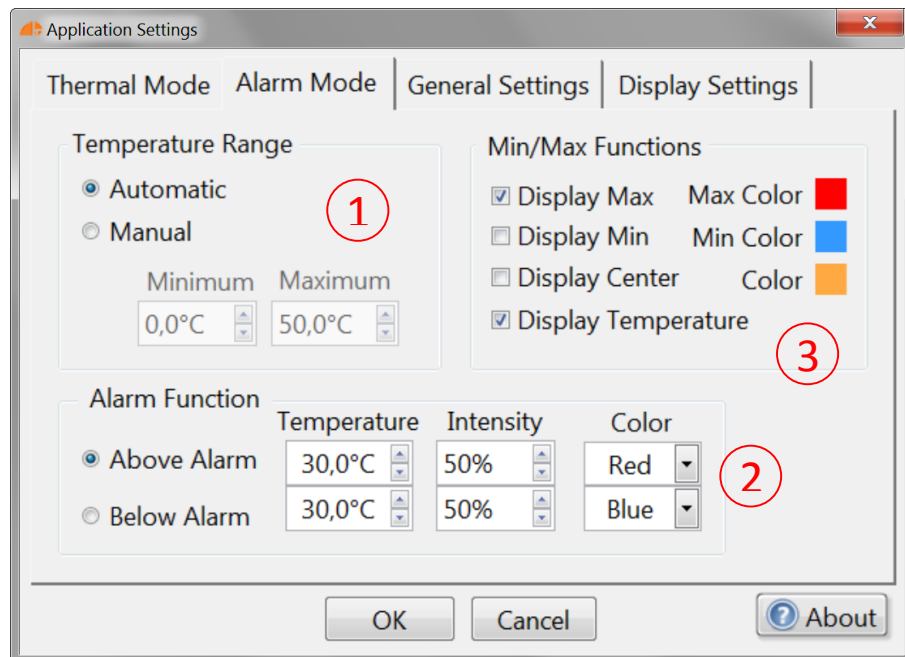


Alarm mode settings consists of three parts:

- 1) *Temperature Range* – automatic or manual temperature range settings
 - 2) *Alarm Function* – select Above or Below alarm function, temperature limits settings, set color and intensity of marked areas
 - 3) *Min/Max functions* – display min/max temperature cursor, display center cursor, set cursors color and display min/max temperature value on the screen
- Function description:
- 1) *Above Alarm* – the UAV remote control screen displays the actual black and white thermal image and marks areas with higher temperature than the temperature limit. Marked area has selected color and intensity (default: red color and 50% intensity).
 - 2) *Below Alarm* – the UAV remote control screen displays the actual black and white thermal image and marks areas with lower temperature than the temperature limit. Marked area has selected color and intensity (default: blue color and 50% intensity).

Note: Only one alarm function can be selected for the flight.

General Settings

Setting measurement parameters and selecting available image modes can be done through the *General Settings* tab.

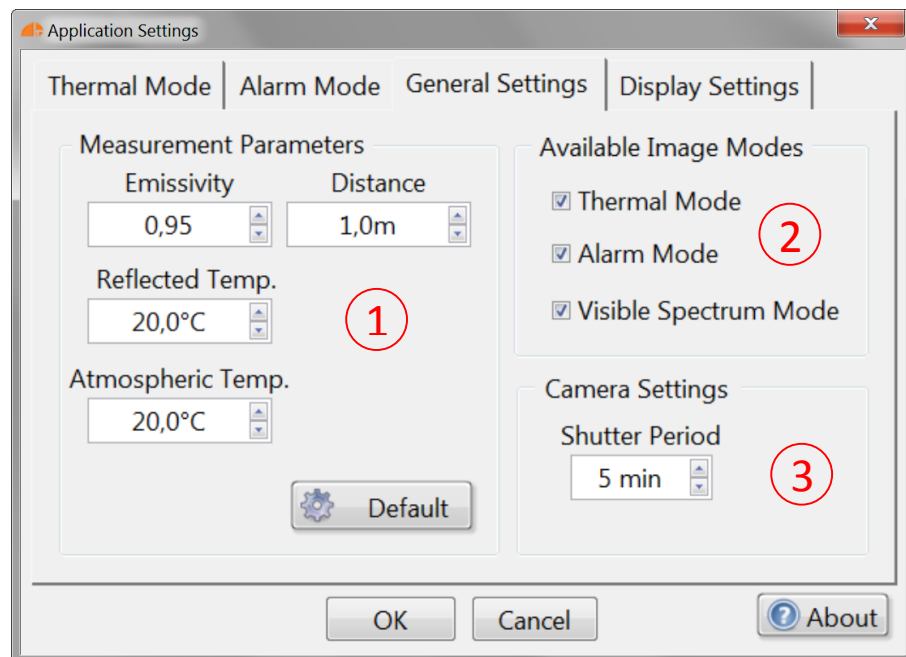


General Settings consists of two parts:

- 1) *Measurement parameters* – thermal conversion parameters settings
- 2) *Available Image Modes* – Image modes selection. Checked modes are available to be switch during the flight (see section **Image mode switching**).
- 3) *Callibration period* – 5 minutes period is recommended (shorter period can lead to camera shutter wear)

Display Settings

Display parameters can be edited at the *Display Settings* tab.

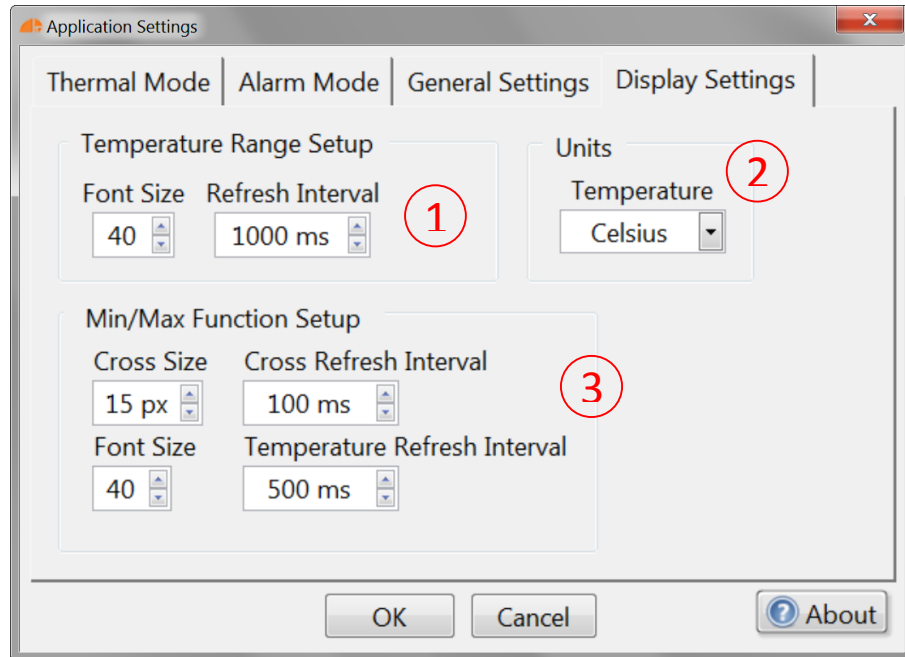

Display Settings consists of three parts:

- 1) *Temperature Range Setup* – font size and refresh interval setup of the temperature range legend
 - 2) *Temperature unit* – display temperature in Kelvins, Fahrenheits or Celsius degrees
 - 3) *Min/Max Function Setup* – font size and refresh interval settings of the min/max cursor
-

7 FLIR Tools compatibility

General description

Workswell Thermal Vision Pro allows you to take radiometric images. Captured radiometric images can be further edited using FLIR Tools software.

Basic functions of FLIR Tools:

- Editing images (thermograms) captured by an infrared camera
- Creating simple reports (reports on measurements) in PDF format

Download link for FLIR Tools:

<http://support.flir.com/SwDownload/app/RssSWDownload.aspx?ID=120>


More information:

<http://www.termokamery-flir.cz/software-flir-tools/>

Editing images


One of the basic functions of FLIR Tools software is editing captured radiometric images (thermograms). Following functions are available in editing mode:

- displaying basic image information (date of capturing, model of infrared camera etc.)
- editing all five measurement parameters (Emissivity, Reflected temperature, atmospheric temperature, distance and humidity of the atmosphere).
- reading and editing text notes, playing voice notes
- adding (any number) of measuring points
- adding (any number) of areas (rectangles, ellipses), including the minimum and maximum temperatures
- adding (any number) of delta functions for determining the temperatures differences
- changing palette
- adding isotherm (above, below, interval etc.)
- changing temperature range (only within the limits of the temperature range which was set in camera during shooting)

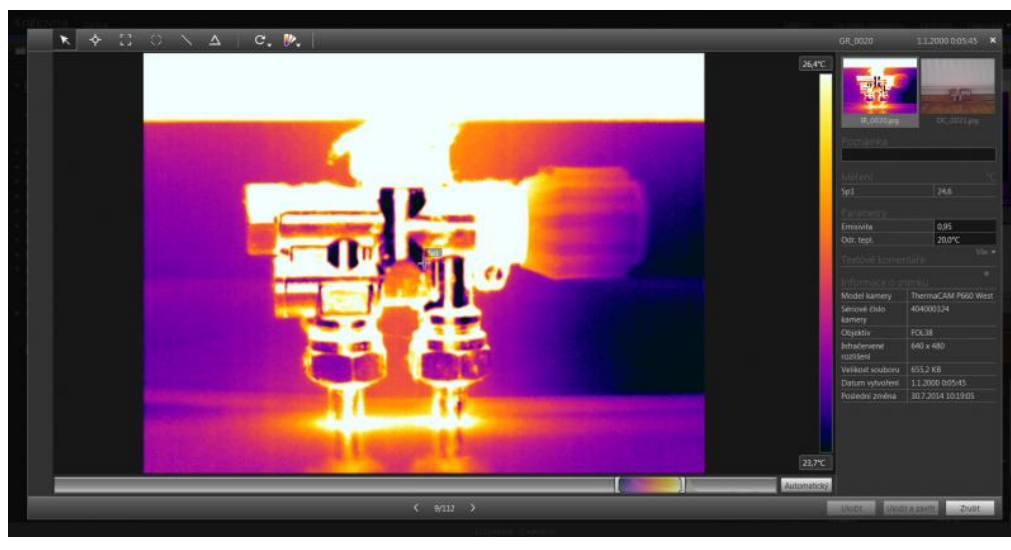

Creating reports

Another of the basic features of FLIR Tools software is creating simple reports in PDF format. For a more comprehensive protocols we recommend using the FLIR Tools+ and its extension for MS Windows. This software is paid and a license can be ordered at Workswell s.r.o..

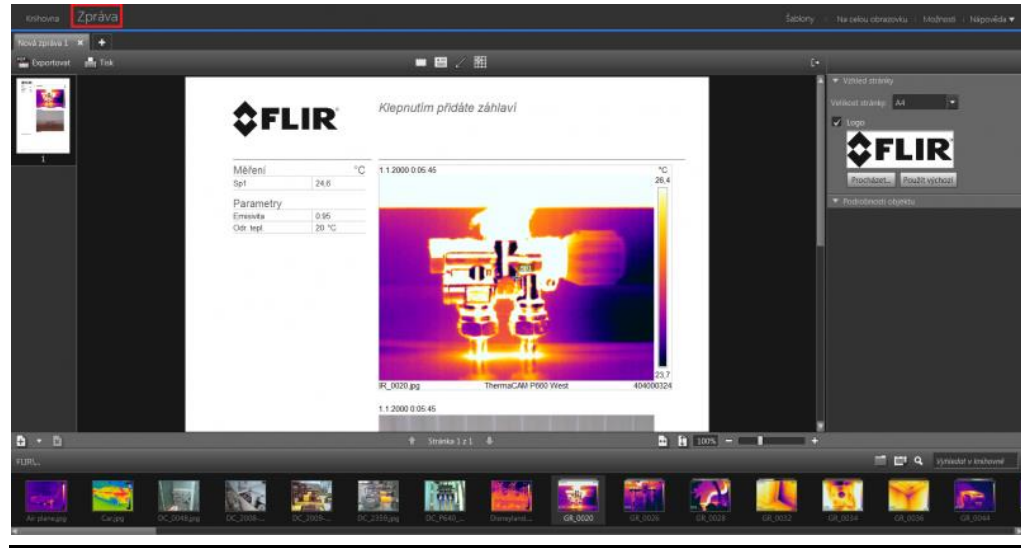

8 Enviroment Conditions

Enviroment Conditions

You should follow these storage and operating conditions for proper function of the *Workswell Thermal Vision Pro* system:

Operation temperature range	from 0°C to +45°C
Storage temperature range	from -20°C to +60°C
Humidity	20-80%, noncondensing
Maximum irradiance	100W/cm ²

If you use the product in coflict with these conditions, damage to the *Workswell Thermal Vision* system can occur.

9 Infrared camera warp-up

General description

Modern infrared cameras are based on a sensor (microbolometer array) that needs to be warmed-up to the working temperature before it can be used. The sensor starts warming-up automatically when you connect the infrared camera to the control unit and start the Workswell Thermal Vision Pro system. The infrared camera is usually ready in less than 5 minues.


During the warm-up proces the accuracy of the measured temperature data is lower and various defects can appear in the thermal image. Therefore, we recommend to let the infrared camera warm before using it.

10 Infrared lens replacement

Lens replacement

Follow these steps when replacing infrared lens:

- 1) Use the focus tool to unscrew the lens counterclockwise.

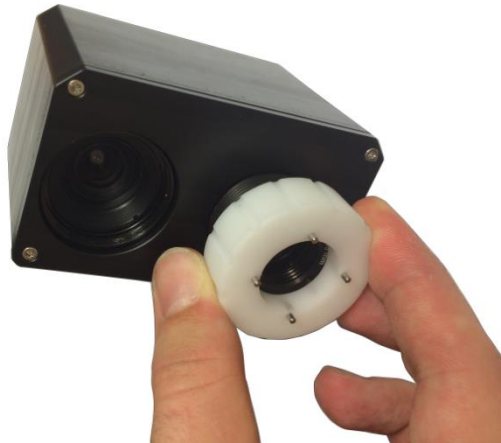

- 2) Perform lens replacement pointing the lens pointing downwards. This prevents the dirt settlement on infrared chip. Never point infrared camera without lens to any light source.



Be careful when you replace the infrared lens. The lens has a delicate anti-reflective coating.

In order to retract the lens back to the camera body gently rotate the lens clockwise. If the lens can rotate too hard, you probably get on the edge of the focus range. Trying to rotate the lens more may cause the lens to damage.

11 Keyboard pairing

General description


The supplied mini wireless keyboard communicates with the control unit via bluetooth. This technology requires the keyboard to be paired with the control unit prior to first use. This process needs to be done only once. After that, the keyboard will connect to the control unit automatically.

The keyboard comes already paired with the control unit. It is no needed to repeat the pairing process again. The only exception (when you are supposed to pair the keyboard) is a replacement of the supplied keyboard with another or adding back the keyboard that was already removed.

Bluetooth keyboard pairing

Insert the bluetooth USB dongle (a part of the keyboard) into any available USB port of the control unit and turn on the keyboard.


Open *Start -> Control Panel -> Hardware and Sound-> Devices and Printer* and click on the **Add a device** button.

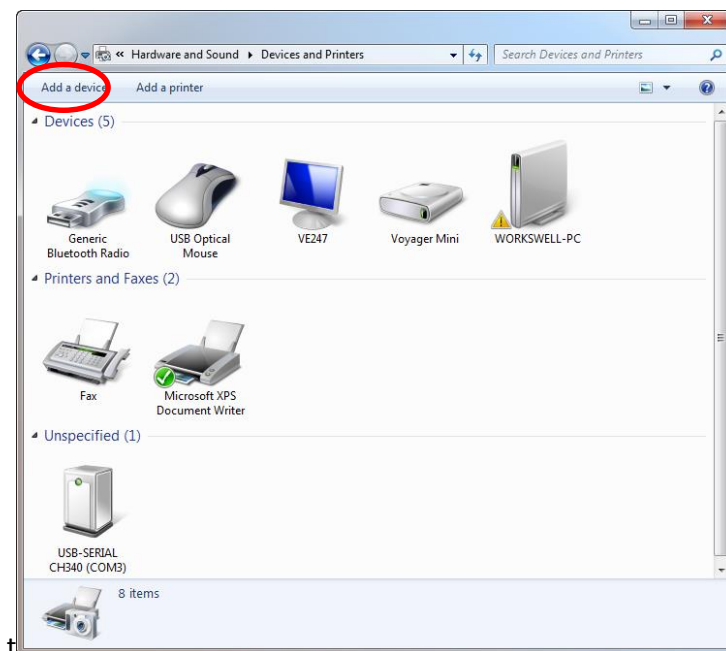


Press the key with a bluetooth symbol on the mini wireless keyboard.




The keyboard appears in the list of devices that can be added. Choose the **Bluetooth 3.0 Macro Keyboard** and click the **Next** button.

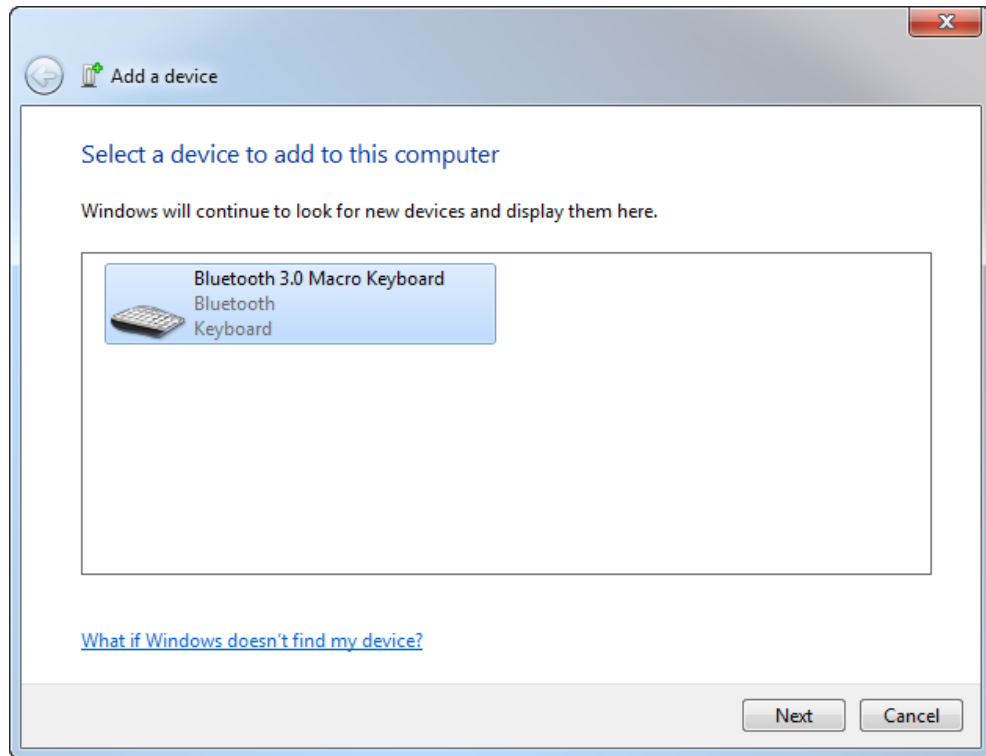

Following window appears showing you the code that has to be used to pair the keyboard. Enter this code to the mini wireless keyboard and then press the **Enter**.

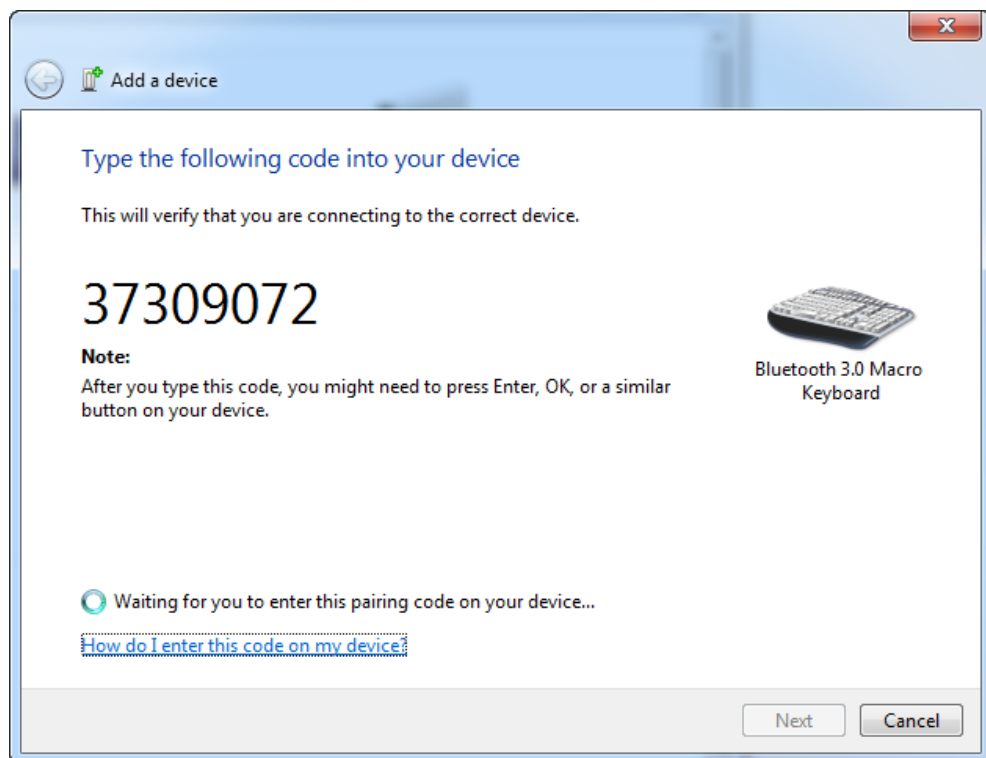

The keyboard has been successfully paired if you can see this window.

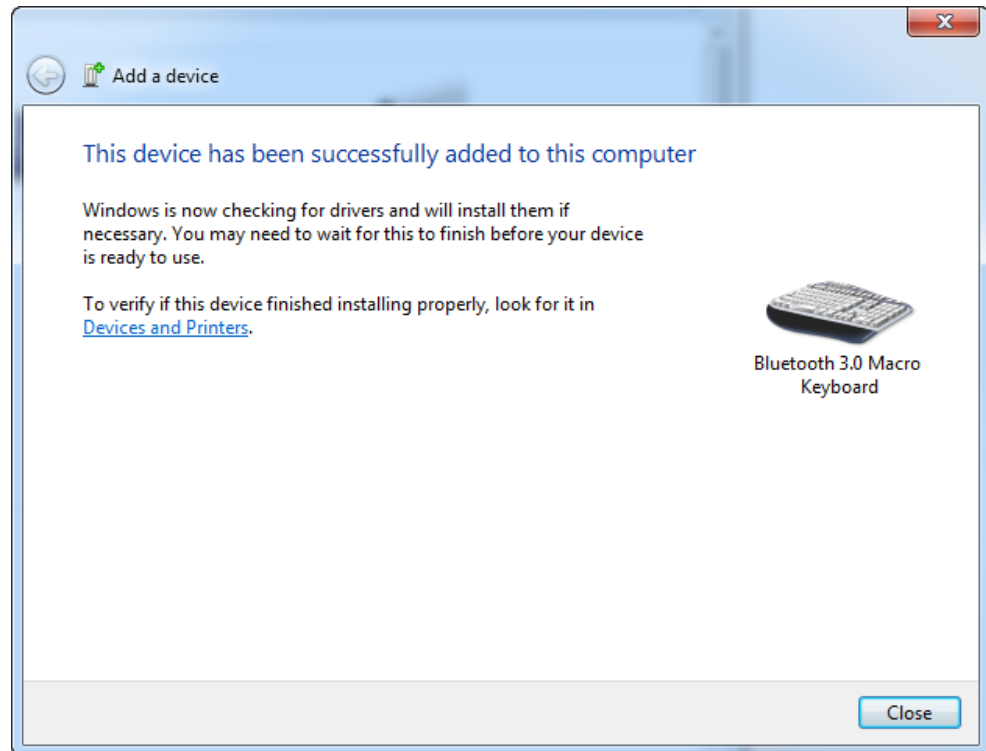

12 Maintenance

Cleaning the camera housing, cables and the control unit

Liquids:

Use one of these liquids:

- Warm water
- A weak detergent solution

Equipment:

A soft cloth

Procedure:

- 1) Soak the cloth in the liquid.
 - 2) Twist the cloth to remove excess liquid.
 - 3) Clean the part with the cloth.
-

Cleaning the infrared lens

Liquids:

Use one of these liquids:

- A commercial lens cleaning liquid with more than 30% isopropyl alcohol.
- 96% ethyl alcohol (C_2H_5OH)
- DEE (= „ether“ = diethylether, $C_4H_{10}O$)
- 50% acetone (= dimethylketone, $(CH_3)_2CO$) + 50% ethyl alcohol (by volume). This liquid prevents drying marks on the lens.

Equipment:

Cotton wool

Procedure:

- 4) Soak the cotton wool in the liquid.
 - 5) Twist the cotton wool to remove excess liquid.
 - 6) Clean the lens one time only and discard the cotton wool.
-

Warning:

Make sure that you read all applicable MSDS (Material Safety Data Sheets) and warning labels on containers before you use a liquid: the liquids can be dangerous.

Caution:

- Be careful when you clean the infrared lens. The lens has a delicate anti-reflective coating.
 - Do not clean the infrared lens too vigorously. This can damage anti-reflective coating. Re-applying antireflective coating is not possible and is required to change the lens.
-

13 Troubleshooting

Thermographic camera not available

Possible causes of the problem:

- 1) *Thermal imaging camera is disconnected*
- 2) *The Workswell Control application was not properly terminated*
- 3) *The control unit was powered after shutdown*

Problem solving:

- 1) *Please check the thermal imaging camera connection*
 - 2) *Close Workswell Control application by pressing F4 key, disconnect and connect the thermal imaging camera and run Workswell Control again*
 - 3) *Close Workswell Control application by pressing F4 key, disconnect and connect the thermal imaging camera and run Workswell Control again*
-

Visible spectrum camera not available

Possible causes of the problem:

- 1) *The visible spectrum camera is disconnected*
- 2) *The Workswell Control application was not properly terminated*
- 3) *The control unit was powered after shutdown*

Problem solving:

- 1) *Please check the visible spectrum camera connection.*
 - 2) *Close Workswell Control application by pressing F4 key, disconnect and connect the visible spectrum camera and run Workswell Control again*
 - 3) *Close Workswell Control application by pressing F4 key, disconnect and connect the thermal imaging camera and run Workswell Control again*
-

Mini Wireless Keyboard is not working

Possible causes of the problem:

- 1) *The keyboard batteries level is low.*
- 2) *USB dongle is not connected*
- 3) *The keyboard is too far from the control unit*
- 4) *The keyboard is in Stand By*

Problem solving:

- 1) *Charge the batteries.*
 - 2) *Plug the USB dongle in any free USB port on the control unit.*
 - 3) *Keep the Keyboard within 2m from the control unit.*
 - 4) *Turn the keyboard off and on.*
-

Application logs

A log file is created and saved on a disk of the control unit each time you run the *Workswell Control* application. Sending the log file back to Workswell s.r.o. can significantly reduce the time needed to resolve the problem.

Folder path:

`C:\Users\Documents\Logger\`

The folder is divided into subfolders named `YYYY_MM_DD`, where `YYYY` is the year, `MM` is the month and `DD` is the day of the date when *Workswell Control* application was running. Logs from different days are stored separately.

Name and format of log file:

	Log name	Log format
Log file	HH_MM_SS_LogFile	txt

HH – hours, MM – minutes, SS – seconds of the time the application was started
