



AdeptModules Instruction Handbook Volume 1, Adept MV Controller Interface

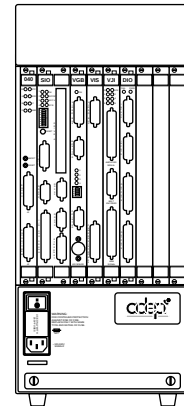

00400-00100, Rev A
July 1997

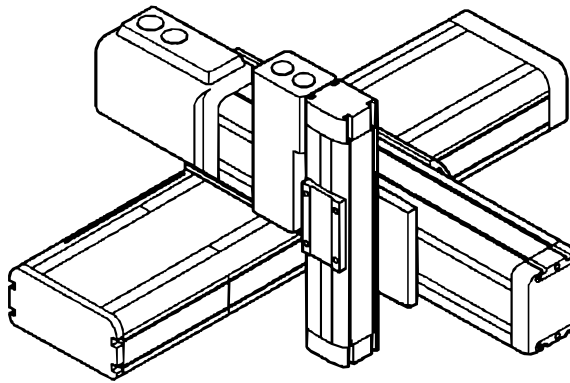

150 Rose Orchard Way • San Jose, CA 95134 • USA • Phone (408) 432-0888 • Fax (408) 432-8707

Otto-Hahn-Strasse 23 • 44227 Dortmund • Germany • Phone 0231/75 89 40 • Fax 0231/75 89 450

11, Voie la Cardon • 91126 • Palaiseau • France • Phone (1) 69.19.16.16 • Fax (1) 69.32.04.62

1-2, Aza Nakahara, Mitsuya-Cho • Toyohashi, Aichi-Ken • 441-31 • Japan • (0532) 65-2391 • Fax (0532) 65-2390

The information contained herein is the property of Adept Technology, Inc., and shall not be reproduced in whole or in part without prior written approval of Adept Technology, Inc. The information herein is subject to change without notice and should not be construed as a commitment by Adept Technology, Inc. This manual is periodically reviewed and revised.

Adept Technology, Inc., assumes no responsibility for any errors or omissions in this document. Critical evaluation of this manual by the user is welcomed. Your comments assist us in preparation of future documentation. A form is provided at the back of the book for submitting your comments.

Copyright © 1997 by Adept Technology, Inc. All rights reserved.

The Adept logo is a registered trademark of Adept Technology, Inc.

Adept, AdeptOne, AdeptOne-MV, AdeptThree, AdeptThree-MV, AdeptThree-XL, PackOne, PackOne-MV, HyperDrive, Adept 550, Adept 550 CleanRoom, Adept 1850, Adept 1850XP, A-Series, S-Series, Adept MC, Adept CC, Adept IC, Adept OC, Adept MV, AdeptVision, AIM, VisionWare, AdeptMotion, MotionWare, PalletWare, AdeptNet, AdeptFTP, AdeptNFS, AdeptTCP/IP, AdeptForce, AdeptModules, and V⁺ are trademarks of Adept Technology, Inc.

Any trademarks from other companies used in this publication are the property of those respective companies.

Printed in the United States of America

Table of Contents

1	Safety	15
1.1	Introduction	17
	How to Use this Manual	18
	Definition of Manipulating Industrial Robot	18
1.2	Notes, Cautions, and Warnings	18
1.3	Precautions and Required Safeguards	19
	AdeptModules Static Forces	19
	Safety Barriers	19
	Additional Safety Information	20
1.4	Intended Use of the AdeptModules	21
1.5	AdeptModules Modifications	22
	Acceptable Modifications	22
	Unacceptable Modifications	22
1.6	Endangerment Through Additional Equipment	22
1.7	Working Areas	23
1.8	Qualification of Personnel	23
1.9	Transport	24
1.10	Safety Equipment for Operators	24
1.11	Protection Against Unauthorized Operation	24
1.12	Operating Modes of AdeptModules	24
	Automatic Mode	24
	Manual Mode	25
1.13	Safety Aspects While Performing Maintenance	25
1.14	What to Do in an Emergency Situation	25
1.15	How to Get Help	25
	In Europe	25
	Europe/Germany	25
	France	26
	Italy	26
	In the United States	26
	Service Calls	26
	Application Questions	26
	Applications Internet E-Mail Address	26
	Training Information	26
	Outside Continental United States or Europe	27

2	Installation	29
2.1	Environmental and Facility Requirements for AdeptModules	31
	Facility Ambient Air Quality for AdeptModules	31
	Compressed Air for the AdeptModules	31
	Mounting Surface Specifications	31
	Mounting Surface	31
2.2	Environmental and Facility Requirements for Controller	31
2.3	Environmental and Facility Requirements for Power Chassis	32
2.4	Before Unpacking the Adept Equipment	32
2.5	Transport and Storage	32
2.6	Unpacking and Inspecting the Adept Equipment	32
2.7	Repackaging for Relocation	33
2.8	AdeptModules Installation	33
2.9	Installation of the Adept MV Controller and the Adept PA-4 Power Chassis	34
	Joining an Adept PA-4 Power Chassis to an Adept MV Controller	34
	Joining at the Top	35
	Joining at the Bottom	35
	Space Around the Chassis	36
	Installation in a Rack or Panel Mount	36
	Panel Mounting	36
	Rack Mounting	36
2.10	Installing the A-Series Monitor and Keyboard	39
	Installation Procedure	39
2.11	Installing a Terminal in an S-Series System	40
	Recommended Terminal for S-Series Systems	40
	Installation Procedure	40
2.12	Installing AdeptWindows PC™	40
2.13	Installing the External Front Panel	41
	Controls and Indicators	41
	Installing the External Front Panel (VFP)	42
2.14	Installing Non-Adept Peripherals in an A-Series System	43
	Third-Party Monitor Compatibility	43
	Third-Party Keyboard Compatibility	43
	Third-Party Pointing Device Compatibility	43
2.15	Installing the Signal Interface Box (SIB)	44
	Connections and Indicators	44
	Installation of the Signal Interface Box (SIB)	46
	Space Around the Signal Interface Box	46
	Typical Digital Output Wiring	46
	Changing User Output Voltage Setting	48
	Installing a Brake Release Button	49

2.16 Signal Interconnection Installation	50
System Cable Connections	50
System Cable Lengths	51
Connecting the AdeptModules to the Power Chassis	51
Installing Signal Cables: AdeptModules to Signal Interface Box	52
Installing Signal Cables: MV Controller to Power Chassis	52
Installing Signal Cables: MV Controller to Signal Interface Box	54
Connecting the MCP to the VFP	55
MCP Cradle	55
2.17 Grounding Information	56
Adept MV Controller Grounding	56
Adept PA-4 Power Chassis Grounding	56
2.18 Connecting to AC Power	57
Connecting AC Power to the MV-5/10 Controller	58
AC Power Requirements	58
Power Entry Module	58
Connecting AC Power Cord	59
Connecting AC Power to the Adept PA-4 Power Chassis	60
Connecting the Power Chassis AC Power Cord	61
Typical AC Power Installation Diagrams	62
Changing Voltage Setting for Power Chassis	63
Connecting AC Power to the Signal Interface Box	64
Power Entry Module	65
2.19 Additional Power Chassis Information	66
B+ Amplifier Module Overview	66
Connectors and Indicators	66
Power Chassis Circuit Breaker and Fuse Information	67
Chassis Circuit Breaker	67
Chassis and Amplifier Module Fuses	67
Removing and Installing Amplifier Modules	67
Removing Amplifier Modules	67
Installing Amplifier Modules	68
2.20 Installing End-Effectors on AdeptModules	68
Connecting Compressed Air Supply to the AdeptModules (optional)	68
3 Preparation for Safe and Effective Use of the Robot	69
3.1 Overview of Safety System	71
Introduction	71
Operating in Manual Mode	71
User-Supplied E-Stop Switches	71
Terminal Block on External Front Panel	72
External E-Stop Input	73
Passive E-Stop Output	73
Digital Inputs and Outputs of the System Input/Output (SIO) Module	74

Input Signals	74
Output Signals	75
Digital I/O Connector Pinouts	76
Typical Emergency Stop Circuitry	78
4 Commissioning the System	81
4.1 Introduction	83
Physical Connections	83
4.2 Operating Modes.	83
Manual Operating Mode.	83
Automatic Operating Mode	84
4.3 Using the Brake Release Button	84
Brake Release Button	84
Brakes	85
4.4 Description of the Manual Control Pendant (MCP)	85
How to Hold the MCP.	85
Description of Buttons on the MCP.	87
Mode Control and Joint/Axis Control Buttons	87
Speed Bars	87
4.5 How to Stop AdeptModules in Manual Mode	88
4.6 Prior to Starting the AdeptModules.	88
Software Configuration	88
Adept Utility Disk	88
SPEC Data	89
Overview of AdeptModules Quick Setup	89
Overview of System Bring-Up.	90
Bringing Up an AdeptModules System.	90
Single Robot With One Motion Board (EJI)	90
4.7 How to Start AdeptModules	92
Enable High Power with the MCP	92
In Automatic Mode	92
In Manual Mode.	93
Calibration Parameters	93
Calibration of the AdeptModules with the MCP.	93
Changing Calibration Direction	94
4.8 Moving the AdeptModules With the MCP	96
MAN/HALT Button for Selecting Joint State	96
Joint/Axis Control Buttons	96
Speed Bars	97
Selecting Joint State and Moving the AdeptModules.	97
Selecting and Moving Joint 1 (X)	98
Selecting and Moving Joint 2 (Y)	99
Selecting and Moving Joint 3 (Z)	99

	Selecting and Moving Joint 4 (Theta)	99
	4.9 Limiting Joint Travel	99
5	Maintenance	101
	5.1 Introduction	103
	5.2 Modules Lubrication	103
	Lubrication Schedule.	103
	Lubrication Grease	104
	Grease Adapter Nozzle.	104
	Lubrication Procedures	104
	5.3 Connectors and Pins.	105
	Connector Pins and Inserter/Extractor Tools.	105
	5.4 Maintenance and Inspection of Air Filters	107
	Adept MV-19 Controller Fan Filter Inspection and Cleaning	107
	Adept MV-5/MV-10 Controller Fan Filter Inspection and Cleaning.	107
	Adept PA-4 Amplifier Chassis Fan Filter Inspection and Cleaning.	107
	5.5 Check Lamps on VFP	108
6	Technical Specification	109
	6.1 Dimensions.	111
	Adept Linear Modules Dimensions.	111
	Adept MV-5 and MV-10 Controllers Dimensions	111
	Adept MV-19 Controller Dimensions	112
	Adept PA-4 Power Chassis Dimensions	113
	Dimensions of the Signal Interface Box	114
	Dimensions of the External Front Panel	115
	Dimensions of the Mounting Brackets	116
	MCP Cradle Dimensions	117
	6.2 Adept MV Controller Power Consumption	118
	6.3 Adept PA-4 Power Chassis Power Consumption	118
A	Software Configuration Using CONFIG_C	119
	A.1 Introduction	121
	Terminology	121
	Adept Utility Disk.	122
	Device Module Documentation	122
	Software Installation Procedure for a New System	123
	Upgrade Procedure for an Existing System.	123
	A.2 Robots and Device Modules	123
	Procedure to Load CONFIG_C	124
	Program Prompts	125
	A.3 Servo Loop Rate	128

B	Multiple Robot Configurations	129
	B.1 Introduction	131
	B.2 AdeptModules Configured as Multiple Robots on One EJI	131
	B.3 Configuring AdeptModules With an Adept Robot	133
	Address Settings for Multiple Servo Boards.	133
C	Sample Specification File	135
	C.1 Introduction	137
	C.2 Sample SPEC File	137
D	Test and Troubleshooting	143
	D.1 Introduction.	145
	D.2 Discrete Inputs	145
	Status LED Hints	145
	D.3 Error Messages and Causes	145
	Motion Interface E-stop	145
	Protection Error	145
	RSC Communication Failure (Robot #)	146
	Time Out Enabling Power	146
	Motor Startup Failure Mtr in (Robot #)	146
	D.4 Calibration Related Problems	146
	D.5 Setup Related Problems.	146
	D.6 Diagnostic Tests	146
	Testing Encoder Channels	147

List of Figures

Figure 1-1	AdeptModules	17
Figure 1-2	Adept MV Controller Interface.	17
Figure 1-3	AdeptModules Joint Motions	18
Figure 2-1	Joining the Power Chassis and Controller at the Top	34
Figure 2-2	Joining the Power Chassis and Controller at the Bottom	35
Figure 2-3	Installing Mounting Brackets on an Adept MV Controller.	37
Figure 2-4	Installing Mounting Brackets on an Adept PA-4 Power Chassis	38
Figure 2-5	Connecting the A-Series Monitor and Keyboard.	39
Figure 2-6	External Front Panel (VFP)	41
Figure 2-7	External Front Panel (VFP) Installation	42
Figure 2-8	Signal Interface Box	44
Figure 2-9	Signal Interface Box LED Indicators	45
Figure 2-10	User Output Wiring Diagram	47
Figure 2-11	Configuring 12 or 24 Volts	49
Figure 2-12	Brake Release Button.	49
Figure 2-13	Adept System Cable Installation	50
Figure 2-14	AdeptModules-to-EJI Cable Installation	53
Figure 2-15	Connecting the PA-4 Power Chassis to the MV Controller.	54
Figure 2-16	MCP Connection	55
Figure 2-17	AdeptModules System Grounding Diagram.	57
Figure 2-18	Adept MV Controller Power Entry Module	59
Figure 2-19	Typical 380-415 VAC Connection	62
Figure 2-20	Typical 3-Phase 200-240 VAC Connection	62
Figure 2-21	Insulating Blue Wire in Power Cord.	63
Figure 2-22	Changing Voltage in Power Chassis	64
Figure 3-1	Digital I/O Connector Pin Locations on SIO Module	77
Figure 3-2	E-Stop Diagram with VFP and MCP	78
Figure 3-3	E-Stop Circuitry with Additional Safety Equipment	79
Figure 4-1	Holding the MCP	86
Figure 4-2	MCP Layout	87
Figure 4-3	Command (CMD) Function Button	94
Figure 4-4	Mode Control Buttons	96
Figure 4-5	Speed Bars	97
Figure 4-6	Joint State	98
Figure 6-1	Adept MV-5 and MV-10 Dimensions	111
Figure 6-2	Adept MV-19 Dimensions	112
Figure 6-3	Adept PA-4 Power Chassis Dimensions	113
Figure 6-4	AdeptModules Signal Interface Box	114

Figure 6-5	Adept External Front Panel Dimensions.	115
Figure 6-6	Adept MV-5/10 and PA-4 With Mounting Brackets Installed	116
Figure 6-7	MCP Cradle Dimensions	117
Figure A-1	Procedure for Copying Device Modules to a System File.	124
Figure A-2	Robots and Device Modules Menu	125
Figure A-3	Example System Disk Configuration in CONFIG_C.	126
Figure A-4	Typical Multirobot System Initialization Messages.	126
Figure A-5	Example Device Module REPLACE Procedure.	128

List of Tables

Table 1-4	Sources for International Standards and Directives	20
Table 2-1	Operating Environment Requirements	31
Table 2-2	Monitor Compatibility Specifications	43
Table 2-3	LED Status and Indications	45
Table 2-4	User Output/Brake Release Connector Pin Assignments	46
Table 2-5	User Outputs Specifications	48
Table 2-6	System Cable Lengths	51
Table 2-7	EJI specifications	52
Table 2-8	Adept MV Controller Power Requirements	58
Table 2-9	Adept MV Controller Power Cord Specifications	59
Table 2-10	Adept PA-4 Power Chassis Power Requirements	60
Table 2-11	AC Power Cord Specifications for Power Chassis	61
Table 2-12	Signal Interface Box AC Power Requirements	65
Table 3-1	Terminal Assignment of the Terminal Block on the Back of the VFP	72
Table 3-2	DIO Input Specifications (SIO module)	74
Table 3-3	DIO Output Specifications (SIO module)	75
Table 3-4	Digital I/O Connector Pin Assignments on SIO Module	76
Table 5-1	Lubrication Schedule	104
Table 6-1	Adept MV Controller Power Requirements	118
Table 6-2	Power Consumption for PA-4 Power Chassis (four-axis configuration)	118
Table B-1	Motor-to-channel mapping Robot #1	132
Table B-2	Motor-to-mapping Robot #2	132
Table B-3	Multiple Robot Address Setting	133
Table C-1	AdeptModules Specifications for Sample Spec. File	137

1.1 Introduction	17
How to Use this Manual	18
Definition of Manipulating Industrial Robot	18
1.2 Notes, Cautions, and Warnings	18
1.3 Precautions and Required Safeguards	19
AdeptModules Static Forces	19
Safety Barriers	19
Additional Safety Information	20
1.4 Intended Use of the AdeptModules	21
1.5 AdeptModules Modifications	22
Acceptable Modifications	22
Unacceptable Modifications	22
1.6 Endangerment Through Additional Equipment	22
1.7 Working Areas	23
1.8 Qualification of Personnel	23
1.9 Transport	24
1.10 Safety Equipment for Operators	24
1.11 Protection Against Unauthorized Operation	24
1.12 Operating Modes of AdeptModules	24
Automatic Mode	24
Manual Mode	25
1.13 Safety Aspects While Performing Maintenance	25
1.14 What to Do in an Emergency Situation	25
1.15 How to Get Help	25
In Europe	25
Europe/Germany	25
France	26
Italy	26
In the United States	26
Service Calls	26
Application Questions	26
Applications Internet E-Mail Address	26
Training Information	26
Outside Continental United States or Europe	27

1.1 Introduction

AdeptModules are a family of linear modules (see Figure 1-1) that can be used separately or combined into 15 unique 2- and 3-axis configurations. AdeptModules consist of a precision-ground, ball-screw drive mechanism, high capacity linear guides and AC servo motors. AdeptModules also include fully sealed belt covers to protect the module from contaminants.

The AdeptModules are designed to interface with the Adept MV controller and PA-4 power chassis (see Figure 1-2) using the Signal Interface Box (SIB). The Adept MV controller is used to program and control the Modules.

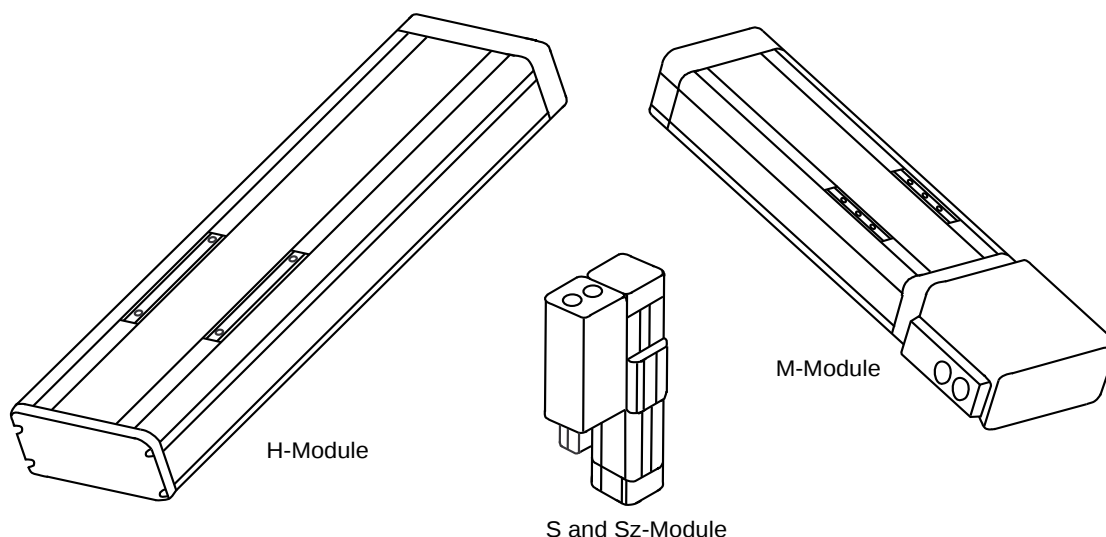


Figure 1-1. AdeptModules

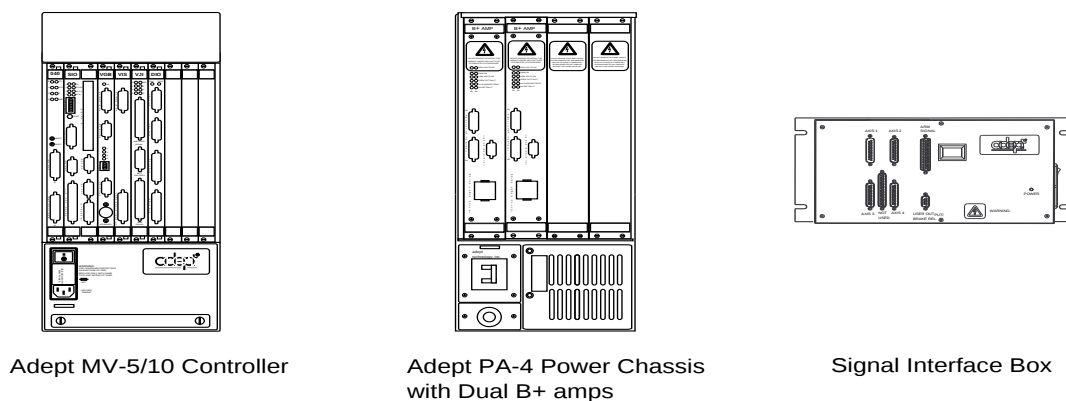


Figure 1-2. Adept MV Controller Interface

How to Use this Manual

This manual is intended for use with Volume 2 of the AdeptModules Manual, Mechanical assembly. This manual contains information that is useful during installation, commissioning, and operation of the system, as well as during the mechanical assembly and periodical maintenance of the AdeptModule.

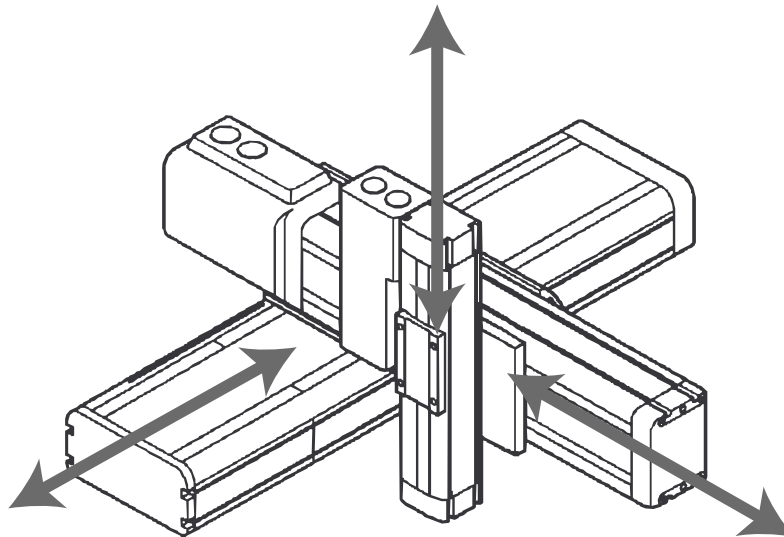


Figure 1-3. AdeptModules Joint Motions

Definition of Manipulating Industrial Robot

An automatically controlled, reprogrammable, multipurpose, manipulative machine with several degrees of freedom (see Figure 1-3), which may be either fixed in a place or mobile, for use in industrial automation applications is called a manipulating robot. (ISO 10218:1992(E))

1.2 Notes, Cautions, and Warnings

There are four levels of special notation used in this instruction handbook. In descending order of importance, they are:



Warning: If the actions indicated in a “WARNING” are not complied with, injury or major equipment damage could result. A Warning statement will typically describe the potential hazard, its possible effect, and the measures that must be taken to reduce the hazard.



Warning: If in a “WARNING” the actions are indicated with an lightning bolt instead of an exclamation mark, an electrical danger or shock is possible for personnel working with the system.



Caution: If the action specified in the “CAUTION” is not complied with, damage to your equipment could result.

Note: A “NOTE” provides supplementary information, emphasizes a point or procedure, or gives a tip for easier operation.

1.3 Precautions and Required Safeguards

This manual must be read by all personnel who install, operate, or maintain Adept systems, or who work within or near the workcell.



Warning: Adept Technology strictly prohibits installation, commissioning, or operation of an installation with an AdeptModule without adequate safeguards according to the standards EN 775/ISO 10218, sections 5,6; EN 292-1, and EN 60204, section 13, or national equivalent.

AdeptModules Static Forces

AdeptModule systems include computer-controlled mechanisms that are capable of exerting considerable force. Like all robot and motion systems, and most industrial equipment, they must be treated with respect by the user and the operator.

Safety Barriers

Safety barriers must be an integral part of AdeptModules workcell design, installation, operator training, and operating procedures. Adept systems are computer-controlled and may activate remote devices under program control at times or along paths not anticipated by personnel. It is critical that safeguards be in place to prevent personnel from entering the workcell whenever equipment power is present.

The AdeptModules are not safe on their own. The AdeptModules System Integrator (or end-user) must ensure that adequate safeguards, safety barriers, light curtains, safety gates, safety floor mats, etc., will be installed. The AdeptModules workcell must be designed according to EN 775/ISO 10218, sections 5,6; EN 292-1, 3.71, and EN 60204, section 13, or national equivalent.

The safety distance to the AdeptModules depends, relating to the standard EN 294, on the height of the safety fence. The height and the distance of the safety fence must ensure that nobody can reach the danger zone of the AdeptModules, (see EN 294).

Adept controller systems for AdeptModules have various control features that can aid the integrator or user in constructing system safeguards, including Customer Emergency stop circuitry and digital input and output lines. The emergency power-off circuitry is capable of switching external power systems. See Chapter 3 for information on safe and effective use of the AdeptModules.

AdeptModules are capable of moving at high speeds. If a person is struck by an AdeptModules (impacted), serious injury could occur. AdeptModules configuration, joint speed, joint orientation, and attached payload all contribute to the total amount of energy available to cause injury.

Additional Safety Information

The standards and regulations listed in this handbook contain additional guidelines for AdeptModules system installation, safeguarding, maintenance, testing, startup, and operator training. Table 1-4 below lists sources for the various standards.

Table 1-4. Sources for International Standards and Directives

BSI, British Standards Institute Sales Department Linford Wood Milton Keynes MK14 6LE United Kingdom Phone 0181 996 7000 Fax 0181 996 7001
Beuth Verlag GmbH 10722 Berlin Germany Phone 030 26 01 - 22 60 Fax 030 26 01 - 12 60
American National Standards Institute 11 West 42nd Street, 13th Floor New York, NY 10036 Phone 212-642-4900 Fax 212-398-0023
Document Center, Inc. 1504 Industrial Way, Unit 9 Belmont, CA 94002 Phone 415-591-7600

1.4 Intended Use of the AdeptModules

The installation and use of Adept products must comply with all safety instructions and warnings in this manual. Installation and use also must comply with all applicable European, international or local requirements and safety standards.

The AdeptModules are intended for use in parts assembly and material handling for payloads less than 60kg (132 lbs). Refer to *AdeptModules Instruction Handbook, Volume 2: Mechanical Assembly* for configuration and related payloads.



Warning: For safety reasons it is prohibited to make certain modifications to AdeptModules. See Section 1.5.

The Adept MV controller, Adept PA-4 power chassis, and Signal Interface Box (SIB) are intended to be used as subassemblies of a complete industrial automation system. The controller and power chassis subassemblies must be installed inside a suitable enclosure and must not come into contact with liquids.

The Adept equipment is not intended for use in any of the following situations:

- In hazardous (explosive) atmospheres.
- In mobile, portable, marine, or aircraft systems.
- In life-support systems.
- In residential installations.
- In situations where the Adept equipment will be subject to extremes of heat or humidity. See specifications for allowable temperature and humidity ranges.



Warning: The given instructions about operation, installation, and maintenance in this Instruction Handbook must be strictly observed.

Nonintended use of an AdeptModules can:

- cause injury to personnel.
- damage the AdeptModules or other equipment.
- reduce the system reliability and the performance of the system.

All persons that install, commission, operate, or maintain the AdeptModules must:

- have the necessary qualifications.
- read and follow exactly the instructions in this Instruction Handbook.

If there is any doubt concerning the application, ask Adept to determine if it is an intended use or not.

1.5 AdeptModules Modifications

Sometimes AdeptModules must be modified to successfully integrate them into a workcell. Unfortunately, many modifications can cause an AdeptModules failure or reduce the AdeptModules performance, reliability, or lifetime. The following information is provided as a guideline to modifications.

Acceptable Modifications

In general, the following AdeptModules modifications will not cause problems but may affect AdeptModules performance:

- Attaching tooling, utility boxes, solenoid packs, vacuum pumps, screwdrivers, cameras, lighting, etc., to the AdeptModule mounting plates, combining brackets, or cable brackets.
- Attaching hoses, pneumatic lines, or cables to the AdeptModules. These should be designed so they do not restrict joint motion or cause AdeptModules motion errors.

Unacceptable Modifications

If not done properly, the modifications listed below will damage the AdeptModules, reduce system safety and reliability, or shorten the life of the AdeptModules.



Caution: Making any of the modifications outlined below will void the warranty of any components that Adept determines were damaged due to the modification. You must contact Adept Customer Service if you are considering any of the following modifications.

- Modifying any of the AdeptModules harnesses or Modules-to-controller cables.
- Modifying any AdeptModule covers or drive system components.
- Modifying, including drilling or cutting, any AdeptModules casting or extrusions.
- Routing additional hoses, air lines, or wires through the modules or modules cable tracks.

1.6 Endangerment Through Additional Equipment

Additional equipment, such as grippers, conveyor belts, etc., must not be allowed to reduce the safeguarding of the workcell.

All Emergency Stop Switches must be always accessible.

In other countries, Adept strongly recommends a similar level of safety be obtained, in addition to complying with the applicable local and national regulations.

1.7 Working Areas

AdeptModules have both a Manual and an Automatic operating mode. While an AdeptModules is in Automatic Mode, no personnel are allowed in the workcell.

Operators with additional safety equipment (see Section 1.10) are allowed to work in the AdeptModules workcell when it is in Manual Mode. For safety reasons the operator should, whenever possible, stay outside of the working envelope of the AdeptModules to prevent injury. The maximum speed and power of the AdeptModules is reduced, but it could still cause injury to the operator.

Before performing maintenance in the working envelope of the AdeptModules, High Power must be switched off and the power to the PA4 power chassis must be disconnected. After these precautions, a skilled person is allowed to maintain the AdeptModules. See Section 1.8 for the personnel specifications.



Warning:

Electrical Hazard!

Impact Hazard!

Never remove any safeguarding and never make changes in the system that will decommission a safeguard.

1.8 Qualification of Personnel

This manual assumes that personnel have attended an Adept MV Controller training course and have a working knowledge of the system. The user must provide the necessary additional training for all personnel who will be working with the system.

As noted in this handbook, certain procedures should be performed only by **skilled** or **instructed** persons. For a description of the level of qualification Adept uses the standard terms:

- **Skilled persons** have technical knowledge or sufficient experience to enable them to avoid the dangers which electricity may create (engineers and technicians).
- **Instructed persons** are adequately advised or supervised by skilled persons to enable them to avoid the dangers which electricity may create (operating and maintenance staff).

All personnel must observe sound safety practices during the installation, operation and testing of all electrically powered equipment. To avoid injury or damage to equipment, always remove power by disconnecting the AC power cord from the source before attempting any repair or upgrade activity.



Warning: The user is obligated to get confirmation of the following points from all entrusted personnel before they start working with the AdeptModules.

- 1) The person has received the Instruction Handbook, has read it and has understood it.
- 2) The person will work in the described manner.

1.9 Transport

Always use adequate equipment to transport and lift Adept devices. See Chapter 3 for more information on transporting, lifting, and installing.



Warning: Do not stay under the AdeptModule while it is transported.

1.10 Safety Equipment for Operators

Adept advises operators to wear extra safety equipment in the workcell. For safety reasons the operators must wear

- safety glasses
- protective headgear
- safety shoes

when they are in the AdeptModules workcell. Install warning signs around the workcell to make sure anyone working around the AdeptModules system knows they must wear safety equipment.

1.11 Protection Against Unauthorized Operation

The system must be protected against unauthorized use. Restrict access to the keyboard and the Manual Control Pendant by locking them in a cabinet or use another adequate method to prevent access to them.

1.12 Operating Modes of AdeptModules

The AdeptModules have two different operating modes.

Automatic Mode

AdeptModules systems are computer-controlled, and the program that is currently running the AdeptModules may cause it to move at times or along paths you may not anticipate. When the key switch for the operating mode is in the AUTO position and the HIGH POWER light or the PROGRAM RUNNING light on the external Front Panel (VFP) are illuminated, do not enter the workcell because the AdeptModules or motion device might move unexpectedly. (The LAMP TEST button on the VFP allows these lights to be periodically checked.)



Warning: During Automatic Mode operations no person is allowed to stay in the guarded space of the AdeptModules because serious injury can occur if a person is struck by the AdeptModules.

Manual Mode

AdeptModules can also be controlled manually when the operating mode key switch is in the MANUAL position and the HIGH POWER light on the VFP is illuminated. When Manual mode is selected, motion can be initiated only from the Manual Control Pendant (MCP). Per EN 775/ISO 10218, the *maximum speed of the AdeptModules is limited to less than 250 mm per second (10 ips) in Manual mode. In this mode, work can be performed that requires close approach to the installation or AdeptModules such as teaching points, program verification, or troubleshooting operations.*

Note: The MCP has two operating modes. In MAN (Manual) mode the MCP can initiate an AdeptModules motion. In COMP (Automatic) mode the MCP works like a terminal.

1.13 Safety Aspects While Performing Maintenance

Only skilled persons with the necessary knowledge about the safety and operating equipment are allowed to maintain the AdeptModules, controller, and power chassis.



Warning: During maintenance and repair, the power of the Adept PA-4 power chassis and the Adept MV controller must be turned off. Unauthorized third parties must be prevented from turning on power through the use of fail-safe lockout measures. (Turn off the circuit breakers, lock the cabinet, and remove the key!)

1.14 What to Do in an Emergency Situation

Press any Emergency-Stop button (a red push-button on a yellow field) and then follow the internal procedures of your company or organization for an emergency situation. If a fire occurs, use CO₂ to extinguish the fire.

1.15 How to Get Help

When calling with an equipment-related question, please have the serial number of the Adept MV Controller, Adept PA-4 power chassis and the part numbers of the AdeptModules. The serial numbers are located on the product data labels on each piece of equipment. The serial number of the Adept MV controller can also be determined by using the ID command (see the V⁺ Operating System User's Guide).

In Europe

Europe/Germany

Adept Technology maintains a European Customer Service Center in Dortmund, Germany. The phone numbers are:

(49) 231 / 75 89 40 (Monday to Friday, 8:00 to 17:00, CET)
(49) 231/75 89 450 FAX

France

For customers in France, Adept Technology maintains a Customer Service Center in Paris, France. The phone numbers are:

(33) 1 69 19 16 16 (Monday to Friday, 8:30 to 17:30, CET)
(33) 1 69 32 04 62 FAX

Italy

For customers in Italy, Adept Technology maintains a Customer Service Center in Arezzo, Italy. The phone numbers are:

(39) 575 3986 11 (Monday to Friday, 8:30 to 17:30, CET)
(39) 575 3986 20 FAX

In the United States

Adept Technology maintains a Customer Service Center at its headquarters in San Jose, CA. The phone numbers are:

Service Calls

(800) 232-3378 (24 hours per day, 7 days a week)
(408) 433-9462 FAX

Application Questions

Note: Address all applications questions Monday to Friday, 8:00 A.M. to 5:00 P.M., in the respective time zone of the regional office calling.

Western Region - (408) 434-5033
Midwestern Region - (513) 792-0266
Eastern Region - (203) 264-0564

Applications Internet E-Mail Address

If you have access to the Internet, you can send applications questions by e-mail to:

applications@adept.com

Training Information

For information regarding Adept Training Courses in the USA, please call (408) 474-3246 or fax (408) 474-3226.

Outside Continental United States or Europe

For service calls, applications questions, and training information, call the Adept Customer Service Center in San Jose, California, USA:

(408) 434-5000

(408) 433-9462 FAX (service requests)

(408) 434-6248 FAX (applications questions)

Installation 2

2.1 Environmental and Facility Requirements for AdeptModules	31
Facility Ambient Air Quality for AdeptModules	31
Compressed Air for the AdeptModules	31
Mounting Surface Specifications	31
Mounting Surface	31
2.2 Environmental and Facility Requirements for Controller	31
2.3 Environmental and Facility Requirements for Power Chassis	32
2.4 Before Unpacking the Adept Equipment	32
2.5 Transport and Storage	32
2.6 Unpacking and Inspecting the Adept Equipment	32
2.7 Repackaging for Relocation	33
2.8 AdeptModules Installation	33
2.9 Installation of the Adept MV Controller and the Adept PA-4 Power Chassis	34
Joining an Adept PA-4 Power Chassis to an Adept MV Controller	34
Joining at the Top	35
Joining at the Bottom	35
Space Around the Chassis	36
Installation in a Rack or Panel Mount	36
Panel Mounting	36
Rack Mounting	36
2.10 Installing the A-Series Monitor and Keyboard	39
Installation Procedure	39
2.11 Installing a Terminal in an S-Series System	40
Recommended Terminal for S-Series Systems	40
Installation Procedure	40
2.12 Installing AdeptWindows PC™	40
2.13 Installing the External Front Panel	41
Controls and Indicators	41
Installing the External Front Panel (VFP)	42
2.14 Installing Non-Adept Peripherals in an A-Series System	43
Third-Party Monitor Compatibility	43
Third-Party Keyboard Compatibility	43
Third-Party Pointing Device Compatibility	43
2.15 Installing the Signal Interface Box (SIB)	44

Connections and Indicators	44
Installation of the Signal Interface Box (SIB).	46
Space Around the Signal Interface Box.	46
Typical Digital Output Wiring	46
Changing User Output Voltage Setting	48
Installing a Brake Release Button	49
2.16 Signal Interconnection Installation.	50
System Cable Connections	50
System Cable Lengths	51
Connecting the AdeptModules to the Power Chassis.	51
Installing Signal Cables: AdeptModules to Signal Interface Box.	52
Installing Signal Cables: MV Controller to Power Chassis.	53
Installing Signal Cables: MV Controller to Signal Interface Box.	54
Connecting the MCP to the VFP.	55
MCP Cradle	55
2.17 Grounding Information	56
Adept MV Controller Grounding.	56
Adept PA-4 Power Chassis Grounding.	56
2.18 Connecting to AC Power	57
Connecting AC Power to the MV-5/10 Controller	58
AC Power Requirements.	58
Power Entry Module.	58
Connecting AC Power Cord	59
Connecting AC Power to the Adept PA-4 Power Chassis.	60
Connecting the Power Chassis AC Power Cord	61
Typical AC Power Installation Diagrams	62
Changing Voltage Setting for Power Chassis.	63
Connecting AC Power to the Signal Interface Box	64
Power Entry Module.	65
2.19 Additional Power Chassis Information	66
B+ Amplifier Module Overview	66
Connectors and Indicators.	66
Power Chassis Circuit Breaker and Fuse Information	67
Chassis Circuit Breaker.	67
Chassis and Amplifier Module Fuses	67
Removing and Installing Amplifier Modules.	67
Removing Amplifier Modules	67
Installing Amplifier Modules	68
2.20 Installing End-Effectors on AdeptModules.	68
Connecting Compressed Air Supply to the AdeptModules (optional) . . .	68

2.1 Environmental and Facility Requirements for AdeptModules

The information in this chapter applies to all AdeptModules except when differences are specifically noted.

Facility Ambient Air Quality for AdeptModules

Compressed Air for the AdeptModules

The AdeptModules do not require compressed air to operate, but it is often needed for end-effectors or tooling. AdeptModule to AdeptModule cabling includes built-in air hoses, which are rated for 6 Kgf/cm² maximum pressure. The tube diameter is 6mm (.23 inch).

Mounting Surface Specifications

The floor at the installation site must comply with all local codes and be level. Any mounting structure vibration or flexing will seriously degrade AdeptModules performance. Adept recommends using either a mounting plate or a table type base. If some other type of mounting structure is used, it must adequately resist vibration and flexure.

Mounting Surface

The mounting surface should conform to the following recommended specifications:

- Material: Finished Surface (free from projections)
- Dimensions: Determined by AdeptModule Configuration
- Mounting Surface Flatness: Within 0.1 mm (0.004 inch)
- Mounting Hole Pattern: As Shown in *AdeptModules Instruction Handbook, Volume 2: Mechanical Assembly*

2.2 Environmental and Facility Requirements for Controller

The Adept MV controller installation must meet the operating environment requirements shown in Table 2-1. See Table 2-8 for electrical requirements.

Table 2-1. Operating Environment Requirements

Ambient temperature	0 - 40° C (20 - 80% humidity, non- condensing)
Altitude	up to 2000 m (6500 ft.)
Pollution degree	2

2.3 Environmental and Facility Requirements for Power Chassis

The Adept PA-4 power chassis is typically installed in the same enclosure as the controller. See Table 2-1 for environmental requirements. See Table 2-8 on page 58 for electrical requirements.

2.4 Before Unpacking the Adept Equipment

Carefully inspect all shipping crates for evidence of damage during transit. If any damage is indicated, request that the carrier's agent be present at the time the container is unpacked.

2.5 Transport and Storage

For the transport and storage of the crates and boxes use an adequate tool, such as, a pallet jack or a forklift.



WARNING: Some crates and boxes are heavier than others!

Do not attempt to transport all AdeptModule boxes by hand. The use of a pallet jack or forklift, etc., may be required.



WARNING: The center of gravity of the AdeptModules shipping crates is not in the middle of the boxes. Pay attention when you transport the crates.

2.6 Unpacking and Inspecting the Adept Equipment

Compare the actual items received (not just the packing slip) with your equipment purchase order and verify that all items are present and that the shipment is correct.

Inspect each item for external damage as it is removed from its container. If any damage is evident, contact Adept at the numbers listed in section 1.15.

Retain all containers and packaging materials. These items may be needed to relocate the equipment. Should the shipment be incorrect or damaged on arrival, the sales order number and purchase order numbers will be important.

2.7 Repackaging for Relocation

If the AdeptModules or other equipment needs to be relocated, reverse the steps in the installation procedures in this section. Reuse all original packing containers and materials and follow all safety notes used for installation. Improper packaging for shipment will void your warranty.

2.8 AdeptModules Installation

AdeptModules must always be installed on a base. A base could be a mounting plate or table. AdeptModules must not be installed directly to the floor. AdeptModules can be mounted vertically on the wall or inverted from a gantry or the ceiling. For mounting specifications refer to *AdeptModules Instruction Handbook, Volume 2: Mechanical Assembly*.

2.9 Installation of the Adept MV Controller and the Adept PA-4 Power Chassis

Joining an Adept PA-4 Power Chassis to an Adept MV Controller

The Adept PA-4 power chassis can be joined to the Adept MV-5/10 (or the MV-19) controller using the brackets supplied in the accessory kit. They must be joined at the top and bottom, as described in the following paragraphs.

Top view with covers removed

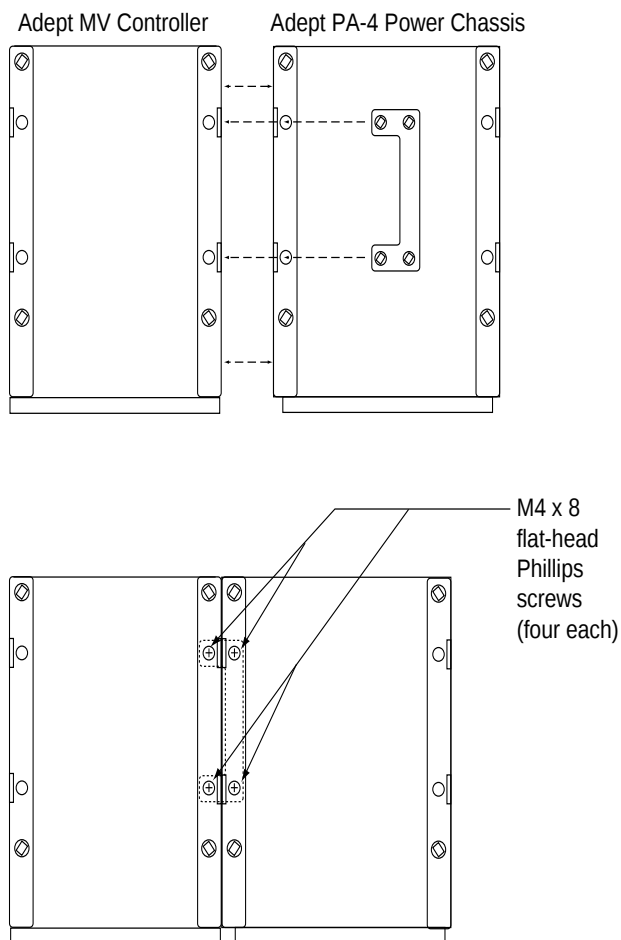


Figure 2-1. Joining the Power Chassis and Controller at the Top

Joining at the Top

1. Turn off power to each unit and disconnect the power cord. Place the two units next to each other. Remove the top cover from both (see Figure 2-1).
2. Locate the C-shaped bracket in the accessory kit.
3. Slip the bracket under the lip of the top edge of the unit on the right-hand side and into the two slots in the edge of the chassis. Install two M4 x 8 flat-head screws into the lip and down into the bracket.
4. Install the other two M4 x 8 flat-head screws into the chassis on the left-hand side. Replace the cover on each unit.

Joining at the Bottom

1. Turn the two units over so you have access to the bottom side.
2. Locate the cutout bracket in the accessory kit.
3. Place the bracket over the feet of the units as shown in Figure 2-2.
4. Install the four M4 x 8 flat-head screws in the holes indicated in Figure 2-2 to secure the brackets.



CAUTION: Do not use screws longer than 8 mm to install the bracket. Doing so could cause damage to your equipment.

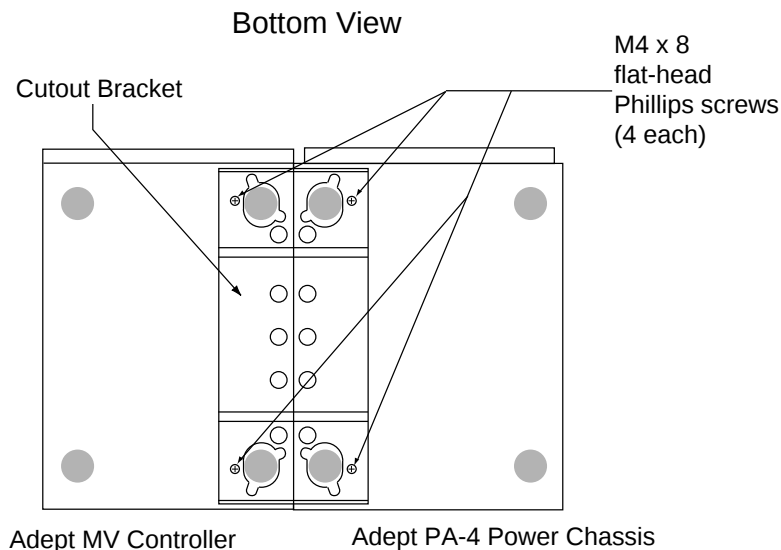


Figure 2-2. Joining the Power Chassis and Controller at the Bottom

Space Around the Chassis

When the Adept MV Controller is installed vertically, allow 25mm (1 inch) at the top and bottom of the chassis for proper air cooling. For the MV-5/10, allow 75mm (3 inches) and for the MV-19, allow 50mm (2 inches) at the front of the Adept MV Controller for power and signal cable clearance.



CAUTION: Keep the air filters clean so the forced air cooling system can work efficiently. See section 5.4 on page 107 for details on cleaning the filters.

Installation in a Rack or Panel Mount

The power chassis and controller can be mounted in a rack or panel by using the mounting brackets that are shipped in the accessories kit. The brackets can be attached at the rear of the controller/power chassis for panel mounting or they can be attached to the front of the controller/power chassis for rack mounting.

Panel Mounting

To panel mount the controller or power chassis, install one bracket on each side near the back of the chassis. Use the screws and washers from the accessories kit (see Figure 2-3 and Figure 2-4).

Rack Mounting

To rack mount the Adept PA-4 power chassis joined to an Adept MV-5/10 controller in a standard 19-inch equipment rack, use the mounting brackets, screws, and washers from the accessories kit. The brackets can be installed in two positions for rack mounting, flush and set-back (see Figure 2-3 and Figure 2-4).

To rack mount the Adept MV-19 Controller in a standard 19-inch equipment rack, use the mounting brackets, screws, and washers provided with the accessories kit (see Figure 2-3).

To rack mount the controller or power chassis by itself in a standard 19-inch equipment rack, you must first install the mounting brackets, then build an extender panel and attach it to the bracket on one side of the chassis.

To Install Mounting Brackets
on Adept M-5/10/19 controller:

- Remove (and discard) three existing countersink screws from each side of the chassis at locations shown in drawing.
- Place bracket in desired position and secure with indicated M4 screws and washers from accessories kit.
- Repeat process for other side of controller. If the controller is joined to an Adept PA-4 Power Chassis, the position of the screws is different than on the side of the controller.

(See drawing for power chassis.)



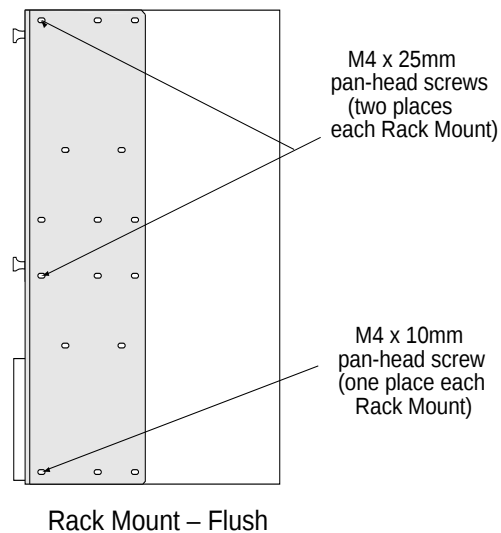



Figure 2-3. Installing Mounting Brackets on an Adept MV Controller

To Install Mounting Brackets on Adept PA-4 Power Chassis:

- Remove (and discard) 3 existing countersunk screws from the side of the chassis at locations shown in drawing.
- Place bracket in desired position and secure with indicated M4 pan-head screws and washers from accessories kit.
- Repeat process for other side of chassis. If the power chassis is joined to an Adept MV controller, the position of the screws is different than on the side of the controller. See the controller drawing.

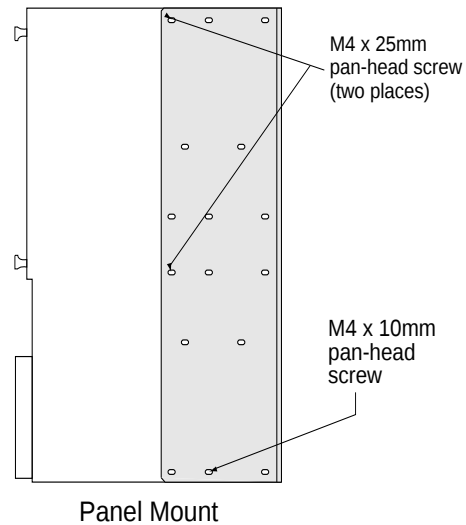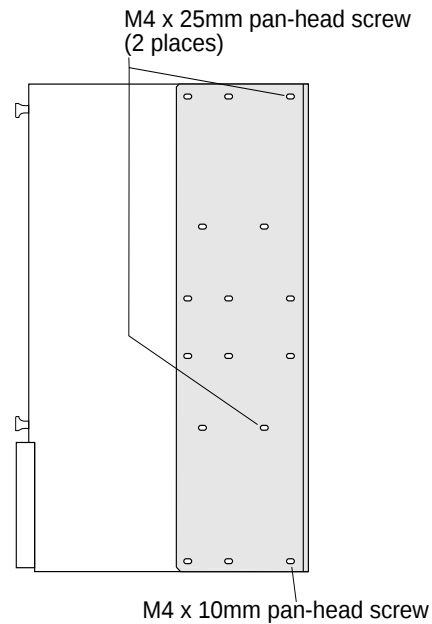

Panel Mount

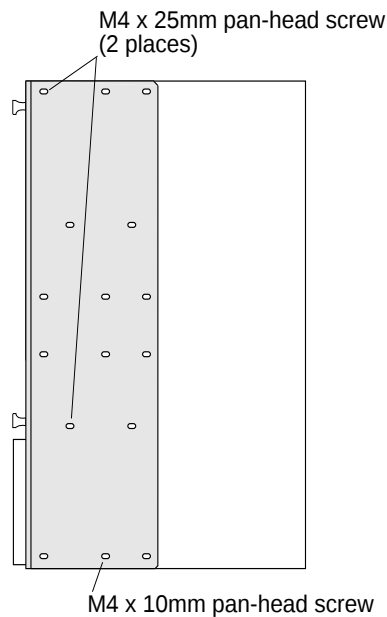

Rack Mount – Flush

Figure 2-4. Installing Mounting Brackets on an Adept PA-4 Power Chassis

2.10 Installing the A-Series Monitor and Keyboard

NOTE: Peripheral equipment such as the keyboard and monitor supplied by Adept are intended for use in light industrial conditions. In more severe conditions, the equipment should be protected with a suitable enclosure.

Installation Procedure

An A-Series Adept MV controller can be configured with a color monitor and an extended keyboard with built-in trackball. Both of these devices connect to the VGB module.

Figure 2-5 illustrates the steps listed below.

1. Make sure the controller is turned off before making any connections.

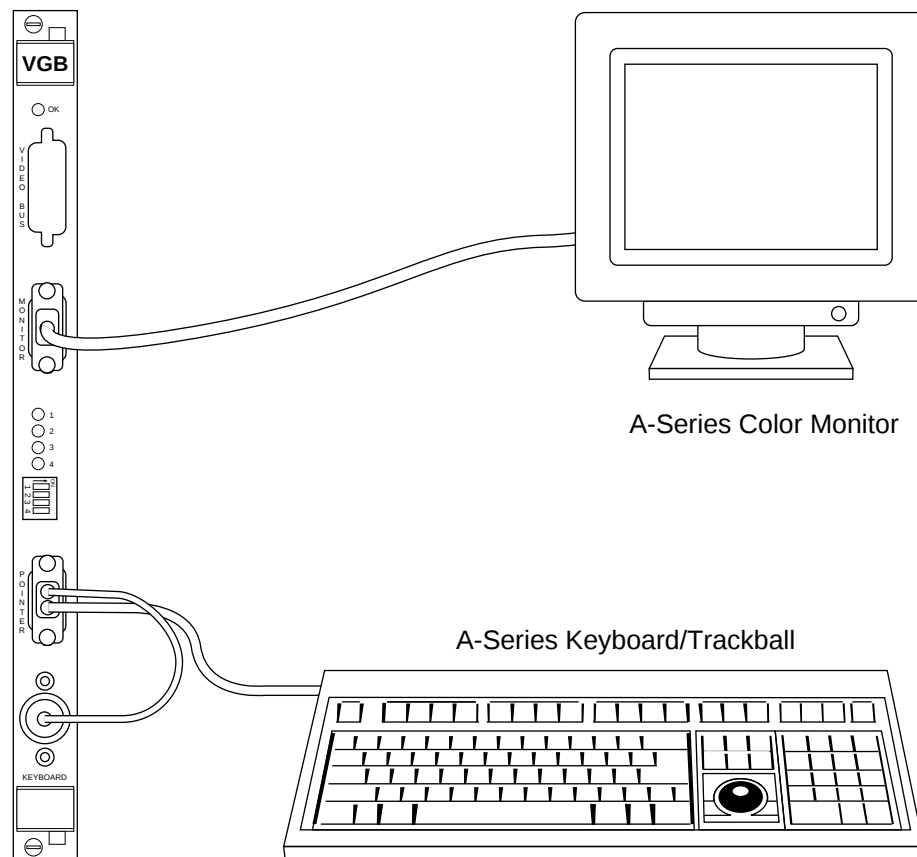


Figure 2-5. Connecting the A-Series Monitor and Keyboard

2. Connect the monitor signal cable to the MONITOR connector on the VGB module.
3. Connect the double-ended keyboard cable to the KEYBOARD connector and the POINTER connector on the VGB module.

4. Verify that the voltage range marked on the monitor is compatible with your local voltage source. Connect the color monitor AC power cord to the monitor, then plug it into an appropriate voltage source.

2.11 Installing a Terminal in an S-Series System

With an S-Series Adept MV controller system, the customer must supply the terminal and cable to interface to the controller. The terminal must be a Wyse Model 60 or 75, with an ANSI keyboard, or a compatible terminal. A computer with suitable terminal emulation software can also be used. For DOS or Windows-compatible computers, the programs "Procomm+" or "Procomm for Windows" (available from many computer stores) include software emulation for the Wyse-75.

Recommended Terminal for S-Series Systems

The recommended terminal for use with the Adept MV controller is the Wyse WY-60. Also required is a Wyse ANSI/VT100 style keyboard (Wyse P/N 900127-02 or 900128-02).

Note: The WY-60 is also available with ASCII and IBM Enhanced PC keyboards. These are *not* Adept-compatible. Make sure to order the correct keyboard. The WY-60 is available in both 220V and 110V configurations.

Installation Procedure

1. Make sure the controller is turned off before making any connections.
2. Verify that the voltage range marked on the terminal is compatible with local voltage source. Connect the AC power cord to the terminal, then plug it into an appropriate voltage source.
3. Connect a suitable serial cable between the terminal and the RS-232/TERM connector on the System Processor module.
4. If the terminal is a Wyse 60, use the set-up mode to set the personality to "WY-75". When using terminal emulation software on a computer, set the software to "WY-75" emulation. If "WY-75" is not available, try "VT102" or "VT100". However, not all of the function keys will be usable.
5. Set the terminal baud rate to 9600, the default rate for the Adept system. To change the Adept system baud rate, refer to the information on CONFIG_C in the *Instructions for Adept Utility Programs*.

2.12 Installing AdeptWindows PC™

An Adept MV system can be programmed and controlled by AdeptWindows PC™. AdeptWindows PC™ is a MicroSoft Windows-based program that allows full programming and control of the AdeptModules from an IBM-compatible personal computer. The computer can be connected to the Adept controller with a serial cable or by an ethernet link.

For instructions on installing and configuring AdeptWindows PC™, see the *AdeptWindows User's Guide*.

2.13 Installing the External Front Panel

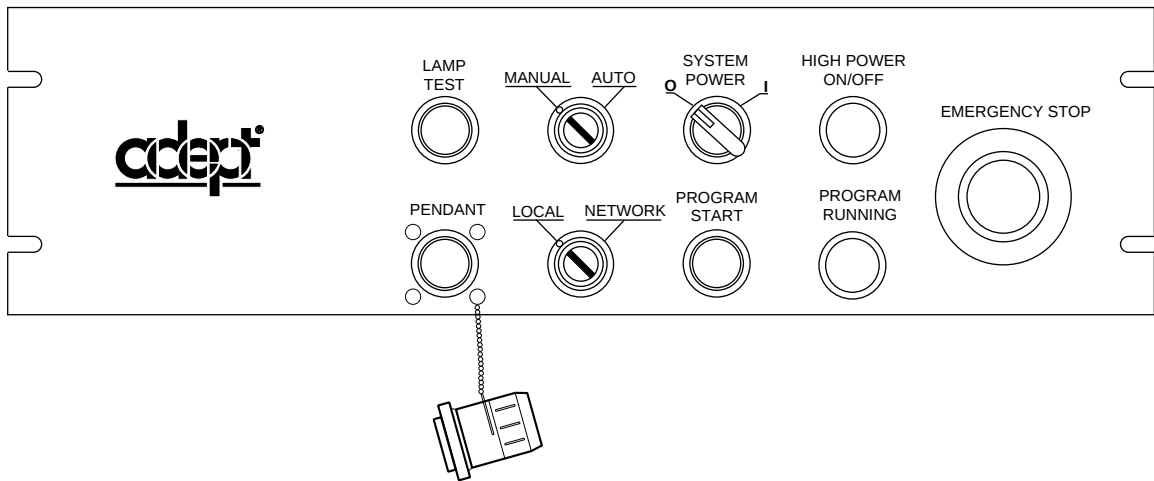


Figure 2-6. External Front Panel (VFP)

Controls and Indicators

For the location of the following controls and indicators, refer to Figure 2-6.

- **EMERGENCY STOP switch:** This push-pull emergency stop switch removes HIGH POWER and brings any installed motion device to an immediate stop when pressed.
- **HIGH POWER ON/OFF lamp (amber):** This lamp works in conjunction with the Enable Power command. If the amber lamp is on, the AdeptModules are operating under servo control. When the lamp is off, the system is not under servo control.
- **PROGRAM RUNNING lamp (white):** When lit, this lamp indicates that a V⁺ program is running. It is a warning that the AdeptModules and other mechanisms in the workcell are under computer control and may move at any time.
- **PROGRAM START switch and lamp (green):** A programmer can read the status of the button to trigger special events.
- **Operating Keyswitch:** The keyswitch is a two-position rotary switch marked AUTO and MANUAL. This switch determines which operating mode is selected. The AUTO position permits control of the system from the controller. The MANUAL position makes the MCP the single point of control.
- **Control Keyswitch:** The keyswitch is a two-position rotary switch marked LOCAL and NETWORK. This switch determines which device is able to start AdeptModules motions. The LOCAL position makes the Manual Control Pendant (MCP) or the connected Terminal the single point of control. The NETWORK position is used with host supervisory control software.
- **LAMP TEST switch:** When the button is pressed, all the indicator lamps should light. If an indicator does not light, check it before continuing operation.

- **PENDANT:** connector for attaching the Manual Control Pendant (MCP) to the front panel. In order to enable High Power, either the MCP or the supplied pendant jumper plug must be connected.

Installing the External Front Panel (VFP)

The VFP can be mounted in a standard 19-inch equipment rack. See Figure 6-5 on page 115 for dimensions. Since the back of the VFP is open, make sure that it is securely mounted and that electronic components on the back side of the panel are protected from contact by users or other equipment. Mount the VFP in the same enclosure as the controller, or in a separate, protected enclosure. See Table 2-1 for enclosure requirements. See Figure 2-7 as you follow the procedures listed below.

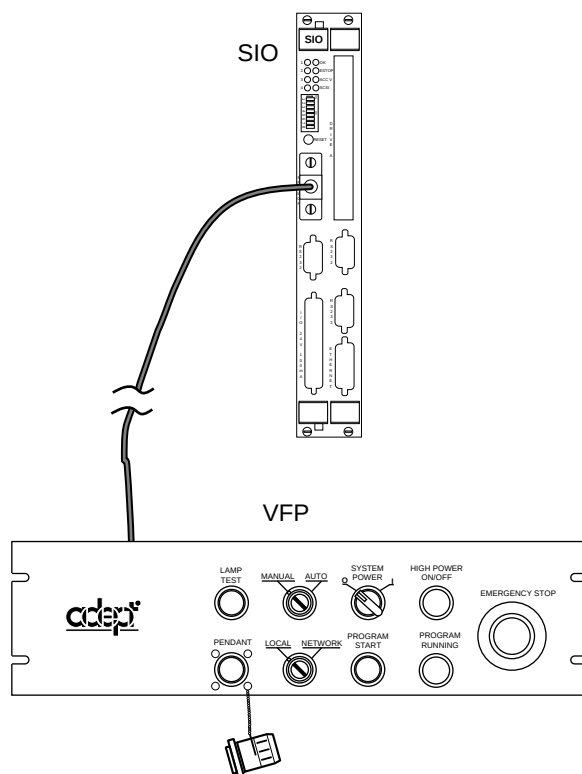


Figure 2-7. External Front Panel (VFP) Installation

1. Turn off the power switch on the front of the Adept MV controller.
2. Remove the FP/MCP bypass plug from the FP/MCP connector on the SIO module.
3. Locate the 2-meter Front Panel cable that comes with the VFP. Plug one end into the FP/MCP connector on the SIO module. Plug the other end into the 27-pin D-Sub connector on the back of the VFP. Tighten the thumbscrews on both connectors.
4. If you are not using an MCP, install the MCP bypass plug in the MCP connector of the VFP. If you are using an MCP, refer to page 55.

2.14 Installing Non-Adept Peripherals in an A-Series System

Third-party monitors, keyboards, and pointing devices can be used with the Adept MV Controller system. The equipment must be compatible with certain standards to work successfully with the MV controller.

Third-Party Monitor Compatibility

To use a color monitor other than the one supplied by Adept, ensure that the monitor selected meets the specifications shown in Table 2-2. Refer to the *Adept MV Controller User's Guide* for more information and specifications

Table 2-2. Monitor Compatibility Specifications

Video Display Resolution	1024 × 768 Pixels
Frame Rate	60 Hz
Format	Non-interlaced
Line Rate	48.363 kHz
Dot Rate	65.000 MHz
Video Signal	Analog RGB
Signal Level	0 - 0.7 Vp-p
Input Impedance	75 ohm ±5% at 100 kHz

Third-Party Keyboard Compatibility

The Adept MV controller can interface to keyboards that are “AT” compatible and use a standard DIN 5 connector.

Third-Party Pointing Device Compatibility

The Adept MV controller can interface to any serial mouse, trackballs or other pointing device that uses the Microsoft mouse protocol (1200 bps). The connector must be a 9-pin D-sub.

This port can alternatively be used for a touchscreen using ELO Touchsystems protocol. To install a touchscreen, disconnect any other pointing devices. The MV controller will not support the use of more than one pointing-type device at a time.

2.15 Installing the Signal Interface Box (SIB)

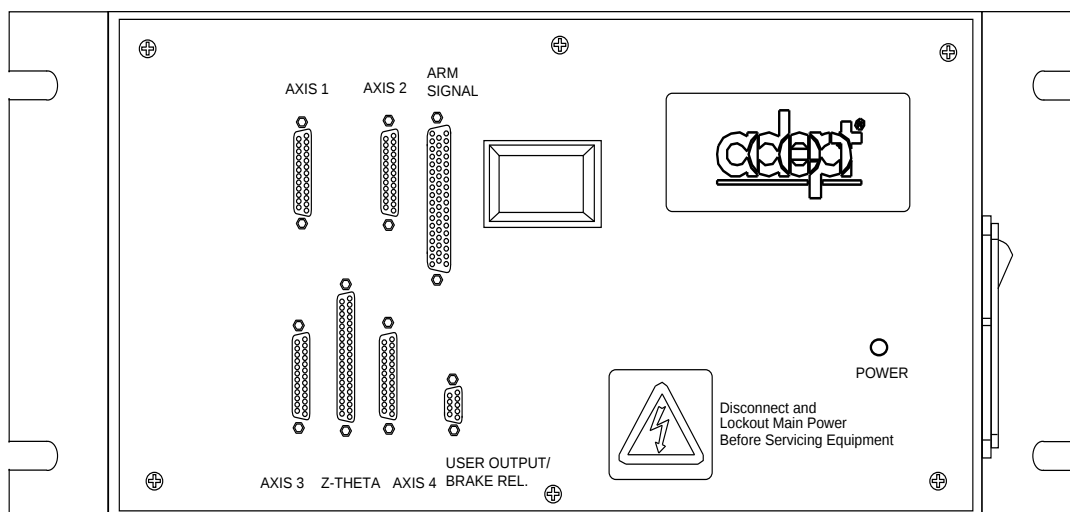


Figure 2-8. Signal Interface Box

Connections and Indicators

For the location of the following controls and indicators refer to Figure 2-8.

POWER: A green LED on the front panel is illuminated when the controller power is turned on and the 50-pin Arm Signal cable is connected.

AXIS 1 - 4: Each encoder from the module is connected through a 25-pin D-sub connector. The Brake signal for each axis also uses these connectors.

ARM SIGNAL: This 50-pin male D-sub connector is for signals going to the Arm Signal connector on the EJI module within the Adept MV Controller chassis.

STATUS LED's: The seventeen status LEDs are provided for troubleshooting and status reporting; refer to Figure 2-9 and Table 2-3.

USER OUTPUT / BRAKE REL: This 9-pin female D-sub connector has several functions (refer to Table 2-4 for the pin assignments). The four user outputs, configured at either 24 or 12 volts and factory set at 24 VDC (refer to page 48 for changing the output voltage setting), and the Manual Brake release are available on this connector. Refer to page 49 for installation and section 4.3 for use of the brake release button.

NOTE: A 9-pin male D-sub connector is supplied with the SIB and must be connected at all times. Wire user I/O to this connector.

AC POWER SWITCH: Located on the side of the Signal Interface Box. AC power must be turned on to use the Signal Interface Box (I = On, O = Off).

Z-THETA: This is for connecting the Adept Z-Theta module .



WARNING: Plugging into Z-Theta and the AXIS 3 and 4 connectors at the same time will result in damage to the Signal Interface Box.

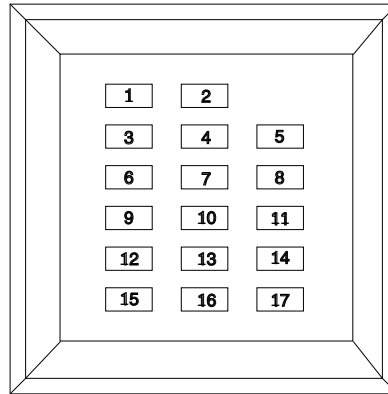


Figure 2-9. Signal Interface Box LED Indicators

Table 2-3. LED Status and Indications

LED	Status	Description	LED	Description
1	+5 Volts	+5 Volts	10	Joint2 Home
2	24 Fail	24 Volt Failure	11	Joint2 Overtravel Right
3	CPU Error	CPU Error	12	Joint3 Overtravel Left
4	MAN_BRK	Manual Brake Release	13	Joint3 Home
5	CE_BRK	Future Use	14	Joint3 Overtravel Right
6	J1_OTL	Joint1 Overtravel Left	15	Joint4 Overtravel Left
7	J1_H	Joint1 Home	16	Joint4 Home
8	J1_OTR	Joint1 Overtravel Right	17	Joint4 Overtravel Right
9	J2_OTL	Joint2 Overtravel Left		

Table 2-4. User Output/Brake Release Connector Pin Assignments

Pin Number	Signal Type	Signal Description
1	Output	User Output 1
2	Output	User Output 2
3	Output	User Output 3
4	Output	User Output 4
5	Return	Return
6	24V	Not for Use
7 ^a	Input	Future Use
8	Return	Return
9	Input	Manual Brake Release

^aThe (CE_BRK) signal on Pin 7 is not used currently. CE_BRK(pin 7) and 24V(pin 6) are tied together in the 9-pin male D-sub connector supplied by Adept. Do not use the 24V (pin 6) for external use.

Installation of the Signal Interface Box (SIB)

The Signal Interface Box is designed for panel mounting. Use M6 (UWC 1/4-20) screws with washers for proper mounting.

Space Around the Signal Interface Box

When installing the SIB, ensure that there is 25mm (1 inch) of free air space around the SIB except on the right side where 50mm (2 inches) is required for the AC power cord installation. This will allow for proper cooling. Also allow 75mm (3 inches) in front of the SIB for power and signal cable clearance.

Typical Digital Output Wiring

Figure 2-10 shows the user output wiring. The four user outputs on the “User Output/Brake Rel” connector are used in conjunction with the Adept MV controller software signals (refer to Table 2-4). The maximum current rating of each individual output channel is 750mA. Combined maximum current cannot exceed 2 amps from the user outputs.



WARNING: Damage to the Signal Interface Box will occur if the maximum current rating is exceeded.

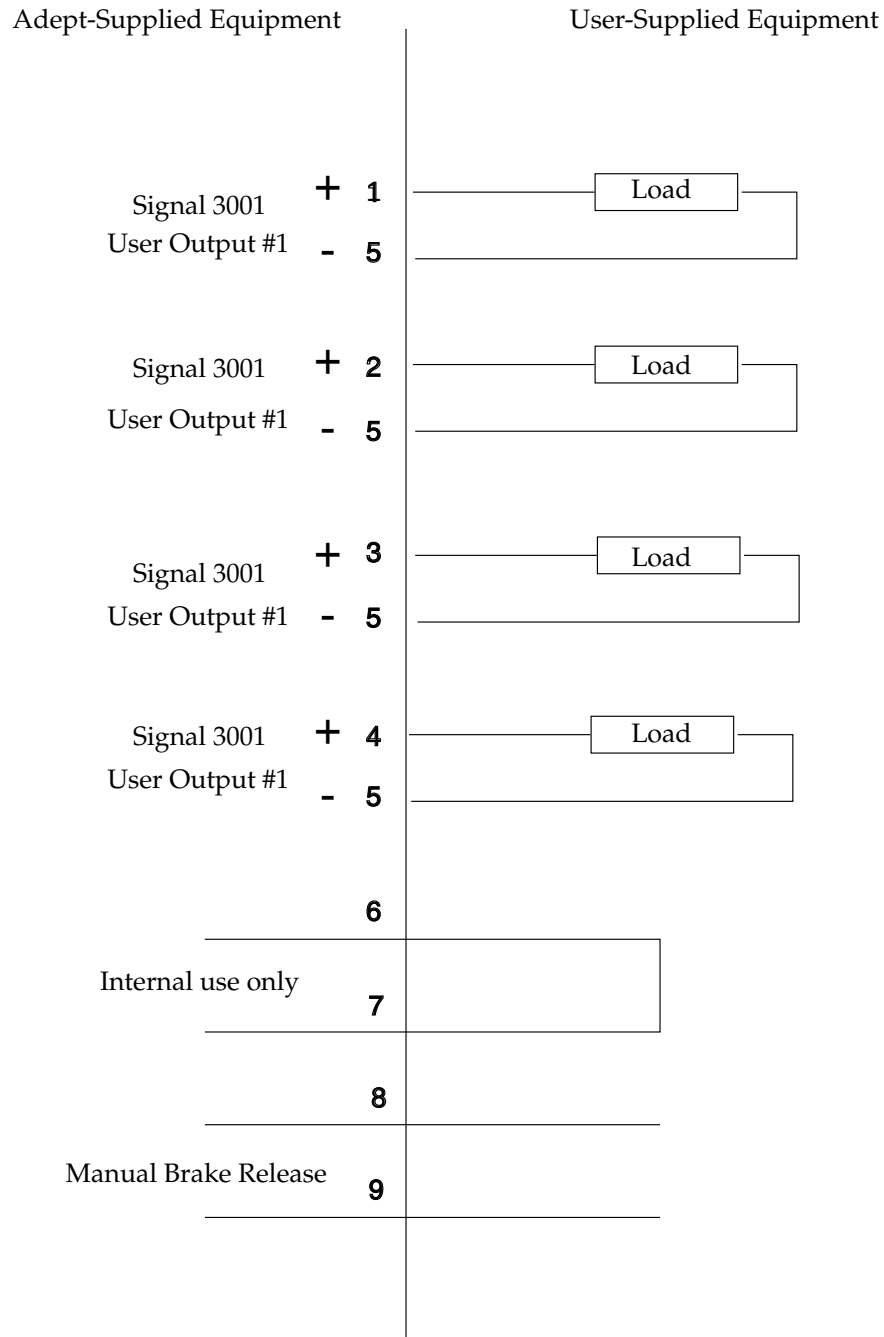


Figure 2-10. User Output Wiring Diagram

The four user outputs on the User Output/Brake Release connector are used in conjunction with the following MV controller signals (refer to Table 2-5). Other Adept V⁺ programming commands are available to control the user outputs (refer to the *V⁺ Language User's Guide* for these commands).

Table 2-5. User Outputs Specifications

Signal Label	MV Controller Signal Name	Voltage Output per Channel Default ^a	Current Rating per Channel ^b
User 1	Signal 3001	24 VDC	750 mA
User 2	Signal 3002	24 VDC	750 mA
User 3	Signal 3003	24 VDC	750 mA
User 4	Signal 3004	24 VDC	750 mA

^a Output voltage can be configured at either 12 VDC or 24 VDC

^b Maximum current rating for all combined channels is 2 amps

Changing User Output Voltage Setting

The four user outputs are configured for either 24 volts or 12 volts. The default setting is 24 volts. Jumper JP1, located on the circuit board inside the enclosure, is used to change the voltage. To change the setting, remove the front cover of the Signal Interface Box and locate the jumper on the upper right-hand corner of the circuit board. Removing the circuit board from the front panel is not necessary (see Figure 2-11).

WARNING: Electrical hazard!



Disconnect the power cord prior to opening the Signal Interface Box. Hazardous voltages exist inside the Signal Interface Box. Failure to disconnect the power can cause injury or kill personnel.



CAUTION: Disconnect the power so that damage to the Signal Interface Box does not occur.

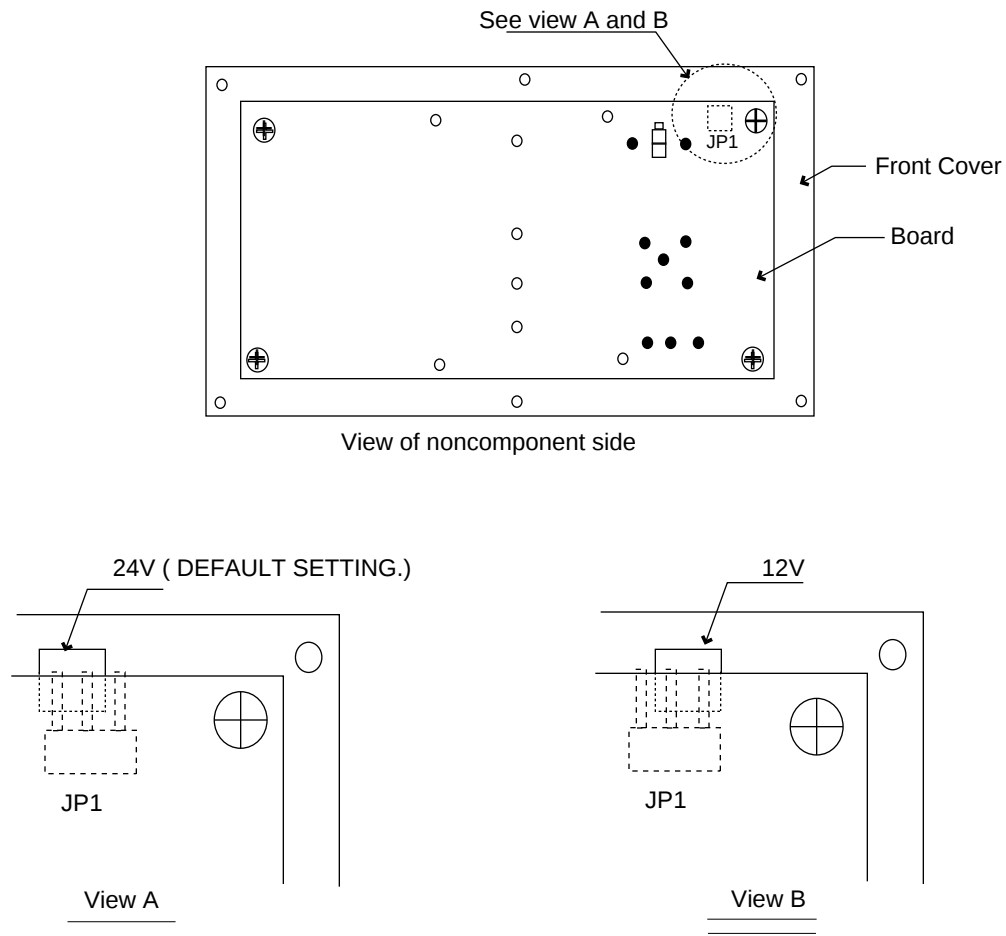


Figure 2-11. Configuring 12 or 24 Volts

Installing a Brake Release Button

When using AdeptModules with a brake mechanism, Adept recommends installation of a brake release button so the brake can be disabled and the axis moved manually. To install this switch, connect a momentary contact switch to pins 8 and 9 on the User Output / Brake Release connector on the Signal Interface Box (See Figure 2-8). The switch should be located in a position that can be reached in an emergency and should be correctly labeled.

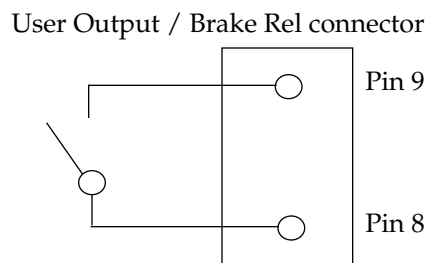


Figure 2-12. Brake Release Button

2.16 Signal Interconnection Installation

System Cable Connections

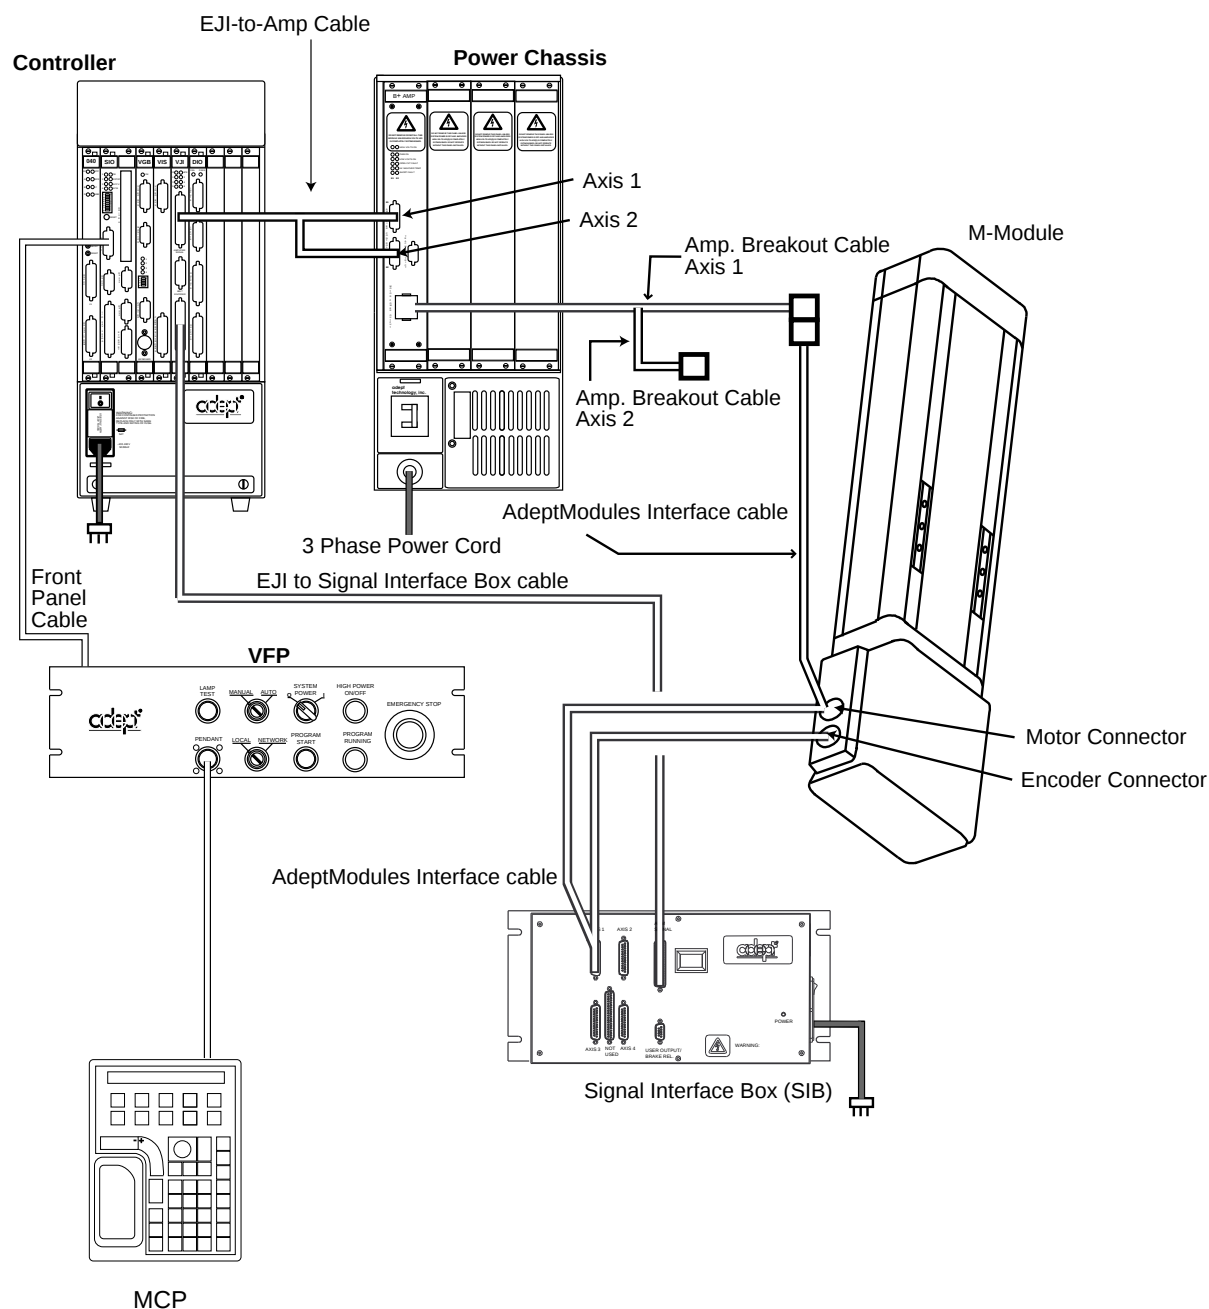


Figure 2-13. Adept System Cable Installation

System Cable Lengths

Table 2-6 describes the standard cable lengths.

Table 2-6. System Cable Lengths

Cable	Length
AdeptModules Interface Cable	3 m (9.8 ft), 6m (19.7 ft), 15m (49.2 ft)
EJI-to-Signal Interface Box Cable	1.5 m (5 ft)
EJI-to-Amps Cable	1 m (3.28 ft)
Amp Breakout Cable	1.5 m (5 ft)
Front Panel Cable (SIO-to-VFP)	2 m (6.5 ft)
PA-4 Power Cord	2.9 m (9.5 ft)
SIB Power Cord	2.9 m (9.5 ft)
MV Controller Power Cord	2.9 m (9.5 ft)
MCP Cable	1.66m (5.45 ft)

Connecting the AdeptModules to the Power Chassis

The cable between the AdeptModule Interface cable and power chassis is called the Amp Breakout cable. Both ends of the Amp Breakout cable have Molex connectors. One end of the cable is connected to the AdeptModule Interface cables and the opposite end of the cable is connected to the power amplifier (see Figure 2-13). Two AdeptModules can be connected to one Dual B⁺ amp using one Amp Breakout Cable.

1. Connect the Amp Breakout Cable to the AdeptModule Interface cable. Snap the two Molex connectors together.
2. Connect the other end of the Amp Breakout Cable to the matching connectors on the B+ Amp modules marked "Motor Power Output".
3. Connect the motor power barrel connector to the main connector on the AdeptModules and tighten securely.
4. Repeat these steps for each additional Module.

NOTE: The system integrator must add adequate strain relief for the Amp Breakout cable connectors at the amplifier modules. The connectors that join the Amp Breakout cable and the Interface cable are designed to be inside a cabinet.

WARNING: Verify that all connectors are secure and fully inserted. Loose connectors could cause unexpected AdeptModules motion.



Installing Signal Cables: AdeptModules to Signal Interface Box

The cable between the AdeptModule and the Signal Interface Box as well as the Amp Breakout cable is called the AdeptModule Interface cable. The AdeptModules end has a barrel-type connector. The Signal Interface Box end has a 25-pin D-connector. (See Figure 2-13 for wire connections.)

1. Connect the Encoder signal barrel connector to the main connector on the AdeptModule and tighten it securely.
2. Connect the 25-pin D-sub connector to the appropriate axis connector on the Signal Interface Box. Tighten the two captive screws securely.



WARNING: Verify that all connectors are fully inserted and secured. Loose connectors could cause unexpected AdeptModules motion.

Table 2-7. EJI specifications

Maximum EJIs per controller	3
Number of axes of control (maximum)	4 axes of robot joint control per EJI module
Number of belt encoders (maximum)	2 conveyor belts per EJI module
Width	Occupies one backplane slot

Installing Signal Cables: MV Controller to Power Chassis

The EJI-to-Amp cable is the interconnect between the controller and the power chassis. This cable assembly has a single plug on the controller end (for the EJI see Figure 2-14) and four plugs on the amplifier end (for the amplifiers).

1. Connect the cable end with the single connector to the connector marked Amplifier Signal on the EJI module (see Figure 2-14).
2. The other end of the cable with four plugs must be connected in the following pattern:
 - a. Connect the plug labeled **Amplifier Ctrl 1** to the B1 Control Signal connector on B⁺ Amp #1. Tighten the two captive screws securely.
 - b. Connect the plug labeled **Amplifier Ctrl 2** to the B2 Control Signal connector on B⁺ Amp #1. Tighten the two captive screws securely.

- c. Connect the plug labeled **Amplifier Ctrl 3** to the B1 Control Signal connector on the B⁺ Amp #2. Tighten the two captive screws securely.
- d. Connect the plug labeled **Amplifier Ctrl 4** to the B2 Control Signal connector on the B⁺ Amp #2. Tighten the two captive screws securely.

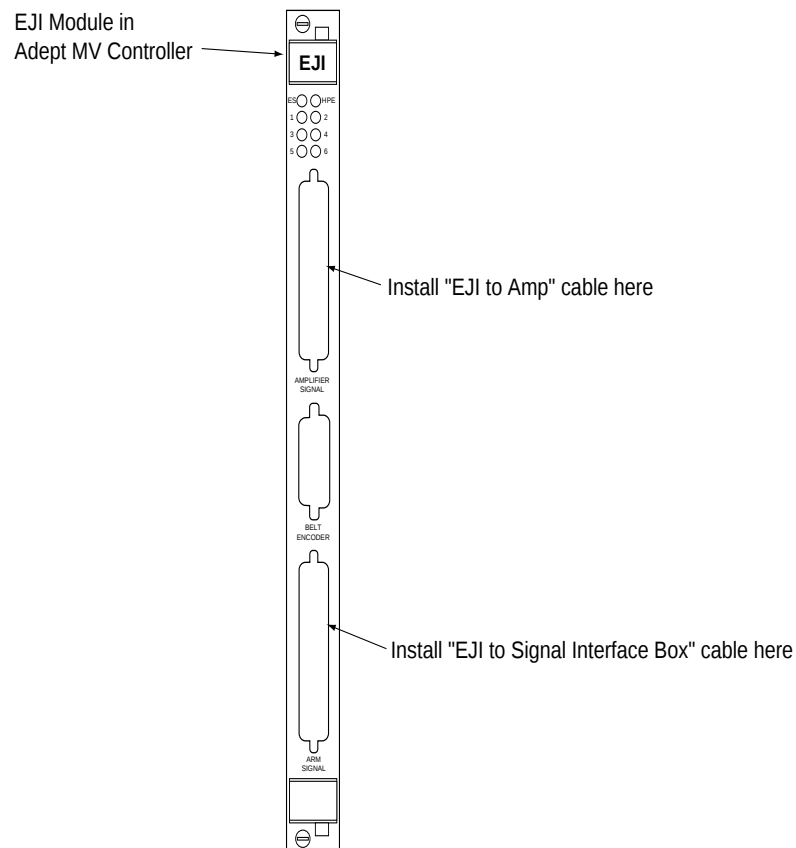


Figure 2-14. AdeptModules-to-EJI Cable Installation

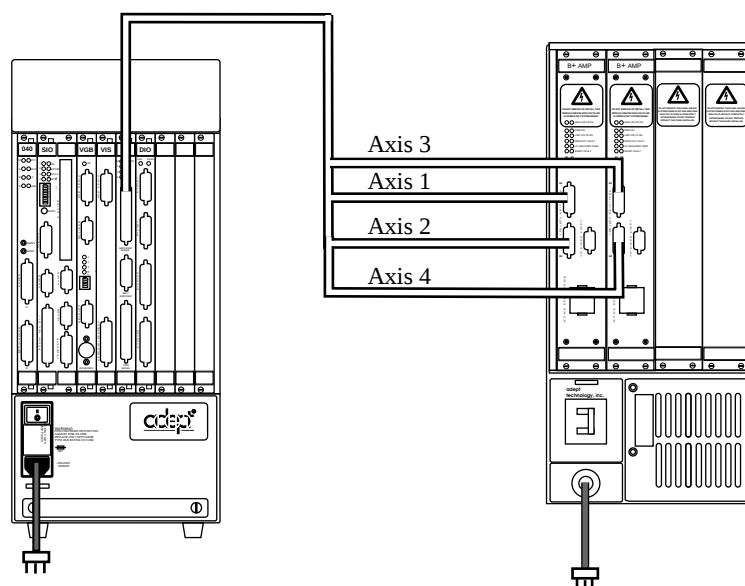


Figure 2-15. Connecting the PA-4 Power Chassis to the MV Controller

3. Verify that all connectors are secure and fully inserted and installed in the correct location.



WARNING: Verify that all connectors are fully inserted and screwed down. Loose connectors could cause unexpected AdeptModules motion. Also, a connector can be pulled out or dislodged unexpectedly.

Installing Signal Cables: MV Controller to Signal Interface Box

The EJI-to-Signal Interface Box cable is the interconnect between the controller and the Signal Interface Box. This cable assembly has a 50-pin D-sub connector on one end (for the EJI) and a 50-pin D-sub connector on the other end (for the Signal Interface Box).

1. Connect the cable end labeled EJI to the connector marked Arm Signal (lower D-sub connector) on the EJI module.
2. The other end of the cable with the 50-pin D-sub connector must be connected to the Signal Interface Box connector labeled “Arm Signal”.
3. Verify that all connectors are secure and fully inserted and installed in the correct location.



WARNING: Verify that all connectors are fully inserted and screwed down. Loose connectors could cause unexpected AdeptModules motion. Also, a connector can be pulled out or dislodged unexpectedly.

NOTE: For the differences in connecting the Adept 550 Robot to the Adept PA-4 Power Chassis, refer to the *Adept 550 Instruction Handbook Rev. A, Chapter 2, Figure 2-13*.

Connecting the MCP to the VFP

The optional MCP is connected to the system at the Pendant connector on the VFP (see Figure 2-16). See Chapter 4 for instructions on using the MCP.

Install the MCP to the connector that is marked PENDANT on the VFP.



WARNING: The VFP has two key switches, one to select the device that controls program execution and one to select the operating mode. Before using the MCP in the workcell, the operating key switch must be set to MANUAL and the other one to LOCAL. This will prevent program execution from being started from the keyboard or terminal.

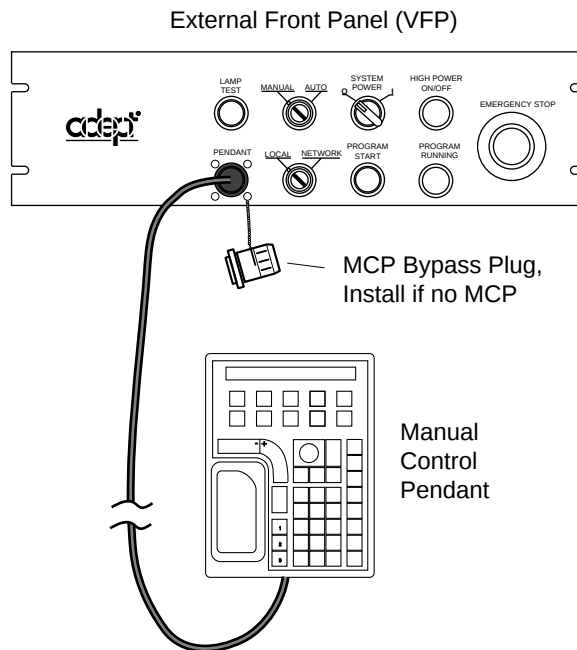


Figure 2-16. MCP Connection

MCP Cradle

The MCP is stored in the MCP cradle when it is not being held by an operator. The cradle has a retaining clip that keeps the Hold-to-Run switch closed. The MCP cradle *must* be installed outside of the AdeptModules workcell. See Figure 6-7 on page 117 for the dimensions of the cradle.

2.17 Grounding Information

Adept MV Controller Grounding

The detachable three-wire power cord connects to the power source and the protective ground. The protective ground conductor (colored green/yellow) in the power cord is internally connected to the exposed metal parts of the Adept MV Controller. To ensure electrical-shock protection, the protective ground conductor must be connected to a properly grounded power source (see Figure 2-17).

Adept PA-4 Power Chassis Grounding

The protective ground conductor (colored green/yellow) of the Adept PA-4 Power Chassis is internally connected to the accessible metal parts of the power chassis. To ensure electrical-shock protection, this must be connected to a properly grounded power source.



WARNING: Ensure that a proper protective ground connection exists before turning on the power. The Adept PA-4 power chassis and the Adept MV controller must be connected to the same earth ground.

Typical Customer-Supplied Equipment Cabinet

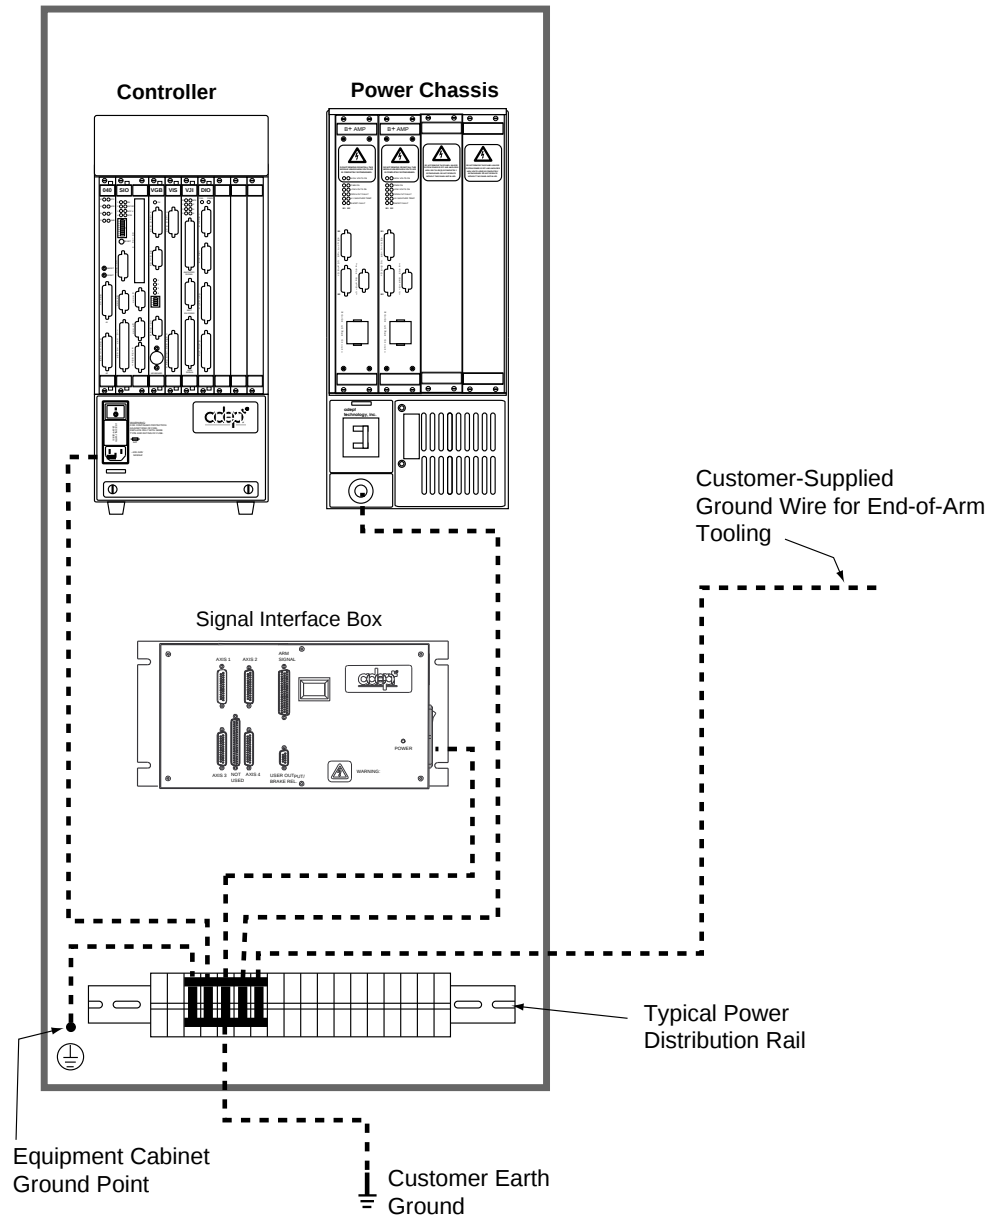


Figure 2-17. AdeptModules System Grounding Diagram

2.18 Connecting to AC Power

AC power must be connected separately to the Adept MV controller and the Adept PA-4 power chassis, but the power should come from the same source.

Connecting AC Power to the MV-5/10 Controller

The Adept MV Controller can operate at two different voltage settings. The identification (ID) label identifies the model, serial numbers, the voltages and the current ratings of the controller. The label is located on the left side of the controller chassis. A smaller serial number label is also located on the front of the chassis above the On/Off switch. Always have this serial number available when you call Adept Customer Service for technical support.

The Adept MV-5 and MV-10 controllers have auto-ranging power supplies that operate at either 100-120 VAC or 200-240 VAC single phase. The Adept MV-19 controller operates at either 100-120VAC or 200-240 VAC single phase. MV-19 controllers are shipped from the factory set to 200-240 VAC single phase. Contact Adept Customer Service for details on changing to 100-120 VAC configuration (refer to Table 2-8).

AC Power Requirements

Table 2-8. Adept MV Controller Power Requirements

Nominal Voltage Range	Frequency/ Phasing	Minimum Operating Voltage ^a	Maximum Operating Voltage	Recommended External Circuit Breaker (user-supplied)
200V to 240V (Factory Setting)	50-60 Hz, 1-phase	180V	260V	10 amps
100V to 120V	50-60Hz, 1-phase	90VAC	132VAC	10 amps
Power to the Adept MV controller and PA-4 power chassis must come from a single source.				

^aThe maximum interruption time (operating voltage below specification) tolerated by the controller is 16 milliseconds.

Power Entry Module

The power entry module is located at the lower left side of the controller front panel (see Figure 2-18). It contains:

- the On/Off power switch (**I** = On, **O** = Off)
- the AC power cord socket
- the two incoming AC line fuses, rated at 10 amps

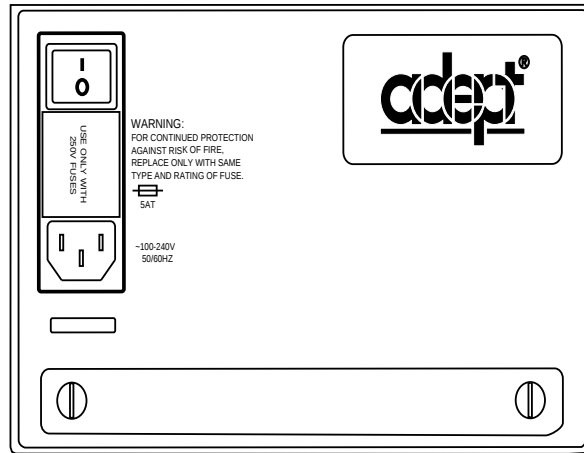


Figure 2-18. Adept MV Controller Power Entry Module

Connecting AC Power Cord

The AC power cord is included in the accessory kit. The controller end of the power cord is fitted with an IEC 320 connector. The user end of the cord is unterminated.

WARNING: Electrical hazard!



The installation of the power cord must be done by a skilled person. The power supply can injure or kill the person who installs the cords or an incorrect installation can injure or kill anybody who touches the equipment in the AdeptModules workcell.

Connect each conductor of the power cord securely to the AC power source, using the color code shown in Table 2-9. Provide a suitable plug or other facility connection in accordance with all applicable regional and national codes. (See section 2.17 on page 56 for important information on system grounding.)

Table 2-9. Adept MV Controller Power Cord Specifications

Cord length	3 meters ± 0.1 m (9 ft. 10 in. ± 4 in.)
Cord rating	10 amps
Number and size of conductors	3 x 1.00 mm ²
Color Code:	
line	brown
neutral	blue
ground	green/yellow

Connecting AC Power to the Adept PA-4 Power Chassis

The Adept PA-4 power chassis provides amplified power signals to drive the module motors in an AdeptModules system. The amplifier modules in the Adept PA-4 power chassis receive control signals from the Adept MV controller. The amplifier modules then provide the necessary current to drive various joint motors.

The Adept PA-4 power chassis is shipped from the factory configured for either 380-415 VAC or 200-240 VAC operation, depending on the sales order (refer to Table 2-10). A voltage setting label is located on the front of the chassis below the circuit breaker. The voltage setting is also shown on the ID label on the side of the chassis. Verify that the setting matches facility power before installation. This chassis is designed for 3-phase operation only.

If AC voltage needs to be changed from 380-415 VAC to 200-240 VAC, refer to page 63.



WARNING: Electrical hazard!

Verify that the voltage settings are correct before turning on power. Operating the Adept PA-4 power chassis with incorrect voltage settings can cause damage or injury.

Table 2-10. Adept PA-4 Power Chassis Power Requirements

Nominal Voltage Range	Frequency/ Phasing	Minimum Operating Voltage	Maximum Operating Voltage	Recommended External Circuit Breaker (user-supplied)
380 to 415 VAC	50-60Hz, 3-phase with neutral	342 VAC	424 VAC	20 amps
200 to 240 VAC	50-60Hz, 3-phase	180 VAC	245 VAC	20 amps
Power to the Adept MV controller and PA-4 power chassis must come from a single source.				

Connecting the Power Chassis AC Power Cord

The user end of the cord is unterminated. Connect each conductor of the power cord securely to the AC power source, using the color code shown in Table 2-11. The installation must meet all applicable European, international, and national standards and regulations.

Table 2-11. AC Power Cord Specifications for Power Chassis

Cord length	3 meters ± 0.1 m (9 ft. 10 in. ± 4 in.)
Cord rating	25 amps
Number and size of conductor	5 x 2.5 mm ²
Color code: 380 - 415 VAC	
line 1	black
line 2	black
line 3	brown
neutral	blue
ground	green/yellow
Color code: 200 - 240 VAC	
line 1	black
line 2	black
line 3	brown
no connection	blue (must be insulated, see page 63)
ground	green/yellow

WARNING: Electrical hazard!



The installation of the power cord must be done by a skilled person. The power supply can injure or kill the person who installs the cord or an incorrect installation can injure or kill anybody that touches the equipment in the workcell.

Typical AC Power Installation Diagrams

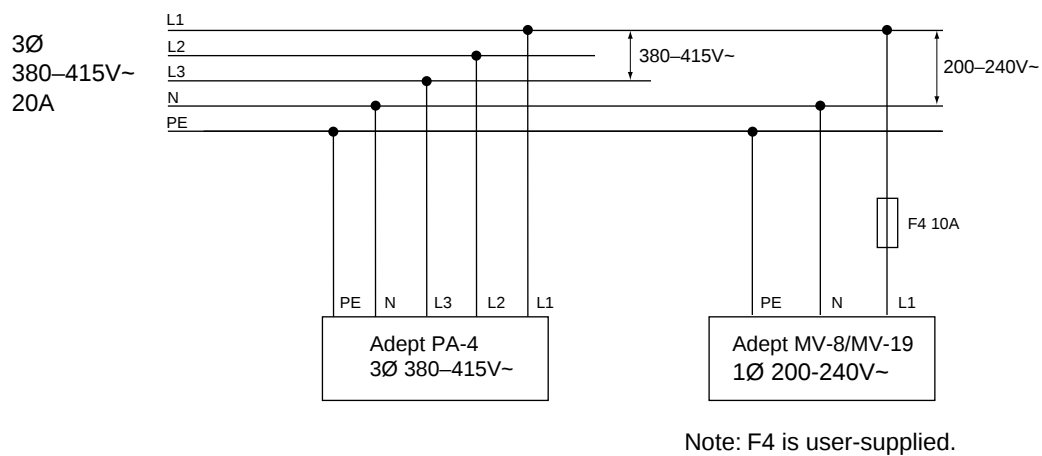


Figure 2-19. Typical 380-415 VAC Connection

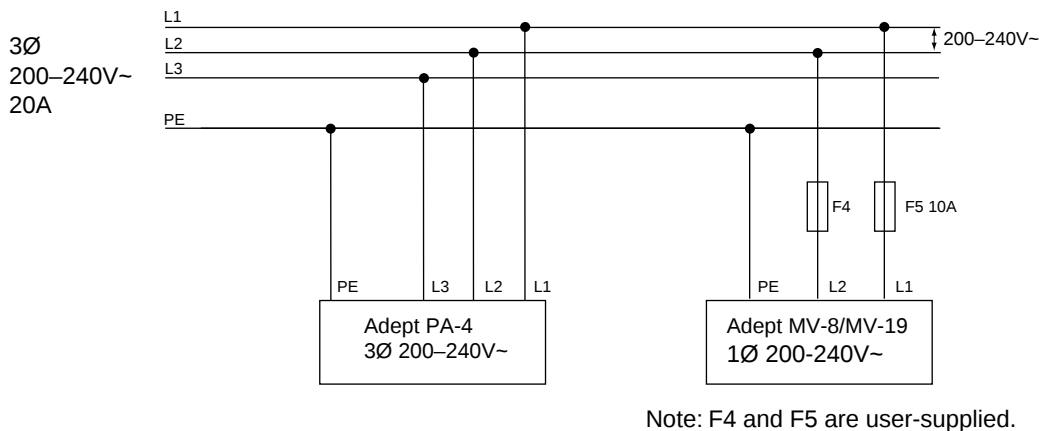


Figure 2-20. Typical 3-Phase 200-240 VAC Connection

Changing Voltage Setting for Power Chassis

To change the AC voltage setting from 3-phase 380-415 VAC to 3-phase 200-240 VAC, follow the two-part procedure below. This procedure must be done only by a skilled person and should be performed before installing the power chassis.



WARNING: Electrical hazard!

Changing the voltage setting in the power chassis must be done by a skilled person. The power supply can injure or kill a person who does not perform this procedure correctly.

Part 1 – Insulating the Blue Wire in Power Cord



WARNING: High AC voltage is coupled through EMI capacitors to the blue wire of the PA-4 power chassis power cord. To change the voltage setting from 380-415 VAC to 200-240 VAC, insulate the blue wire according to the directions provided below.

1. Turn off the Adept PA-4 Power Chassis and the Adept MV Controller.
2. Disconnect the 5-wire power chassis power cord from the AC power source.
3. Locate the two pieces of shrink tubing in the accessories kit; one is 7 mm (1/4 inch) diameter, the other is 19 mm (3/4 inch).
4. Place the 7 mm shrink tubing over the end of the blue wire in the power cord and use a heat gun to apply it. See Figure 2-21.
5. Fold the blue wire back and place the 19 mm shrink tubing over the end of the power cord. Use a heat gun to apply the shrink tubing.

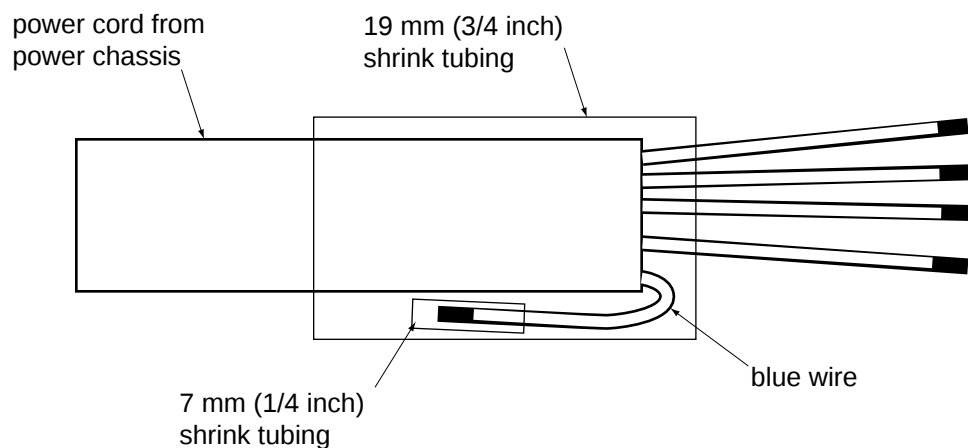


Figure 2-21. Insulating Blue Wire in Power Cord

Part 2 – Rotating Voltage Selector in Power Chassis

1. Turn off the Adept PA-4 Power Chassis and the Adept MV Controller.
2. Open the front air-intake grille by loosening two screws and swinging the grille out.
3. Inspect the voltage setting; it is marked on the front of the voltage selector plug. To change the voltage setting, remove the selector, rotate it 180° so the required setting is shown, and replace it. See Figure 2-22.
4. Close the grille and secure the two screws.
5. Clearly mark or alter the ID label (on the side of the chassis) to show the new voltage configuration.
6. Clearly mark or paste an alternative label over the existing label below the circuit breaker (on the front of the chassis) to show the new voltage configuration.
7. Reconnect the Adept PA-4 Power Chassis to the AC power source (see Figure 2-20 and Figure 2-21).

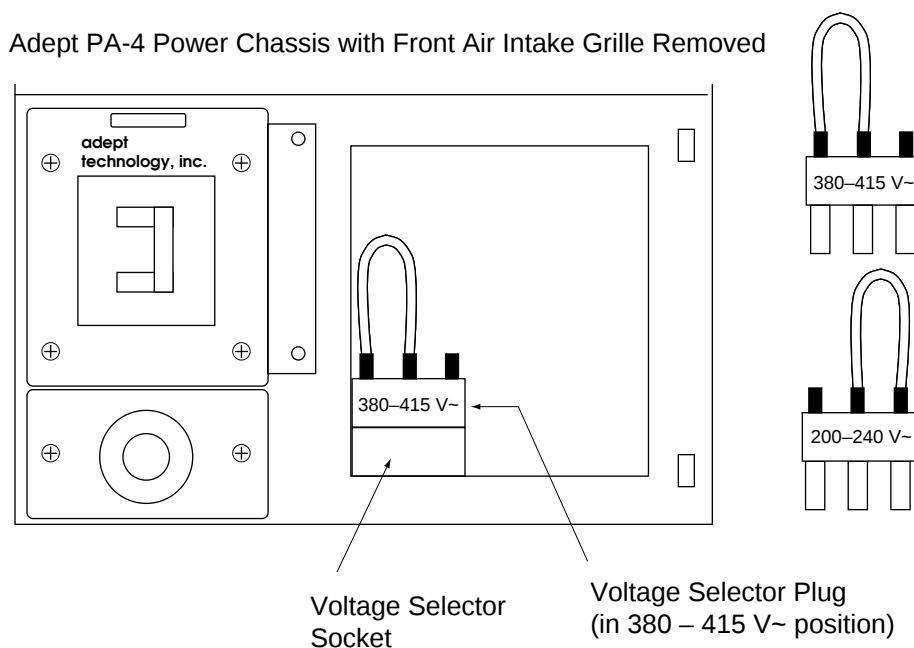


Figure 2-22. Changing Voltage in Power Chassis

Connecting AC Power to the Signal Interface Box

All Signal Interface Boxes have auto ranging power supplies that operate at either 100-120VAC or 200-220 VAC single phase (refer to Table 2-12).

Table 2-12. Signal Interface Box AC Power Requirements

Voltage Ranges	Minimum Operating Voltage	Maximum Operating Voltage	Current	Frequency / Phasing
100V to 120V and 200V to 240V	90V 180V	132V 264V	2 Amps 1 Amps	50 - 60Hz, 1-Phase

Power Entry Module

The power entry module is located on the right side of the Signal Interface Box. It contains:

- the On/Off power switch (**I** = On, **O** = Off)
- the AC power cord socket
- the two incoming AC line fuses, rated at 2.5 amps
- two spare 2.5 amp AC fuses, stored in fuse cover sockets

The AC power cord for the Signal Interface Box has the same specifications as the Adept MV controller power cord. Refer to Table 2-9.


2.19 Additional Power Chassis Information

B⁺ Amplifier Module Overview

The B⁺ Amplifier module is a plug-in module that contains the circuitry and amplifying components to drive two AdeptModules motors. In a typical AdeptModules system, there is one B⁺ Amplifier module in the Adept PA-4 power chassis. This Amp module will drive the motors for two AdeptModules.

NOTE: AdeptModules require a Dual B⁺ amp or newer version of the PA4 power chassis

Connectors and Indicators

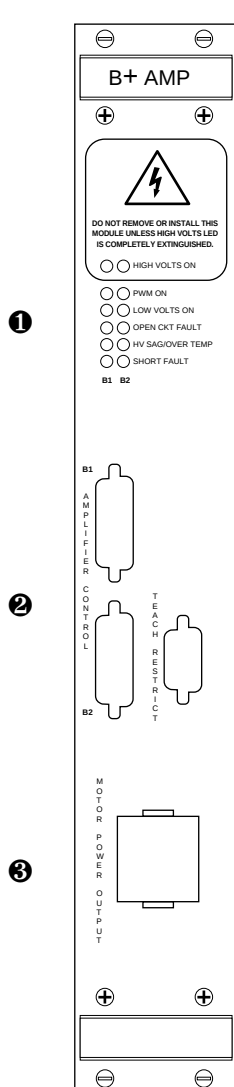

- 1 Status LEDs. The left-hand column of LEDs is for the first motor controlled by this module; the right-hand column is for the second motor controlled by this module. A lit LED indicates one of the following conditions:

High Volts On indicates the high voltage to the amps is turned on.

PWM On indicates that current servo is on. It does not go on until calibration is complete.

Low Volts On indicates the low voltage supply in the power chassis is on.

Note: the three LED pairs below indicate faults and are visible momentarily before the system turns off.

Open Ckt Fault indicates that an open circuit in the motor leads has been detected.

Short Fault indicates that an over-current in the motor leads has been detected.

- 2 **Amplifier Control** connector – the EJI-to-Amp cable connectors are installed here.
Teach Restrict connector – the Teach Restrict-to-B+ Amp cable is installed here.
- 3 **Motor Power Output** connector – the Amp-Brake-out cable is installed here.

Power Chassis Circuit Breaker and Fuse Information

NOTE: The SSER, LVON, HPON, and ILMT labels on the lower right corner of the front of the power chassis are for diagnostic LEDs that can be viewed behind the front grille. These LEDs are for Adept Field Service use only.

Chassis Circuit Breaker

The power chassis circuit breaker is rated at 15 amps and is located on the lower-left front of the chassis on the power entry module. It also functions as an on/off switch to isolate the chassis.



CAUTION: If the circuit breaker trips due to current overload, it indicates an internal fault. Do not reset the circuit breaker yourself. Contact Adept Customer Service at the numbers listed in Section 1.15.

Chassis and Amplifier Module Fuses

Six chassis fuses are located inside the base of the power chassis on the power control board. These fuses are not user-replaceable. If you suspect that a chassis fuse may have blown, contact Customer Service.

In addition to the fuses in the power chassis, there are additional fuses located inside the power amplifier modules. The amplifier fuses are not user-replaceable. If you suspect that an amplifier fuse may have blown, contact Customer Service.



CAUTION: Failure of a chassis or an amplifier fuse indicates an internal circuit fault which must be corrected before the fuse is replaced. Do not attempt to replace the fuse yourself. Contact Adept Customer Service at the numbers listed in Section 1.15.

Removing and Installing Amplifier Modules

The Adept PA-4 power chassis is shipped from the factory with the amplifier modules installed in the chassis. Any unused slots are filled with blank covers. Normally you will not need to remove the amplifier modules. If you do need to remove and reinstall a module for some reason, follow the instructions below. The four slots in the chassis are not interchangeable: Some slots have special control signals. The amplifier modules are factory-installed in the correct slots. Contact Adept Customer Service if you need to relocate any modules.



WARNING: Do not attempt to install or remove any amplifier modules without first turning off the power to the power chassis and all related external power supplies. Failure to observe this warning could cause injury or damage to your equipment.

Removing Amplifier Modules

1. Turn off the power chassis and the Adept MV controller.
2. Note the location of any cables connected to the module, then disconnect them.
3. Loosen the captive screws at the top and bottom of the module.

4. Using both the top handle and bottom handle, pull the module straight out of the chassis. Remove the module from the chassis and store it in a safe place.



CAUTION: To prevent amplifier modules from being exposed to electrostatic discharge (ESD) while handling or storing them. Adept recommends using an antistatic ground strap when handling modules.

Installing Amplifier Modules

1. Turn off the power chassis and the Adept MV controller.
2. If the slot has a blank panel installed, loosen the captive screws at the top and bottom of the panel and remove it.
3. Verify that the intended slot for the module is ready to accept the module.
4. Align the module with the card guide slots at the top and bottom of the card cage. Slide the module in slowly. Apply straight, forward pressure to the top and bottom handles until it is firmly seated in the rear power connector and the face of the module is flush with the other modules.

It should not be necessary to use excess pressure or force to engage the connector. If the board does not properly connect with the rear power connector, remove the module and inspect the connector and guide slots for possible damage or obstructions.

5. Tighten the captive screws at the top and bottom of the module.



WARNING: There is an interlock circuit that prevents enabling power if the amp module screws are not tightened securely. This also applies to any blank panel cover(s). There are dangerous voltages present inside the power chassis; do not attempt to operate without blank panel cover(s) installed in any unused slots.

2.20 Installing End-Effectors on AdeptModules

Providing an end-effector or other necessary tooling is the responsibility of the user. If hazardous voltages are present at the end-effector, install a ground cable to the end-effector. Mounting hole patterns can be found in *AdeptModules Instruction Handbook, Volume 2: Mechanical Assembly*.

Connecting Compressed Air Supply to the AdeptModules (optional)

Some end-effectors may require compressed air (for example, pneumatic grippers); and AdeptModules have built-in air lines for this use.

The user must supply all tubing and fittings to plumb the facility air supply to the AdeptModules. The compressed air to the AdeptModules must meet the specifications listed in section 2.1 on page 31.

Preparation for Safe and Effective Use of the Robot

3

3.1 Overview of Safety System	71
Introduction	71
Operating in Manual Mode	71
User-Supplied E-Stop Switches	71
Terminal Block on External Front Panel	72
External E-Stop Input	73
Passive E-Stop Output	73
Digital Inputs and Outputs of the System Input/Output (SIO) Module	74
Input Signals	74
Output Signals	75
Digital I/O Connector Pinouts	76
Typical Emergency Stop Circuitry	78

3.1 Overview of Safety System

Introduction

Adept Technology highly recommends the use of workcell safety features such as light curtains, safety gates, or safety floor mats to prevent access to the workcell while power is present. These devices would open the E-Stop circuit and shut down High Power when activated. Make sure sufficient E-Stop switches are provided in the workcell so they can be easily reached in an emergency.

It is possible to control different safety features in relation to the AUTO/MANUAL operating mode keyswitch and the terminal block on the external Front Panel. Together with the Adept Controller system, you have various control features to construct individual system safeguards, including:

- Terminal block on the external Front Panel
- Emergency stop circuitry
- Digital input and output lines

Operating in Manual Mode

An important function of the Emergency Stop system is to protect the operator in Manual mode. To work in Manual mode, the operator switches the lower keyswitch on the VFP to the LOCAL position and the operating mode keyswitch (upper one) to the MANUAL position. Then the operator gives the instruction to enable High Power, either through the ENABLE POWER software instruction, or by pressing the COMP/PWR button on the MCP. The system starts the process to enable High Power. The steps are outlined in the following list.

High Power enable process in Manual mode (takes about 8 seconds):

- VFP HIGH POWER ON/OFF push button starts blinking*
- operator presses the VFP HIGH POWER ON/OFF button

*The system waits until the HIGH POWER ON/OFF push button is pressed. If the button has not been pressed in a selected time, the system stops enabling power with an error message.

While in Manual mode, the module speed is limited to 250 mm per second (10 ips). This is to protect a person who is in the workcell teaching points with the MCP during program development. Also, the motors run at reduced torque. It is important to remember that the module speed is *not* limited when in Automatic mode.

User-Supplied E-Stop Switches

The specifications for user-supplied E-Stop and safety barrier switches are:

- switches with positive driven contacts, per EN60204 Section 10.73N1992
- minimum switching power 24 VA
- minimum switching voltage 24 VDC
- minimum switching current 1.0 A DC



WARNING: Do not use switches in the E-Stop circuit that do not comply with Category 1 requirements.

See Table 3-1 for the terminal assignments of the terminal block on the external Front Panel for the monitoring of the Emergency Stop switches on the Manual Control Pendant and the external Front Panel, and the Hold-to-Run button on the MCP.

Terminal Block on External Front Panel

Adept provides voltage-free contacts on the terminal block on the back of the external Front Panel for monitoring the emergency circuitry components and other switches. It is a vital part of your safety system. The user has access to the voltage-free contacts of the Emergency Stop switches on the Manual Control Pendant and the external Front Panel. Additionally, there are contacts for monitoring the Hold-to-Run switch on the MCP and the position of the System Power and Operating Mode switch on the external Front Panel. See Table 3-1 for assignment of the terminals.

The voltage-free contacts can be used to create additional safety circuitry or to monitor the existing one. For instance, the user can control additional contactors with the voltage-free contacts that turn on and off the power supply to the PA-4 power chassis. Then it is possible to enable High Power to the motors of the module only if the E-Stop circuitry is closed. See Figure 3-3 for an example of additional safety equipment that uses the voltage-free contacts on the external Front Panel and the external E-Stop Inputs on the SIO Module in the Adept MV Controller.

Table 3-1. Terminal Assignment of the Terminal Block on the Back of the VFP

Number	Description
1	System Power switch on the external Front Panel (contacts are closed when power is turned on)
2	
3	Operating Keyswitch on the external Front Panel (contacts are closed in Manual mode)
4	
5	Emergency Stop switch on the external Front Panel (N/C)
6	
7	Emergency Stop switch on the Manual Control Pendant (N/C)
8	
9	Hold-to-Run switch on the Manual Control Pendant (N/O)
10	
11	not used
12	not used

External E-Stop Input

Pins 42 and 44 on the Digital I/O connector on the SIO module must be connected through a user-provided, normally closed (NC) safety circuit. Multiple external emergency stop switches can be connected in series. (See Figure 3-2.) The E-Stop circuit should also be used to monitor other safety-critical items, including but not limited to safety barriers and encoder power supplies. Pins 41 and 43 also comprise part of the E-Stop circuit – for most applications, connect pin 41 to pin 43.

Passive E-Stop Output

The passive E-Stop output from the SIO module consists of a normally open, voltage-free, relay contact. It is controlled by signals received from the external E-Stop devices and the MCP and Front Panel E-Stops. (See Figure 3-2.)

The passive E-Stop output uses only electromechanical relays to monitor the E-Stop circuits. Many safety codes do not permit electronic control of E-Stop signals. Therefore, the passive E-Stop output is often required to ensure that the user's equipment is shut down if the E-Stop circuit is activated. The Passive E-Stop output should also be used to control any other user devices in the workcell that need to be stopped in an emergency. Such devices might include other moving equipment such as conveyor belts, indexing or transfer devices, pneumatic systems, etc.

The passive E-Stop output is rated at 10 VA, for example 0.8A at 12 Vdc or 0.4A at 24 Vdc. This rating must not be exceeded.

The specifications for the relay in the passive E-Stop circuit are:

- maximum switching power = 10 VA (volt amps)
- maximum switching voltage = 100 Volts DC, 70 Volts AC rms
- maximum switching current = 0.5 Amps DC, 0.3 Amps AC rms



CAUTION: The power through the relay must not exceed 10 VA.

Digital Inputs and Outputs of the System Input/Output (SIO) Module

The Digital I/O connector on the SIO is a 50-pin, high-density, female D-Sub connector for digital I/O communication. There are 12 input channels and 8 output channels. All channels are opto-isolated. The same connector also provides access to the Emergency Stop circuit (E-Stop input and Passive E-Stop output). To access this connector, a cable with a 50-pin, male D-Sub connector at one end (not supplied with the system) is needed.

Input Signals

The digital I/O connector handles input signals 1001 to 1012. Each channel has an input and a corresponding return line. Refer to Table 3-2 for input specifications. The locations of the signals on the connector are shown in Table 3-4.

Table 3-2. DIO Input Specifications (SIO module)

Operational voltage range	0 to 24 VDC
“Off” state voltage range	0 to 3 VDC
“On” state voltage range	10 to 24 VDC
Typical threshold voltage	$V_{in} = 8 \text{ VDC}$
Operational current range ^a	0 to 20 mA
“Off” state current range ^a	0 to 1.2 mA
“On” state current range ^a	7 to 20 mA
Typical threshold current, per channel ^a	10 mA
Impedance (V_{in}/I_{in})	1.3 K Ω minimum
Current at $V_{in} = +24 \text{ VDC}$	$I_{in} \leq 20 \text{ mA}$
Turn on response time (hardware)	5 μsec maximum
Software scan rate/response time	16 ms scan cycle/ 32 ms max response time ^b
Turn off response time (hardware)	5 μsec maximum
Software scan rate/response time	16 ms scan cycle/ 32 ms max response time ^b

^a the input current specifications are provided for reference; voltage sources are typically used to drive the inputs.

^b 2 ms response time (minimum) for fast inputs 1001 to 1003, depending on program task configuration, when used with V^+ INT.EVENT instruction.

Output Signals

The digital I/O connector handles output signals 0001 to 0008. Refer to Table 3-3 for output specifications. The locations of the signals on the connector are shown in Table 3-4. The SIO provides separate + and – connections for each channel (no internal common connections). This allows you the choice of wiring for current-sourcing or current-sinking mode as required.

Each output channel (circuit) should be connected to only one output device. Each output circuit is short-circuit protected.

Table 3-3. DIO Output Specifications (SIO module)

Operating voltage range	0 to 24 VDC
Operational current range, per channel	$I_{out} \leq 100 \text{ mA}$
V_{drop} across output in on condition	$V_{drop} \leq 0.85 \text{ V}$ at 100 mA $V_{drop} \leq 0.80 \text{ V}$ at 10 mA
Output off leakage current	$I_{out} \leq 600 \text{ }\mu\text{A}$
Turn on response time (hardware)	3 μsec maximum
Software scan rate/response time	16 ms scan cycle/ 32 ms max response time
Turn off response time (hardware)	200 μsec maximum
Software scan rate/response time	16 ms scan cycle/ 32 ms max response time



CAUTION: The above specifications for the digital inputs and outputs on the SIO module are different from the specifications for a DIO module. Specifically, the SIO output current is limited to 100 mA per channel, whereas the DIO output is rated at 400 mA.

Digital I/O Connector Pinouts

Table 3-4. Digital I/O Connector Pin Assignments on SIO Module

Pin	Signal Name	Pin	Signal	Pin	Signal	Pin	Signal
1	Input 1001	2	1001 return	27	Output 0002+	28	Output 0002–
3	Input 1002	4	1002 return	29	Output 0003+	30	Output 0003–
5	Input 1003	6	1003 return	31	Output 0004+	32	Output 0004–
7	Input 1004	8	1004 return	33	Output 0005+	34	Output 0005–
9	Input 1005	10	1005 return	35	Output 0006+	36	Output 0006–
11	Input 1006	12	1006 return	37	Output 0007+	38	Output 0007–
13	Input 1007	14	1007 return	39	Output 0008+	40	Output 0008–
15	Input 1008	16	1008 return	41 ^a	Auxiliary E-Stop input+	42 ^a	External E-Stop input–
17	Input 1009	18	1009 return	43 ^a	Auxiliary E-Stop input –	44 ^a	External E-Stop input +
19	Input 1010	20	1010 return	45	Passive E-Stop output+	46	Passive E-Stop output–
21	Input 1011	22	1011 return	47	Not used	48	Not used
23	Input 1012	24	1012 return	49	Not used	50	Not used
25	Output 0001+	26	Output 0001–				

^a See Figure 3-2 and Figure 3-3 for more information on pins 41, 42, 43, and 44.

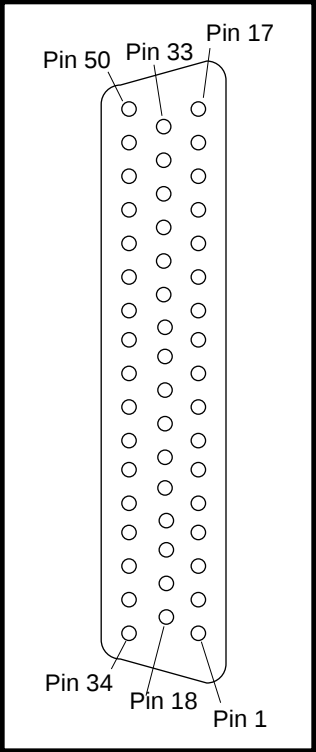


Figure 3-1. Digital I/O Connector Pin Locations on SIO Module

Typical Emergency Stop Circuitry

The following drawings show two examples of different types of connections to the Emergency Stop circuitry.


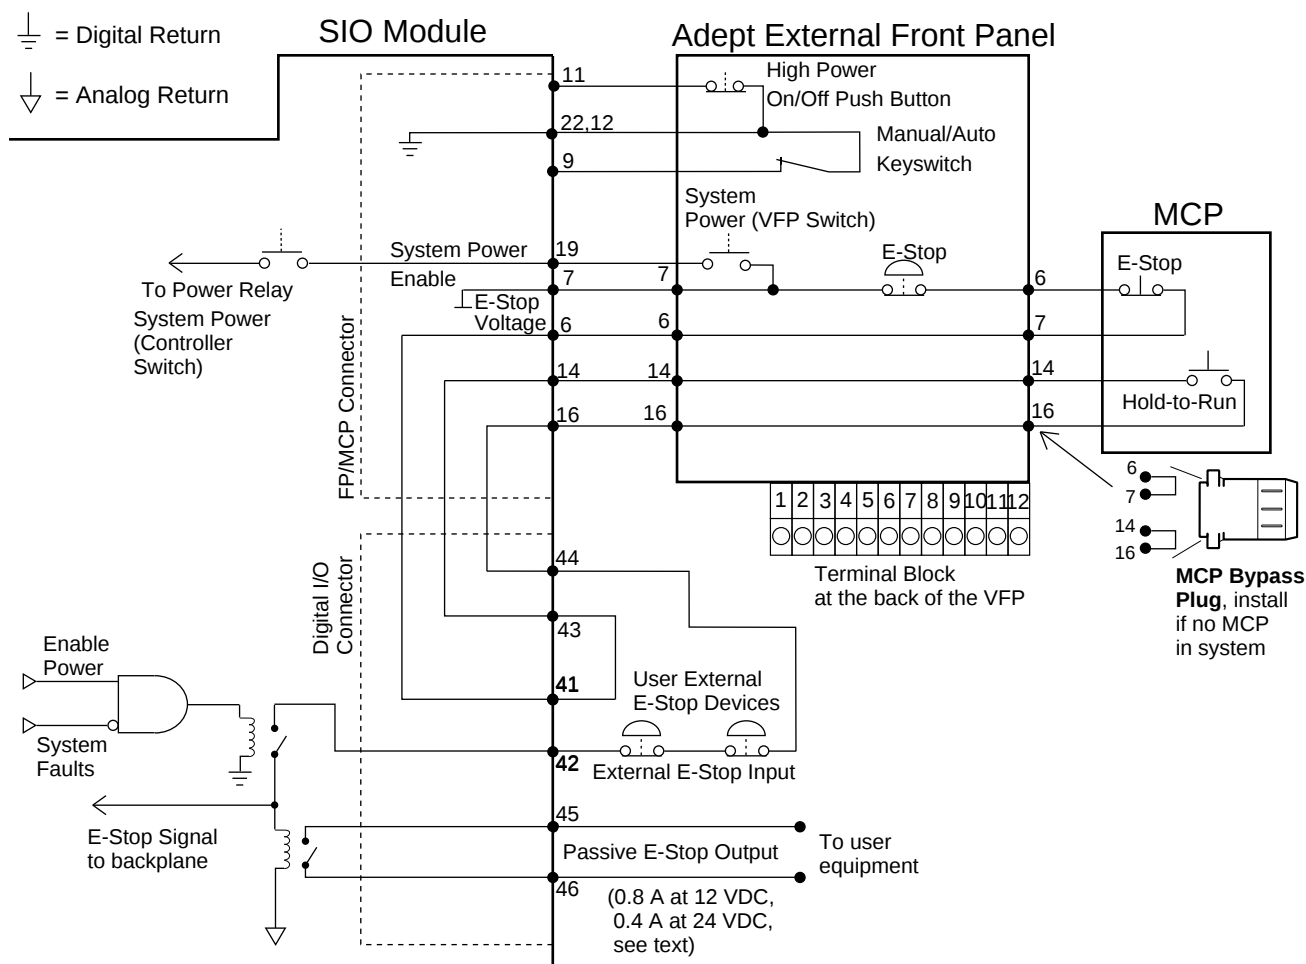


Figure 3-2. E-Stop Diagram with VFP and MCP

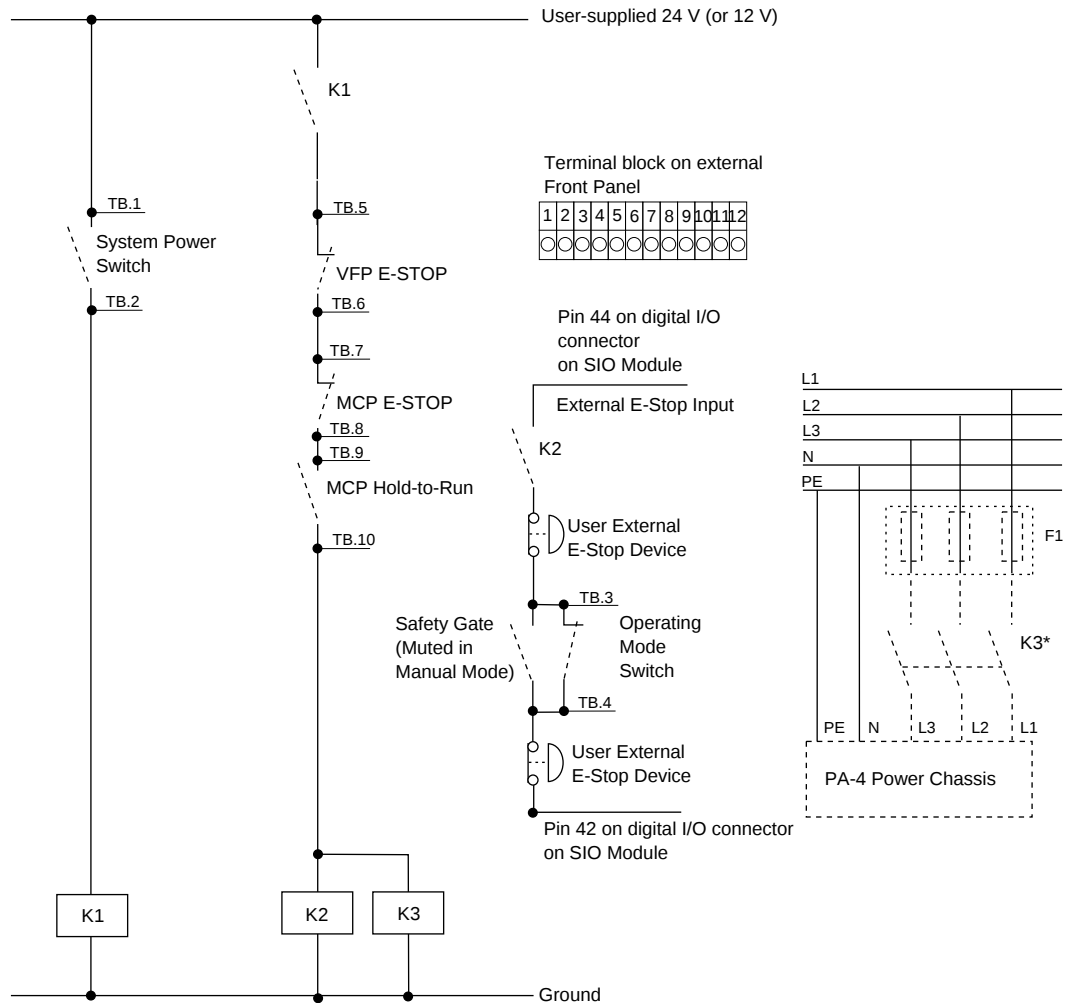

(*) The implementation of the K3 High Power contactor is not necessary to achieve Category 1 operation, per EN 954.

Note: This drawing is ONLY an example for the implementation of additional safeguards.

Figure 3-3. E-Stop Circuitry with Additional Safety Equipment

Commissioning the System

4

4.1 Introduction	83
Physical Connections	83
4.2 Operating Modes	83
Manual Operating Mode	83
Automatic Operating Mode	84
4.3 Using the Brake Release Button	84
Brake Release Button	84
Brakes	85
4.4 Description of the Manual Control Pendant (MCP)	85
How to Hold the MCP	85
Description of Buttons on the MCP	87
Mode Control and Joint/Axis Control Buttons	87
Speed Bars	87
4.5 How to Stop AdeptModules in Manual Mode	88
4.6 Prior to Starting the AdeptModules	88
Software Configuration	88
Adept Utility Disk	88
SPEC Data	89
Overview of AdeptModules Quick Setup	89
Overview of System Bring Up	90
Bringing Up an AdeptModules System	90
Single Robot With One Motion Board (EJI)	90
4.7 How to Start AdeptModules	92
Enable High Power with the MCP	92
In Automatic Mode	92
In Manual Mode	93
Calibration Parameters	93
Calibration of the AdeptModules with the MCP	93
Changing Calibration Direction	94
4.8 Moving the AdeptModules with the MCP	96
MAN/HALT Button for Selecting Joint State	96
Joint/Axis Control Buttons	96
Speed Bars	96
Selecting Joint State and Moving the AdeptModules	97
Selecting and Moving Joint 1 (X)	98
Selecting and Moving Joint 2 (Y)	98

Selecting and Moving Joint 3 (Z)	98
Selecting and Moving Joint 4 (Theta)	98
4.9 Limiting Joint Travel	99

4.1 Introduction

This chapter covers commissioning, or putting into service, the AdeptModules system. This includes verifying that the installation is complete, starting and stopping the AdeptModules, and moving the AdeptModules with the MCP.

Physical Connections

Before turning on the controller and enabling High Power, ensure that the following cables are installed correctly. See Chapter 3 for installation instructions.

- AdeptModules to power chassis
- AdeptModules to controller
- AdeptModules to Signal Interface Box
- controller to power chassis
- controller to Signal Interface Box
- VFP to controller and MCP

Make sure you have installed proper safeguards and E-Stop circuits as described in Chapter 1 and Chapter 3.



CAUTION: Ensure that all screws holding the amp modules and blank panels in the power chassis are securely fastened. If they are loose, power to the AdeptModules cannot be enabled.

Make sure that the controller is connected to the correct AC power source. See Chapter 3 for the power requirements of the devices.

4.2 Operating Modes

AdeptModules have two different operating modes. The VFP has a two-position rotary keyswitch marked MANUAL and AUTO that controls whether the AdeptModules are operating in Manual or Automatic mode. For safety reasons, High Power is automatically disabled when the operating mode is changed.

Manual Operating Mode

With the keyswitch in the MANUAL position, AdeptModules motion can be initiated only from the Manual Control Pendant (MCP). When the system is in Manual mode, the user cannot initiate a motion with the system keyboard. This protects the operator in the workcell from unexpected motions of the AdeptModules.

In Manual mode the maximum speed of the Tool Center Point and the joints of the AdeptModules is reduced to less than 250 mm per second (10 ips). Also, the motors run at reduced torque.

See section 1.10 on page 24 for a description of safety equipment for an operator who is working in the AdeptModules workcell.

Automatic Operating Mode

The AUTO position of the operating keyswitch permits computer control of the AdeptModules. A program that is currently running the AdeptModules or motion device may cause it to move at times or along paths you may not anticipate. When the amber HIGH POWER light and the white PROGRAM RUNNING light on the VFP are illuminated, do not enter the workcell because the AdeptModules or motion device might move unexpectedly.



WARNING: Impact Hazard!

In Automatic mode no personnel are allowed to stay in the workcell. The AdeptModules can move at high speeds and exert considerable forces.



CAUTION: The LAMP TEST button on the VFP allows you to check the HIGH POWER light and the PROGRAM RUNNING light on the VFP. Adept recommends periodically checking the two lights prior to entry into the workcell.

NOTE: The MCP can be used in Automatic (COMP) and in Manual (MAN) mode. For example, it is possible to calibrate the AdeptModules or to enable High Power with the MCP in Automatic mode.

4.3 Using the Brake Release Button

Brake Release Button

The manual brake release on AdeptModules with brake mechanisms, can be used to move that axis manually during setup (refer to section 2.15 for installing the manual brake release button).



CAUTION: When the Brake Release button is pressed, all joints with brakes are released simultaneously and the joints may drop to the bottom of their travel. To prevent possible damage to the equipment, make sure that the joint is supported while releasing the brake and verify that any end-effector or other installed tooling is clear of all obstructions.



WARNING: The Brake Release function may be needed to help release a trapped person. Failure to correctly install the Brake Release button may prevent rescue and cause additional injury or death.

Brakes

Certain AdeptModules have holding brakes. These brakes are on whenever High Power is off. The brakes are intended primarily to restrict Linear Module movement when High Power is off, but they also assist in stopping Linear Module motion when the Emergency Stop circuitry is activated or when there is a Linear Module motion error. These brakes are not designed to be used as a routine method of stopping Linear Module motion.


4.4 Description of the Manual Control Pendant (MCP)

The MCP assists the operator in teaching AdeptModules locations to be used in application programs. The MCP is also used with custom applications that employ “teach routines” that pause execution at specified points and allow an operator to teach or reteach the AdeptModules locations used by the program. The Adept AIM software system makes extensive use of the pendant for teaching AdeptModules locations.

A description of the necessary basic operations with the MCP, such as enabling High Power, calibration, and moving the AdeptModules, follows in the next sections.

How to Hold the MCP

The pendant has a palm-activated enabling switch that is connected to the emergency stop circuitry. Whenever this switch is released, High Power is turned off (see Figure 4-1). To operate the MCP, put your left hand through the opening on the left-hand side of the pendant and use your left thumb to operate the pendant speed bars. Use your right hand for all the other function buttons.

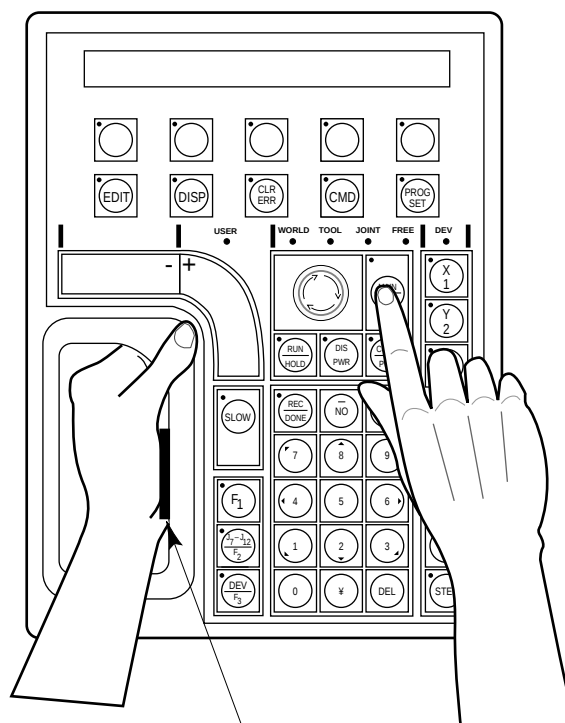

Depress the palm-activated
enabling switch

Figure 4-1. Holding the MCP

NOTE: The MCP must be stored in the MCP cradle to close the enabling switch when it is not being held.

Description of Buttons on the MCP

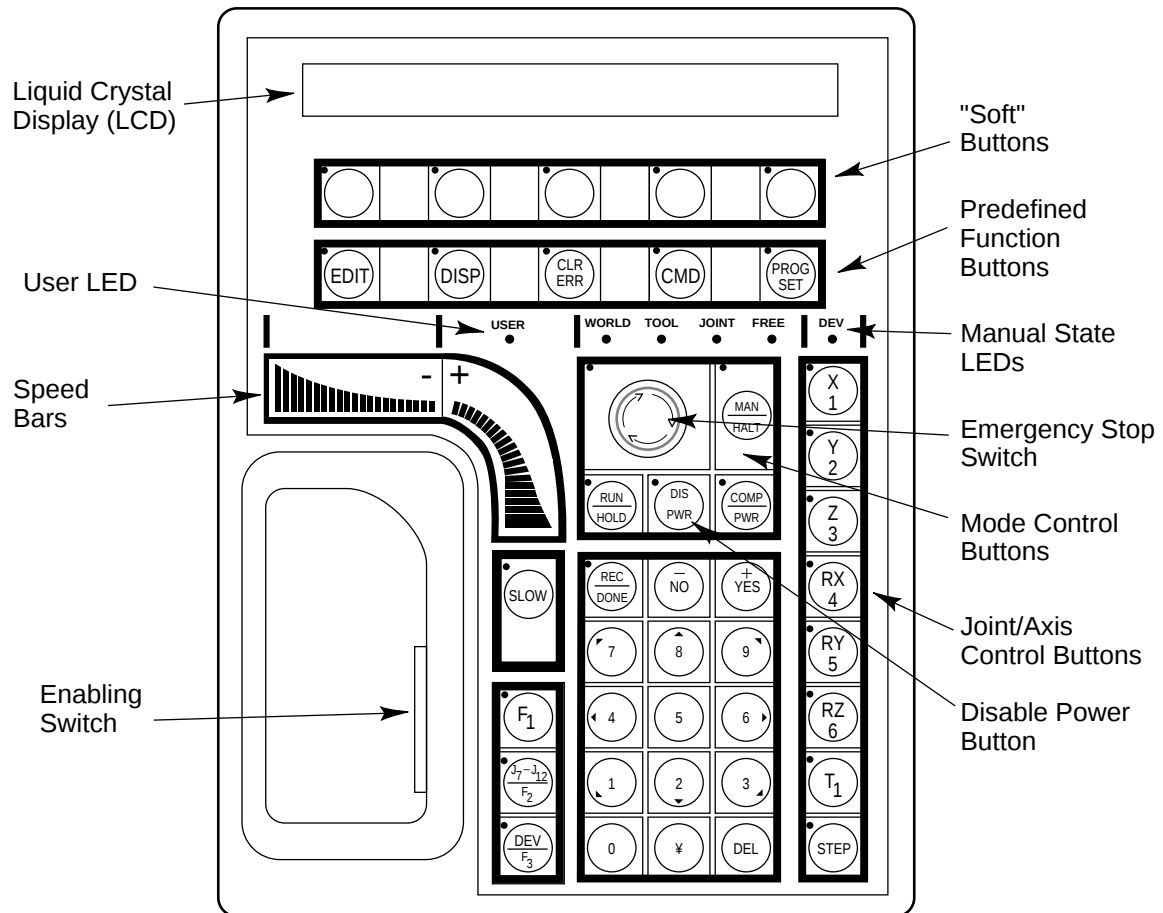


Figure 4-2. MCP Layout

Mode Control and Joint/Axis Control Buttons

The mode control and joint/axis control buttons are used to control the AdeptModules from the pendant.

Speed Bars

The speed bars are used to move the AdeptModules when it is in MCP Manual mode. The slow button modifies the speed command by the speed bars.

NOTE: The Step button on the lower right corner of the MCP is used to step through motions in a V⁺ program. See the V⁺ Release Notes for details.

NOTE: For more details on MCP use refer to the *Adept MV Controller User's Guide*.

4.5 How to Stop AdeptModules in Manual Mode

There are several ways to stop AdeptModules motion. In an emergency press an Emergency-Stop button. Power will be removed from the AdeptModules immediately. Use an Emergency-Stop button only in emergency situations. For a normal stop press the DIS PWR button on the MCP or release the speed bars on the MCP. The AdeptModules will stop with controlled deceleration.

Ways to stop AdeptModules motion:

- Press the Emergency-Stop button on the MCP or another Emergency-Stop button (only in emergency situations).
- Release the enabling switch on the MCP to shut off High Power (only in emergencies).
- Release the Speed Bars on the MCP.
- Press the DIS PWR (Disable Power) button on the MCP.
- Press the HIGH POWER ON/OFF button on the VFP.



CAUTION: Press an Emergency-Stop button or release the enabling switch only in emergency situations. In normal operations, stop the AdeptModules by releasing the speed bars or pressing the Disable Power button.

4.6 Prior to Starting the AdeptModules

Software Configuration

The AdeptModules Interface allows control of various modules, configurations using the V⁺ language. In order for V⁺ to control these configurations, it must know the number and types of the AdeptModules in the system, and the values of parameters that describe each configuration. This information is stored on the system disk so that a configured system will start up ready for action. This section describes for configuring the AdeptModules system.

It is assumed throughout the software sections of this Instruction Handbook that the user has a working knowledge of the V⁺ language and operating system. Specific information about V⁺ can be found in the *V⁺ Operating System User's Guide* and the *V⁺ Operating System Reference Guide*

Adept Utility Disk

The Adept Utility Disk contains two program packages for customizing a system disk for a particular AdeptModules system. The utility disk also contains the subdirectory "SPECDATA", which contains spec parameters and robot configuration files for selected modules. These utility programs are:

1. System configuration program (CONFIG_C.V2)

This program configures the number and type of robots in a system. A special software file called a “device module file” must be loaded into the system file in order to use the AdeptModules system. Refer to Appendix A for a detailed explanation of CONFIG_C. Refer to the section “*Bringing Up the AdeptModules System*” for a detailed step-by-step procedure.

2. Robot specification utility program (SPEC.V2)

The robot specification utility program (referred to as the SPEC program) allows customizing of the system file with the required control parameters for AdeptModules. It includes routines to interactively configure the AdeptModules system. The SPEC program allows use of the “Quick Setup” of the AdeptModules by loading SPEC parameter files provided with the system. The SPEC program will allow modification of the parameters (before modifying the parameters, be sure to understand the effect of each parameter). Adept recommends using the default parameters which are loaded during configuration. The program also stores these parameters to the system file so that the configured system boots from the modified system disk.

SPEC Data

The Adept Utilities Disk contains the subdirectory “SPECDATA”. This subdirectory contains SPEC parameter files for selected AdeptModules and robot configurations. Load the SPEC data files from this disk when using **AdeptModules Quick Setup** from the main menu of the SPEC program. These parameters files can be copied to the hard disk in a separate directory.

Overview of AdeptModules Quick Setup

The **AdeptModules Quick Setup** allows bringing up the system quickly by loading default SPEC parameter files. All the appropriate files are on the Adept Utilities Disk in the directory Spec Data. These SPEC parameters are optimized for AdeptModules. If the application requires further tuning of the parameters, use caution in changing them. The **AdeptModules Quick Setup** is divided into two main sections. First, load the JOINT-INDEPENDENT file and then the JOINT-specific file for each module in the robot. The JOINT-INDEPENDENT files contain information such as number of axes, Cartesian parameters, etc.

The JOINT-INDEPENDENT file naming convention is:

LM_XYZ or LM_XZ

Where “XYZ” represents number of axes and kinematic configuration of the AdeptModules system.

Each JOINT file contains information about a specific joint (AdeptModule) in the system, including tuning parameters, encoder configuration, calibration configuration, etc.

The JOINT data files are named using the last five digits of AdeptModule part number.

For example:

The part number of an H-Module with 800mm stroke is 90400-10080

The name of the SPEC parameter file name for this module is “10080”.

The part number of a particular module can be found on the label affixed to the module.

The JOINT-INDEPENDENT and JOINT files are on the Adept Utility Disk in the sub-directory SPEC DATA. See the **Bringing Up AdeptModules System** section below for step-by-step instructions.



CAUTION: If any AdeptModule is replaced with a different AdeptModule (i.e., different part number) in a configured system, the JOINT file for the new AdeptModule must be loaded.

Overview of System Bring-Up

This section outlines the steps in configuring a new system. Follow the recommended procedures in the order described in this section. After the hardware is installed:

1. Load the proper device module(s) to the working copy of the system disk using the CONFIG_C utility.
2. Use the SPEC utility's **AdeptModules Quick Setup** to configure the system.
3. Save the SPEC parameters to the system file.
4. Finally, make a backup copy of the configured V⁺ system (using the DISKCOPY utility).

Bringing Up an AdeptModules System

AdeptModules, in conjunction with V⁺, provide the flexibility to control a single robot or multiple-robot system from one controller. A maximum of four AdeptModules can be controlled from one motion board (EJI). Four AdeptModules can be configured as one robot or two 2-axis robots or any other combination. Refer to Appendix B for a multiple robot configuration.

Single Robot With One Motion Board (EJI)

This section describes configuring a single robot with one motion board.

1. Load the appropriate device module file using CONFIG_C program (refer to Appendix A for details on CONFIG_C). There are two device-module files that can be used with AdeptModules:

LMMV X/Y/Z/Theta (LM)

Enhanced LMMV X/Y/Z/Theta (ELM)

LMMV X/Y/Z/Theta is included with the system. Use of the enhanced LMMV X/Y/Z/Theta module requires an additional kinematics license. Contact Adept for further information.

2. Reboot the controller after installing the device module files. Initialization errors will occur during reboot. Ignore the errors for now.
3. Load and execute the SPEC program from the Adept Utility Disk or from the hard disk. Adept installs the utility programs in the directory C:\UTIL:

```
load \util\spec
```

```
execute 1 a.spec
```

Follow the prompts provided by the program.

```

*** ADEPT ROBOT SPECIFICATION PROGRAM ***
      (Version 12.1)

Servo code version: 12.1C.0      Servo rate: 1000 Hz

      ROBOT 1: AdeptModules X/Y Robot.

      Unrestricted access mode

      * WARNING: ROBOT IS DISABLED *

0 => Exit to system monitor
1 => AdeptModules quick setup
2 => Change robot options and motor configuration
3 => Perform hardware diagnostics
4 => Edit robot specifications
5 => Load robot specifications from a disk file
6 => Save robot specifications to a disk file
7 => Save ALL specifications to system disk
8 => Change robot number
9=> Switch to external encoder specifications

Enter selection: 1

```

NOTE: **AdeptModules Quick Setup** will be displayed only if the robot uses the LMMV X/Y/Z/Theta or Enhance LMMV X/Y/Z/Theta device module.

4. Select **AdeptModules Quick Setup**. Follow the instructions on the screen. This selection will allow configuration of the AdeptModules system using the predefined SPEC parameter files provided by Adept Utility. First select a JOINT-INDEPENDENT file and then JOINT files as described above.
5. Save the SPEC parameters to the system file. Save SPEC parameters by selecting **Save ALL specifications to system disk** from main menu. The following message will be displayed:

This function saves the robot specification information FOR ALL ROBOTS IN THE SYSTEM. The information that is currently contained in memory is written to the system boot disk. Before writing the data, you should make a copy of the boot disk and ALTER ONLY THE COPY of the disk.

Do you want to write the data to the boot disk (Y/N)?

Respond “Y” and the program will ask to verify that the user wants to update the system disk. Respond “Y” and the program will ask:

Which disk drive contains the system disk (A/C)?

Insert a system disk in drive A: if necessary. The program will ask for final verification. Then the updating process begins.

For detailed information on the SPEC program refer to *AdeptMotion VME Developer's Guide*

Use the DISKCOPY utility to make a backup of the configured V⁺ system.

4.7 How to Start AdeptModules

Before AdeptModules motion can be initiated, High Power must be enabled and the AdeptModules must be calibrated.

NOTE: Refer to Appendix D For Testing and Troubleshooting information.

Enable High Power with the MCP

In Automatic Mode

Follow these steps to enable High Power in Automatic mode with the MCP:

NOTE: If High Power is on and you release the enabling switch on the MCP, the system recognizes an emergency stop signal and will turn off High Power immediately.

1. Turn on the power switches on the controller and the power chassis.
2. Set the VFP System Power switch into the position I to turn on system power.
3. Verify that all Emergency-Stop switches are pulled out and all access doors to the workcell are closed.



WARNING: Impact Hazard!

When the system is in Automatic mode, no personnel are allowed to enter or stay in the workcell. The AdeptModules can move at high speeds and exert considerable force.

4. Set the operating keyswitch to AUTO and the other keyswitch to LOCAL.
5. Press the “COMP/PWR” button on the MCP.

6. Press the blinking “HIGH POWER ON/OFF” button on the VFP.

NOTE: In Automatic mode it may take up to 8 seconds to complete the High Power sequence.

In Manual Mode

Follow these steps to enable High Power in Manual mode with the MCP:

NOTE: If High Power is on and you release the enabling switch on the MCP, the system recognizes an emergency stop signal and will turn off High Power immediately.

1. Turn on the power switches on the controller and the power chassis.
2. Set the VFP System Power switch into the position I to turn on system power.
3. Verify that all Emergency-Stop switches are pulled out and all access doors to the workcell are closed.
4. Set the operating keyswitch to MANUAL and the other keyswitch to LOCAL. For added safety, remove the keys from the keyswitches.
5. Press the “COMP/PWR” button on the MCP.
6. Release the enabling switch, as instructed by a message on the MCP display, and then close the switch again. This step checks for proper operation of the enabling switch. This step is not required in Automatic mode.
7. Press the blinking “HIGH POWER ON/OFF” button on the VFP.

NOTE: In Manual mode it may take up to 20 seconds to complete the High Power sequence.

To reen able High Power after pressing the MCP emergency stop button, turn the emergency stop button to the right (clockwise). The switch is spring-loaded and will return to its normal position. Depress the enabling switch. High Power can now be reen able by pressing the COMP/PWR button (mode control group) and the HIGH POWER ON/OFF push button on the VFP.

Calibration Parameters

The default calibration parameters are loaded as part of the **AdeptModules Quick Setup** with joint-specific files. By default, AdeptModules calibrate toward the motor end.

Calibration of the AdeptModules with the MCP

The AdeptModules can be calibrated only when High Power is enabled and Automatic mode is selected. If the AdeptModules are in Manual mode, you must switch to Automatic mode. After changing the operating mode, High Power is shut off automatically. See the instructions above to enable High Power.

NOTE: Refer to Appendix D for testing and troubleshooting information.

**WARNING:** Impact Hazard!

In Automatic mode no personnel are allowed in the workcell. The AdeptModules can move at high speeds and exert considerable forces. Calibration involves limited AdeptModules motion. Observe all safety precautions.

1. Set the VFP operating keyswitch to the AUTO position and verify that the other keyswitch is in the LOCAL position. If necessary, reenale High Power.
2. Press the CMD soft button to display the MCP functions (see Figure 4-3).
3. Ensure that none of the joints are positioned at the end of their travel, covering the sensors. This will cause calibration errors. Position the joints in the middle of their travel range.

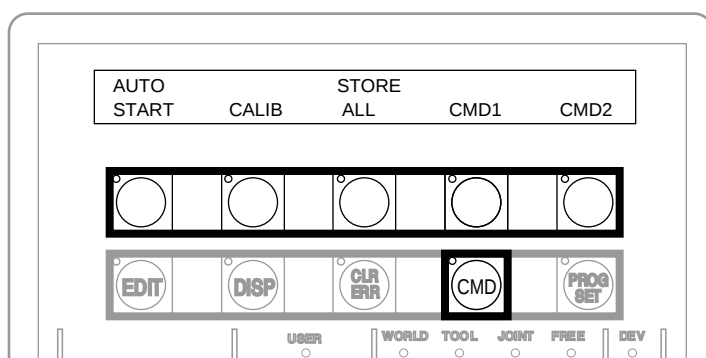


Figure 4-3. Command (CMD) Function Button

4. Press the soft button below the text CALIB in the display to start calibration.

Changing Calibration Direction

AdeptModules calibrate by default toward the motor end of the module. By modifying SPEC parameters and teaching calibration, the direction of travel for calibration can be changed. The following steps should be used as a guideline for changing the parameters. Adept assumes that the user has a working knowledge of SPEC and a general understanding of kinematics before performing this procedure.

The direction of travel for calibration can be changed by changing the sign of the “Speed and Direction of Search” parameter and then reteaching calibration.

1. Load and execute SPEC.V2 (see instructions on page 91).
2. Select “Edit Robot Specifications” from the main menu.
3. Select “Edit Motor Calibration Parameter” from the submenu.
4. Select and change the “Speed and Direction for Search” parameter sign.
5. Select “Teach calibration specs”.

SPEC will prompt in the following :

Before teaching calibration, you should:

1. Have properly tuned all motors.

2. Have properly set:
 - *homing configuration
 - *homing speeds and distances

The above parameters are set during “AdeptModules Quick Setup”.

Do you wish to continue (Y/N)? y

The robot may now be repositioned for teaching. Make sure that none of the joints are positioned at either end of the travel distance, covering any of the sensors.

Depress the “ENTER” key to continue.

Ready to find home switch. Okay to proceed (Y/N)? y

Answer “yes” to the above question. The joint will move and search for the HOME sensor. This will allow the module to return to the start position.

Distance traveled to home switch: XXXX counts.

Ready to find zero index. Okay to proceed (Y/N)? y

By answering “yes” to the above question, the joint will move and search for the Index pulse.

Index found. Distance from home switch to index is XX counts.
Do you want to save this value (Y/N)? y

Answer “yes” to the following question even if not correcting calibration. If not correcting calibration, don’t move the module/motor to a known position.

The motor is now calibrated. Do you want to correct the calibration by moving to a known position (typically the kinematics zero position)(Y/N)? y

Move the joint to defined zero position, either with the pendant or manually. Typically, the zero position is toward the motor end of the module.

Press the “ENTER” key to continue.

The current position is XX counts. Enter new position or
press ENTER to leave calibration unchanged: 0

Enter the value of 0 (zero) to make the current position Zero.

6. Return to the main menu

The user may define a park position after calibration by selecting “Park position after calibration” in “Edit motor calibration parameters” menu.

NOTE: Make sure to save the parameters to the system disk at the end of the procedure. The parameters can be saved by selecting “Save ALL specifications to system disk” from the main menu of SPEC.

Once the AdeptModules is calibrated, you can move the AdeptModules. If High Power is disabled after the calibration process is complete, the user will have to Enable Power again but not calibrate. If system power is turned off at the VFP, then the user must Enable Power and calibrate the system.

4.8 Moving the AdeptModules With the MCP

This section describes using the MCP to move the AdeptModules. Follow the steps on page 92 to enable High Power and to calibrate the AdeptModules. Do **not** enter the workcell. Leave the operating keyswitch in the AUTO position. Make sure that all access doors are closed and no person is in the workcell. Press the MAN/HALT button on the MCP to select the MCP Manual mode, then see the following descriptions.



WARNING: Impact Hazard!

Only an AdeptModules operator with the qualifications and safety equipment given in section 1.8 on page 23 is allowed to work with the AdeptModules.

MAN/HALT Button for Selecting Joint State

The MAN/HALT button changes the state of the AdeptModules.

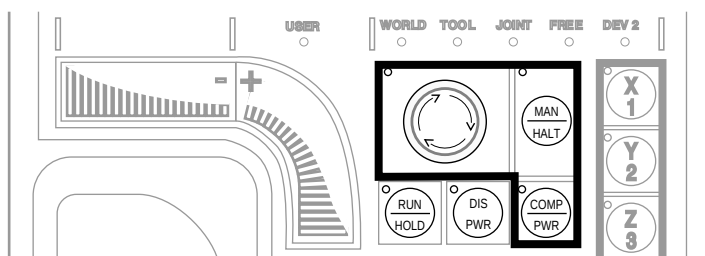


Figure 4-4. Mode Control Buttons

When the MAN/HALT button is pressed the first time, the MCP will be in World state. Pressing the MAN/HALT button again selects the next state to the right (Tool, Joint, or Free), eventually wrapping back to the left-most state (World). If MCP Manual mode is terminated and reentered (without turning off system power), the last active state is selected.

The system will remain in MCP Manual mode until High Power is turned off or the COMP/PWR button is pressed (see Figure 4-4).

Joint/Axis Control Buttons

The buttons on the far right side are the Joint/Axis control buttons (see Figure 4-2 on page 87). When the controller is in Manual mode, these buttons select which AdeptModules joint will move, or the coordinate axis along which the AdeptModules will move.

Speed Bars

The speed bars control the AdeptModules speed and direction (see Figure 4-5). The joint(s) that will move when the speed bars are pressed depend(s) on the “state” selected with the MAN/HALT button. Press the speed bars with your left thumb. Pressing the speed bars near the outer ends will move the AdeptModules faster; pressing the speed bar near the center will move the AdeptModules slower. The maximum speed of the AdeptModules in Manual mode is 250 mm per second (10 ips).

NOTE: Refer to Appendix D for testing and troubleshooting information.

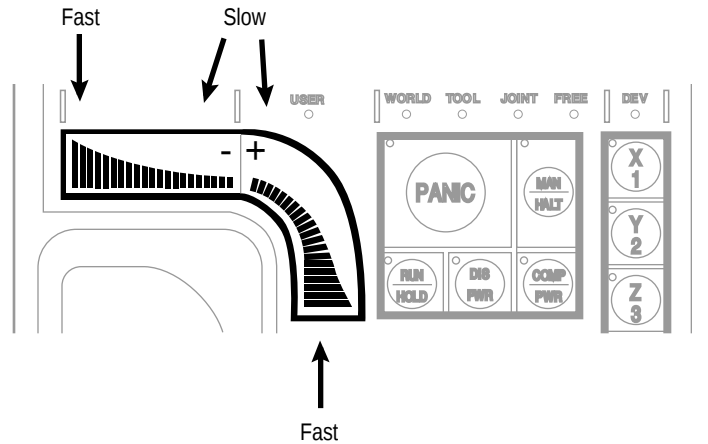


Figure 4-5. Speed Bars

Selecting Joint State and Moving the AdeptModules

Figure 4-6 shows a typical AdeptModules configuration with three degrees of movement. Positive motion of the X-axis is away from the motor as viewed from above. Positive movement of Z-axis is downward. Before the speed bars will move an axis, the correct axis must be selected from the Joint / Axis control buttons.

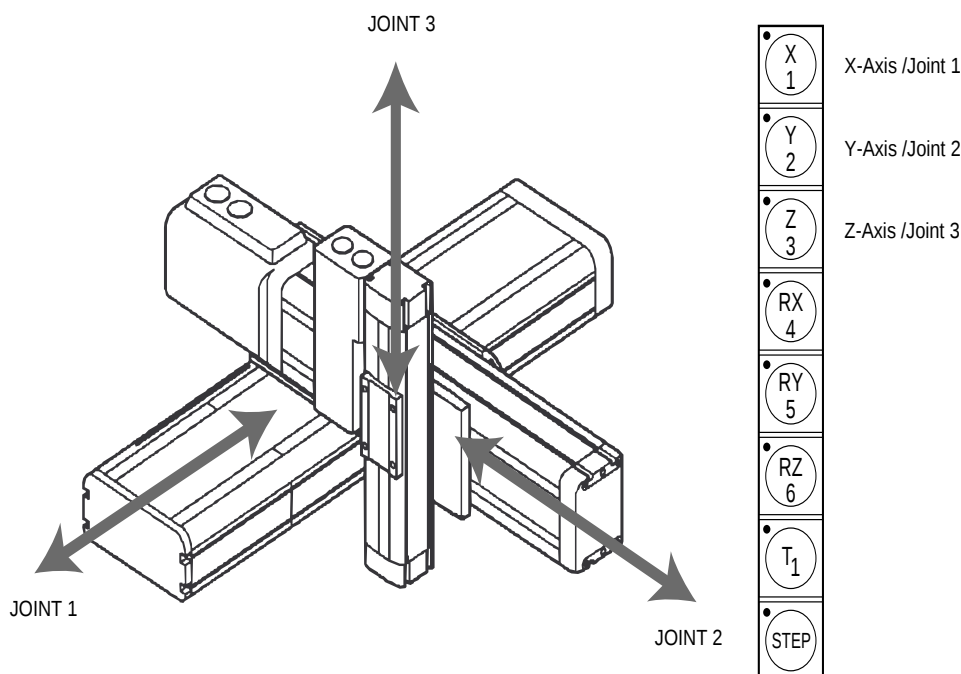


Figure 4-6. Joint State



WARNING: Before moving AdeptModules, ensure that all personnel are out of the workcell.

In Joint State, only the selected joint moves. After calibration of the AdeptModules, switching into Manual mode and reenabling High Power, you must select the joint mode.

1. Press the MAN/HALT button to enable the MCP.

The MCP is in the correct mode when:

- a. The LED on the MAN/HALT button is illuminated. If it is not illuminated, press the MAN/HALT button.
- b. One of the manual state LEDs is also illuminated (the “Manual state” LEDs indicate the type of manual motion that has been selected, either World, Tool, Joint, or Free). Press the MAN/HALT button (see Figure 4-4) several times until the JOINT LED is illuminated.

When the LED on the MAN/HALT button and the JOINT LED are lit, Joint state is selected and movement of a specified joint must be selected. When an Adept Z-Theta Module is being used in Joint State, the RX/4 button on the MCP is used. In World state the Adept Z-Theta uses RZ/6 to move.

Selecting and Moving Joint 1 (X)

Figure 4-6 shows the buttons for selecting a joint in the Joint State. Press the X1 button to select Joint 1. The LED on the button will turn on. The user can now move that joint with the speed bars.

NOTE: The operator must keep the enabling button depressed to retain High Power while working with the AdeptModules.

While watching Joint 1, press one of the Speed Bars until that joint starts to move, then release the Speed Bar. The joint should stop moving. Press the other Speed Bar until the joint moves in the opposite direction, then release the Speed Bar.

Selecting and Moving Joint 2 (Y)

Press the Y2 button on the MCP to select Joint 2. The Y2 button LED will illuminate. The user can now move Joint 2.

Move this joint in the same manner as described for Joint 1 (X) movement.

Selecting and Moving Joint 3 (Z)

Press the Z3 button on the MCP to select Joint 3. The Z3 button LED will illuminate. The user can now move Joint 3.

Move this joint in the same manner as described for Joint 1 (X) movement.

Selecting and Moving Joint 4 (Theta)

Press the RX4 button on the MCP to select Joint 4. The RX4 button LED will illuminate. The user can now move Joint 4.

Move this joint in the same manner as described for Joint 1 (X) movement.

If every joint of the system moved correctly in both directions, the installation of the hardware is correct. Press the DIS/PWR button on the MCP to disable High Power.

NOTE: Refer to Appendix D for testing and troubleshooting information.

4.9 Limiting Joint Travel

Refer to the *AdeptModules Instruction Handbook, Volume 2: Mechanical Assembly* or to section 4.9 of the *Adept 550 Instruction Handbook* for limiting joint travel.

Maintenance 5

5.1 Introduction	103
5.2 Modules Lubrication	103
Lubrication Schedule	103
Lubrication Grease	104
Grease Adapter Nozzle	104
Lubrication Procedures	104
5.3 Connectors and Pins	105
Connector Pins and Inserter/Extractor Tools	105
5.4 Maintenance and Inspection of Air Filters	107
Adept MV-19 Controller Fan Filter Inspection and Cleaning	107
Adept MV-5/MV-10 Controller Fan Filter Inspection and Cleaning	107
Adept PA-4 Amplifier Chassis Fan Filter Inspection and Cleaning	107
5.5 Check Lamps on VFP	108

5.1 Introduction

Due to their direct-drive design the AdeptModules require very little maintenance . This chapter describes the preventive maintenance procedures that are required to keep the AdeptModules system operating properly.

5.2 Modules Lubrication

Lubrication Schedule

Each Module should be lubricated after 5000 kilometers (3,100 miles or 16,400,000 feet) of travel.

To calculate the estimated time it will take for a module to travel this distance, use the following equation:

$$\text{Number of Hours} = \frac{\text{Travel Distance to Lubricate} \times \text{Seconds per Cycle}}{\text{Travel Distance per Cycle} \times 3600 \text{ seconds per hour}}$$

For example, if a module performs a 2-meter travel in 4 seconds the recommended number of elapsed hours between lubrication is:

$$\text{Number of Hours} = \frac{5,000,000 \text{ meters} \times 4 \text{ seconds per cycle}}{2 \text{ meters per cycle} \times 3600 \text{ seconds per hour}} = 2,778 \text{ hours}$$

2,778 hours could translate to a different lubrication interval (in weeks) depending on the production schedule of the modules equipment:

Production Schedule	1 shift per day 5 days per week 40 hours per week	2 shifts per day 6 days per week 96 hours per week	3 shifts per day 7 days per week 168 hours per week
Lubrication Interval	70 weeks	29 weeks	17 weeks

Table 5-1 provides an estimated lubrication schedule (in actual production weeks) based on the length of the module and an assumption of the travel distance and time required to perform the cycle. If your system includes two or more modules, all modules should be lubricated at the same time and the time should be determined by the module that requires the most frequent lubrication.

Table 5-1. Lubrication Schedule

Module Stroke Length (mm)	Estimated Module travel distance (meters)	Cycle Time (seconds)	Total number of hours (hours)	Lubrication Interval for 1 Shift/day 5 days/week 40 hrs/week (weeks)	Lubrication Interval for 2 Shifts/day 6 days/week 96 hrs/week (weeks)	Lubrication Interval for 3 Shifts/day 7days/week 168 hrs/week (weeks)
130	0.13	1.0	10,684	267	111	64
230,250	0.24	1.5	8,680	217	91	52
300,330,350	0.325	2.0	8,550	214	89	51
400,430,450	0.425	2.5	8,170	204	85	49
500,530,550,600	0.55	3.0	7,576	189	79	45
750,800	0.78	3.5	6,232	156	65	37
950,1000,1200	1.0	4.0	5,555	139	59	33
1400 to 2000	1.4	4.5	4,464	112	47	27

Lubrication Grease

For standard non-cleanroom modules (module part numbers that begin with 90400-XXXXX), Shell Alvania No. 2 grease is recommended. Adept does not supply this grease for the modules product and purchase this grease from a third-party.

For cleanroom modules (module part numbers that begin with 90401-XXXXX) a special cleanroom grease is required. This grease is supplied by Adept Technology. The Adept part number is 90401-04029 for a single tube with 50 cc of grease. Please contact Adept customer service to order this grease.

Grease Adapter Nozzle

The grease fittings on the modules have a 4.5 mm (0.8 inch) diameter and a small ballcheck in the center. A special adapter is required for these fittings.

The grease adapter nozzle is supplied by Adept Technology. The Adept part number is 90400-04100. Please contact Adept Customer Service to order a grease adapter nozzle.

Lubrication Procedures

1. Remove the plastic black circular cap(s) from the module. The cap is approximately 10 mm (0.5 inch) diameter.
 - The H-Module has two black caps located on each side of the module at the end of the module opposite the motor.
 - The M-Module has a single black cap located on the same side of the module as the cable connections and near the motor end of the module.

- The S and Sz-Modules have a single black cap located on the same side as the motor housing at the end of the module opposite the motor.
2. Move the module slider until the grease nipple(s) can be seen through the access hole(s).
 - The slider of the H-Module must be moved to the end of the module travel.
 - The slider of the M-Module must be moved to a position 10 mm (0.5 inch) from the motor end.
 - The slider of the S- and Sz-Module must be moved to a position 35 mm (1.5 inch) from the end opposite the motor.
 3. Fill the module with the appropriate amount of grease.
 - The H-Module requires 20 cc (2/3 oz.) of grease. Fill each side with approximately 10 cc (1/3 oz.).
 - The M-Module requires 10 cc (1/3 oz.).
 - The S- and Sz-Modules require 2.0 cc (0.1 oz.).
 4. Replace the black plastic cap(s) on the modules.

5.3 Connectors and Pins

NOTE: All four encoder connectors have the same pin assignments for diagnostic purposes. Axis encoder connectors can be interchanged, provided that no attempt is made to enable the associated axis.

Connector Pins and Inserter/Extractor Tools

The modules and spare motors are supplied with JAE connectors with crimp style pins. If these pins need to be repaired or replaced, additional pins and an inserter/extractor tool are required.

Description	JAE Part Number
Encoder Pins	030-51906-800
Motor Pins	030-51928-800

The motor pins are the larger of the two pins. Adept Technology has a limited supply of these pins to send to customers on request. Please contact Adept Technology Customer Service.

Description	Part Number	Color
Encoder Pin Inserter/ Extractor Tool	JIET-D*C-20	Red/White
Contact JAE directly for this Inserter/Extractor Tool JAE Electronics 142 Technology Drive Irvine, CA 92718-2401 Phone (714) 753-2600 Fax (714) 753-2699		

A different tool is required for replacing motor pins.

Description	Part Number	Color
Motor Pin Inserter/ Extractor Tool	CIET-16	Blue/White
This tool is provided with each spare motor shipped by Adept. Contact JAE for additional tools.		
Another source for this tool is Aiconics USA. The Aiconics part number is: M81969 14-03. Contact the following company for this Aiconics tool: Connector MicroTooling Systems 14500 Trinity Blvd. Suite 110 Fort Worth, Texas 76155 Phone (817) 283-4882 Fax (817) 354-0790		

5.4 Maintenance and Inspection of Air Filters

Adept MV-19 Controller Fan Filter Inspection and Cleaning



CAUTION: If the fan stops working or the filter becomes dirty, the controller could overheat and cause a thermal failure. This applies to all models of Adept MV controllers.

The air filter located on the front of the chassis should be **inspected regularly and cleaned** at the first sign of dust or dirt buildup. The filter must be inspected and cleaned at least once per month. Regular cleaning will prolong the life of the filter. If the filter becomes clogged or unusable for any reason, you will need to order a new air filter; the Adept part number is 40330-11190.

1. Turn off the controller.
2. Open the front grille by loosening two screws and swinging the grille out.
3. Pull the air filter out and inspect for dust or dirt particles. If cleaning is required, use compressed air to clean the filter. (Follow appropriate safety procedures regarding use of compressed air.)
4. Replace the cleaned air filter and secure the grille.

Adept MV-5/MV-10 Controller Fan Filter Inspection and Cleaning

The air filter located on the front of the chassis should be **inspected regularly and cleaned** at the first sign of dust or dirt buildup. The filter must be inspected and cleaned at least once per month. Regular cleaning will prolong the life of the filter. If the filter becomes clogged or unusable for any reason, you will need to order a new air filter; the Adept part number is 40340-00030.

1. Turn off the controller.
2. Loosen the two screws on the fan filter cover to gain access to the filter.
3. Pull the air filter out and inspect for dust or dirt particles. If cleaning is required, use compressed air to clean the filter. (Follow appropriate safety procedures regarding use of compressed air.)
4. Replace the cleaned air filter and secure the filter holder.

Adept PA-4 Amplifier Chassis Fan Filter Inspection and Cleaning

The air filter located on the front of the chassis should be inspected regularly and cleaned at the first sign of dust or dirt buildup. The filter must be inspected and cleaned at least once per month. Regular cleaning will prolong the life of the filter. If the filter becomes clogged or unusable for any reason, you will need to order a new air filter. The part number for the filter is 40330-11200.



WARNING: Dangerous voltages are present inside the power chassis. Turn off the power to the power chassis and protect it against an unauthorized return to service, before opening the front grille to inspect the air filter. Failure to observe this warning could cause injury or damage to your equipment.

1. Turn off the power to the power chassis and protect it against an unauthorized return to service.
2. Open the front grille by loosening two screws and swinging the grille out.
3. Pull the air filter out and inspect for dust or dirt particles. If cleaning is required, use compressed air to clean the filter.
4. Replace the cleaned air filter and secure the grille.

5.5 Check Lamps on VFP

Use the Lamp Test button on the external Front Panel to test the lamps once per month. Replace any lamps that are not working. Contact Adept Customer Service for replacement information.

Technical Specification

6

6.1 Dimensions	111
Adept Linear Modules Dimensions	111
Adept MV-5 and MV-10 Controllers Dimensions	111
Adept MV-19 Controller Dimensions	112
Adept PA-4 Power Chassis Dimensions	113
Dimensions of the Signal Interface Box	114
Dimensions of the External Front Panel	115
Dimensions of the Mounting Brackets	116
MCP Cradle Dimensions	117
6.2 Adept MV Controller Power Consumption	118
6.3 Adept PA-4 Power Chassis Power Consumption	118

6.1 Dimensions

Adept Linear Modules Dimensions

For the dimensions of the Linear Modules refer to the *AdeptModules Instruction Handbook, Volume 2: Mechanical Assembly* manual

Adept MV-5 and MV-10 Controllers Dimensions

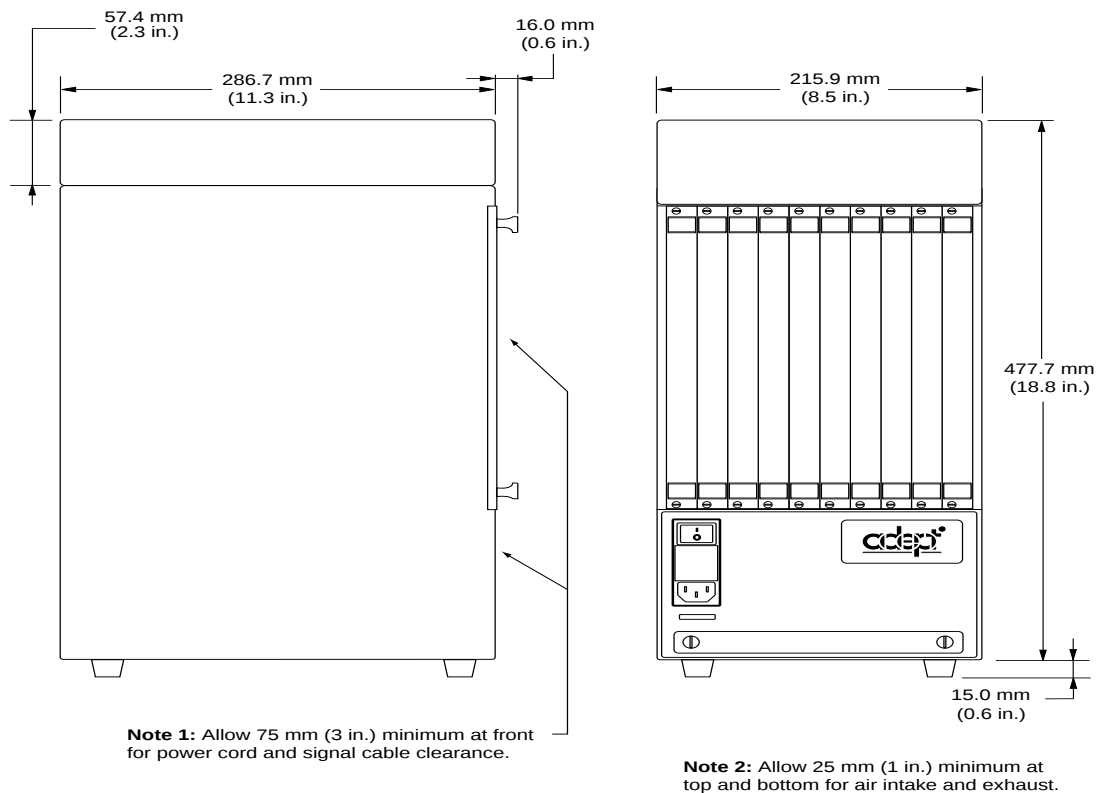


Figure 6-1. Adept MV-5 and MV-10 Dimensions

Adept MV-19 Controller Dimensions

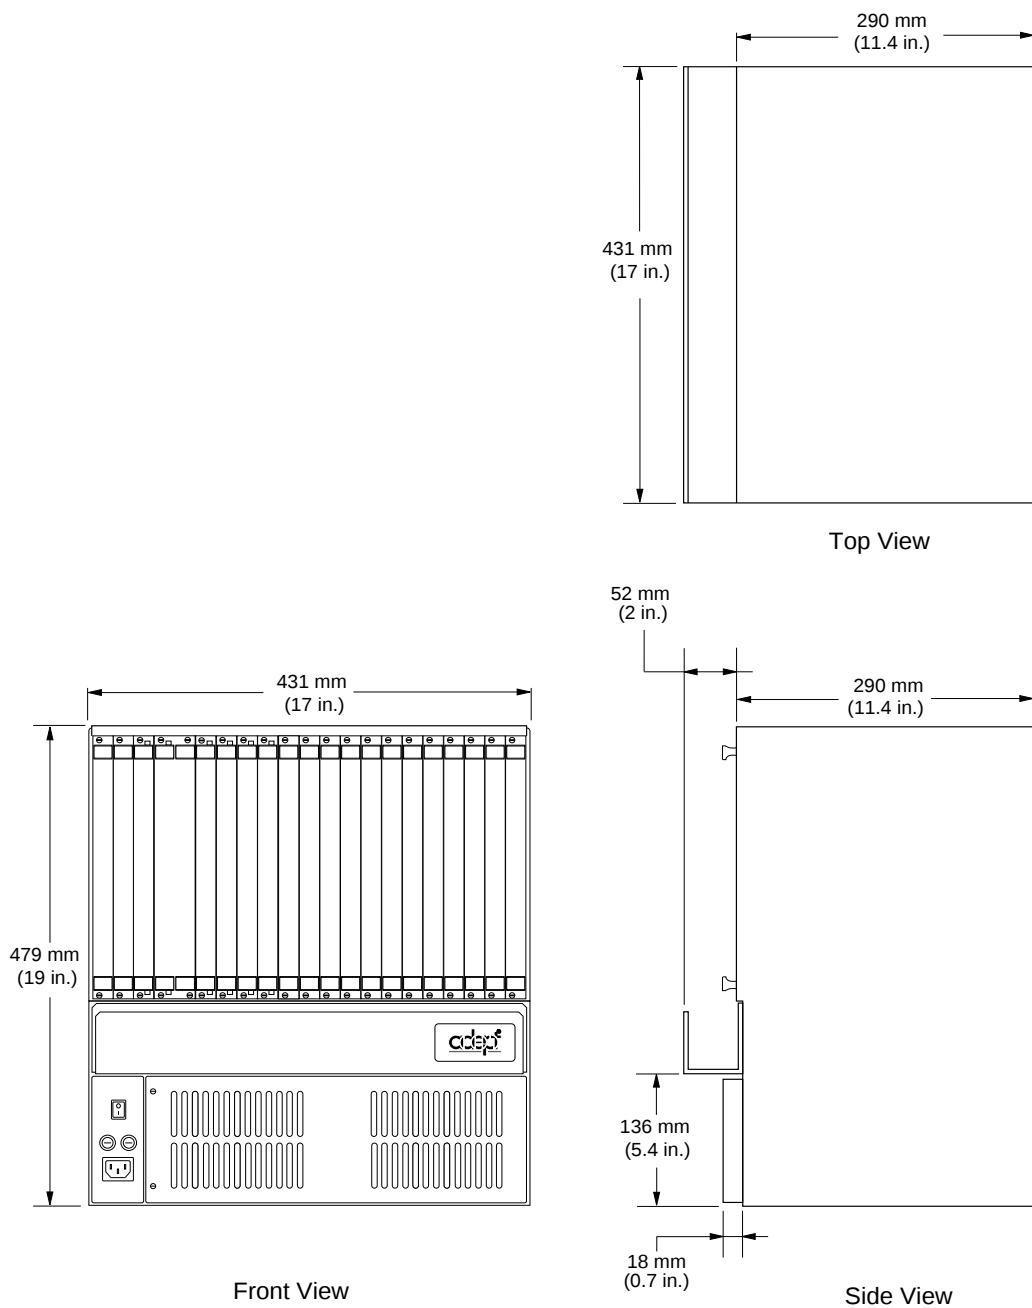


Figure 6-2. Adept MV-19 Dimensions

Adept PA-4 Power Chassis Dimensions

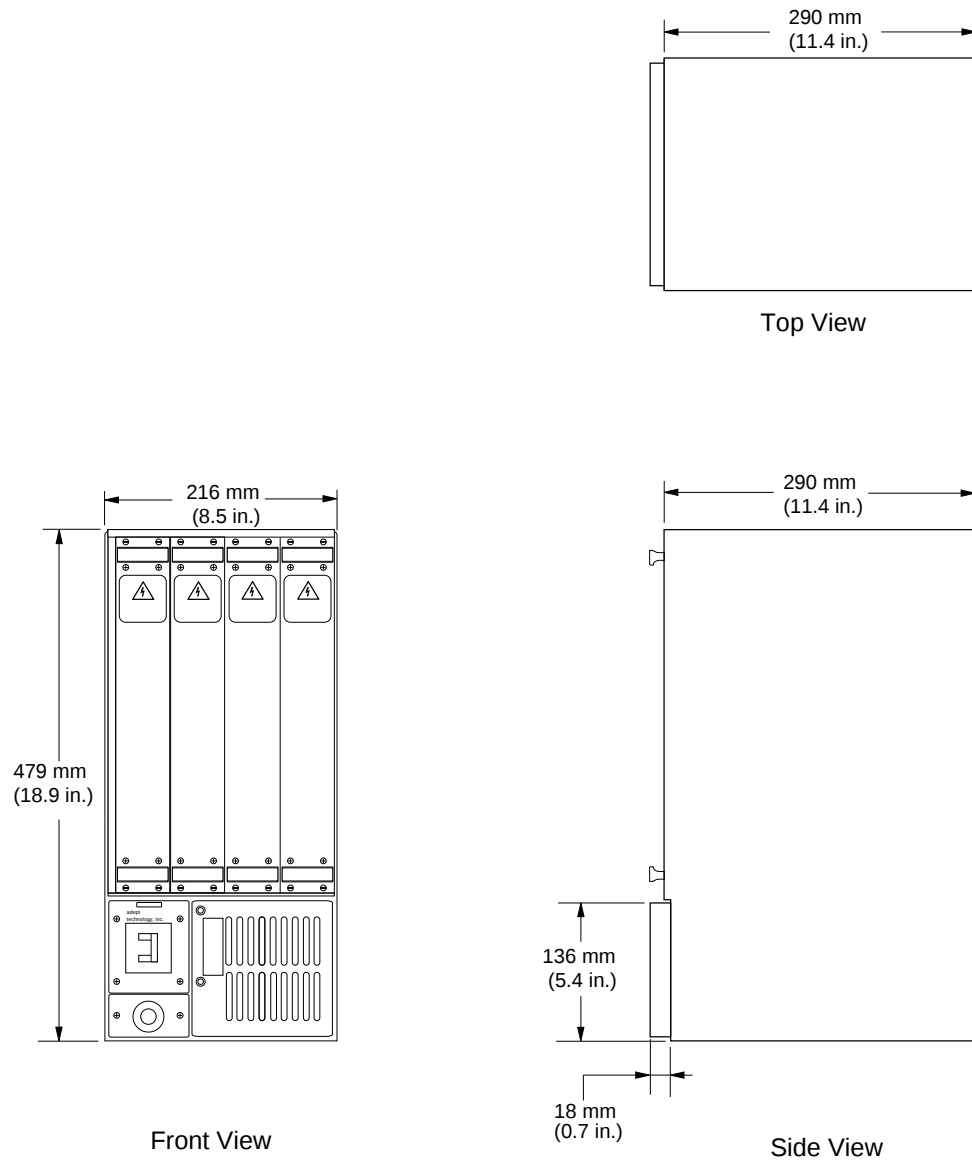


Figure 6-3. Adept PA-4 Power Chassis Dimensions

Dimensions of the Signal Interface Box

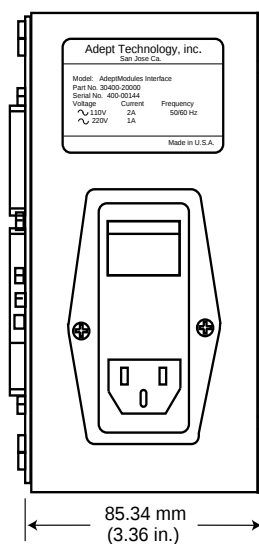
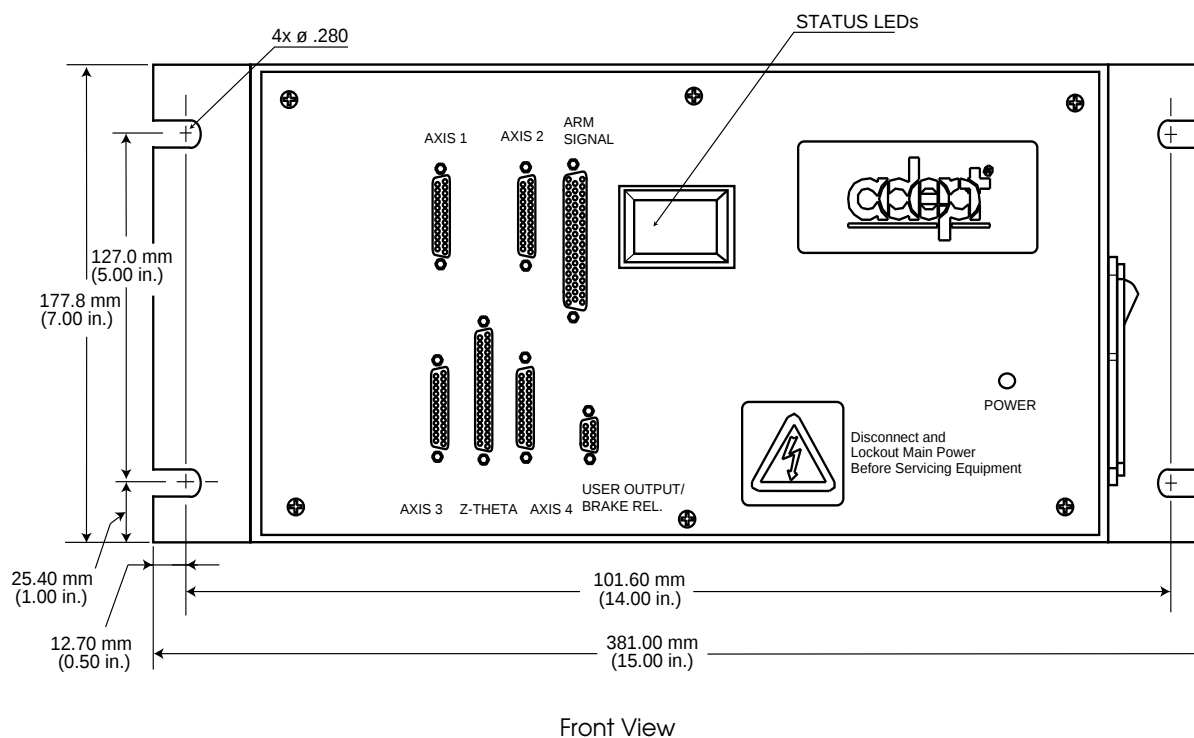


Figure 6-4. AdeptModules Signal Interface Box

Dimensions of the External Front Panel

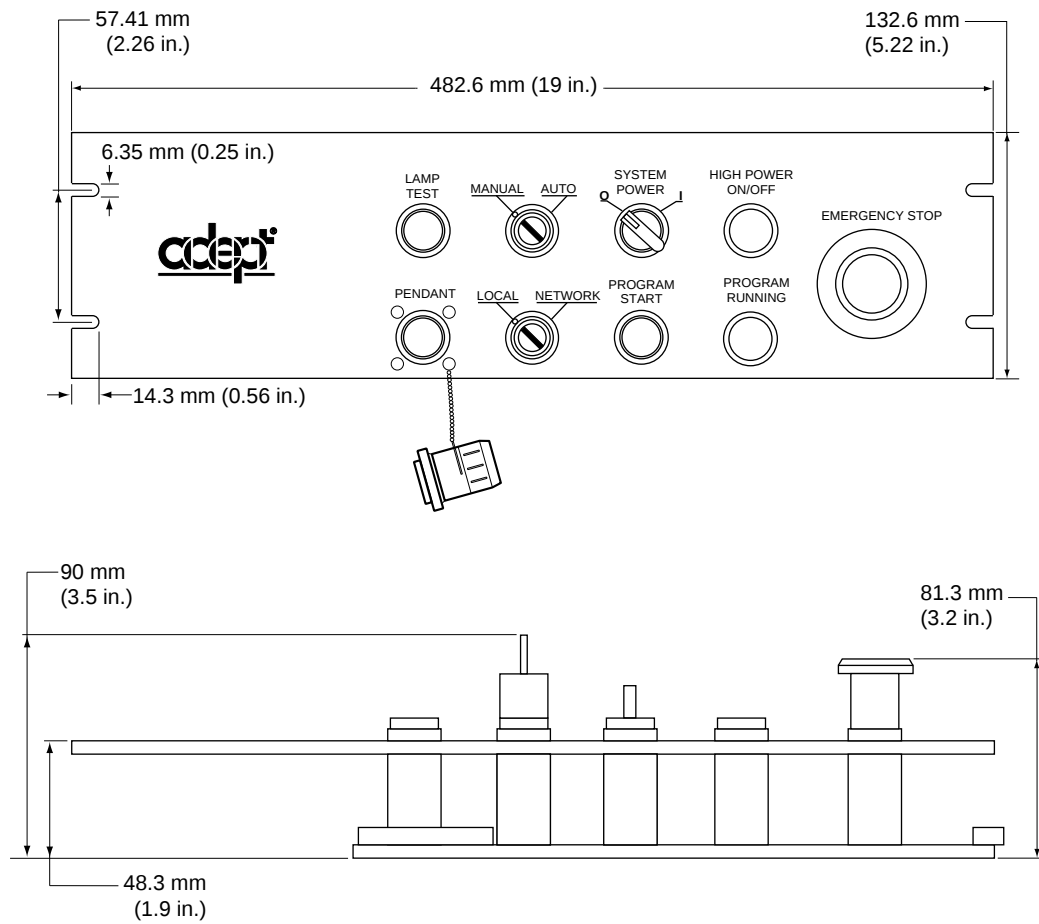


Figure 6-5. Adept External Front Panel Dimensions

Dimensions of the Mounting Brackets

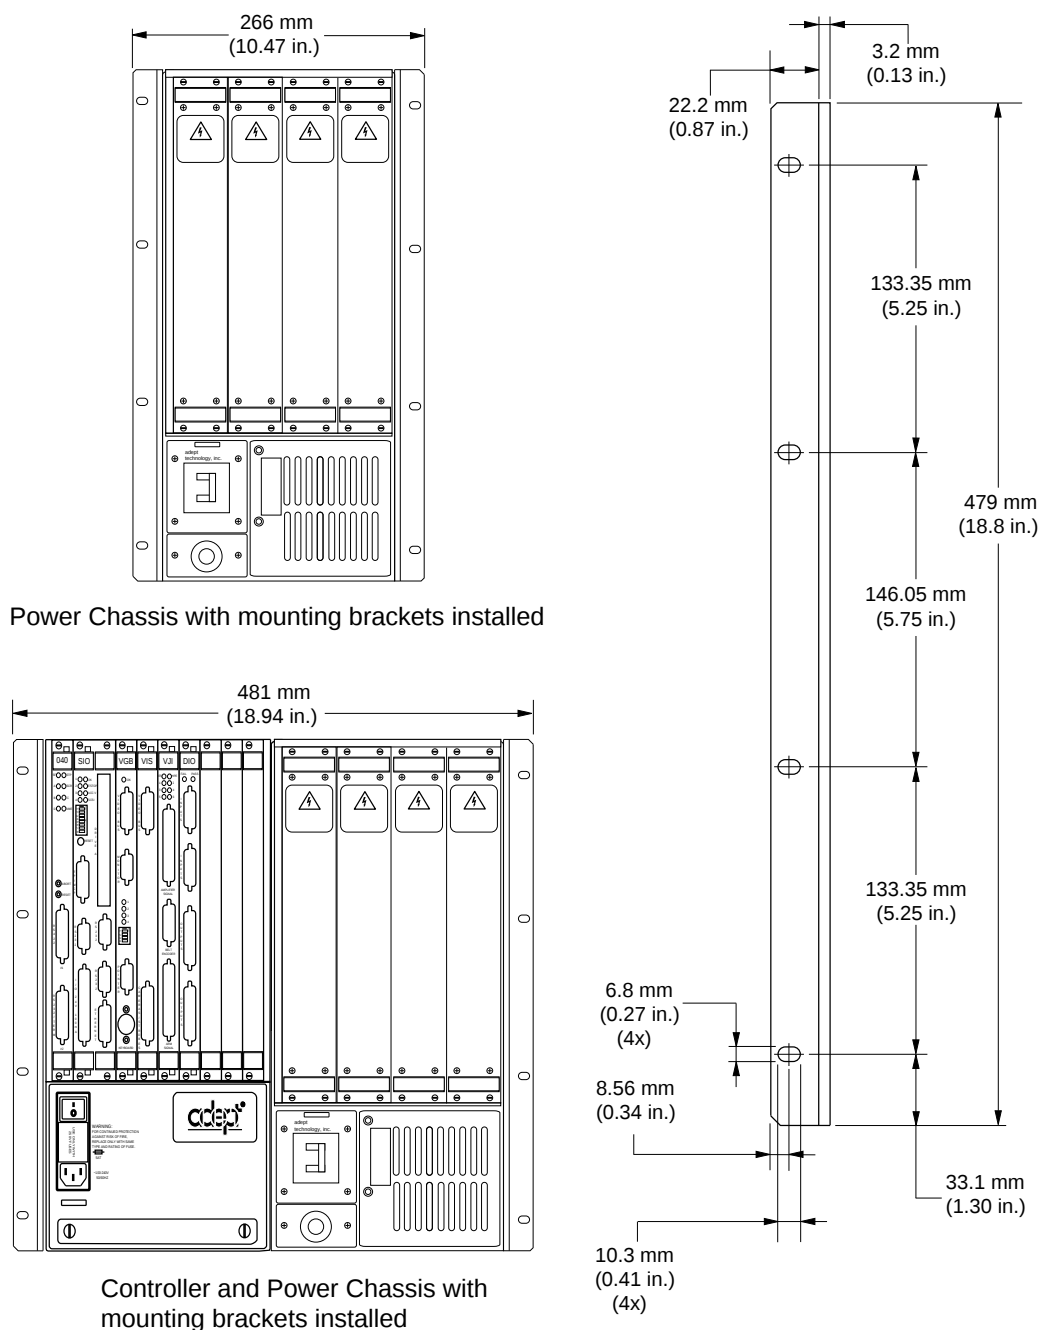


Figure 6-6. Adept MV-5/10 and PA-4 With Mounting Brackets Installed

MCP Cradle Dimensions

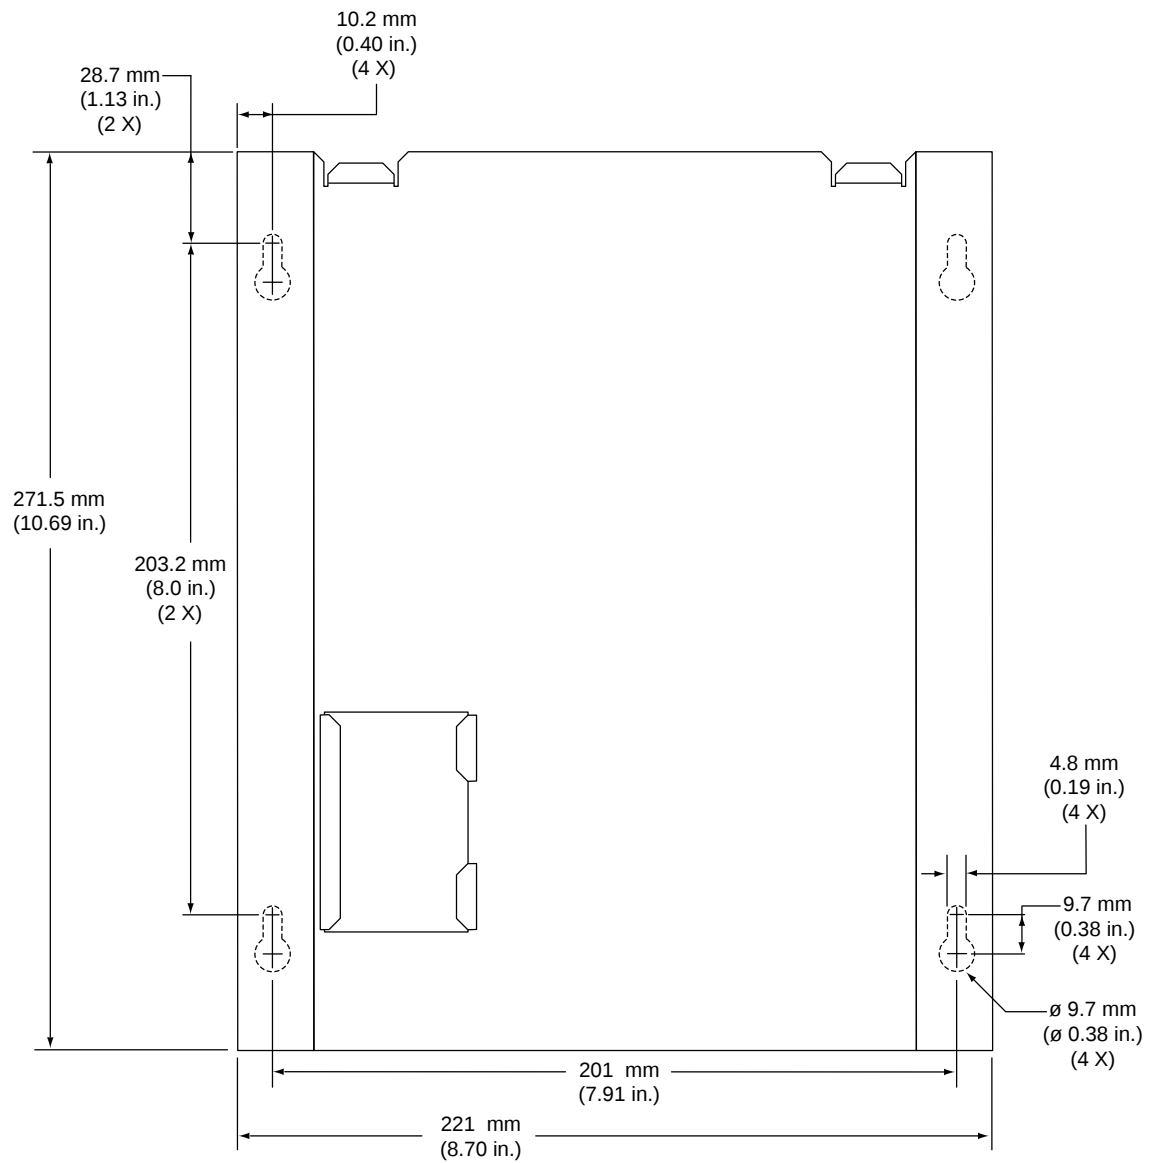


Figure 6-7. MCP Cradle Dimensions

6.2 Adept MV Controller Power Consumption

The following power consumption information is provided (Table 6-1) to allow customers to install adequate electrical wiring and power sources for worst case (short duration) demands of the Adept MV Controller.

Table 6-1. Adept MV Controller Power Requirements

Nominal Voltage Range	Frequency/ Phasing	Minimum Operating Voltage ^a	Maximum Operating Voltage	Recommended External Circuit Breaker (user-supplied)
200V to 240V (factory setting)	50-60Hz, 1-phase	180V	264V	10 amps
100V to 120V	50-60Hz, 1-phase	90V	132V	10 amps
Power to the Adept MV controller and PA-4 power chassis must come from a single source.				

^a The maximum interruption time (operating voltage below specification) tolerated by the controller is 16 milliseconds.

6.3 Adept PA-4 Power Chassis Power Consumption


The following power consumption information is provided (Table 6-2) to allow customers to install adequate electrical wiring and power sources for worst case (short duration) demands of the Adept PA-4 power chassis. The typical values are for calculating air conditioning requirements for a four-axis system using two Dual B⁺ amps.

Table 6-2. Power Consumption for PA-4 Power Chassis (four-axis configuration)

Line Voltage		Typical	Worst Case
380-415 VAC, 50/60Hz, 3 phase ^a	Current (RMS)	8.5 amps/phase	20 amps/phase
	Watts	1.65 kW	3 kW
200-240 VAC, 50/60Hz, 3 phase	Current (RMS)	7.2 amps/phase	17 amps/phase
	Watts	1.65 kW	3 kW

^a In the 380-415 VAC configuration, the Adept system draws current for a short duration during the positive peak voltage only.

Software Configuration Using CONFIG_C

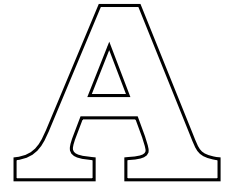

A.1 Introduction	121
Terminology	121
Adept Utility Disk	122
Device Module Documentation	122
Software Installation Procedure for a New System	123
Upgrade Procedure for an Existing System	123
A.2 Robots and Device Modules	123
Procedure to Load CONFIG_C	124
Program Prompts	125
A.3 Servo Loop Rate	128

A.1 Introduction

AdeptMotion VME provides the flexibility to control a variety of mechanisms. In order for V⁺ to control these mechanisms, it must know the number and type of the mechanisms and the values of parameters that describe each mechanism and its interface. This information is stored on the system disk, so that the system will start up ready to calibrate. This chapter describes the procedure for installing the software device modules required for your system.

It is assumed throughout the software sections of this User's Guide that the user has a working knowledge of the V⁺ operating system. Specific information about V⁺ can be found in the *V⁺ Language User's Guide* and the *V⁺ Language Reference Guide*.

Terminology

The following terms are referenced throughout this and the following appendixes. Understanding of these terms is crucial to successfully configuring a system.

- **Device module** – the software and data that are installed on the system disk to allow V⁺ to understand the geometry and specifications of a particular class of mechanism. For example, the X/Y/Z/Theta device module contains the software and specifications used to control an XY table with a vertical and roll axis.
- **Device-module file** – a file that contains one or more device modules. For example, a device-module file might contain two X/Y/Z/Theta device modules and one external encoder device module.
- **Drive or Amplifier** – user-supplied hardware that converts a command signal into motor current. “Drive” and “amplifier” are used interchangeably in this manual.
- **Drive channel** – one of the hardware ports on the motion interface board that is responsible for interfacing with motors. A drive channel has digital I/O, a Digital-to-Analog Converter (DAC) to command an amplifier, and support for a position encoder to read motor position.
- **Motor** – the actuator associated with a drive channel. There must be at least one motor for each joint of a robot, and joint and motor numbering are normally identical. However, some mechanisms contain “motor-to-joint coupling” such that the motion of a given joint may involve the motion of more than one motor.
- **Joint** – a moving element of a robot. Joints can be either rotational or linear. An XY table has two linear joints.
- **Axis** – an element of the device module model of a mechanism. For example, the X/Y/Z/Theta module has four axes – the X-axis, Y-axis, Z-axis, and Roll axis – but a two-axis XY table uses only two of those axes as robot joints.
- **Robot** – refers to the mechanism you are controlling: *Robot* and *mechanism* are used interchangeably in this chapter.
- **System File** – disk file that contains the software and data that comprise the V⁺ system. This file is read into memory when the V⁺ system is booted from a system disk.

Adept Utility Disk

The Adept Utility Disk contains two program packages that are used to customize a system disk for your particular robot configuration. These utility programs are:

1. System Configuration Program (CONFIG_C.V2)

This package configures the number and type of robots in your system. Each different robot type, such as Cartesian or SCARA, has a special software file (called a “device-module file”) that you must load into your system file in order to use that robot. AdeptMotion VME supports multiple robots on each system; they may be the same or different types.

As an example, suppose you want to add two XY tables with your system. In that case, the user would need to use CONFIG_C to transfer two X/Y/Z/Theta device modules to your system file. After transferring the device modules to your system file, you are ready to use the Robot Specification Utility (SPEC) to fully define each robot’s characteristics.

2. Robot Specification Utility Program (SPEC.V2)

The Robot Specification Utility Program (the SPEC program) allows you to customize your system file with the required control parameters to move a robot installed by CONFIG_C. It includes routines to interactively test robot I/O such as signals from the amplifiers and encoders, and to teach robot parameters such as servo gains and calibration specifications. The SPEC program also stores these parameters to the system file, so that after the system boots from the modified system disk, your custom robot(s) will be ready to run. See the *AdeptMotion VME Developer’s Guide* for information on using the SPEC program.

Device Module Documentation

For each type of device module, there is a document describing the information that is required by the device module. This document is necessary for the configuration procedure since it informs the user how to answer some questions posed by the SPEC program for that particular module. If you need this information for other device modules, contact Adept Customer Service.

Software Installation Procedure for a New System

When configuring a *new* system, follow the recommended procedures in the order described in this section. Once your hardware is installed as described earlier in this guide, follow these steps to power-up and configure the system.

1. Copy the V⁺ system sent to you by Adept to the hard drive. **Do not** make changes to the master copy that arrived with your system; after duplicating it, put it somewhere safe and change only the copy. Use the DISKCOPY Utility from the Adept Utility Disk to copy the master to either the hard drive or another floppy disk. See the *Instructions for Adept Utility Programs* included with every Adept system, for details.
2. Load the proper device modules to the working copy of the system disk using the CONFIG_C utility.
3. Reboot the system to allow V⁺ to recognize the new modules. You may see initialization errors displayed by V⁺; they can be ignored at this point.
4. Use the SPEC program to define the robot specifications (link lengths, encoder type, tuning, etc.).
5. Finally, save the SPEC parameters to the system file and to a backup data file, using SPEC.

If you are setting up two or more controllers with similar mechanisms, you can use the DISKCOPY utility to copy the fully configured System Files from the first controller to a floppy disk, then use DISKCOPY to install the files on the second controller. If the systems are electrically and mechanically identical, you should then only have to use SPEC to enter the correct serial number and calibration parameters (encoder offsets) for the second system.

Upgrade Procedure for an Existing System

You may at some time the need to upgrade the revision level of the V⁺ system software. In that case, you do not have to repeat the system specification process. You must, however, carefully follow the procedure outlined in the appropriate V⁺ *release notes* to successfully perform the upgrade.

It is important to follow the correct procedure, because the System Files contain all your tuning parameters and mechanism specifications, which need to be carried forward to the new V⁺ system. Correct use of CONFIG_C to install the new V⁺ system will completely configure the new system to match the previous system.

A.2 Robots and Device Modules

The Configuration utility program (CONFIG_C.V2) allows you to copy device modules onto a system disk to make them available for use. You will need one device module for each mechanism. Groups of one or more device modules are stored in disk files and must be copied as a group.

NOTE: This program modifies a system disk. Do NOT make these changes to the original system disk sent by Adept. Instead, make changes to a working copy of the system disk that you have transferred to the hard drive or to a duplicate floppy made using Adept's DISKCOPY Utility.

Figure A-1 shows a graphical interpretation of the primary functions of the CONFIG_C program. In this example, we assume the user wants three robots, two using device module A (for example, an X/Y/Z/Theta module) and one using device module B (for example, a SCARA robot module). Using the replace or append operations, Module A is copied twice to the boot disk, and module B is copied once. The robot selection procedure allows the desired modules to be selected and any undesired ones to be ignored.

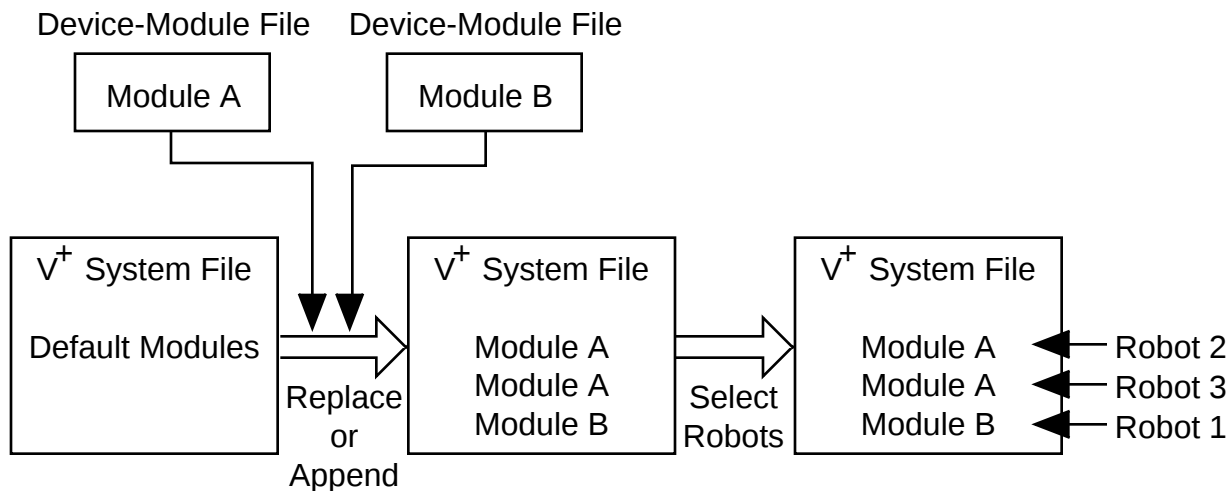


Figure A-1. Procedure for Copying Device Modules to a System File

Procedure to Load CONFIG_C

1. Load the utility program into system memory and start execution of the program with the commands

```
load c:util/config_c
execute 1 a.config_c
```

2. Follow the prompts provided by the program (see below).

3. When complete, you can clear the program from memory with the following commands:

```
kill 1
delete a.config_c
```

Program Prompts

When you select “Robots and Device Modules” from the CONFIG_C main menu, you see the “Robots and Device Modules” menu as shown in Figure A-2. The following paragraphs describe the menu items.

```
***  ROBOTS AND DEVICE MODULES  ***

0  =>  Return to MAIN MENU
1  =>  LIST current CONFIGURATION of system file
2  =>  LIST device modules in a device-module FILE
3  =>  REPLACE device modules in system file
4  =>  APPEND device modules to system file
5  =>  SELECT device modules for robots

Enter selection and press RETURN:
```

Figure A-2. Robots and Device Modules Menu

NOTE: To exit the program at any prompt, enter Ctrl + Z.

"Return to MAIN MENU"

Choose this item when you are ready to return to the main menu.

"LIST current CONFIGURATION of system file"

Select this item to display the device modules in your system file and how they are matched to robots. Figure A-3 shows a typical display.

DEVICE MODULES IN THE SYSTEM FILE

Enter the drive on which the V+ system resides (A/C, default is A): c

Scanning the system file for device modules...

Reading configuration data from the system disk...

Robot 1: [32,0] LMMV X/Y/Z/Theta Robot Control Module.

Modules: [32,0] LMMV X/Y/Z/Theta Robot Control Module. (3.7KB)
[32,0] LMMV X/Y/Z/Theta Robot Control Module. (3.7KB)
[32,0] LMMV X/Y/Z/Theta Robot Control Module. (3.7KB)
[0,0] <End module> (0.1KB)

Memory: 65.0 Kbytes of system memory are available
for additional device modules.

Press RETURN to continue.

Figure A-3. Example System Disk Configuration in CONFIG_C

The module name, such as “LMMV X/Y/Z/Theta Robot Control Module,” is extracted from the device module. When you first transfer a device module to your system file, a default module name such as those shown. Later, you can change the name with the “Edit start-up message” menu selection in the SPEC program. The module name for each selected device module is displayed whenever the system is booted up, as shown in Figure A-4.

Copyright (c) 1984-1997 by Adept Technology, Inc. All rights reserved.

LMMV X/Y/Z/Theta Robot Control Module.

LMMV X/Y/Z/Theta Lift Robot

LMMV X/Y/Z/Theta Loader Robot

Software: 12.1 1-100 (Edit L)

Controller: 3302-599 0

Processor 1: 0.0 2-5 4Mb

Robot 1: 100-1 0-0 8

Robot 2: 100-2 0-0 8

Robot 3: 100-3 0-0 8

27-Mar-95 10:49:33

Figure A-4. Typical Multirobot System Initialization Messages

The module list in Figure A-3 indicates that there are three copies of module #32, the LMMV X/Y/Z/Theta robot, on this particular system disk. The module numbers, which are part of the “Robot (number): (model#)-(serial#)...(module#)” display in the initialization messages, as shown in Figure A-4, are listed in the documentation you receive with your device modules.

"LIST device modules in a device-module FILE"

To determine whether a device module file contains a device module you want transferred to your system disk, select this menu selection to display the list, which looks like the module list shown in Figure A-3.

"REPLACE device modules in system file"

To delete any device modules from your system file, you must use this selection to delete ALL of them. It then allows you to replace the deleted ones with device modules taken from your device-module disk file(s). Figure A-5 shows a typical terminal session in which the existing device modules are replaced with the contents of an LMMV X/Y/Z/Theta module file.

REPLACE DEVICE MODULES IN THE SYSTEM FILE

This procedure reads device modules from a disk file and uses them to replace all the existing device modules in the system file.

Enter the drive on which the V+ system resides (A/C, default is A): c

Scanning the system file for device modules...

Reading configuration data from the system disk...

```
Robot 1:  [32,0]  X/Y/Z/Theta Robot Control Module.
          2:  [32,0]  X/Y/Z/Theta Robot Control Module.
          3:  [32,0]  X/Y/Z/Theta Robot Control Module.
```

```
Modules:  [32,0]  LMMV X/Y/Z/Theta Robot Control Module. (3.7KB)
          [32,0]  LMMV X/Y/Z/Theta Robot Control Module. (3.7KB)
          [32,0]  LMMV X/Y/Z/Theta Robot Control Module. (3.7KB)
          [0 ,0]  <End module>                                (0.1KB)
```

```
Memory:   65.0 Kbytes of system memory are available
          for additional device modules.
```

You need to specify the disk file from which the device modules are to be read.

```
The current default disk/directory is "C:\SYSTEM\".
Just press RETURN to use this default.
```

Enter desired disk/directory:

```
You can enter "?" to see a list of device-module files available.
You can enter "???" to see a list of files available, with contents.
Just press RETURN to cancel the pending operation.
```

Writing the device module to the system file...

Writing configuration data to the system disk...

Do you want to add another device module (Y/N)?

```
Enter desired file name: sca

Reading device-module file C:\SYSTEM\B2K00EOM.SYS...
Reading device-module file C:\SYSTEM\B2K00SCA.SYS...

Module in file: General SCARA Robot Control Module.

** WARNING ** The system file will be corrupted if the replace operation
               fails for any reason.

               You should be working with a COPY of your V+ system.

Are you sure you want to continue (Y/N)? Y
```

Figure A-5. Example Device Module REPLACE Procedure

"APPEND device modules to system file"

Select this menu item to add more device modules to your system file. If you already have a robot (such as an Adept robot) installed in your system, you should normally use the Append option instead of Replace.

"SELECT device modules for robots"

Choose this menu item to change which device module corresponds to each of the available robots. Any module in the system file can be assigned to any robot. If you have copied the external encoder device module to the system file, that module will be enabled automatically if you have the V⁺ Extensions software license installed.

A.3 Servo Loop Rate

The default servo rate is 1 kHz. This means the robot position is read from every channel once every millisecond. New servo output commands are calculated and the DAC outputs are updated at this millisecond rate. CONFIG_C can be used to reduce the servo rate to 500 Hz. In *many* applications, there will be no detectable reduction in performance. However, if your system includes an Adept robot, you **must not** change the servo loop rate. Adept robots are designed to operate only at 1 kHz.

The benefit of choosing the 500 Hz rate is reduced processor demand. For example, at the 1 kHz rate, servoing 4 channels will occupy approximately 50% of the CPU time on an Adept 030 processor. This leaves the other 50% for V⁺ (operating system, language interpreter, trajectory generator, kinematics, disk and serial drivers, etc.) and the user's application programs. At the 500 Hz rate, servoing 4 channels will occupy 25% of an Adept 030, leaving 75% for V⁺ and user activity.

Multiple Robot Configurations B

B.1 Introduction	131
B.2 AdeptModules Configured as Multiple Robots on One EJI	131
B.3 Configuring AdeptModules with an Adept Robot	133
Address Settings for Multiple Servo Boards	133

B.1 Introduction

This section describes two different scenarios of Multiple Robot Configuration. First, the AdeptModules configured as multiple robots on one motion board (EJI) (i.e., two 2-axes; AdeptModules robots running from one board) is described and then AdeptModules system with Adept robot (550, A1, A-XL, Palletizer) is covered. The second configuration requires two motion boards (VJI/EJI). A maximum of four AdeptModules can be controlled from one EJI.

B.2 AdeptModules Configured as Multiple Robots on One EJI

The following steps describe configuring multiple AdeptModules on a single EJI board:

1. Use CONFIG_C to load the LMMV X/Y/Z/Theta device modules. One device module is required per robot. Complete the interactive mapping of the robot to appropriate device modules as described in Appendix A.
2. After completing the CONFIG_C procedures and saving the change, reboot the computer. During reboot there might be initialization errors. Ignore the errors for now.
3. Load and execute SPEC. Refer to “Bringing Up an AdeptModules System” on page 90.
4. Select AdeptModules Quick Setup. Refer to “Bringing Up an AdeptModules System” on page 90 for configuring each robot. While configuring, you will probably get error messages similar to:

```
*Device in use* (Robot 2)
*[Fatal] Initialization failure* Mtr 1 (Robot 2)
*Device in use* (Robot 2)
*[Fatal] Initialization failure* Mtr 2 (Robot 2)
```

Ignore the errors for now.

5. From the Main Menu select **Change Robot Number** and repeat step 4 for each robot.
6. Select **Change Robot Options and Motor configuration** from the Main Menu.


```
Do you want to change this configuration (y/n)? y
Do you want to change Robot Option Bits (y/n)? n
```
7. Enter the number of joints in Robot 1 (two, in this example).
8. Change the motor-to-channel mapping. There are a total of four channels that can be used for servo control. Map each joint of Robot 1 to board 1. (The board number must match the dip switch address setting on the board, see the *Adept MV Controller User's Guide*. The default address is set for board 1.)

For example:

Table B-1. Motor-to-channel mapping Robot #1

Joint	Axis	Type	Motor	Board	Channel
1	1	Primary	1	1	1
2	2	Primary	2	1	2

9. After the mapping is complete, respond “Y” to the following prompt:

Do you want to change this configuration (Y/N)?

10. Enable the appropriate kinematics axis.

For example, with an X and Y axis for Robot 1, enable axis 1 and axis 2.

Axis 1 = kinematics X-axis Enabled

Axis 2 = kinematics Y-axis Enabled

11. Select **Change robot number** from the main menu. Follow steps 6 to 9 for Robot 2.

12. The mapping of Robot 2 should look like this:

Table B-2. Motor-to-mapping Robot #2

Joint	Axis	Type	Motor	Board	Channel
1	1	Primary	1	1	3
2	2	Primary	2	1	4

13. When Robot 2 is properly mapped, enable the appropriate kinematics axis.

For example: If Robot 2 has X and Z axes, enable axis 1 and axis 3.

Axis 1 = kinematics X-axis Enabled

Axis 2 = kinematics Y-axis Disabled

Axis 3 = kinematics Z-axis Enabled

B.3 Configuring AdeptModules With an Adept Robot

AdeptModules and an Adept robot (550, Adept 3-XL, Adept 1850) can be controlled from one Adept MV controller. This procedure applies only to the system where the AdeptModules are configured as single robot on one EJI. There are several things that must be considered.

- The Adept robot must be Robot 1 (default setting).
- The AdeptModules must be configured (using CONFIG_C) as Robot 2. Refer to “Bringing Up an AdeptModules System” on page 90 and CONFIG_C in Appendix A for more detail.
- The Motion board (VJI/EJI) addresses must be set properly. For example:

Table B-3. Multiple Robot Address Setting

Robot #1	Adept robot	VJI address = 1
Robot #2	AdeptModules	EJI address = 3

Address Settings for Multiple Servo Boards

If you have MI6 boards installed with a VJI/EJI, each board must have a unique VME bus address. Check the address settings on all boards to ensure they are all different. If you purchased the Adept MV controller from Adept with all the motion modules installed, the correct DIP switch settings will have already been set.

In systems with a VJI/EJI (Adept robot systems) in addition to MI6(s), the first MI6 board should be set to servo board number 3. In systems with two VJI/EJI modules (dual Adept robots) the second VJI/EJI should be set to Servo Board 3. This optimizes processor allocation for the servo code with the default V⁺ software configuration. See Table B-3 for examples of address settings for various configurations.


The AdeptModules system must be configured as described in “Bringing Up an AdeptModules System”. “The AdeptModules Quick Setup” will detect multiple robots automatically when the first robot is an Adept robot.

The servos must now be restarted. The screen will look similar to:

```
Adept External Encoder Module.  
Adept XL Robot Module.  
AdeptModules X/Y Robot.  
*Device in use* (Robot 2)  
*[Fatal] Initialization failure* Mtr 1 (Robot 2) *Device in use*  
(Robot 2)  
*[Fatal] Initialization failure* Mtr 2 (Robot 2)  
  
Restart completed.  
  
*Warning* Multiple robots detected. The servo board number for  
currently  
selected AdeptModules is mapped to board #3.
```

The board, channel, and axis mapping is done automatically in this case. You can verify the mapping by selecting **Change robot options and motor configuration** from the main menu of SPEC. In order to verify AdeptModules setup, you must change the robot number from main menu as well.

Sample Specification File

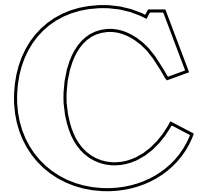

C.1 Introduction	137
C.2 Sample SPEC File	137

C.1 Introduction

This appendix gives an example of a three axis AdeptModules system "SPEC" file. Don't assume that it will work in all applications.

C.2 Sample SPEC File

Table C-1 shows the contents of a sample specification file that was created for an AdeptModules LMMV X/Y/Z system with three axes.

In addition to specification information, the file also contains some computed values that were automatically derived from the robot specification data.

Table C-1. AdeptModules Specifications for Sample Spec. File

Axis	AdeptModule	Part Number
X-Axis	800mm H-Module	90400-10080
Y-Axis	550mm M-Module	90400-20055
Z-Axis	230mm Sz-Module	90400-40023

A typical data section within the specification data file looks like this:

```
DATA 61 ;          COUNTS PER JOINT TRAVEL
711.1111, 444.4444,    533.3333,
277.7778
```

Following the word ".DATA" is the data section number, 61. This number indicates to the motion system where the data is to be stored in system memory. The data section number is followed by a descriptive comment about the data section. Ensuing lines contain the values as stored in system memory. In this case, the values are stored in joint order. Other data sections, such as link dimensions, are stored in an order particular to the robot. This sample specification file shows the data for:

```
.HEADER Robot Specification Data                                Version 1.3
; Created by SPEC 12.1B1 on 12-May-97 08:17:35

; Software:    12.1 83-100 (Edit D5, 21-Feb-1997, Development Test)
; Controller:  3305-678 0
; Servo rate: 1000 Hz
; Processor 1: 0.2 1-5 4Mb
Robot 1:      400-1 0-0 32
Title: "AdeptModules X/Y/Z Robot."

.DATA_SECTION
```

; OPTION WORD AND MOTOR CONFIGURATION

```
.DATA 230 ;Robot option word
                                0
.DATA 1 ;Number of joints
                                3
.DATA 2 ;Motor to axis mapping
                                1, 1, 1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0,
                                0, 0, 0, 1, 2, 1, 0, 0, 0, 0, 0, 0,
                                0, 0, 0, 0, 0, 0, 1, 3, 1, 0, 0, 0,
                                0, 0, 0, 0, 0, 0, 0, 0, 0
.DATA 3 ;Enabled axis mask
                                7
.DATA 4 ;Velocity servo enable mask
                                15
```

; ROBOT INITIALIZATION SPECIFICATIONS

```
.DATA 17 ;Module password
                                Null
.DATA 15 ;Modular joint type
                                "h10080", "m20055", "sz40023"
.DATA 20 ;Hand OPEN/CLOSE signals
                                0, 0, 0, 0
.DATA 220 ;Timeouts (sec): 1=Nulling timeout, 2=Drive enable timeout
; 3=Power-on/amp-on delay, 4=Brake-off delay, 5=Brake-on delay
                                8, 1.008, 0, 0, 0
.DATA 222 ;Max time to wait for amp power (sec)
                                20.16
.DATA 221 ;Time required for clutch to engage (sec)
                                0
```

; AMPLIFIER AND ENCODER SPECIFICATIONS

```
.DATA 61 ;Counts per joint travel (cts/deg or cts/mm)
                                400, 400, 400
.DATA 62 ;Joint travel per count (deg/cts or mm/cts)
                                2.5E-03, 2.5E-03, 2.5E-03
.DATA 1017 ;Counts per zero index (zero = disable)
                                8000, 8000, 4000
.DATA 1016 ;Zero-index configuration
                                5, 5, 6
.DATA 1015 ;Encoder sign (non-zero => flip sign)
                                0, 0, -1
.DATA 1009 ;Motor sign (non-zero => flip sign)
                                0, 0, -1
.DATA 1010 ;Maximum DAC value
                                32767, 32767, 13653
.DATA 1059 ;Maximum DAC value in Manual mode
                                17000, 15000, 8000
.DATA 1012 ;*Duty cycle exceeded* DAC limit
                                10922, 10922, 4551
.DATA 1013 ;*Duty cycle exceeded* filter pole
                                18, 18, 18
.DATA 1014 ;*Motor stalled* timeout (sec)
                                0.5, 0.5, 0.5
.DATA 1018 ;*Soft envelope error* limit (cts)
                                6000, 6000, 3000
```

```

.DATA 1058 ;*Hard envelope error* limit (cts)
                                     12000, 12000, 6000
.DATA 1063 ;*Velocity envelope error* limit (ct/ms)
                                     100000, 100000, 100000
.DATA 1032 ;Machine input polarity
                                     0, 0, 0
.DATA 1042 ;Default motion speed (cts/ms)
                                     4, 4, 4
.DATA 1045 ;Counts per commutation cycle
                                     4000, 4000, 2000

; SERVO TUNING PARAMETERS

.DATA 1048 ;Proportional (DC) loop gain
                                     52, 42, 26
.DATA 1049 ;Location of zero, S-plane
;                                     (Z-plane values:0.932,0.915,0.925)
                                     -70.41513, -88.83855, -77.95824
.DATA 1050 ;Location of pole, S-plane
;                                     (Z-plane values:0.750,0.000,0.000)
                                     -287.6821, -1E+10, -1E+10
.DATA 1003 ;Integrator gain
                                     1.1, 0.5, 0.8
.DATA 1005 ;Max value for integrator state
                                     14000, 14000, 10000
.DATA 1004 ;Max position error to integrate
                                     27, 27, 24
.DATA 1006 ;Velocity feed-forward gain
                                     25, 14, 0
.DATA 1060 ;Minimum acceleration feed-forward gain
                                     0, 0, 0
.DATA 1007 ;Nominal acceleration feed-forward gain
                                     1600, 1250, 700
.DATA 1062 ;Default acceleration feed-forward gain
                                     1600, 1250, 700
.DATA 1061 ;Maximum acceleration feed-forward gain
                                     10000, 10000, 10000
.DATA 1022 ;DAC output filter pole
                                     0, 0, 0

; CALIBRATION PARAMETERS

.DATA 200 ;Calibration file name
                                     "standard.cal"
.DATA 1023 ;Homing configuration
                                     0, 0, 0
.DATA 1040 ;Speed and direction for search (cts/msec)
                                     -5, -5, -5
.DATA 1041 ;Speed for fine searches (cts/msec)
                                     1, 1, 1
.DATA 1034 ;Max distance to search (cts)
                                     324000, 224000, 96000
.DATA 1036 ;Max width of home sensor (cts)
                                     3000, 3000, 3000
.DATA 1037 ;Distance from home sw to first zero index (cts)
                                     800, 800, 1000
.DATA 1035 ;Motor position at first index (cts)
                                     -5200, -5200, -4400

```

```
.DATA 1053 ;Calibration group
                                1, 1, 1
.DATA 1038 ;Park position after homing (cts)
                                0, 0, 0
.DATA 1044 ;Saturation time during calibration (ms)
                                300, 300, 300

; JOINT MOTION PARAMETERS

.DATA 180 ;FINE nulling tolerance (cts)
                                20, 20, 40
.DATA 181 ;COARSE nulling tolerance (cts)
                                400, 400, 400
.DATA 1019 ;Time to be in tolerance (sec)
                                0.016, 0.016, 0.016
.DATA 1055 ;Tolerance checking filter pole
                                4, 4, 4
.DATA 202 ;READY location joint values (deg or mm)
                                0, 0, 0
.DATA 141 ;Min joint pendant increment (deg or mm)
                                1E-03, 1E-03, 1E-03
.DATA 142 ;Max joint pendant speed (deg/sec or mm/sec)
                                50, 50, 50
.DATA 240 ;Free mode enable bit field
                                65535
.DATA 22 ;Free mode signals
                                0, 0, 0

; LINK DIMENSIONS (mm)

.DATA 80 ;Wrist to flange distance
                                0
.DATA 81 ;Link dimensions
                                0

; SOFTWARE JOINT LIMITS (deg or mm)

.DATA 120 ;Lower joint travel limit
                                -10, -10, -10
.DATA 121 ;Upper joint travel limit
                                780, 530, 210
.DATA 123 ;Max lower joint travel limit
                                -11, -11, -11
.DATA 124 ;Max upper joint travel limit
                                781, 531, 211

; CARTESIAN MOTION SPECIFICATIONS

.DATA 144 ;Max WORLD/TOOL pendant trans./rot. speed (mm/sec or deg/sec)
                                0, 50, 0
.DATA 140 ;Time to reach max WORLD/TOOL pendant speed (sec)
                                0.16
.DATA 143 ;Min WORLD/TOOL pendant trans./rot. increment (mm or deg)
                                1E-03, 1E-03, 1.74533E-05

; TRAJECTORY GENERATOR SPEED PARAMETERS

.DATA 162 ;Minimum execution time for Cartesian motions (sec)
```

```

                                0, 0
.DATA 163 ;Joint speed at SPEED 100 (deg/sec or mm/sec)
                                1200, 1200, 600
.DATA 165 ;Joint accel at ACCEL 100 (deg/sec^2 or mm/sec^2)
                                16000, 16000, 16000
.DATA 164 ;Cartesian trans./rot. speed at SPEED 100 (mm/sec or deg/s)
                                1200


.DATA 166 ;Cartesian trans./rot. accel at ACCEL 100 (mm/sec^2 or deg/sec^2)
                                16000
.DATA 167 ;Acceleration ramp times (sec)
                                -1, 0.1, 0.1, 0.1, 0.1, 0, 0, 0, 0, 0,
                                0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0,
. . . . . 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0,
                                0, 0, 0, 0
.DATA 168 ;Max acceleration (%)
                                140
.DATA 173 ;Max deceleration (%)
                                140
.DATA 169 ;Max program speed (%)
                                140
.DATA 170 ;Max rate of change in Mtr speed (%/sec)
                                50
.DATA 171 ;Startup S-curve profile
                                0
.DATA 172 ;Startup % accel and % decel
                                50, 50
.DATA 174 ;SCALE.ACCEL speed limit (%)
                                1E+16

; BACKLASH AND LINEAR COMPENSATION
; STOP-ON-FORCE SPECIFICATIONS

.DATA 1027 ;Stop-on-force integrator gain
                                0, 0, 0
.END

```


Test and Troubleshooting

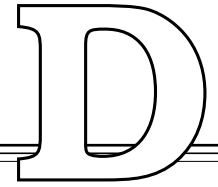

D.1 Introduction	145
D.2 Discrete Inputs	145
Status LED Hints.	145
D.3 Error Messages and Cause.	145
Motion Interface E-stop	145
Robot Power Off	145
Protection Error	145
D.4 Calibration Related Problems	146
D.5 Setup Related Problems	146
D.6 Diagnostic Tests	146
Encoder Channel.	147

D.1 Introduction

This appendix is designed to help quickly test and troubleshoot the AdeptModules system interfaced with the Adept MV Controller.

D.2 Discrete Inputs

After all the required hardware is connected, the Discrete Input signals can be tested for proper operation. There are 17 status LEDs on the Signal Interface Box for troubleshooting (refer to Section 2.15 for an explanation of the LEDs).

Status LED Hints

1. The Overtravel LED stays “ON” in the normal operating condition
2. CE_BRR LED is lit when the 9-pin D-sub connector is not plugged into the USER OUTPUT/BRAKE REL. connector.

WARNING: Do not apply power to the system without having this connector plugged into the USER OUTPUT/BRAKE REL socket. Damage to the Signal Interface Box or unexpected movement of the Modules can occur.

3. The “ON” condition of the status LEDs does not indicate that there is AC power to the Signal Interface Box. Power for the LEDs is supplied by the EJI board in the Adept MV Controller.
4. No status LEDs are lit when the Arm Signal cable is not connected.

D.3 Error Messages and Causes

Some of the common error messages generated with the AdeptModules system and their causes are listed below. For a detailed explanation of all of the errors and problems that can occur with the system refer to the *V+ Language Reference Guide*.

Motion Interface E-stop

This error is reported when the power is turned “OFF” on the Signal Interface Box and the system is trying to enable High Power (EN POWER). Another possibility is that the power for the Signal Interface Box is not on. If the power is enabled several times the error could be:

Robot Power off

Protection Error

This error is reported when the Adept V+ 12.0 Software License is not installed on the system in use.

***RSC Communication Failure* (Robot #)**

Time Out Enabling Power

The above two errors are reported consecutively when trying to enable high power while the Arm Signal cable is not connected. In this case the system may lock up.

***Motor Startup Failure* Mtr in (Robot #)**

This error is reported when calibration is attempted while the encoder cable is not connected.

D.4 Calibration Related Problems

Once the Software setup is done as described in Chapter 4, the AdeptModules are ready to be calibrated. The CALIBRATION will fail if the calibration process is started by entering the CAL command while the AdeptModule is covering any one of the sensors at the ends of the modules travel. Ensure that the sensors are not covered before calibration. For safety, make sure to position the AdeptModule towards the center of the travel range. Reboot the Adept MV controller if the calibration was attempted while a module was covering one of the sensors.

D.5 Setup Related Problems

1. "AdeptModules Quick Setup" is not showing up as a menu item in the main menu of "SPEC".

LMMV X/Y/Z/Theta or Enhance LMMV X/Y/Z/Theta device module is not loaded. Refer to Chapter 4.

2. Initialization errors are reported after going through "AdeptModules Quick Setup".

This will generally happen with a multiple robot configuration. The user can have a multiple robot configuration with one EJI board or with multiple motion boards (EJI, VJI or MI3/6) in the same Adept MV controller. The initialization errors indicate that mapping of the motion board, the joints, and the motors are incorrect. It is also possible that the motion board (EJI, VJI or MI3/6) address is not set correctly. Refer to Appendix B for further details on setting up multiple robots.

D.6 Diagnostic Tests

The SPEC program provides the capability of performing diagnostic tests. With AdeptModules system, the diagnostic test feature offers limited functionality. This test is mainly used for verifying encoders by moving the AdeptModule manually. The diagnostic test CANNOT be used to check discrete inputs, such as OVERTRAVEL, HOME SWITCH, and DRIVE FAULT. Also, it cannot be used to drive the AdeptModule by applying an analog output (DAC). Use status LEDs as described in Chapter 2 for verifying inputs.

Load and execute the SPEC program. Select “Perform hardware diagnostics” from the main menu and the following screen will appear.

*** Diagnostics : Robot 1 ***				
Robot power is OFF				
Press P to toggle power, Q or 0 to quit.				
Motor.Board.Channel	1/B1/C1	2/B1/C2	3/B1/C3	4/B1/C4
Encoder position	10428	0	0	0
Last zero-index	8924	0	0	0
Zero-index delta	2048	0	0	0
Home	OFF	OFF	ON	OFF
Overtravel	OFF	+ON	-ON	+ -ON
Amp fault	OFF	OFF	OFF	OFF
Amp enable	OFF	OFF	OFF	OFF
release	OFF	OFF	OFF	OFF
DAC voltage	0.00	0.00	0.00	0.00
DAC count	Max DAC	0	0	0
	val is 0			

Testing Encoder Channels

Write down the encoder position shown on the screen.

Check the functionality of the encoder by moving the AdeptModule a known distance. The display should count up or down, according to the direction of motion.

If the encoder count doesn't change at all, check the encoder power or the encoder cable connection.

If the encoder reading changes by only 1 count, then one of the two phases of the encoder is not connected.

-
- A**
- AC power
 - connecting power cord to controller 59
 - connecting to controller 58
 - connecting to power chassis 60
 - installation diagram for 200-240VAC 62
 - installation diagram for 380-415VAC 62
 - requirements for controller 58
 - voltage/current ratings controller 58
 - Acceptable modifications 22
 - Adept 111
 - AdeptModules 17
 - calibrating from MCP 93
 - how to start 92
 - intended uses 21
 - modifications 22
 - moving with MCP 96
 - static forces 19
 - Air quality, facility requirements for robot 31
 - Amplifier module
 - fuses 67
 - installing 68
 - removing 67
 - APPEND procedure 128
 - A-Series controller, installation 39
 - Auto, keyswitch position 41
 - Automatic Mode 24
 - Automatic mode
 - how to use 84
 - Axis
 - description 121
- B**
- B+ amplifier module
 - connections/indicators 66
 - Brakes
 - description 85
- C**
- Cable connections, system 50
 - Changing User output voltage 48
 - Circuit breaker
 - on power chassis 67
 - Compressed air
 - installation at robot 68
 - requirements for AdeptModules 31
 - CONFIG_C 129
 - modules and robot configured as multiple system 133
 - modules configured as multiple robots 131
 - servo board address setting on multiple system 133
 - CONFIG_C program
 - description 122
 - using 123
 - Configuring 12 or 24 volts 49
 - Connections and Indicators 44
 - Z-Theta 45
 - Control Key Switch, on External Front Panel 41
 - Controller
 - connecting to power chassis 52, 54
 - dimensions, Adept MV-5 and MV-10 controllers 111
 - dimensions, MV-19 controller 112
 - grounding 56
 - joining to power chassis 34
 - panel mounting 36
 - rack mounting 36
 - Current/voltage ratings
 - controller 58
 - Customer E-Stops 71–79
 - Customer Safety Barrier
 - switch specifications 71
- D**
- Device module
 - description 121
 - documentation 122
 - loading 123–128
 - REPLACE/APPEND procedure 128
 - Device-module file
 - description 121
 - Digital I/O on SIO
 - connector pinouts 76
 - input specifications 74
 - output specifications 75
 - Dimensions 111
 - dimensions
 - Adept MV-19 controller 112
 - Adept MV-5 and MV-10 controllers 111
 - External Front Panel 114
 - MCP cradle 117

- mounting brackets 116
- power chassis 113
- DISKCOPY Utility
 - using to make copies 123, 124
- Drive channels
 - description 121

E

- EJI-to-Amp cable, installation 52, 54, 55
- Emergency Stop circuit, see E-Stop circuit
- Emergency Stop switch
 - on External Front Panel 41
- Enable Power
 - how to from MCP 92
- E-Stop circuit 71–79
 - Customer Safety Barrier switch
 - specifications 71
 - drawings 78
 - external input 73
- External E-Stop input 73
- External Front Panel 41–42
 - controls/indicators 41
 - dimensions 114
 - installation 42

F

- Fan filter, cleaning 107
- Fan filter, cleaning in controller 107
- Fuses
 - amplifier module 67
 - chassis 67

G

- gotolink amvmedg
 - firstpage 92
- Grounding
 - diagram 57
 - system information 56

H

- High Power enable process, description of 71
- High Power On/Off switch, on External Front Panel 41
- Humidity, required range
 - power chassis 32

I

- Installation
 - AC power 57–65

- External Front Panel 42
 - floor requirements 31
 - joining power chassis to controller 34
 - keyboard 39
 - MCP cradle 55
 - monitor 39
 - mounting surface 31
 - power chassis in rack or panel 36
 - power cord to controller 59
 - system cable connections 50
- Installing brake release button 49
- Installing SIB 44–49
- Instructed persons 23
- Introduction 17
 - AdeptModules 17

J

- Joint
 - description 121
- Joint state
 - with AdeptModules 97

K

- Keyboard
 - installation 39

L

- Lamp Test button, on External Front Panel 41
- Local, key switch position 41

M

- Maintenance
 - checking VFP lamps 108
 - cleaning controller fan filter 107
- Manual Control Pendant
 - calibrating AdeptModules 93
 - connection on External Front Panel 42
 - how to use 85–88
 - installation 55
- Manual Mode 25
- Manual mode
 - High Power enable process 71
 - how to stop robot 88
 - how to use 71, 83
 - module speed limited 71
- Manual, keyswitch position 41
- MCP cradle
 - dimensions 117

- installation 55
- MCP, see Manual Control Pendant
- Mode control buttons on MCP 96
- Modifications
 - acceptable 22
 - unacceptable 22
- Module
 - how to stop in Manual mode 88
 - joint locations 18
 - speed limited in Manual mode 71
 - transport and storage 32
 - unpacking and inspection 32
- Monitor
 - installation 39
- Motor
 - description 121
- Mounting brackets
 - dimensions 116
 - install positions
 - controller 37
 - power chassis 38
 - installation 36
- Mounting plate
 - specifications 31
- Multiple Configurations 129
- N**
- Network, keyswitch position 41
- O**
- Operating environment specifications
 - controller and power chassis 31
 - Modules 31
- Operating Keyswitch, on External Front Panel 41
- Operating modes
 - Automatic 24, 84
 - Manual 25, 83
- P**
- Panel mounting 36
- Passive E-Stop 73
- Pendant connection, on External Front Panel 42
- Physical Connections of the Modules 83
- Power chassis
 - changing voltage setting 63
 - circuit breaker 67
 - connecting to controller 52, 54, 55
 - dimensions 113
 - fuses 67
 - grounding 56
 - joining to controller 34
 - panel mounting 36
 - rack mounting 36
- Power Chassis to AdeptModule cable, installation 51
- Power entry module on controller 58, 65
- Program Running lamp, on External Front Panel 41
- Program Start switch, on External Front Panel 41
- Q**
- Qualification of personnel 23
- R**
- Rack mounting 36
- REPLACE procedure 127
- REPLACE/APPEND procedure 128
- Robot
 - definition of industrial 18
- Robot Specification Utility (SPEC.V2) (see SPEC program)
- Robots and Device Modules
 - main menu 125
- S**
- Safety 19
 - during maintenance 25
 - equipment for operators 24
 - qualification of personnel 23
 - required safeguards 19
 - sources for information 20
- Safety barriers
 - requirements 19
- Sample Spec File 135, 143
- Servo loop rate, setting 128
- SIB LED status and indications 45
- Signal cable, installation 52
- Skilled persons 23
- Software configuration
 - terminology 121
- Software installation
 - procedure for a new system 123
 - procedure for an existing system 123
- Space around SIB 46
- Spec File Sample 135, 143
- SPEC program
 - description 122

- Speed bars on MCP 97
- S-series controller, installation 40
- System cable connections 50
- System file
 - description 121
- System grounding
 - diagram 57

T

- Temperature, required range
 - power chassis 32
- Terminology
 - for software configuration 121
- Typical digital output wiring 46

U

- Unacceptable Modifications 22
- User Output/Brake Release connector Pin
 - assignments 46

V

- VFP, see External Front Panel
- Voltage
 - changing setting on power chassis 63
 - maximum operating
 - controller 58
 - minimum operating
 - controller 58

W

- Working area 23

Adept User's Manual Comment Form

We have provided this form to allow you to make comments about this manual, to point out any mistakes you may find, or to offer suggestions about information you want to see added to the manual. We review and revise user's manuals on a regular basis, and any comments or feedback you send us will be given serious consideration. Thank you for your input.

NAME _____ DATE _____

COMPANY _____

ADDRESS _____

PHONE _____

MANUAL TITLE: _____

PART NUMBER and REV level: _____

COMMENTS:

MAIL TO: Adept Technology, Inc.
Technical Publications Dept.
11133 Kenwood Road
Cincinnati, Ohio 45242

FAX: (513) 792-0274

