



USER'S GUIDE  
V:1133-0104-12



# ISP822B

## Wireless Speaker System

For the most up-to-date version of this User's Guide, go to [www.ilive.net](http://www.ilive.net)

# Warnings and Precautions

- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **WARNING:** Shock hazard - Do Not Open.
- **AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRI**

Mains Plug or Direct plug-in adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the Mains Plug or Direct plug-in adapter should be disconnected from the mains socket outlet completely.

*La fiche d'alimentation ou adaptateur de courant est utilisé comme dispositif de déconnexion et doit rester accessible pendant l'utilisation. Pour mettre l'appareil hors tension, la fiche ou adaptateur de courant doit être débranché de la prise de courant.*



**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.




The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** The remote control supplied with this product contains a button-cell battery that could be accidentally ingested by children. Do not leave button-cell batteries accessible to children. If swallowed, promptly see doctor and call (202) 625-3333.

# Important Safety Instructions

1. Read these Instructions.
  2. Keep these Instructions.
  3. Heed all Warnings.
  4. Follow all instructions.
  5. Do not use this apparatus near water.
  6. Clean only with a dry cloth.
  7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
  10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  11. Only use attachments/accessories specified by the manufacturer.
- 
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
  14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**Special note:** When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

## FCC Warnings

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
 
 
## Additional Warnings

 
 
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.  
*L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.*
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.  
*Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.*
- Caution marking is located at the rear or bottom of the apparatus.  
*Attention marquage est situé sur le panneau arrière ou inférieur de l'unité.*
- The marking information is located at the rear or bottom of apparatus.  
*Le marquage est situé sur le panneau arrière ou inférieur de l'unité.*



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

# Introduction

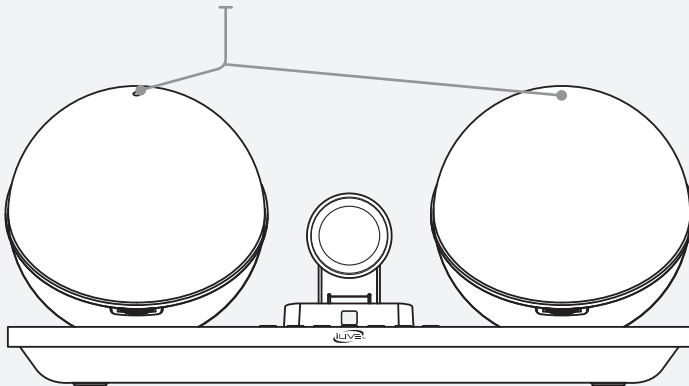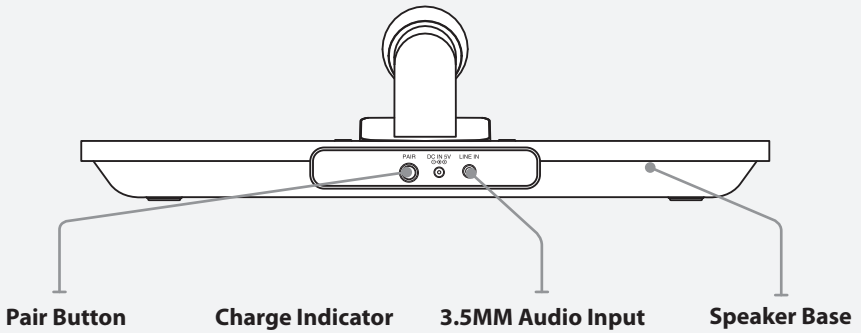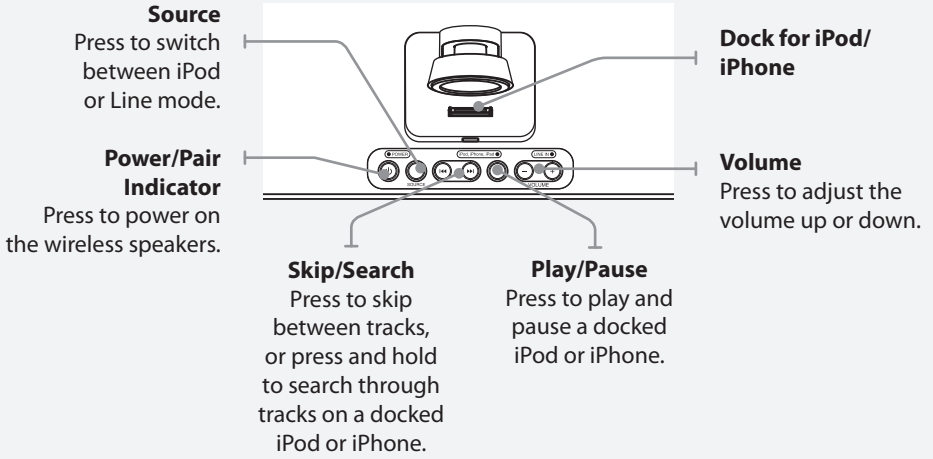


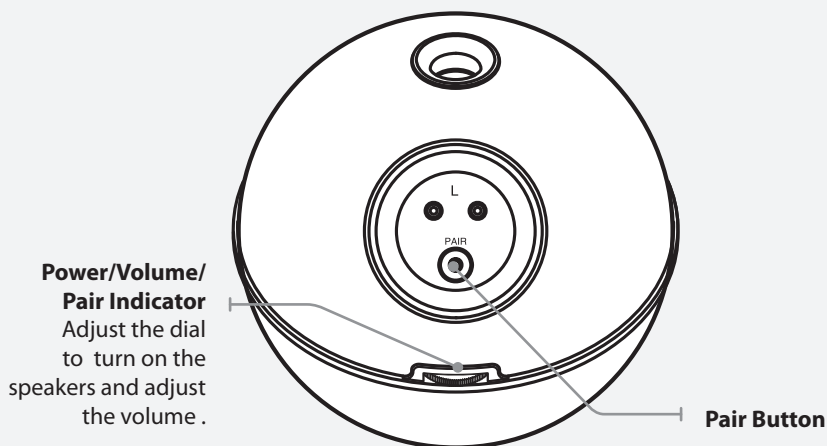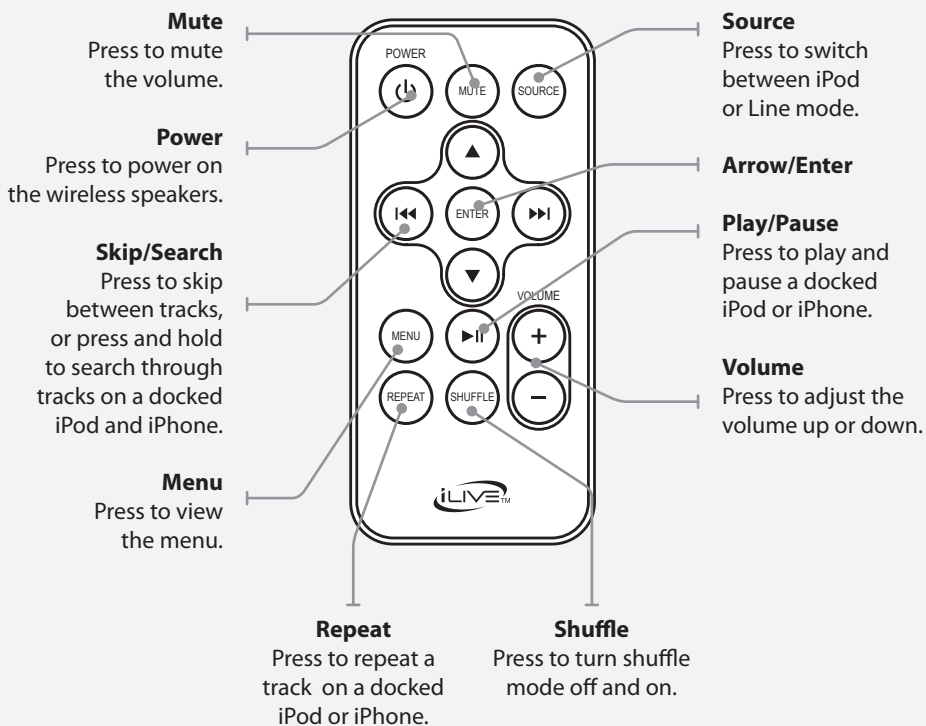

## Setup

### Power

 
DC power input: requires an AC/DC power adapter (included)

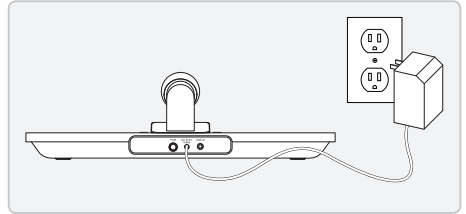

### Battery Power

Speakers: built in rechargeable lithium battery.

 Before use we recommend charging the speakers for 3 hours. Once the **Speaker Base** is plugged in, it will automatically charge the speakers when they are placed on the **Speaker Base**. Allow the speakers time to fully charge before removing them from the **Speaker Base**.

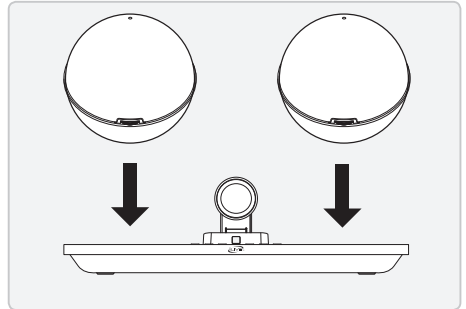

*Note: Using the **Power/Volume dial**, make sure both speakers are turned on when attempting to play music.*


Charge Indicator	Speaker Status
OFF	Fully charged
RED	Needs recharging

Speakers will have up to 3 hrs of play time after being removed from the **Speaker Base**.

When not in use, turn off both speakers using the **Power/Volume dial**.

### Remote

 Remote control: requires 1 CR2025 battery (pre-installed)

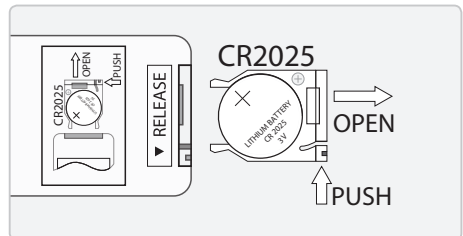

# Wireless Speakers Setup

## Important Note

While the wireless speakers were paired at the factory to allow for immediate operation, they will occasionally become un-paired in transit. Un-pairing can also occur in day-to-day operation due to different environmental influences. This is normal. Should this occur, please follow the pairing instructions below.

## What does it mean to pair?

Pairing allows the **Speaker Base** to recognize a wireless speaker. Once a wireless speaker is paired, the base unit will transmit audio to it.

## Additional Information

- Once paired, the wireless speakers can be moved up to 75 ft . Should the sound drop or become garbled it will be necessary to move the speaker to another location in order to receive the signal clearly.

Pair Indicator	System Status
OFF	Powered off
SLOW FLASHES	Standby mode
QUICK FLASHES	Attempting to pair
SOLID LIGHT	Paired and playing

## Pairing the Wireless Speakers

Keep the **Speaker Base** and all wireless speakers within 3 feet of each other when you pair them.

1. Plug the **Speaker Base** into a power source and press the **Power** button to power the **Speaker Base** on.
2. Using the **Power/Volume** dial, turn on both wireless speakers.

*The Speaker Base Link Indicator will flash when the **Speaker Base** is powered on.*

3. Press and hold the **Pair** button on the **Speaker Base** and the **Pair** button on the wireless speaker.
4. Once paired, the **Pair indicator** will display a solid light, and a sound will be heard from the speaker.

## iPod and iPhone, & Audio Input

### Docking an iPod or iPhone

1. Connect the iPod or iPhone to the connector inside the Dock for iPod and iPhone.
2. When the speaker is plugged in using AC power, the docked iPod or iPhone will charge.

### Playing a Docked iPod or iPhone

1. Follow the instructions for [Docking an iPod or iPhone](#).
2. Press the **Play/Pause** button to begin playing the docked iPod or iPhone.

### Using the 3.5mm Audio Input

*Requires a 3.5mm audio cable (included).*

1. Connect the 3.5mm audio cable to the **3.5MM Audio Input** on the **Speaker Base** and an audio output on an MP3 player or other audio source.
2. Press the **Source** button to switch to Line In mode.
3. Use the native controls on the connected MP3 player or other audio source to play and control audio played through the speaker.

## Company Information

### International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at [www.iliveelectronics.com](http://www.iliveelectronics.com).

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en [www.iliveelectronics.com](http://www.iliveelectronics.com).

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur [www.iliveelectronics.com](http://www.iliveelectronics.com).

### Contact Information

**Phone:** 1-888-999-4215

**Email:** [customerservice@ilive.net](mailto:customerservice@ilive.net)

**Parts Email:** [partsinfo@dpi-global.com](mailto:partsinfo@dpi-global.com)

**Website:** [www.iliveelectronics.com](http://www.iliveelectronics.com)

### Compatibility

To get information on which iPod, iPhone, or iPad products are compatible with this product, go to [www.iliveelectronics.com](http://www.iliveelectronics.com).

### Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to [www.iliveelectronics.com](http://www.iliveelectronics.com).

