

User's Manual

Pocket InfraRed Thermometer

Model 59114

Introduction

This device allows the user to take non-contact temperature measurements simply by pointing the meter and pressing a button. This meter, with proper care, will provide years of safe reliable service.

Specifications

General Specifications

Display	3 ½ -digit (2000 count) LCD display
Measurement Range	Temperature: -30 to 270°C / -22 to 518°F
Power off	Automatic shutoff after approx. 7- 8 seconds
Laser power	Laser power less than 1mW (red)
Operating Temperature	32 to 122°F (0 to 50°C)
Operating Humidity	Max. 80% RH
Power Supply	2 x AAA battery
Weight	81g
Size	97 x 57 x 29 mm

Range Specifications

Ranges/Resolution	-30 to 270°C/ -22 to 518°F	1°C /1°F
Accuracy	-30 to 270°C/ -22 to 518°F: $\pm (2.5\% \text{ of reading} + 2^\circ\text{C}/ 4^\circ\text{F})$	
Accuracy notes	1. Accuracy is given at 18 °C to 28 °C (64 °F to 82 °F), less than 80 % RH 2. Accuracy specified for emissivity of 0.95	
Emissivity settings	0.95 fixed	
Distance Factor	Distance to Target Ratio 6:1	

IR Measurements


Taking Measurements

Point the meter toward the object being measured, then press and hold the MEASURE button. The meter and Laser will turn ON and take a reading. Read the measured temperature on the LCD. The meter and Laser turn off automatically approximately 8 seconds after the MEASURE button is released.

The object being measured should be larger than the spot size as illustrated at right.

Measurement considerations: If the surface of an object to be measured is covered with frost, dust or other materials, surface cleaning must be performed before accurate measurements can be made. **High Reflective Surfaces:** If the surface of an object to be measured is highly reflective, apply masking tape or apply flat black paint to the surface since black paint has a fixed emissivity value.

Distance to Target

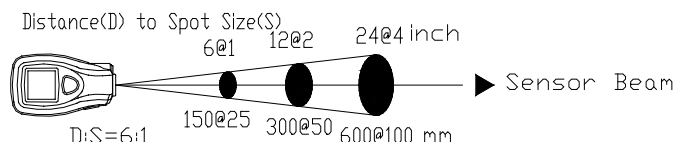

Backlighting function

Press the key to turn on the LCD backlighting function.


The backlight turns off automatically approximately 8 seconds after the BACKLIGHT button is released.

Displaying °F or °C

Open the battery compartment, move the slide switch located in the opening beneath the outermost battery

Battery Replacement

A flashing display indicates that the AAA batteries which power the meter have weakened. Open the battery compartment on the rear of the meter, replace the batteries and close the compartment.

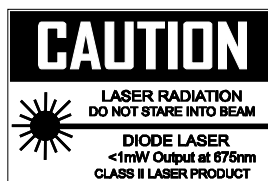

CAUTION: Do not directly view or direct the laser pointer at an eye. Low power visible lasers do not normally present a hazard, but may present some potential for hazard if viewed directly for extended periods of time.

FRONT PANEL DESCRIPTION

1. Laser pointer beam
2. Backlight key
3. LCD display
4. Hand Strap
5. IR sensor
6. Measuring & Laser key
7. °C or °F select key (need open Battery compartment)
8. Battery compartment

