

POCSAG NUMERIC PAGER

PG-2092P

 
USER MANUAL

VERSION: Bi-lingual 1.0

CONTENT

1. External view and description of keys
2. Features and Icon Definitions
3. Turning on the pager
4. Main and miscellaneous functions
 - 4.1. Receiving and reading message
 - 4.2. Locking & unlocking message
 - 4.3. Deleting all messages
 - 4.4. Deleting message selectively
 - 4.5. Turning off the pager
 - 4.6. Setting time
 - 4.7. Setting date
 - 4.8. Setting alert mode
 - 4.9. Setting audio option for alert
 - 4.10. Setting alarm
 - 4.11. Setting language [Langue de montage](#)
 - 4.12. Background light [Lumière d'arrière-plan](#)
5. Points for attention

1. External view and description of keys

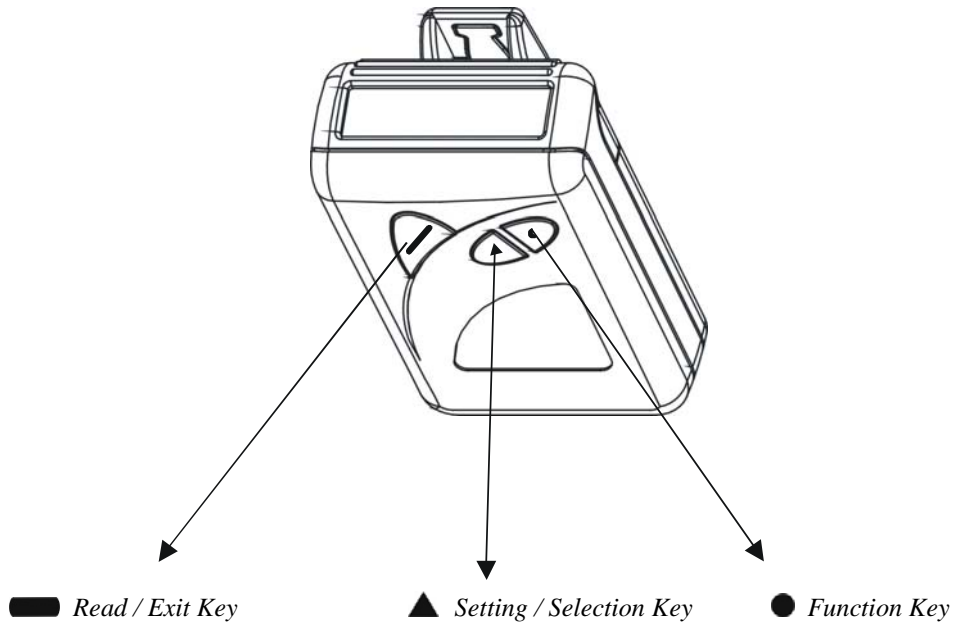

2. Features and Icon Definitions

a) Features

- ◆ 12 audio options
- ◆ Vibration alert mode
- ◆ 3 alarms
- ◆ 4 address codes
- ◆ Total of 20 messages and 15 messages to be lock-protected
- ◆ One message consists of maximum of 18 characters
- ◆ Frequency and address codes are programmable
- ◆ Low battery indication
- ◆ Duplicate and unread message indication
- ◆ Message full indicator

b) Icon Definitions

- ◆ Menu indication icons
 - ▶) Audio alert mode is on
 - (•) Mute and vibration mode is on
 - 🔔 Alarm is on

◆ Message Icons

☐☐ Serial number of message and Serial number of source address code

🔒 Lock / Unlock message

- ▶ For more of the message content
- 📄 Duplicate message


◆ **Function icons**

- 🕒 Setting time/Setting auto turning-off
- 🔊 Setting audio
- 🔇 Setting mute / vibration mode
- 🔔 Setting alarm
- ✂️ Deleting all unlocked messages which have been read

 
◆ **Miscellaneous icons**

- 🔋 Low battery warning
- 📶 Out of range indicator

3. Turning on the pager

- ◆ The pager responds by audio alert after inserted a battery in it, press *Read / Exit Key* , the initial time and date will appear on the LCD.

- ◆ Initial display of the pager:



- ◆ Display of standby mode while the pager is in audio alert mode:



- ◆ Display of standby mode while the pager is in vibration alert mode:




The pager is now in standby mode and ready to receive messages.

- ◆ Display when pager is turned-off:




You can press *Function Key* ● twice or thrice to come into “OFF?” function and then press *Setting / Selection Key* ▲ to turn off the pager.

You can hold *Read / Exit Key*  for approximately 2 seconds to turn on the pager again if it is in turned-off state.


4. Functions

In standby mode, you can press *Function Key* ● to come into the corresponding function menu, and then press *Setting / Selection Key* ▲ to confirm and exit.

Note: If you want to exit a function selection without any change, press *Read / Exit Key* .

The pager will automatically return to standby mode in 8 seconds, if no key is pressed.


4.1. Receiving and reading messages

- ◆ Press *Read / Exit Key*  to read message. “NO PAGE” indication appears on its LCD when no messages are present.




- ◆ When the pager has received message(s), the number of unread message appears on its LCD:



This display indicates 2 unread messages in the pager are waiting for being read, at the same time, a short unread alert will remind you of the unread messages. The number at the bottom left corner displays the serial number of a received message. When you press *Read / Exit Key* , the content of the message appears on its LCD.


- ◆ Press *Read / Exit Key* to display the message.





- ◆ The LCD displays message: [message: 861 579 0234], the digit at the bottom left corner indicates the 8th message, press *Read / Exit Key*  again to display the time message was received [receiving time: 12:36 of March 27.]



The digit at the bottom left corner indicates the 1st address code.

If you press *Read / Exit Key*  and TONE ONLY is displayed, this indicates the call is an audio only call.



- ◆ Press *Setting / Selection Key*  to read the next message.
- ◆ You can press *Function Key*  to return to standby mode while reading message. Your pager can automatically store received messages, including the receiving time and date. When its memory is full, “MEMORY FULL” indication will be displayed on standby mode. In this case, a new message will overwrite the oldest message unlocked.



If the pager is full of unread messages and one or more unread messages have been overwritten by newly received messages, the “OVERFLOW” indication will be displayed on its LCD.



If the pager receives a duplicate message repeatedly, the icon of duplicate message is displayed to show that the message received is a duplicate one. In this case, the receiving time of the message will be updated to the latest. If it's the same message from different sources, the "two messages" will be regarded as the same one.

- ◆ The number at the bottom left corner shows the serial number of a message.

4.2. Locking & unlocking message

You can lock a maximum of 15 messages and protect them from being overwritten or deleted by the new message when memory overflows.

- ◆ In order to lock or protect a message, press *Function Key* ● while reading the message. When "PROTECT" appears on the LCD, please press *Setting / Selection Key* ▲ to lock the message. Then the icon indicates that the message has been locked.



- ◆ In order to unlock a message, press *Function Key* ● once then press *Setting / Selection Key* ▲ to unlock the message while reading the message.



Note: "FULL" indication will be displayed as you press *Setting / Selection Key* ▲ to lock one more message when 15 messages were locked. In this case, you cannot lock or protect more messages.



4.3. Deleting all messages

There are two ways to delete messages:

- 1) You can select "CLEAR ALL?" function to delete all read and unlocked messages.
- 2) You can select "DELETE?" function to delete the messages that have been read and remain unlocked selectively.



- ◆ Press *Setting / Selection Key* ▲ to confirm and all unlocked messages that have been read will be permanently deleted.

Note: "CLEAR ALL?" function will not be displayed in function menu items under the following cases:

- 1) No message stored.
- 2) All messages unread (*an unread message means that both the content and the receiving*

time page of the message have not been read).

3) All messages have been read and locked.

4.4. Deleting message selectively

- ◆ In order to delete messages selectively, please press *Function Key* ● twice while reading unlocked messages. Then “DELETE” indication appears as follow.



- ◆ Press *Setting / Selection Key* ▲ to confirm the deletion.

4.5. Turning off the pager


- ◆ Press *Function Key* ● to display:



You can press *Function Key* ● two or three times to get to “PAGER OFF?” function menu and then press *Setting / Selection Key* ▲ to turn off the pager. The pager cannot receive messages when in the off mode. You can press *Read / Exit Key* ■ once again to turn on the pager if it is in turned-off state.

4.6. Setting time

- ◆ Press *Function Key* ● to display:

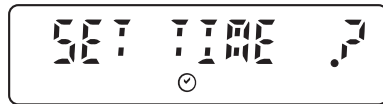

- 1) Press *Setting / Selection Key* ▲ to come into the menu and to move cursor from one position to another. The order is [HH—>MM—>A / P—>12Hr/24Hr]
 - 2) Press *Function Key* ● to adjust the digit to the current time.
- ◆ You can repeat step 1 and 2 to adjust it to correct time.
 - ◆ Press *Read / Exit Key* ■ to confirm and exit.




4.7. Setting date


- ◆ Press *Function Key* ● to display:



- ◆ Press *Setting / Selection Key* ▲ to come into the menu.
- ◆ Press *Setting / Selection Key* ▲ to move the cursor from one position to another. The order is [MM—DD—YY] or [DD—MM—YY] and it is decided by the code programming.
- ◆ Press *Function Key* ● to adjust the digits.
- ◆ Press *Function Key* ● to adjust the digit in every position.



- ◆ Repeat the above 2 steps in every position to adjust it.
- ◆ Press *Read / Exit Key*  to confirm and exit.

4.8. Setting alert mode


 
- ◆ Press *Function Key*  to display:





In the “SET ALERT” function, you can select the following 3 alert modes:

- 1) Audio alert - Press *Setting / Selection Key*  to set audio alert; or press *Function Key*  to go to the next option.



  
- 2) Vibration alert - Press *Setting / Selection Key*  to set vibration alert; or press *Function Key*  to go to the next option.



- 3) Mute alert - In this mode, the pager will receive messages with no alert. Press *Setting / Selection Key*  to confirm the setting or press *Function Key*  to go to the next option.

 

 


4.9. Setting alert audio

- ◆ Press *Function Key*  to display:



By the “SET AUDIO?” function, you can select one audio from the 12 alert audio options for receiving messages or turning on the pager.


- ◆ Press *Setting / Selection Key*  to go to the menu.
- ◆ Press *Function Key*  until you get your desired audio option.
- ◆ Press *Setting / Selection Key*  to confirm the option and exit.



4.10. Setting alarm

- ◆ Press *Function Key*  to display:




- ◆ Press *Setting / Selection Key*  to go to the alarm menu.

- ◆ Press *Function Key* ● to select the alarm you want to set for alarm 1, 2 and 3.



- ◆ Press *Read / Exit Key* ■ to confirm your option and exit.
- ◆ Press *Function Key* ● to select turning the alarm on or off.
- ◆ Press *Setting / Selection Key* ▲ to move the cursor to the position you need to adjust, then press *Function Key* ● to adjust the alarm time.
- ◆ Repeat the above-listed steps to adjust the alarm time.
- ◆ Press *Read / Exit Key* ■ to confirm your alarm setting and exit.

When the alarm icon appears on the LCD in standby mode or OFF mode, it indicates that an alarm has been turned on. When all alarms are turned off, the alarm icon will not be displayed.

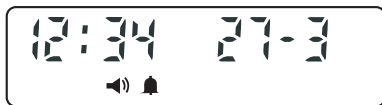

Standby mode display with alarm turned on


At the designated time of alarm, the pager will remind you of your appointment by alert. The alarm icon will display on it's LCD to indicate the alarm is turned on.



Note: You can set a maximum of 3 alarms. The 3 alarms are for daily timed alarming. *La note: vous pouvez régler le maximum de 3 alarmes. Les 3 alarmes sont pour alarmer chronométré quotidien*

4.11 Setting language **Langue de montage**

You can set language option in the following menu: *Vous pouvez régler l'option de langue dans le menu suivant*

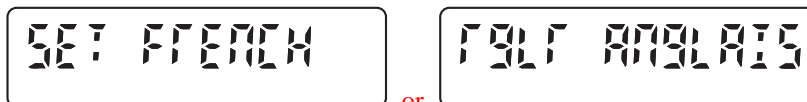

- ◆ The optional languages are ENGLISH and FRENCH. *Les langues facultatives sont ANGLAISES et françaises*
- ◆ In “SET FRENCH” function menu, press *Setting / Selection Key* ▲ to confirm and come into the interface of French version. *Dans “FRANÇAIS DE SERIE” le menu de fonction, la presse Réglant/la Clef de Sélection pour confirmer et venir dans l'interface de version française*
- ◆ You can also set English option in the same way if the pager's interface is the interface of French version. *Vous pouvez régler aussi l'option anglaise dans la façon pareille si le pager l'interface de s est l'interface de version française.*
- ◆ In “RGLR ANGLAIS” function menu, press *Setting / Selection Key* ▲ to confirm and come into the interface of English version. *Dans “RGLR ANGLAIS” le menu de fonction, la presse Réglant/la Clef de Sélection pour confirmer et venir dans l'interface de version anglaise.*

- ◆ Note: This function is available only in the pager of French version. In the pager of English version, the above-listed two menus would not appear on its LCD. *La note: Cette fonction est disponible seulement dans le pager de version française. Dans le pager de version anglaise, l'au-dessus d'énuméré deux menus n'apparaîtraient pas sur son LCD.*

4.12 Background light **Lumière d'arrière-plan**

- ◆ In standby mode, you can press *Function Key* ● for 2 seconds to turn on or turn off the background light. *Dans le mode d'état d'attente, vous pouvez appuyer la Clef de Fonction pour vers de 2 seconde pour allumer ou tourner de la lumière d'arrière-plan.*
- ◆ In turn-off state, you can press *Function Key* ● for 2 seconds to turn on the background light and press *Function Key* ● or *Setting / Selection Key* ▲ again to turn off it. *Dans l'état de virage-de, vous pouvez appuyer la Clef de Fonction pour vers de 2 seconde pour allumer la lumière d'arrière-plan et appuie sur Fonction Principal ou Réglant/la Clef de Sélection encore pour tourner d'il.*
- ◆ The background light can be turned off automatically in 8 seconds, when no keys are pressed. *Après avoir a allumé la lumière d'arrière-plan, si vous n'appuyez pas de clef, la lumière d'arrière-plan peut être tournée d'automatiquement dans de 8 seconde.*

5. **Points for attention:**

- ◆ Avoid being close to humidity, high temperature, magnetic field or dropping pager.
- ◆ If you have any quality problem or trouble, please contact the company that sold the pager to you for service.
- ◆ Do not open and repair your pager for any reason as this will void the warranty.

A. THIS EQUIPMENT IS SUITABLE FOR USE IN CLASS 1, DIVISION 2, GROUPS A, B, C AND D; CLASS 2, DIVISION 2, GROUPS F AND G OR NON - HAZARDOUS LOCATIONS ONLY.

B. WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS 1, DIVISION 2.

C. WARNING-EXPLOSION HAZARD - DO NOT REPLACE BATTERY UNLESS AREA IS KNOWN TO BE NON-HAZARDOUS.

