 


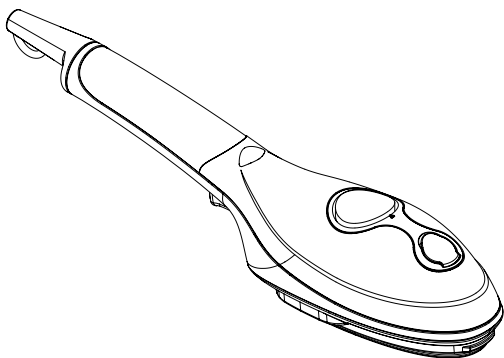

***Multi-function steam brush/iron***

MODEL: G-665

---



Instruction Manual

# IMPORTANT SAFEGUARDS

When using the appliance, basic safety precautions should always be followed, including following:

## **READ ALL INSTRUCTION BEFORE USING**


1. Save this instruction manual. Before using, read all instructions carefully and check voltage indicates on the appliance corresponding to your home voltage.
2. Use multi-function steam brush/iron for its intended use.
3. To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.
4. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let appliance cool completely before

putting away. Loop cord loosely around appliance when storing.

6. Always disconnect the appliance from electrical outlet when filling with water or emptying, and when not in use.
7. Do not operate the appliance with a damaged cord or if the appliance has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the appliance; take it to a qualified serviceman for examination and repair. Incorrect reassemble can cause a risk of electric shock when appliance is used.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave the appliance unattended while connected.
9. Do not perform steam ironing to any parts of human or pets as it may cause scald.

10. Do not iron clothes or steam clean clothes on the body as this may cause scald.
11. Burns can occur from touching hot surfaces, hot water or steam. Use caution when you turn the appliance upside down. There may be hot water in the water tank.
12. Care should be taken when using the appliance due to the emission of steam.
13. The appliance must be not be left unattended while it is connected to the supply mains.
14. The iron is intended for its ironing and steam cleaning uses (Note: Do not use steam cleaning for leather, fur etc., It is easy to cause burns on these materials in case of improper operation). Please refer to the cleaning methods described on the garment indicator label provided by manufacturer before use.

15. It is normal that there will make appear to smoke after power on. This does not indicate a defect or hazard.
16. The appliance is not to be used if it has been dropped, if there are visible sign of damage or if it is leaking.
17. If the supply cord is damaged, it must be replaced by the manufacturer, Its service agent or similar qualified persons in order to avoid a hazard.
18. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

19. the iron must be used and rested on a stable surface.
20. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
21. Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
22.  The surfaces are liable to get hot during use.

**CAUTION:** Never use any cleaning agent, spray or stain to remove agents, these may do harm to your clothes or cause fire or any unexpected hazard.

## Special instruction

1. Check and ensure that the voltage of the power socket is same as the rating marked on Voltage Selector of the appliance.
2. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.

# SAVE THESE INSTRUCTION

# PARTS AND FEATURES

- ① Main body
- ② Heating indicator light
- ③ Steam release button
- ④ Handle cover
- ⑤ Water tank
- ⑥ Water tank cover
- ⑦ Temperature control dial
- ⑧ Cord guard
- ⑨ Lint brush
- ⑩ Bristle brush
- ⑪ Stand
- ⑫ Water cup
- ⑬ Skirt
- ⑭ Brush lock
- ⑮ Soleplate
- ⑯ Little brush
- ⑰ Storage Bag

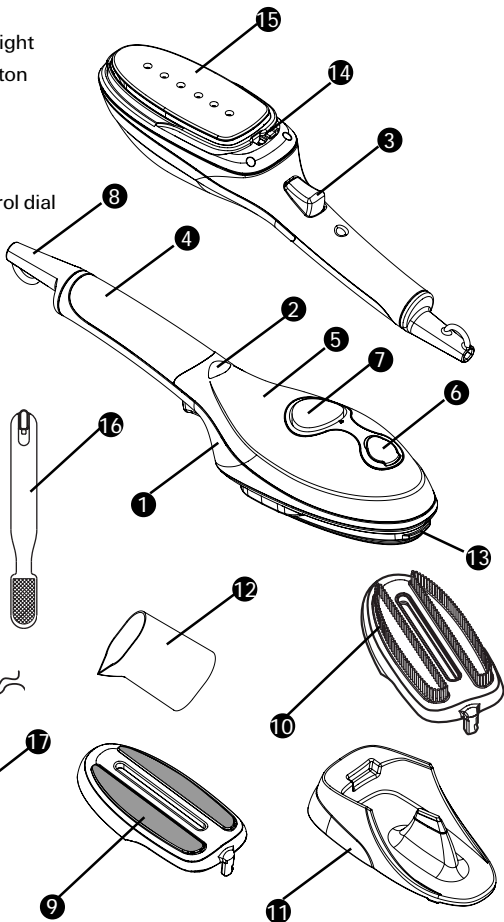 


Fig.1

# How to use your multi-function steam brush/iron

## Note:

- Before assemble or disassemble lint/bristle brush, unplug the appliance from the electrical outlet and allow it cool down completely.
- When steam ironing or steam cleaning, keep the appliance 30mm away from the clothes, Incorrect operation will cause uneven stains and ironing traces on your clothes.

## Assemble or disassemble Lint/Bristle brush

### Assemble:

- Select lint brush or bristle brush according to your requirement.
- Assemble the front of the brush attachment onto the iron. (Fig.2)
- Press down the brushes to make them be locked in place. (Fig.3)

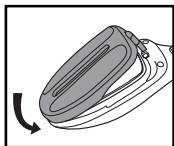 


Fig.2

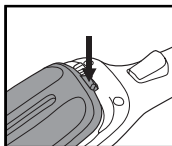 


Fig.3

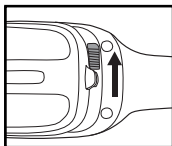 


Fig.4

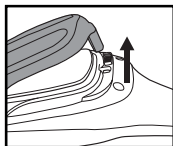 


Fig.5

**Disassemble:** Push the brush lock outwards, then take it upwards and remove. (Fig.4.5)

**Note:** Lint brush is designed for clothes, necktie and cloth. (Fig.6) Bristle brush is designed for curtains and sofa. (Fig.7)

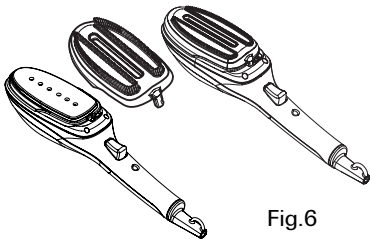 


Fig.6

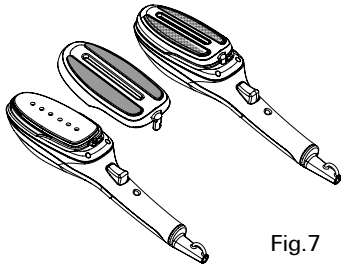 


Fig.7



# How to fill water tank

Open water tank cover, use the water cup attached to fill clean tap water into water tank up to "MAX" fill level. Replace water tank cover and dry the spilt water around the enclosure of the appliance, if necessary. Do not overfill. (Fig.8)

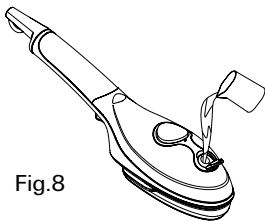 


Fig.8

## Dry ironing

- Plug the appliance into main socket, power indicator light turn on. Turn temperature control dial to desired setting according the fabric setting chart. When power indicator light turn off after the second time ON, the desired temperature has been reached, it is ready for dry ironing.
- During use, please rest your multi-function steam brush/iron on its intended stand. (fig.9)
- After use, turn temperature control dial to MIN. position, unplug the appliance from main socket, and then empty the water tank. Store the appliance after it has completely cooled down.

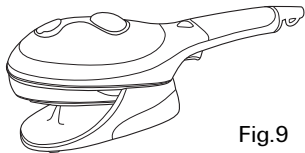 



Fig.9

## Steam ironing

- Fill water into water tank as indicated in above "How to fill water tank".
- Plug the appliance into main socket, power indicator light turn on. Turn temperature control dial to desired setting according to the fabric setting chart. When power indicator light turn off after the second time ON, the desired temperature has been reached. It is ready for steam ironing.
- Press steam release button steam for steam ironing. The steam release button should be pressed at a 2 seconds interval (if water leakage happened, it should reduce the speed of pressing the steam release button).

- d. During use, please rest your multi-function steam brush/iron on its intended stand.(fig.9)
- e. After use, turn temperature control dial to MIN. position, unplug the appliance from main socket, empty the remaining water from water tank. Store the appliance after it has completely cooled down.

## Steam cleaning

- a. Fill water into water tank as indicated in above "How to fill water tank".
- b. Select brush according to your requirement, and then assemble brush as indicated in above "Assemble or disassemble brushes"
- c. Turn temperature control dial to "  ".
- d. Every first time use. When power indicator light turn off after the second time ON, the desired temperature has been reached, it is ready for dry ironing. Press steam release button for steam ironing. The steam release button should be pressed at a 2 seconds interval (if water leakage happened, it should reduce the speed of pressing the steam release button).
- e. During use, please rest your multi-function steam brush/iron on its interded stand.(fig.9)
- f. After use, turn temperature control dial to MIN position, unplug the appliance from main socket, empty the remaining water from water tank.
- g. Store the appliance after it has completely cooled down.

 
## How to use little brush

Use little brush to remove dust from the lint brush, or clean fibre left on bristle brush when steam cleaning or any other creates from lint brush /bristle brush.


### Attachments:

- |                         |                        |
|-------------------------|------------------------|
| 1. 1pc of bristle brush | 4. 1pc of water cup    |
| 2. 1pc of lint brush    | 5. 1pc of storage bag  |
| 3. 1pc of base          | 6. 1pc of little brush |

# Multi-Direction Steam Cleaning

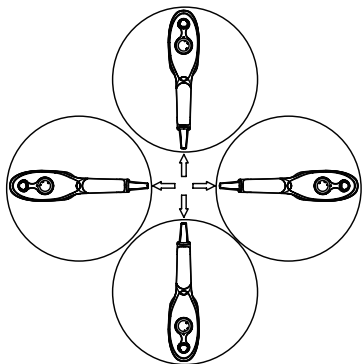

## Fabric setting chart

Steam setting	Temperature setting	Ironing instruction
Min	Min	
●	Nylon/Acetate	Dry ironing with temperature control dial set at low temperature setting. Such as Nylon/Acetate. Do not use steam, otherwise water leakage may happen.
● ●	Silk/ Wool	Dry ironing with temperature control dial set at middle temperature setting, such as Silk/ Wool. Do not use steam, otherwise water leakage may happen.
	Max/Cotton	Steam ironing or steam cleaning with temperature control dial set at high temperature setting, such as Cotton.

# Care and clean

1. Before cleaning, Unplug the unit from power socket, and allow the appliance completely cool down, and then clean with a damp cloth, do not immerse the unit into water or other liquids.
2. If ironing clothes with high temperature, which is not recommended on the garment table, will cause burns to your clothes and residue left on the sole-plate of the unit, it is proposed to iron a old cloth to remove these residue from the sole-plate.
3. After use, turn off all switches of the unit, disconnect the unit from main socket, empty remaining water from water tank and then store the unit after it has been completely cooled down.

## Statement

This appliance is patent pending, fabrication without written consent by original designer is forbidden.



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.