



User Manual - SpotterRF M600

[Introduction](#)

[M600 Required Components](#)

[Physical Setup](#)

[Direct Wire Connection](#)

[Setting Up the PC](#)

[Wi-Fi Connection](#)

[Setting up the PC](#)

[Connection Troubleshooting](#)

[Setting up Google Earth](#)

[Configuring the Radar Unit](#)

[Adjusting the Sensitivity of the Radar Unit](#)

[Calibrating the Offset Angle](#)

[Displaying Trackers](#)

[Setting up Multiple M600's](#)

Introduction

The M600 is a light-weight (about 3 ½ lb), medium range (1 km) Micro Surveillance Radar (MSR). A single M600 can provide surveillance in all visibility conditions for up to 148 acres. This manual will guide you through the setup process of an M600 radar unit.

M600 Required Components

1. M600 Radar
2. Mount
3. [Passive Power over Ethernet Injector](#)
4. Cigarette Lighter Adapter Power Cable
5. 2 Cat5 Cables
6. Laptop with Google Earth and Firefox or Chrome browsers

Physical Setup

Placement of the radar unit will directly affect its performance. Avoid pointing the radar at buildings within 100 m or vehicles within 50 m (direct reflection from large and flat surfaces can reduce the tracking performance of the radar).

Mounting the radar high will reduce reflections coming from the ground, and thereby improve its performance. Mounting the radar unit high can also improve its line of sight. Mounting at 10 ft or more is recommended for tracking a target on foot out to 1 km. Mounting on a vehicle will shorten the range to roughly 800 m, depending on the terrain.

After mounting the M600, you can set up either a direct-wired connection or a wireless connection.

Setting Up the PC

To establish a connection to the radar unit, the static IP address of your computer must be in the same sub-network as the radar unit. For example, to connect to the radar unit at its default address (192.168.254.254), your computer will use the following TCP/IPv4 settings (see fig. 2.):

IP address: *192.168.254.(any number 2-249)*

Subnet mask: *255.255.255.0*

For Windows XP, these settings can be adjusted by choosing Start > Control Panel > Network and Internet Connections > Network Connections > Local Area Connection > Properties > Internet Protocol (TCP/IP) > Properties <<

For Windows 7, these settings can be adjusted by choosing Start > Control Panel > Network and Internet > Network and Sharing Center > Change Adapter Settings > Local Area Connection > Properties > Internet Protocol Version 4(TCP/IPv4) > Properties <<



Fig. 2: Screenshot of proper network settings

After setting the IP address, open a web browser and type **192.168.254.254** into the URL. You should get the following page (see fig. 3):

QuickStart

1. Input Azimuth Orientation

Angle: Angle (in degrees) the unit is facing relative to true north (90° is East)

2. Select Wind Condition

Wind Condition: Use Low for 1-5 knot winds, Medium for 5-15, High for 15+. This reduces false alerts in windy conditions.

3. Verify Location

Use Live GPS: Select true to use the live GPS coordinates from the GPS receiver or false to manually input coordinates

Latitude: Latitude in decimal format (-90, 90)

Longitude: Longitude in decimal format (-180, 180)

Altitude: Altitude of the unit in meters (HAE is WGS-84)

Fig. 3: Screenshot of SpotterRF QuickStart web page

Wi-Fi Connection

- 1) Assure the spotter is **NOT** lying flat down against any surface.
- 2) Connect the spotter to the M12 Ethernet cable then connect the cable to the case (See Figure 1).
- 3) Connect the case to either AC power or DC power using the appropriate cable.
- 4) Turn on the Wireless switch inside the pelican case.

Setting up the PC

From the *Network Sharing Center* on your Laptop click on *Connect to a network*. Find the Network Called **BA** and click *Connect*. You will be prompted to enter a security key. The security key is: **PREMIUM93**. To establish a connection to the radar unit, the wireless static IP address of your computer must be in the same sub-network as the radar unit. For example, to connect to the radar unit at its default address (192.168.254.254), your computer will use the following TCP/IPv4 settings:

WLAN IP address: 192.168.254.(any number 2-249)

Subnet mask: 255.255.255.0

For Windows XP, these settings can be adjusted by choosing *Start > Control Panel > Network and Internet Connections > Network Connections > Wireless Network Connection > Properties > Internet Protocol 4 (TCP/IP) > Properties*

For Windows 7, these settings can be adjusted by choosing *Start> Control Panel> Network and Internet> Network and Sharing Center> Change Adapter Settings> Wireless network Connection > Internet Protocol 4 (TCP/IP)> Properties*


After establishing a connection with the network, open a web browser that supports HTML 5 (i.e. Google Chrome or FireFox 4) and type **192.168.254.254** into the URL. A web page similar to that of figure 3 should appear.

Connection Troubleshooting

Common mistakes while setting up the radar unit include:


1. The battery is dead and needs to be recharged
2. The IP address has not been set up correctly.
3. The cable from the radar unit to the case is too long. The case has a built in 19 Volt power supply, however a 24 volt power supply is required when using cable runs longer than 100 ft. **DO NOT USE AN ACTIVE POE (POWER OVER ETHERNET) SUPPLY -- A STANDARD POE SUPPLIES OUTPUT 48V DC, WHICH WILL DAMAGE THE RADAR UNIT.**

If you are unable to connect to the QuickStart page, you should verify that the computer and the radar unit have established a connection. To do this, first open up the Windows Start menu, type *cmd* into the search bar at the bottom, and press Enter. Ping the radar unit's IP address from the computer's command prompt by typing *ping -t 192.168.254.254* and pressing Enter, as seen below.

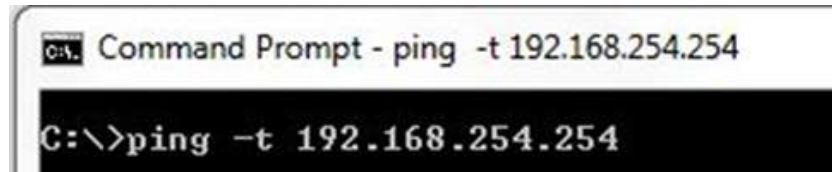

```
C:\>ping -t 192.168.254.254
```

If the radar unit is connected correctly you will see the following response in the command prompt:

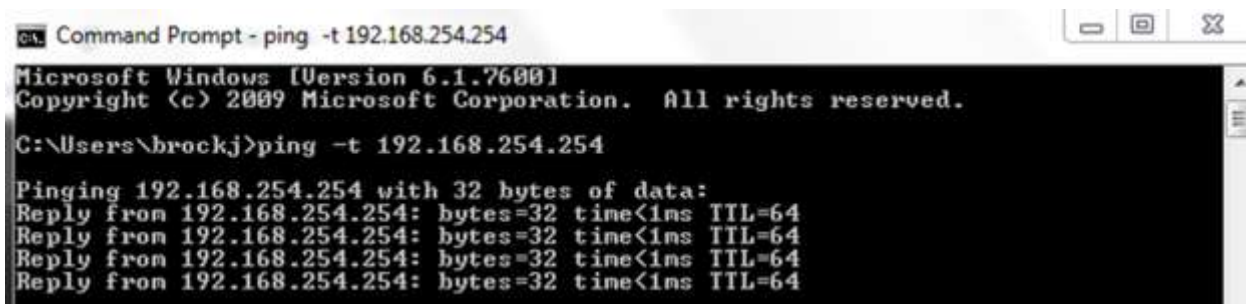


```
Microsoft Windows [Version 6.1.7600]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\brockj>ping -t 192.168.254.254

Pinging 192.168.254.254 with 32 bytes of data:
Reply from 192.168.254.254: bytes=32 time<1ms TTL=64
Reply from 192.168.254.254: bytes=32 time<1ms TTL=64
Reply from 192.168.254.254: bytes=32 time<1ms TTL=64
Reply from 192.168.254.254: bytes=32 time<1ms TTL=64
```

If this is the case but you still cannot connect to the QuickStart page, you may have entered the wrong IP address into the URL. Be sure to enter the address *192.168.254.254* exactly.

If you are not connected correctly your screen will look like this:

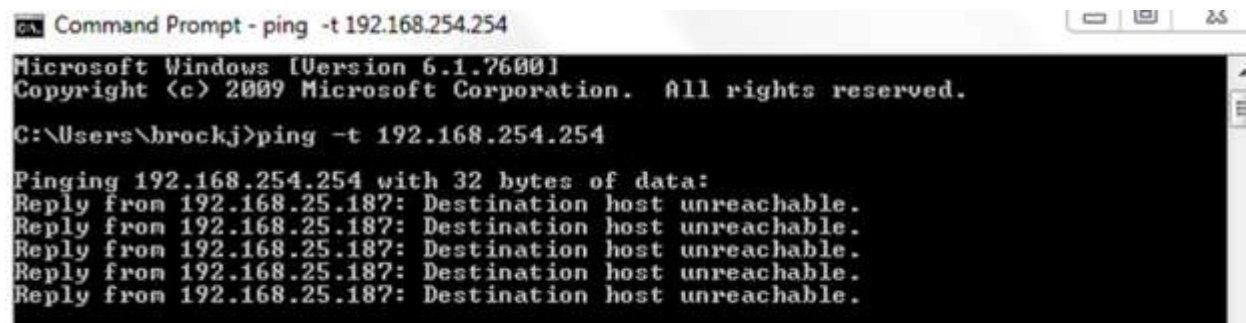

```
Microsoft Windows [Version 6.1.7600]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\brockj>ping -t 192.168.254.254

Pinging 192.168.254.254 with 32 bytes of data:
Reply from 192.168.25.187: Destination host unreachable.
Reply from 192.168.25.187: Destination host unreachable.
Reply from 192.168.25.187: Destination host unreachable.
Reply from 192.168.25.187: Destination host unreachable.
Reply from 192.168.25.187: Destination host unreachable.
```

If this is the case there could be a number of problems associated with the physical setup and/or network setup. Please verify that you followed the setup instructions exactly.

Remember: The default IP address of the radar unit is 192.168.254.254 -- You should be able to establish a connection with the radar unit at this IP address (when it is directly connected to the radar unit as shown in figure 1). The static IP address of your computer should never be the same as the IP address of the radar unit.

Setting up Google Earth

To view trackers using Google Earth, you must tell Google Earth where to find the radar unit's output file. In Google Earth, choose *Add > Network Link*. A window similar to figure 4 below should be visible.

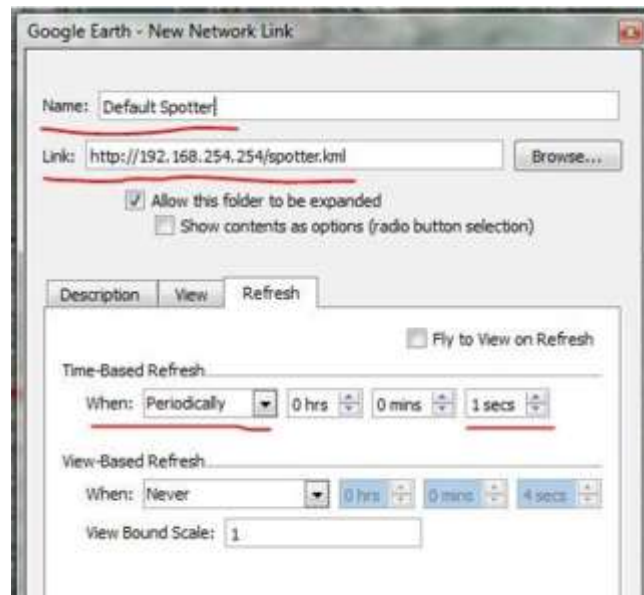


Fig. 4: New Network Link in Google Earth

Edit the fields above marked in red according to the following specifications:

- **Name:** Choose a descriptive name. This name will appear under *My Places > Places* in the right hand column (Figure 7) after adding the link.
- **Link:** *http://(The IP address of the radar unit)/spotter.kml* (e.g. <http://192.168.254.254/spotter.kml>)
- **Time Based Refresh:** When set to *Periodically*, choose *1 secs*.

Click OK. The network link just created should now be visible on the left hand side of Google Earth, as seen in figure 5 below.

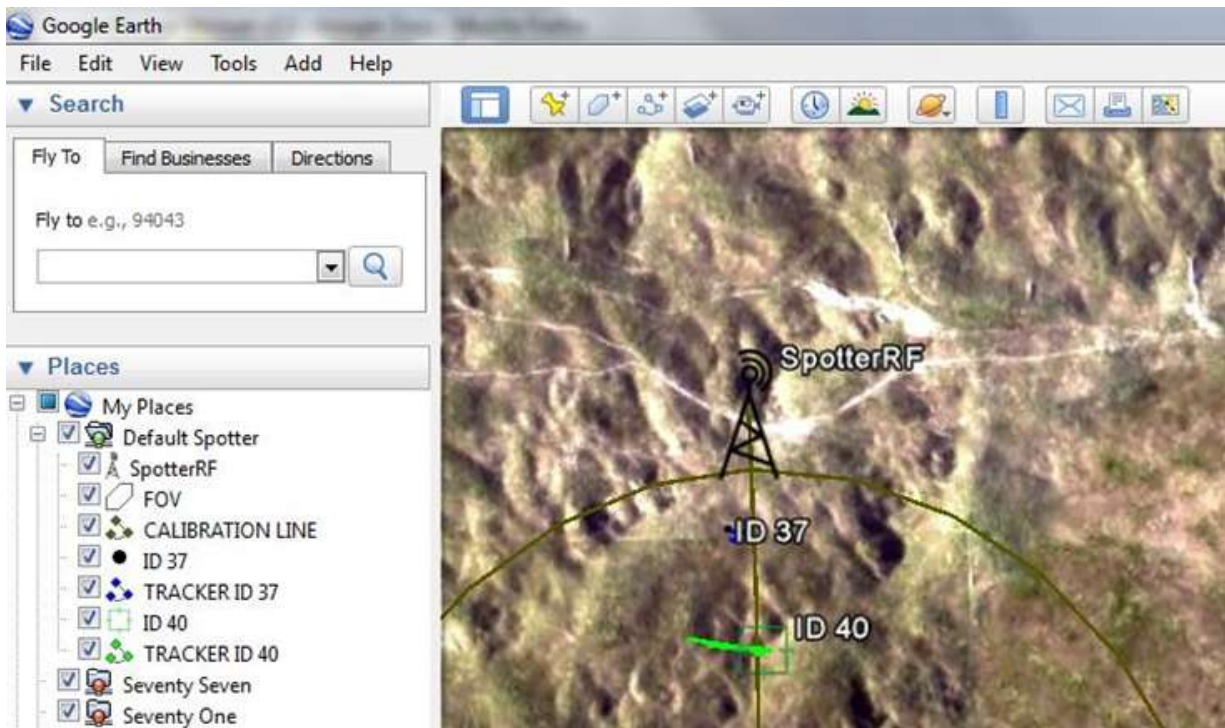


Fig. 5: Active Spotter Link in Google Earth

The icon labeled FOV corresponds to the area that is being monitored by the radar unit. The icon labeled CALIBRATION LINE corresponds to the Azimuth Angle setting on the QuickStart page of the web interface. The items labeled TRACKER ID XX correspond to trackers. If a tracker is alive, it will have cross-hairs at the current position of the tracker. If the radar is unable to sense the target being tracked for a given period of time, the tracker dies and displays a black dot.

Configuring the Radar Unit

The configuration of settings is done through the unit's web interface. To connect to the web interface, launch Google Chrome or other HTML5 compatible web browser and type the IP address of the radar unit (<http://192.168.254.254>) into the address bar of the web browser. You should see the following:

QuickStart
Network
Output
Exclusion Zones
Sensor
Firmware
Guide

QuickStart

1. Input Azimuth Orientation

Angle: Angle (in degrees) the unit is facing relative to true north (90° is East)

2. Select Wind Condition

Wind Condition: Use Low for 1-5 knot winds, Medium for 5-15, High for 15+. This reduces false alerts in windy conditions.

3. Verify Location

Use Live GPS: Select true to use the live GPS coordinates from the GPS receiver or false to manually input coordinates

Latitude: Latitude in decimal format (-90, 90)

Longitude: Longitude in decimal format (-180, 180)

Altitude: Altitude of the unit in meters (HAE is WGS-84)

Fig. 6: Screen shot of QuickStart Page

1. First you must input the azimuth angle the radar is pointing. You can use either a compass or the ruler function in Google Earth to determine the azimuth (in degrees) the Spotter is pointing. To do this open the ruler function in Google Earth. Drop one point at the base of the radar and another point out at the direction the radar is facing.

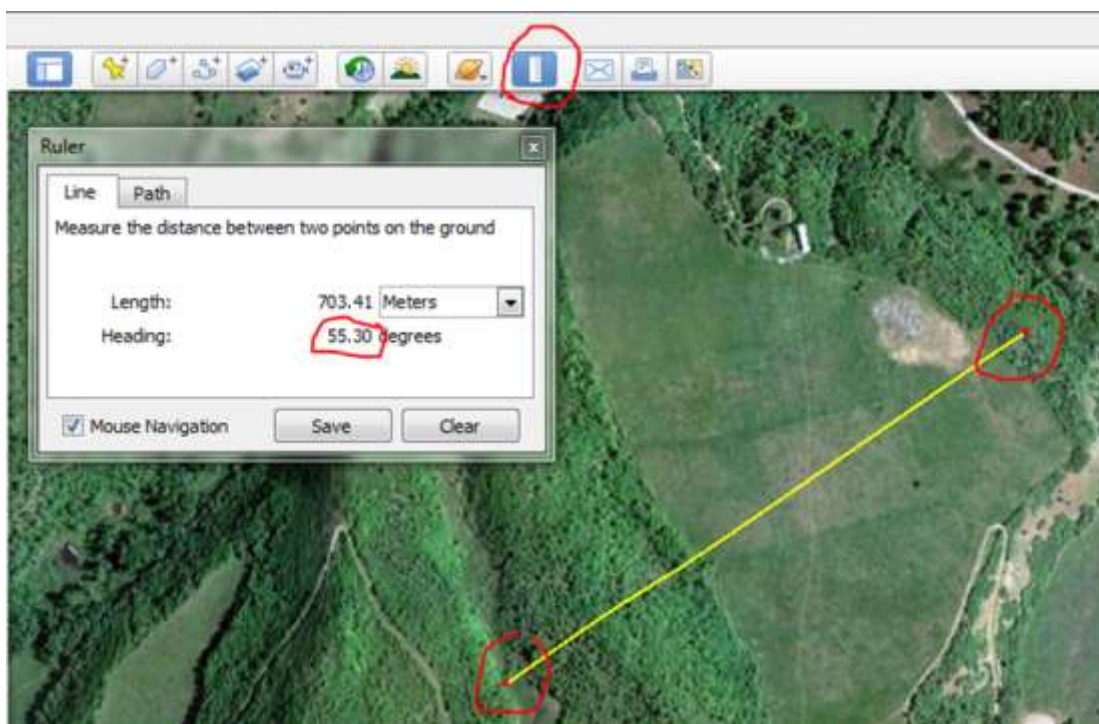


Fig. 7: Using Ruler to measure heading and range in Google Earth

2. If the radar unit has the Garmin GPS receiver attached, it should be detecting satellites within a few minutes (typically less than a minute after initial boot-up in a new location). If the GPS receiver does not lock on to any satellites, manually input the time, latitude, and longitude of the radar unit in decimal format. A simple way to get accurate latitude and longitude, is by opening Google Earth, placing a new placemark at the location of the radar unit, and then copying and pasting the coordinates from Google Earth into their corresponding fields on the "GPS/Time" tab of the web interface.

If Google Earth is not displaying your Lat/Long coordinates in the decimal degree format, choose *Tools > Options > 3D View > Show Lat/Long > Decimal Degrees*


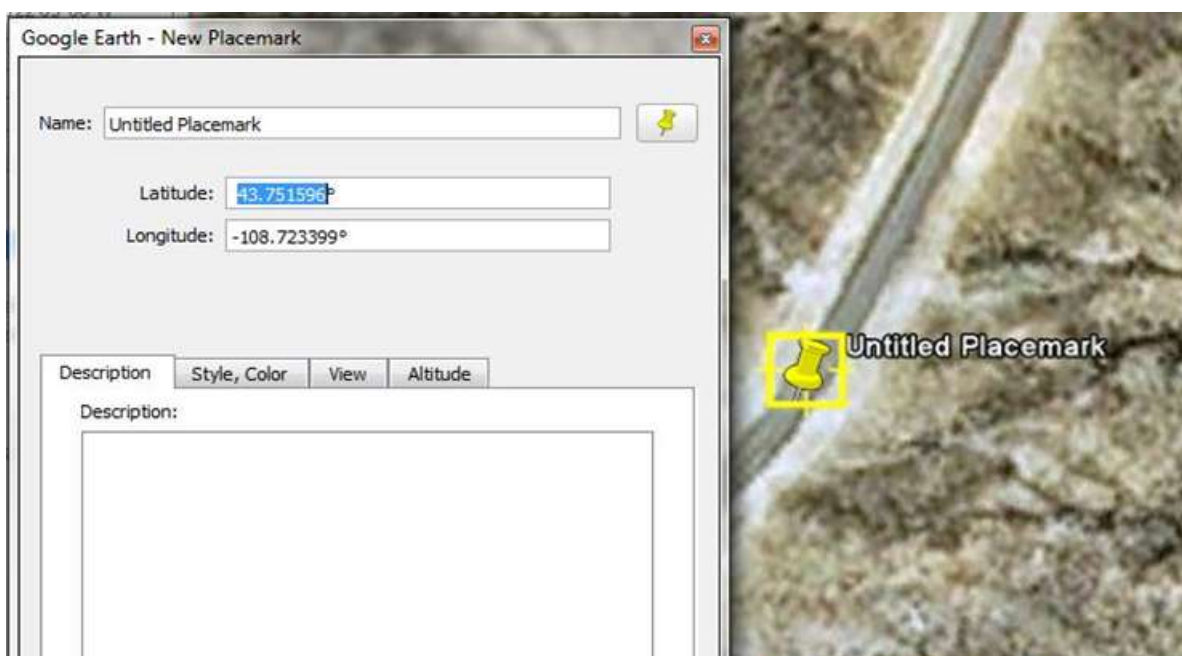


Fig. 8: Using Placemarks to read GPS coordinates in Google Earth

Adjusting the Sensitivity of the Radar Unit

There are two ways to adjust the Sensitivity of the Radar. The simplest way is on the Quick Start page, under “Select Wind Condition”.

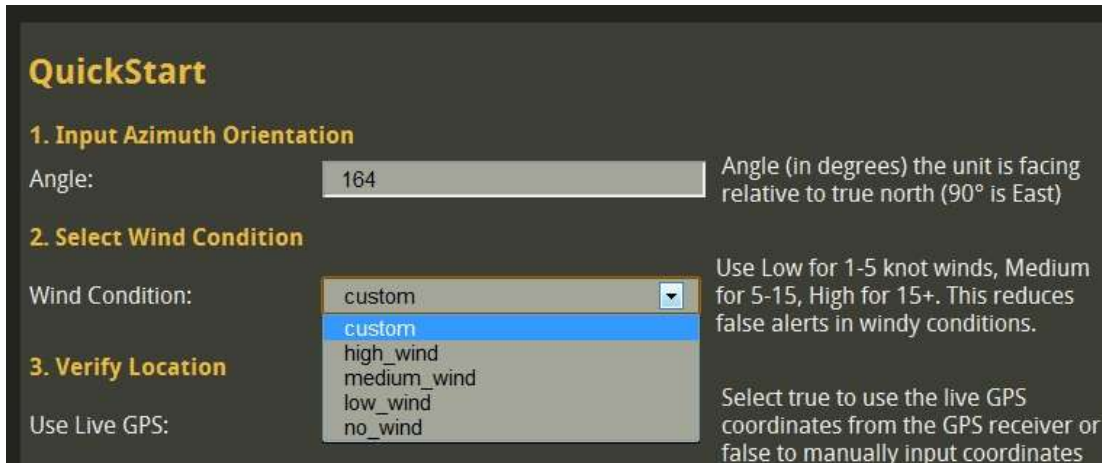

The screenshot shows a 'QuickStart' configuration window with a dark background and yellow text. It is divided into three sections: 1. Input Azimuth Orientation, 2. Select Wind Condition, and 3. Verify Location. In the first section, 'Angle' is set to 164. In the second section, 'Wind Condition' is set to 'custom' from a dropdown menu. In the third section, 'Use Live GPS' is a checkbox. Explanatory text for each section is provided to the right of the input fields.

QuickStart

1. Input Azimuth Orientation

Angle: Angle (in degrees) the unit is facing relative to true north (90° is East)

2. Select Wind Condition

Wind Condition: Use Low for 1-5 knot winds, Medium for 5-15, High for 15+. This reduces false alerts in windy conditions.

3. Verify Location

Use Live GPS: ☐ Select true to use the live GPS coordinates from the GPS receiver or false to manually input coordinates

There are three settings under this option:

1. High_wind - Will detect vehicles and some walkers that are in open areas.
2. Medium_wind - Will detect walkers and vehicles; not crawlers, wind, or noise
3. Low_wind - Will detect vehicles, walkers and some crawlers.
4. No_wind - Will detect crawlers, walkers vehicles and all wind blown clutter

For more comprehensive settings open the “Sensor” tab, as seen in figure 6 below:

Sensor

Ground to Air Mode:	false	Rotate Spotter so that it is looking vertically up into the air and select true for Ground to Air Mode.
Base Angle:	0	Angle (in degrees) the Base of the unit is facing relative to true north (90° is East). This is the azimuth angle if the unit was looking horizontal and in normal Ground Surveillance Mode.
Disable Filters:	false	Disables the use of the cluttermap and some of the wind-detection algorithms.
Detection Sensitivity:	7	Sensitivity of the unit to potential trackers. 10 is the most sensitive and yields the greatest number of trackers.
Detection Min Velocity:	2	Minimum detectable velocity in m/s. The minimum radial velocity a potential target must be moving to be displayed
Angular Calibration:	3	Calibrates the true angle of the tracker. Increasing the angle will cause the tracker to rotate counter-clockwise (-45, 45)
Track Range Threshold:	4	The radial distance (meters) a target must move to be displayed
Track Min Detection:	6	Minimum number of times a potential target must be detected during the Tracker Activation Time to be displayed
Tracker Activation Time:	2	The number of seconds a potential target has to receive Track Min Detections before being killed
Tracker Kill Time:	4	The number of seconds a tracker can stay active without there being a detection in that region
Track Smooth Output:	false	Smooths the tracker position output. May increase the latency in the display of target movement

Fig. 9: Sensor Page on the Web Interface

If there are particular distances that false trackers are appearing from wind blown objects or noise, the user can set exclusion zones on the **Zones** tab to eliminate any tracks at those ranges. An example is shown below:

QuickStart

Network

Output

Exclusion Zones

Sensor

Firmware

Guide

Exclusion Zones

Exclusion Zone 1 Min:	<input type="text" value="0"/>	The beginning of the first exclusion zone measured radially in meters
Exclusion Zone 1 Max:	<input type="text" value="0"/>	The end of the first exclusion zone measured radially in meters
Exclusion Zone 2 Min:	<input type="text" value="0"/>	The beginning of the second exclusion zone measured radially in meters
Exclusion Zone 2 Max:	<input type="text" value="0"/>	The end of the second exclusion zone measured radially in meters

Fig. 10: Using exclusion zones

Calibrating the Offset Angle

Depending on the environment surrounding the radar, trackers might be appearing offset at an angle.



Figure 11. Tracks with an Angular offset

The solution to this problem is adjusting the **angular offset calibration** setting as described on the **Sensor** tab of the web interface.

To fix the picture above, you would first measure the offset angle of the trackers (about thirty six degrees.) Since you want the tracks to be rotated clockwise, you would need to reduce the angular offset calibration by thirty six.

Angular Calibration:	<input type="text" value="-36"/>	Calibrates the true angle of the tracker. Increasing the angle will cause the tracker to rotate counter-clockwise (-45, 45)
----------------------	----------------------------------	---

Figure 12. Angular Calibration

When there is not enough traffic to know if the trackers are appearing offset at an angle, have a person walk down a known path, and calibrate accordingly.

Displaying Trackers

To change how tracks are displayed in Google Earth you can adjust two settings on the Output tab of the web interface:


Adjusting KML Track Timeout will affect the amount of time an inactive tracker is displayed on Google Earth. If the radar unit is monitoring an area with very little activity, using a KML track Timeout of five minutes may be preferred so that past activity is more obvious. If there is more traffic and the user is only interested in real time output, a KML Track Timeout of ten seconds or less is recommended.

Setting up Multiple M600's

If you want to set up multiple radars to be viewed on the same computer you will need to network the M600s using a standard Ethernet switch. It is essential that care is taken to avoid interference. **To avoid interference, use units with different RF channels.** The RF channel is labeled on the bottom of your unit as a sticker numbered between four and eight.

Each radar must be assigned a unique IP address otherwise you will not be able to distinguish between the radars on the network.

To do this you must connect to each radar individually and assign it a unique IP address. Open the QuickStart page as you would in a single radar setup (<http://192.168.254.254>) Next, go to the network tab of the web interface.

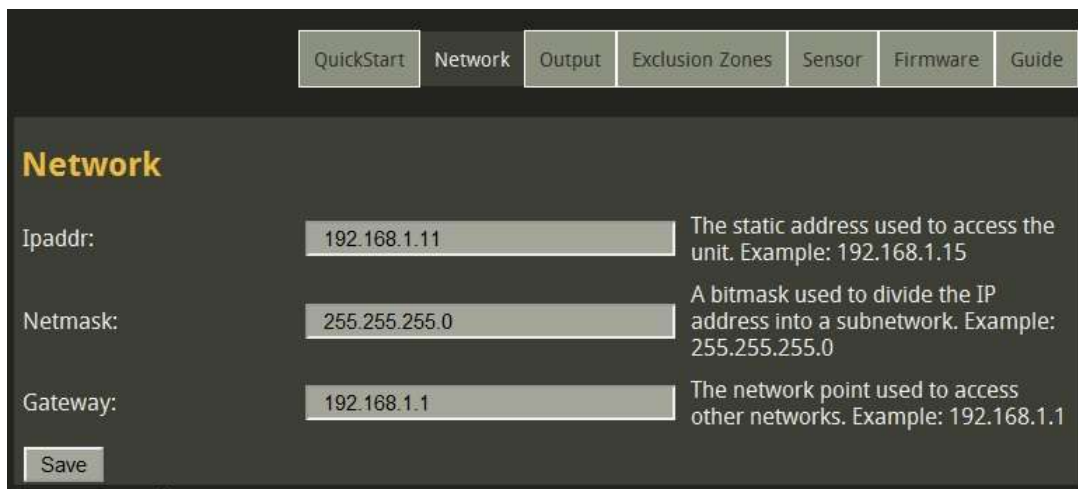

The screenshot shows the 'Network' tab selected in a web interface. The tab bar at the top includes 'QuickStart', 'Network', 'Output', 'Exclusion Zones', 'Sensor', 'Firmware', and 'Guide'. The 'Network' section has a title 'Network' in orange. Below it are three input fields: 'Ipaddr:' with the value '192.168.1.11', 'Netmask:' with the value '255.255.255.0', and 'Gateway:' with the value '192.168.1.1'. To the right of each field is a descriptive text: 'The static address used to access the unit. Example: 192.168.1.15' for Ipaddr, 'A bitmask used to divide the IP address into a subnetwork. Example: 255.255.255.0' for Netmask, and 'The network point used to access other networks. Example: 192.168.1.1' for Gateway. A 'Save' button is located at the bottom left of the form.

Field	Value	Description
Ipaddr:	192.168.1.11	The static address used to access the unit. Example: 192.168.1.15
Netmask:	255.255.255.0	A bitmask used to divide the IP address into a subnetwork. Example: 255.255.255.0
Gateway:	192.168.1.1	The network point used to access other networks. Example: 192.168.1.1

Figure 15

Each Spotter must have a unique IP address but the same first 9 digits and the last three digits being between 1 and 253. We suggest you edit the settings as follows:

Setting Up the PC

To establish a connection to the radar unit, the static IP address of your computer must be in the same sub-network as the radar unit. For example, to connect to the radar unit at its default address (192.168.254.254), your computer will use the following TCP/IPv4 settings (see fig. 2.):

IP address: 192.168.254.(any number 2-249)

Subnet mask: 255.255.255.0

For Windows XP, these settings can be adjusted by choosing Start > Control Panel > Network and Internet Connections > Network Connections > Local Area Connection > Properties > Internet Protocol (TCP/IP) > Properties <<

For Windows 7, these settings can be adjusted by choosing Start > Control Panel > Network and Internet > Network and Sharing Center > Change Adapter Settings > Local Area Connection > Properties > Internet Protocol Version 4(TCP/IPv4) > Properties <<