

# COOKWORKS

S I G N A T U R E

COFFEE MAKER

INSTRUCTION MANUAL



## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or personal injury.


1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the appliance.
3. Do not immerse appliance, cord or plug in water or other liquid.
4. Unplug from outlet when not in use and before cleaning.
5. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. The use of accessory is not recommended by the appliance manufacturer. It may result in fire, electric shock and/or personal injury.
7. Do not let cord hang over edge of table or counter, or touch hot surface.
8. To disconnect, remove plug from wall outlet. Always hold the plug, do not pull the cord.
9. Do not use appliance for other than intended use and place it in a dry environment .
10. Do not leave the coffee maker unattended while it is operating, the appliance cannot be operated by children.
11. Be careful steam can burn.
12. Never use the appliance if the carafe shows any signs of cracks. Only use the carafe with this appliance. Use carefully as the carafe is fragile.
13. Never use your coffee maker without water in it. Use cold water only.
14. Never leave the empty carafe on the keep warm plate otherwise the carafe is liable to crack.
15. Do not use the carafe to hold ice cubes. Do not put carbonated drinks in the carafe.
16. Do not use outdoors.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and

knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

18. Children should be supervised to ensure that they do not play with the appliance.

## SAVE THESE INSTRUCTIONS

### KNOW YOUR APPLIANCE

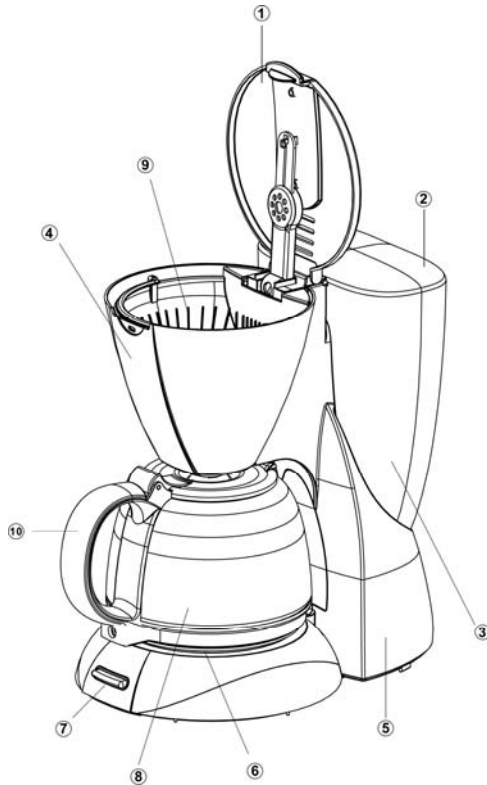

#### DESCRIPTION

1. Lid;
2. Water Tank Cover;
3. Water Tank;
4. Filter holder;
5. Main body;
6. Keep warm plate;

7. ON/OFF switch with indicator;
8. Carafe;
9. Filter;
10. Glass Jug Handle.

## **BEFORE FIRST USE**

Check that the accessories are complete. Brew cold water up to MAX mark for one or two times. Pour water out and clean carafe and filter holder thoroughly.

## **USING THE APPLIANCE**

1. Open the water tank lid of coffee maker, fill with desired quantity of cold water into the tank. The water level should not exceed the MAX level. The water tanks level indicates the number of cups of coffee. Your coffee maker can make up to 12 cups of coffee.
2. Open the lid of the filter holder and place the filter into the filter holder correctly.
3. Add coffee grounds into filter. Usually a cup of coffee needs a spoon of coffee ground. You may adjust according to your taste. Close the lid.
4. Place the carafe on keep warm plate horizontally.
5. Plug the power cord into the wall outlet, turn on the switch and the indicator will illuminate. The appliance will begin to work.
6. Do not open the filter holder lid when the coffee maker is operating. The hot water in the tank may splash and burn.
7. You can remove the carafe, pour and serve when brewing has finished (about one minute after the coffee stops dripping out.)
8. The coffee can be kept warm on the keep warm plate, we suggest the time for keeping warm is not more than 1 hour. For optimum coffee taste, serve just after brewing.
9. Always turn off the coffee maker and unplug the power cord from the electrical outlet when the coffee maker is not in use.

**Note:** the coffee you get will be less than the water you have put in, as some water is absorbed by coffee ground.

**Note:** you can take out the carafe, pour and serve at any time. The appliance will stop dripping automatically. However, the time should not exceed 30 seconds.

**Note:** pay attention when pouring out the coffee as the coffee temperature is high right after the brewing.

## CLEANING

Unplug the appliance before cleaning. To protect against electric shock, do not immerse cord, plug or unit in water or other liquids.

1. Clean the filter and carafe after each use in warm water.
2. Wipe the exterior surface with a soft, damp cloth to remove stains.
3. Use a damp cloth to gently wipe the keep warm plate. Never use abrasive cleaner to clean it.

## DO NOT IMMERSE IN WATER OR ANY LIQUID

### Descaling

Descaling of your coffee maker is recommended from time to time, this will help maintain peak efficiency of your coffee maker. If you only use your coffee maker once or twice a day, the following guidelines for descaling will apply.

Soft water area	Every 6 months
Medium hard water area	Every 2-3 months
Hard water area	Every 6-8 weeks

- Fill the water tank with **one part white vinegar and three parts cold water**.
- Switch the coffee maker on. During cleaning, the unit may produce more steam than when brewing normally.
- Keep the coffee maker switched on until the water level is half the original level, then switch off the unit. When the liquid stops dripping into the carafe, remove the filter and carafe and allow the liquid to cool for 15 minutes.
- When the liquid has cooled, pour it back into the water tank. Replace the filter

and return the carafe to the keep warm plate.


- Switch the coffee maker on and repeat the procedure, this time allowing all the solution to empty into the carafe. After dripping has stopped switch the coffee maker off and discard the contents of the carafe.
- Allow the coffee maker to cool for ten minutes and replace the filter, then rinse the unit by brewing a full carafe of fresh cold water a few times.
- Wash the carafe and the filter in hot soapy water and rinse.
- Wipe the exterior with a damp cloth, then dry all the parts.

## **CONNECTION TO POWER**

- Before connecting, check that the voltage indicated on the appliance (bottom of the appliance) corresponds with the main voltage in your home. If this is not the case, consult your dealer and do not use.
- This appliance may be fitted with a non-rewirable plug. If you need to change the fuse in a non-rewirable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained (available from the appliance manufacturer).
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.
- This unit must be earthed. This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

**For your own safety read the following instructions carefully before attempting to connect this unit to the mains.**

You should only plug the appliance into a 230V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance.

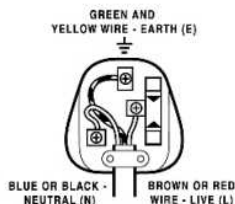

The wires in this mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL  
BROWN = LIVE  
GREEN + YELLOW = EARTH

## IMPORTANT

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:



### Caution

To prevent electric shock disconnect from the mains before removing the cover

- The blue wire must be connected to the terminal marked with the letter N or coloured black.
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
- The green and yellow wire must be connecting to the terminal marked with the letter E or the earth symbol. ( $\perp$ ).

If a 13 Amp (BS1363) fused plug is used it must be fitted with a 13A fuse conforming to BS1362 and be ASTA approved.

If in doubt contact a qualified electrician

## DISPOSAL INFORMATION



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

## GUARANTEE

This product is guaranteed against manufacturing defects for a period of 1 year.

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement

Your statutory rights remain unaffected

Guarantor; Argos Ltd  
489 – 499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW