

TOUCH DIAMOND

 
Read First Poster

Barcode

P/N

2 Your HTC Touch Dual™


Left, Front, and Bottom View

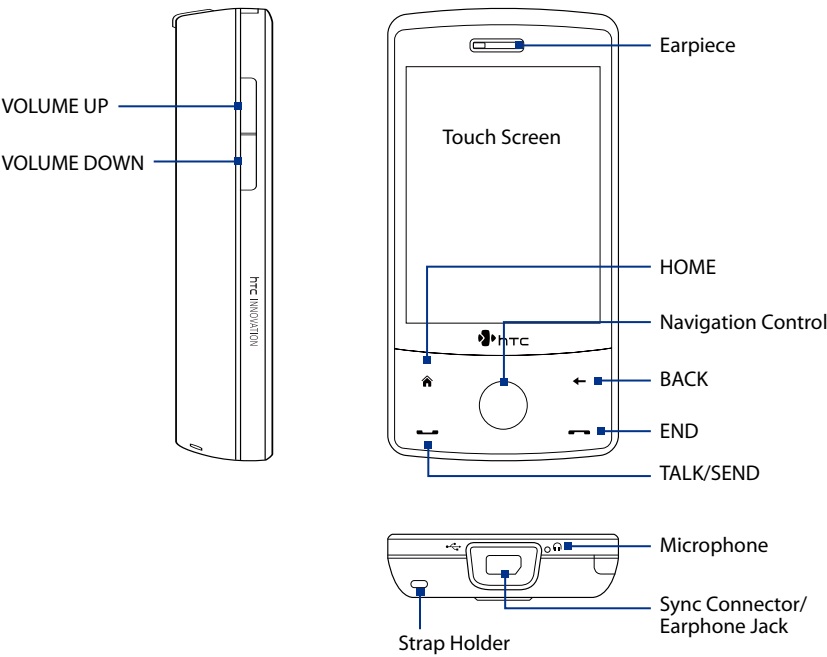

1 What's in the Box

- The Touch Diamond Phone
- Battery
- Extra Stylus
- AC Adapter
- Wired Stereo Headset
- USB Sync Cable
- Multifunction Audio Cable
- Pouch
- Screen Protector
- Read First Poster and Quick Start Guide
- Getting Started Disc

 
Top, Back, and Right View

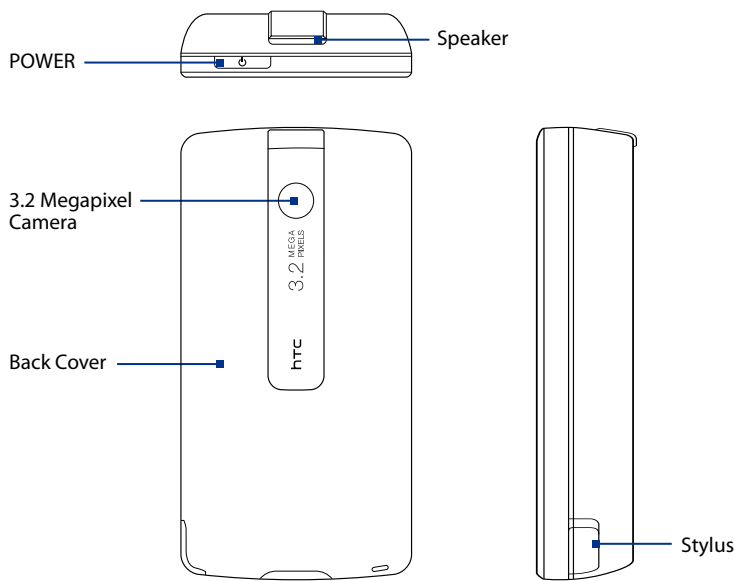

3 Battery and Power

Installing the Battery

 1. Make sure your device is turned off.
2. Hold the device with both hands and the front panel facing down. Push the back cover up with your thumb until it disengages from the device and then slide it up to remove.
3. Align the battery's exposed copper contacts with the battery connectors inside the battery compartment. Insert the contact's side of the battery first and then gently push the battery into place.
4. Replace the back cover.

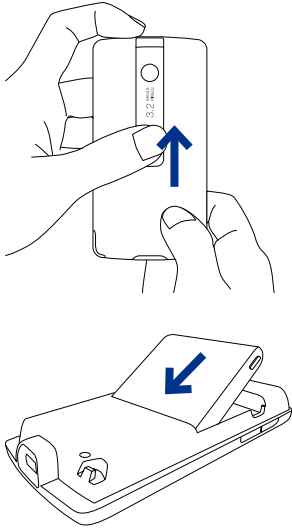

Charging the Battery

1. Connect the USB connector of the AC adapter to the sync connector on your device.
2. Plug in the AC adapter to an electrical outlet to start charging the battery. The battery is fully charged after about **3 hours** of charging.

Starting Up

After installing the battery and charging the battery, you can now power on and start using your device.

1. Press and hold the POWER button for a few seconds.
2. A Quick Start Wizard guides you through the calibration of the screen and the setup of regional settings, date and time, and password. Follow the onscreen instructions to finish the Quick Start Wizard. After the Quick Start Wizard finishes, the device installs customization settings, then restarts.

Sleep Mode

When the device is turned on, press and immediately release the POWER button to turn off the display temporarily and switch your device to **Sleep mode**. Sleep mode suspends your device to a low power state while the display is off in order to save battery power.

 
Your device automatically goes into Sleep mode when you leave the device idle after a certain period of time.

You will still be able to receive messages and calls while your device is in Sleep mode. Pressing the POWER button again or incoming calls/messages will wake up your device.

4 The Home Screen

TouchFLO™ 3D

The Home screen of the device is the TouchFLO™ 3D Home screen, which allows finger-touch access to the most important functions such as contacts, text messages, e-mail, Internet, and more.

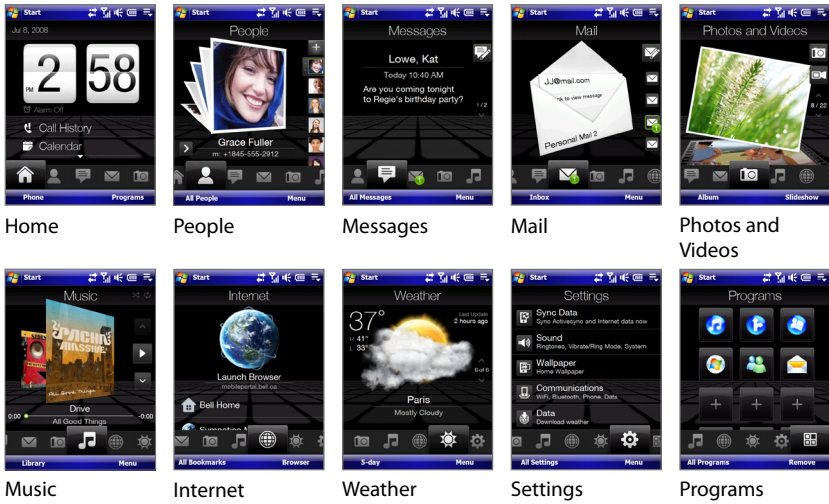

Switching between the Tabs

Press and hold your finger on the active tab, then slide your finger right or left over the tabs. Release when you have selected the desired tab.

You can also swipe left or right across the screen to go to the next or previous tab.

 


Finger Gestures

You can use finger gestures to scroll, pan, and zoom on the touch screen of your device.

Finger scrolling

You can easily scroll the screen by simply sliding your finger on the touch screen.

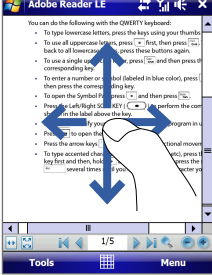

Finger panning

On the touch screen, drag your finger in any direction to move to other parts of a zoomed photo, Web page, document, or an e-mail.



Finger zooming

The type of finger gesture to use when zooming varies in different programs:

- To zoom in on a Web page, tap your finger twice on the screen.
- To zoom in on a photo in Album, make a full-circle swipe on the touch screen.

5 Using the Phone

 
Making your first call

- 1. On the Home screen, tap **Phone** to open the Phone screen.
- 2. Tap the keys on the keypad to enter the phone number.
- 3. Press the TALK/SEND button to place the call.




Answering a Call

Tap **Answer** or press TALK on the device to answer an incoming call.

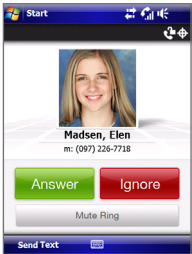


End a Call

 Tap **End Call** or press END on the device to hang up.

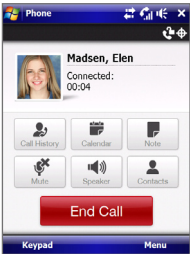

In-Call Options

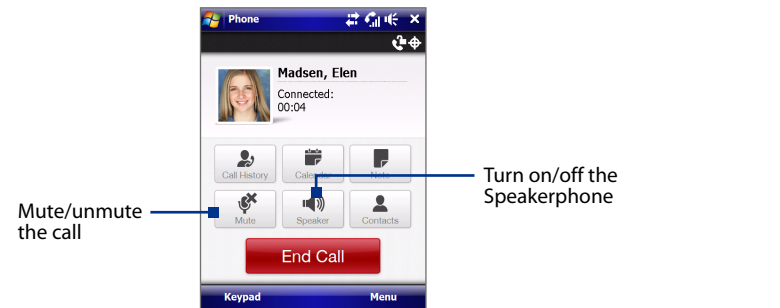 

6 Synchronizing Information

Set up ActiveSync® on Windows XP®

The Getting Started Disc that comes with your device contains Microsoft ActiveSync 4.5 or later. Follow the steps below to install and set up ActiveSync on Windows XP or other compatible Windows systems.

Install ActiveSync

- 1. Insert the Getting Started Disc into the disc drive on your PC.
- 2. Click **Setup and Installation**.
- 3. Follow the step-by-step instructions to complete the installation. After the software has been completely installed, restart your PC.
- 4. When your PC boots up, verify that the ActiveSync icon () appears on your desktop (in the lower right corner).
- 5. Connect your device to the PC, and ActiveSync will automatically detect your device and prompt you to set up a partnership. When it is connected successfully, the ActiveSync icon turns GREEN ().

Windows Mobile® Device Center

Microsoft Windows Mobile® Device Center is the replacement for Microsoft® ActiveSync® on Windows Vista® . When you connect the device to your Windows Vista PC and start Windows Mobile Device Center for the first time, you will be asked to create a Windows Mobile partnership with the device.

- 1. Connect your device to your PC. The Windows Mobile Device Center will open.
- 2. On the license agreement screen, click **Accept**.
- 3. On the Windows Mobile Device Center's Home screen, click **Set up your device**.
- 4. Select the information types that you want to synchronize, and then click **Next**.
- 5. Enter a device name and click Set Up. When you finish the setup wizard, Windows Mobile Device Center synchronizes your device automatically.
- 6. When you are finished, you can use Windows Mobile Device Center to synchronize information and manage your device.

7 Personalizing Your Device

 
To set date and time

- 1. On the Home screen **Home** tab, tap the time display to open the Clock & Alarms Settings screen.
- 2. On the **Time** tab, select the correct time zone and change the date or time.



To set an alarm

- 1. On the Clock & Alarms Settings screen, select the **Alarms** tab.
- 2. Select a check box and tap **<Description>** to enter a name for the alarm.
- 3. Tap the days of the week, and tap the time to open a clock and set the time for the alarm.
- 4. Tap the alarm icon () to specify the type of alarm you want. When done, tap **OK**.

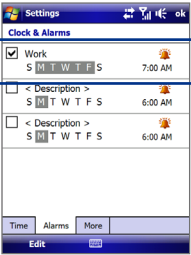

To change the ringtone

- 1. On the Home screen, slide to the **Settings** tab and then tap **Sound**.
- 2. On the Sound screen, scroll down to **Ringtone** and tap it.
- 3. On the Ringtones screen, tap the ringtone you want to use and tap **Done**.



 
To change the Home screen display

- 1. On the Home screen, slide to the **Settings** tab and then tap **Wallpaper**.
- 2. On the Select a Picture screen, tap the picture that you want to use.
- 3. Tap **OK**. The background image of the Home screen will then change to your own picture.



8 Using the Comm Manager

Comm Manager is a central location where you can easily turn on and off the communication features of your device such as the phone, Wi-Fi, data connection, Bluetooth, and more.

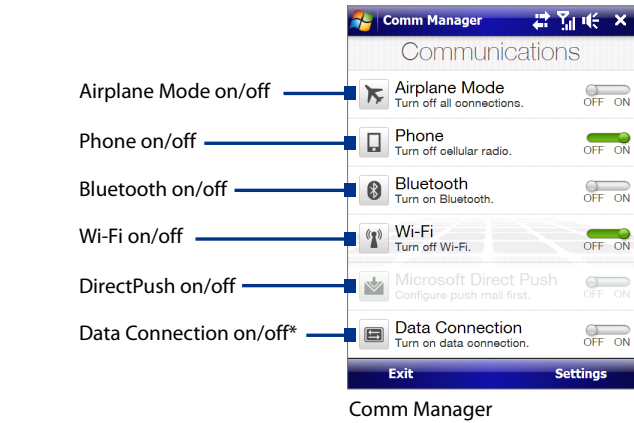

* Tap to disconnect active data connections. However, you cannot reconnect data connections in Comm Manager.

9 For More Information

- To learn more about using your device, please refer to the User Manual (the PDF file on the provided CD).
- For more information about ActiveSync, visit: <http://www.microsoft.com/windowsmobile/help/activesync/default.mspx>.
- For customer support, service rates, and product information, visit: www.bell.ca.