



EN

MOTOROLA **RAZR™**

CONGRATULATIONS

MOTOROLA RAZR™

Introducing the powerful phone in a RAZR slim design! MOTOROLA **RAZR** has tons of advanced features for everything you want to do—video, web browsing, multimedia, and more.

- A blistering fast dual-core 1.2 GHz processor lets you download web pages in under a second, and makes multi-tasking a snap.
- Use your 8MP camera to capture life's moments in full 1080p HD video. Your phone's 4.3" qHD Super AMOLED Advanced display makes video playback crisper and more vivid than ever before.

Note: Certain apps and features may not be available in all countries.



Caution: Before assembling, charging, or using your phone for the first time, please read the important safety, regulatory and legal information provided with your product.



This product meets the applicable limit for exposure to radio waves (known as SAR) of 2.0 W/kg (ICNIRP). The limits and guidelines include a substantial safety margin designed to assure

the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the regulatory information packaged with your product.

MORE

- **Answers:** Touch Apps  >  **Help Center.**
- **Updates:** Phone updates, computer software, user guides, online help, and more at www.motorola.com/myrazr.
- **Accessories:** Find accessories for your phone at www.motorola.ca.

YOUR PHONE

the important keys & connectors



Note: Your phone might look a little different.

 
CONTENTS

LET'S GO	3
CONTROL	5
HOME SCREEN	10
APPS & UPDATES	13
CALLS	15
PEOPLE	18
MESSAGES	21
TEXT ENTRY	22
SOCIAL NETWORKING	24
TIPS & TRICKS	26
WEBTOP APPLICATION	27
DIGITAL LIVING	28
PHOTOS & VIDEOS	29
MUSIC	32
WEB	34
PERSONALIZE	38
LOCATION	39
WIRELESS	41
TOOLS	44
MANAGEMENT	48
SECURITY	53
TROUBLESHOOTING	55
SAFETY, REGULATORY & LEGAL	56

LET'S GO

let's get you up and running

ASSEMBLE & CHARGE

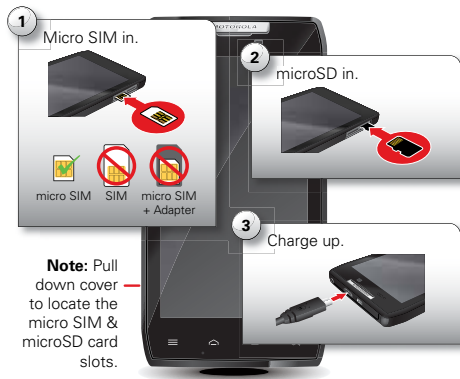

Note: This product uses a non-removable battery. The battery should only be replaced by a Motorola-approved service facility. Any attempt to remove or replace your battery may damage the product and void your warranty.

Tip: In the unlikely event that your device becomes unresponsive, try a forced reboot—press and hold both the Power key and the down volume key for up to 10 seconds.

Tip: To save battery life, see “**BATTERY TIPS**” on page 26.

SET UP & GO



Note: This phone supports apps and services that use a lot of data, so make sure your data plan meets your needs. Contact your service provider for details.

INITIAL SETUP

Create or log in to your Google™ account to get access to all of your Google services, like Gmail™, Google+, Google Play™ Store, and more. Registration is secure and only takes a few minutes. Your Gmail contacts are synced to the phone when you log in to your Google account.

To set up additional personal email accounts or a corporate email account, follow the on-screen instructions.

For more information about setting up accounts on your phone, see “**ACCOUNT MANAGEMENT**” on page 49.

WI-FI CONNECT

If you want to use a Wi-Fi network for even faster Internet access, touch the status bar at the top of the home screen and drag it down. Touch the **Wi-Fi networks available** notification to select a preferred network.

You can also touch Menu  > **System settings**, then drag the **Wi-Fi** power  switch to the right to turn it on. There's more in “**WI-FI NETWORKS**” on page 41.

COOL CONTENT & MORE

Browse and download thousands of the coolest apps on the planet from Google Play™ Store.

Download new apps with “**BROWSE & INSTALL APPS**” on page 13. You can install a microSD memory card in your phone, and load it up with photos, videos, and music from your computer (see “**MEMORY CARD & FILE MANAGEMENT**” on page 48).

 
CONTROL

a few essentials

TOUCH TIPS

It's all in the touch:

 
- **Touch:** Choose an icon or option.
- **Touch & Hold:** Select an item and open an action bar.
- **Drag:** Move items in the home screen, or scroll slowly through lists.
- **Flick:** Scroll quickly between views or through lists.
- **Pinch or double-touch:** Zoom in and out on websites, photos, and maps.

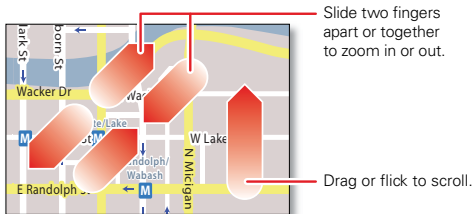

UNLOCK & LOCK TOUCHSCREEN




To unlock the screen, press the Power key, then touch  and flick to .

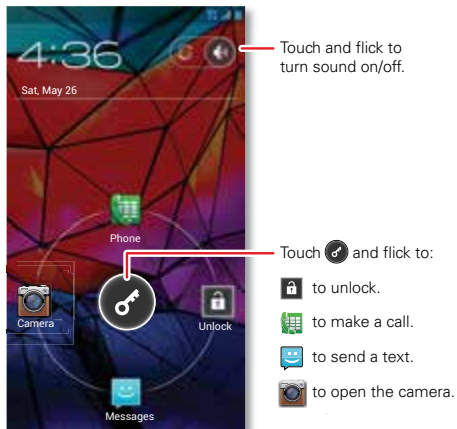To lock the screen, press the Power key, or let the screen time out (don't press anything).



TOUCHSCREEN ON/OFF

Your touchscreen is on when you need it and off when you don't.


- When you hold the phone to your ear during calls, your touchscreen sleeps to prevent accidental touches.
- To make your touchscreen sleep or wake up, just press the Power key.
- To change how long your phone waits before the screen goes to sleep automatically, touch Menu  > **System settings** > **Display** > **Sleep**.
- To make the screen lock when it goes to sleep, see “**SCREEN LOCK**” on page 53. To unlock the screen, press the Power key, then touch  and flick to .

Note: Your touchscreen might stay dark if the sensor just above it is covered. Don't use covers or screen protectors (even clear ones) that cover this sensor.




ROTATE THE SCREEN

When you turn your phone, the touchscreen can rotate to stay right-side up:

Find it: Menu  > **System settings** > **Display** > **Auto-rotate screen**



SCREEN CAPTURE

 
Sometimes a picture speaks louder than words. Share a screen capture of your favorite playlist, or your new high score. Forward a screen capture of a friend's contact information. If you can see it on your phone, you can share it with your friends.

To capture the screen image on your phone, press the Power key and down volume key. The screen image is stored in  **Gallery** (see “**VIEW PHOTOS & VIDEOS**” on page 31).


KEY TIPS

 
MENU, HOME, BACK, & SEARCH


Touch Home  to close a menu or app and return to the home screen. In the home screen, touch and hold Home  to see a list of recent apps, then touch an app to open it.

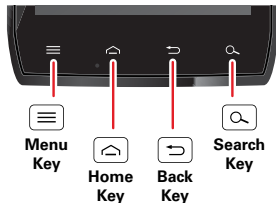

Tip: To remove an item from the recent apps list, flick it left or right.

Touch Menu  to open options for the current app or screen.

Touch Back  to go back.

Touch Search  and enter text for text search or say Google to voice search.

PHONE OPTIONS MENU

Press and hold the Power key to open a phone options menu where you can turn off your phone (**Power off**), turn **Airplane mode** on and off, or change the sound setting.

ADJUST VOLUME

 

Press the volume keys to change ring volume (in the home screen) or earpiece volume (during a call).

When playing music or videos, press the volume keys to adjust media volume.




SEARCH

Search your apps, contacts, files, places, and the web.

Touch Search , or flick your home screen right and, touch **Google** for a text search, or  for voice search.



- Use the touchscreen keyboard to enter search text. Google™ shows suggestions as you type. Touch a

 
suggestion to search for it, or touch  to search for the text you entered.

- To perform a voice search from the search window, just say “Google,” then say what you want to search for.
- To become a super searcher, visit www.google.com/insidesearch.

GOOGLE NOW™

Google Now shows you what's around you, relevant to the moment: current traffic, weather, your appointments, and more. It all happens automatically.

To get started, touch Search , then Menu  > **Settings** > **Google Now**.

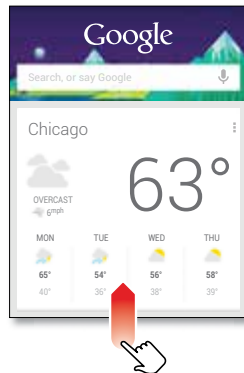 



VOICE TIPS


VOICE ACTIONS

Voice actions let you perform many tasks just by speaking to your phone: call or text your friends, get directions, set an alarm, and more.

To perform a voice action:

1 Touch Search , then  to open voice search.

2 Speak the voice action you want to perform.

Tip: You can also access voice search by touching  in the Google™ Search widget.

If voice search doesn't understand what you said, it presents a list of search terms and actions you can touch to choose.

Some actions, like "send email" and "note to self," open a page that prompts you to complete the action by speaking or typing more information.

Voice Action Commands

Say	Followed by
Words you want to search for	Example: "Bike shoes."
Contact name	Example: "Mike LeBeau" (opens Mike's contact card).

Say	Followed by
"Call"	Contact name & optionally, "home," "mobile," or "work." Example: "Call Mike LeBeau at home."
"Call"	Digits of a phone number. Example: "Call 650 555 1234."
"Call"	Business name. Example: "Call Native Here Nursery."
"Map of"	Address, name, business name, type of business, or other location. Example: "Map of Golden Gate Park, San Francisco."
"Directions to" or "Navigate to"	Address, name, business name, type of business, or other destination. Example: "Directions to 1299 Colusa Avenue, Berkeley, California," or "Navigate to Union Square, San Francisco."
"Go to"	Search string or URL. Example: "Go to Google.com."

 

Say	Followed by
"Send text" or "Send SMS"	<p>"To" & contact names, "Message" & message text (speak punctuation).</p> <p>Example: "Send text to Hugh Briss, subject, new shoes, message, I can't wait to show you my new shoes, period."</p>
"Send email"	<p>One or more of: "To" & contact names, "Cc" & contact names, "Bcc" & contact names, "Subject" & subject text, "Message" & message text (speak punctuation).</p> <p>Example: "Send email to Hugh Briss, subject, new shoes, message, I can't wait to show you my new shoes, period."</p>
"Note to self"	<p>Message text.</p> <p>Example: "Note to self: remember the milk."</p>
"Set alarm"	<p>"Time" or "for" & time (such as "10:45 a.m." or "20 minutes from now"), "Label" & name of alarm.</p> <p>Example: "Set alarm for 7:45 p.m., label, switch the laundry."</p>

Say	Followed by
"Listen to"	<p>Words to search YouTube for (such as the name of a song, artist, or album).</p> <p>Example: "Listen to: smells like teen spirit."</p>

For more information, touch Apps  >  **Help Center**
 > **Use Voice Actions** or **Voice Action commands**.

QUICK TIPS


If you're not sure what to do next, try one of these:

To...	
Open a text message, see contact details, or open items in a list.	Touch the message, contact, or item.
See options for the current screen.	Touch Menu  .
Select an item and open an action bar (if available).	Touch & hold the item.
Go back to the home screen.	Touch Home  .
Wake up your phone.	Press the Power key.
Reboot an unresponsive phone.	Press and hold the Power key and the down volume key for up to 10 seconds.

HOME SCREEN

quick access to the things you need most

QUICK START: HOME SCREEN

The *home screen* gives you all your latest information in one place. It's what you see when you turn on your phone or touch Home  from a menu. It's basically like this:



Note: Your home screen might look a little different.

USE & CHANGE YOUR HOME SCREEN

On your home screen, *shortcuts* are icons that open your favorite apps, web bookmarks, contacts, mail labels, playlists, and more. *Widgets* are live apps or tools that provide news, weather, messages, and other updates.

- To **open** something, touch it. Touch Home (🏠) or Back (⏮) to return to the home screen.

Tip: When you open a widget, touch Menu (☰) to see any options or settings. You can choose accounts for some widgets, like **Calendar**, **Email**, **Facebook**, and **Gmail**.

- To **add shortcuts** to the home screen, touch Apps (⋮), touch and hold an app, then drag it to a spot on the home screen pages.

To create a **shortcut folder**, drag one shortcut onto another to put them both in a folder. To add other shortcuts, drag them onto the folder icon. To name the folder, touch it and enter a name at the bottom.

- To **add widgets**, touch Apps (⋮), touch **Widgets** at the top, then touch and hold a widget (or flick left to see more widgets).
- To **move** widgets or shortcuts, touch and hold them, then drag to a new location.

 
- To **remove** shortcuts or widgets from the home screen, touch and hold them, then drag to **Remove** at the top.
- To **change wallpaper**, touch and hold a blank spot on the home screen.

Shortcuts in the *favorites tray* at the bottom of the home screen always appear in all home screen views. You can drag shortcuts or folders in or out of the favorites tray (except the Apps (⋮) button) for instant access from any home screen.

PHONE STATUS & NOTIFICATIONS





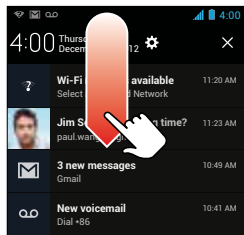














 









Icons at the top right of the screen show status information like signal strength, battery level, and time.

Icons at the top left show messages and app notifications. To see your notifications, touch the status bar and drag it down. Touch a notification to select it.



Tip: To remove a notification from the list, flick it left or right. To clear all notifications, touch X.

STATUS BAR ICONS

	network (full signal)		H+ (fastest data)
	network (roaming)		network (no connection)
	GPS active		warning
	Wi-Fi in range		Wi-Fi connected
	Bluetooth™ on		Bluetooth connected
	USB connected		background data sync
	active call		missed call
	airplane mode		microSD card
	new text message		alarm set
	new email		calendar event reminder
	new voicemail		music player active
	vibrate		speakerphone on
	sound off		call muted
	battery (charging)		downloading
	battery (full charge)		

account. White connection icons mean your phone is not communicating with the Google servers.

Note: Apps you download from Google Play™ Store may show other icons in the status bar to alert you to specific events.

Tip: Blue connection icons (network, data, Wi-Fi) appear when your phone is connected to your Google™

 
APPS & UPDATES

get the app you want

QUICK START: APPS & UPDATES

Touch Apps (⋮) in any home screen page, then flick left or right to see all your apps.

In the apps screen, touch **All apps** to view or create app groups.

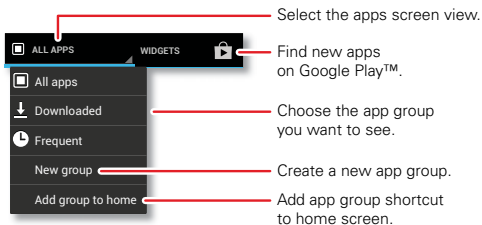

To add a shortcut to the home screen for an app group view, touch **All apps > Add group to home**.

To close the apps screen, touch Home (⬅️) or Back (⬅️).

BROWSE & INSTALL APPS

One of the great things about a phone is the apps. Whatever you're into, whatever you want to do, there's

probably an app that can help you. So, go to the place that has it all, Google Play™ Store.

Find it: Apps (⋮) > **Play Store**

Scroll to and touch the app you want to install. Then, touch **Install** (if app is free) or **Buy**.

New apps that you install are added to the apps screen.

Tip: Choose your apps and updates carefully, from trusted sites like **Play Store**, as some may impact your phone's performance—see “**CHOOSE CAREFULLY**” on page 14.


Note: When installing an app, make sure you read the alerts that tell you what information the app will access. If you don't want the app to have access to this information, cancel the installation.

CREATE SHORTCUT FOLDERS

You can use home screen folders to logically group and store your app shortcuts in a single location.


To create a shortcut folder in the home screen, drag one shortcut onto another to put them both in a folder. To add other shortcuts, drag them onto the folder icon. To name the folder, touch it and enter a name at the bottom.

RECENT APPS



 
Your phone remembers the apps that you used most recently. From the home screen, touch and hold Home  to see the most recent apps used.

Tip: To remove an item from the recent apps list, flick it left or right.

MANAGE & RESTORE APPS



From the home screen, touch Menu  > **Manage apps**.

Touch an app to see its file size, access permissions, and other details, then touch **Disable**, **Force stop**, **Uninstall** (for apps you downloaded), **Clear cache**, or other options.

To reinstall apps from Google Play™ Store, touch Apps  >  **Play Store**, then touch Menu  > **My apps**. Apps that you have previously purchased from Google Play™ Store are listed and available for download.

CHOOSE CAREFULLY

Apps are great. There's something for everyone. Play, communicate, work, or have fun. But remember, choose your apps carefully. Here are a few tips:


- To help prevent spyware, phishing, or viruses from affecting your phone or privacy, use apps from trusted sites, like  **Play Store**.
- In  **Play Store**, check an app's ratings and comments before installing.
- If you doubt the safety of an app, don't install it.
- Like all apps, downloaded apps will use up memory, data, battery, and processing power—some more than others. For example, a simple battery level widget will use less than a streaming music player app. After installing an app, if you're not happy with how much memory, data, battery or processing power it's using, uninstall it. You can always install it again later.
- Just like web browsing, you may want to monitor children's access to apps to help prevent exposure to inappropriate content.
- Certain apps may not provide completely accurate information. Take care, especially when it comes to personal health.

UPDATE MY PHONE

You can check, download, and install phone software updates using your phone, or using your computer:

- Using your phone:

You may get an automatic notification of an available update on your phone. Simply follow the instructions to download and install.

To manually check for updates, touch Menu  > **System settings** > **About phone** > **System updates**.

Your phone downloads any updates over your mobile network. Remember, these updates can be quite large (25MB or more) and may not be available in all countries. If you don't have an unlimited data plan, or mobile network updates are not available in your country, you can update using a computer.

- Using your computer:

On your computer, go to www.motorola.com/myrazr and check the "Software" links. If an update is available, follow the installation instructions.

 
CALLS


 
 

it's good to talk

QUICK START: CALLS

Find it: Apps  >  **Phone**

Tip: When the screen is locked, touch  and flick to .

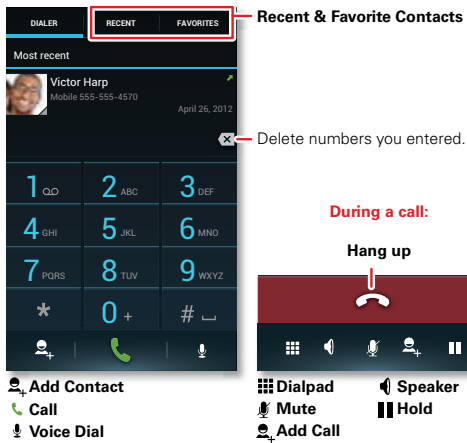

You can touch Home  or Back  to leave the active call display. To reopen it, touch Home  >  **Phone**.

Tip: Search for contacts right from the dialpad. For example, to find **Jeff** in your contacts list, touch **5-3-3-3**. Matching contacts appear above the number field.



Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.



MAKE & ANSWER CALLS



To **make** a call, touch  **Phone**, enter a number, then touch .

Tip: When the screen is locked, touch  and flick to  to make a call.

Tip: When you hold your phone to your ear, the display goes dark to prevent accidental touches. When you move the phone away from your ear, the display lights up again.

To **answer** a call, touch  and flick to .

To ignore an incoming call, touch  and flick to .

To send a pre-set **text message** to the caller, touch  and flick to . Select a message to immediately send it.

Tip: To silence an incoming call alert, press the Power key or the volume keys.

Can't talk now. What's up?

I'll call you right back.




I'll call you later.

Can't talk now. Call me later?

Custom message...

 
RECENT CALLS

Find it:  **Phone** > **Recent**

- To call a number, touch  next to the entry.
- To see call details, touch the entry.
- To send a text message, create a contact, view a contact, or other options, touch and hold the entry.
- To search the recent calls list, touch .
- To clear the list, touch Menu  > **Clear list**.



FAVORITES

Find it: Apps  >  **People** > **Favorites**


- To call, text, email, or view contact information, touch the contact.
- To edit, share, delete, or set a ringtone for a contact, touch the contact, then touch Menu .

MULTIPLE CALLS & CONFERENCE CALLS

During a call, you can start another call, switch between them, or join them in a conference call.



To start a multiple/conference call, call the first number. After the call connects, touch . Dial the next number, or select it from contacts or favorites. When the next number answers, touch .

YOUR PHONE NUMBER

Find it: Menu  > **System settings** > **About phone** > **Status** > **My Phone number**

TTY MODE



Your phone can use an optional teletypewriter (TTY) device, for people who are hard of hearing or have a speech impairment.

- 1 Plug the TTY device into the phone's headset jack.
- 2 Touch  **Phone** > Menu  > **Settings** > **TTY mode**, and choose a TTY setting.

EMERGENCY CALLS

Note: Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in

all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.


- 1 Touch  **Phone** (if your phone is locked, touch **Emergency Call**).
- 2 Enter the emergency number.
- 3 Touch  to call the emergency number.

Note: Your phone can use location based services (GPS and AGPS) to help emergency services find you. See “**LOCATION**” on page 39.

COOL DOWN

In very limited circumstances, such as where your phone has been exposed to extreme heat, you may see “Cool Down” messages. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in “Cool Down” mode, only emergency calls can be made.

MORE CALLING FEATURES

feature	
voice dial	Touch  , then say the contact name, business name, or phone number you want to call.

feature

international calls

If your phone service includes international dialing, press and hold **0** to insert your local international access code (indicated by **+**). Then enter the country code and phone number.

voicemail

 
To listen to your voicemail messages, touch & hold **1** in the dialer screen.

PEOPLE

be a people person

QUICK START: PEOPLE

Find it: Apps  >  **People**

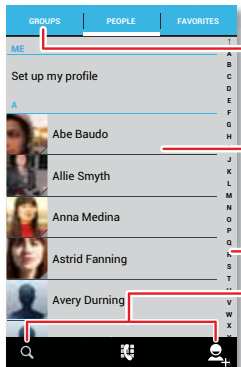


Create & view groups of contacts.

Touch to view contact information, call, send a text message, & more.

Touch a letter to jump to contact names that start with that letter.

Q Search your **People**.

 Switch to dialer.

 Add a contact.

TRANSFER CONTACTS

Get all your contacts, all in one place. Here are a few helpful hints:

- Use Gmail™

When you first set up your phone and sign in to your Google™ account, all your Gmail contacts are synced automatically with your People app. After that, your contacts stay in sync whether you make changes on your phone, from another device, or from a web browser. Most contact applications for mobile phones and email accounts allow you to export your contacts as a “.csv” file. You can then use Gmail to import the file. For more details, go to

www.motorola.com/transfercontacts or log in to your Gmail account on your computer and select “Help”.

 

- More

There are other methods and tools to help you at www.motorola.com/transfercontacts.

LINK CONTACTS


You might have two or more contacts for the same person, maybe a Gmail contact who is also stored on your phone, or one friend with two email addresses. To combine these contacts:

Find it: Apps  >  **People**

Touch a contact to open it, touch Menu  > **Edit**
> Menu  > **Join**, then touch the second contact.

CALL OR EMAIL CONTACTS


Find it: Apps  >  **People**


- To call a contact, touch the contact's name, then touch the number you want to call. To send a text message, touch  next to the number.
- To email a contact, touch the contact's name, then touch the contact's email address.



VIEW & USE CONTACTS

When you log in to a social networking account (see “**SOCIAL NETWORKING**” on page 24), you'll know what everybody's up to and when. Every time you pick up a call, check a message, or look up a friend's contact info, you'll see their name and number, but you can see their social network status and smiling face, too.

Find it: Apps  >  **People**

- To find a contact, touch  and type the contact name.





Touch a contact to open its details. While viewing details, you can start a call or message by touching the phone number, , or email address.

- To change which group of contacts is shown (like **All contacts** or contacts from your Gmail account) touch Menu  > **Contacts to display**.
- To change how you view the list of contacts, touch Menu  > **Settings** > **Display options**.

CREATE CONTACTS

Find it: Apps  >  **People** > .

Touch a text box to type the name and details. When you're finished, touch ✓ **SAVE** at the top.

Where are contacts stored? Your phone can store contacts in its memory or your Google™ account: To choose where contacts are stored, touch Apps  >  **People** > Menu  > **Settings** > **Contact storage** > **Contact storage account**. If you don't see your Google account listed, make sure you're syncing contacts with it: Touch Menu  > **System settings** > **ACCOUNTS**, touch the account, and check **Sync Contacts**. Contacts are not stored on your SIM card.

FAVORITES

To add a contact to your favorites list, touch the contact to open it, then touch Add to Favorites.

To see your favorites list:



Find it: Apps  >  **People** > **FAVORITES**


EDIT OR DELETE CONTACTS

Find it: Apps  >  **People** > touch the contact to open it, then touch Menu  > **Edit** or **Delete**

PERSONALIZE CONTACTS

Find it: Apps  >  **People**




Add a photo: Touch the contact to open it, touch > Menu  > **Edit**, then touch  and choose **Take photo** or **Select existing photo**.

Set a ringtone: Touch the contact to open it, then touch Menu  > **Set ringtone**.

GROUPS

Find it: Apps  >  **People** > **GROUPS** > *group name*



You can put your contacts into groups (like "Friends" or "Family") to make it easier to find them.



To create a new group, touch Apps  >  **People** > **GROUPS** > .





MESSAGES

say it & go

READ & REPLY TO MESSAGES


Find it: Apps  >  **Text**

Tip: From the phone unlock screen, touch  and flick to .

- To **open** a text message and all of its replies, touch it.
- To **respond** to a text message, open it and enter your response in the text box at the bottom.
- To **delete** a message, touch and hold to select it, then drag it to the trash can  in the upper right corner.
- To **adjust** messaging options, touch Apps 
>  **Text** > Menu  > **Settings**.


CREATE MESSAGES

Find it: Apps  >  **Text** > 

Enter the recipient and message. Touch Menu  to **Insert smiley** or **Add subject**.

To add an attachment, touch  in the upper right corner.

SEND & RECEIVE MESSAGE ATTACHMENTS

To send a file in a message, open a new message and touch  in the upper right corner.

 

When you receive a message with an attachment, open the message and touch the file name to download it. Touch the name again to open it. Some file types can be converted to HTML for faster viewing, and your phone will show **Get HTML version**.



While viewing the attachment, touch it to save it, share it, and more.

Tip: To send and receive large attachments faster, use a Wi-Fi connection (see “**WI-FI NETWORKS**” on page 41).

EMAIL



The first time you turned on your phone, you probably set up or logged in to your Google™ Gmail™ account.

If not, you can set up a Gmail account by touching Menu  > **System settings** >  **Add account** > **Google**.

To read and reply to messages on your Gmail account, touch Apps  >  **Gmail**.

EMAIL



You can set up multiple email accounts on your phone.

Touch Menu  > **System settings** >  **Add account** then:

- Select **Corporate** for Microsoft™ Exchange server work email accounts. Enter details from your IT administrator.


Tip: You might need to enter your domain name and user name (like *domain/username*).

- Select **Email** for your personal email accounts. For account details, contact the account provider.

To read and reply to messages on your email accounts, touch Apps  >  **Email**.


INSTANT MESSAGES



To send and receive instant messages, you can use Google Talk™.

Find it: Apps  >  **Talk**

Alternatively, you can download an instant messaging app from Google Play™ Store.

VOICEMAIL

When you have a new voicemail,  appears at the top of the screen. Drag down the status bar and touch the **New voicemail** notification to listen to your voicemail message.

 
If you need to change your voicemail number, in the home screen touch  **Phone** > Menu  > **Settings** > **Voicemail**.

 
TEXT ENTRY

keys when you need them


TOUCHSCREEN KEYPAD

You can open a keypad on your screen by touching a text box.

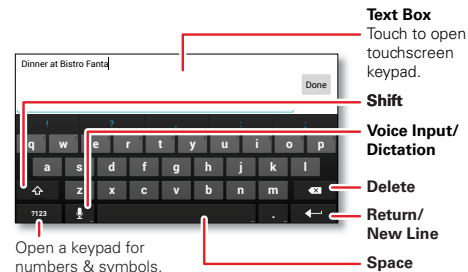

Tip: To close the keypad without saving any text (for example, to select a different text box), touch Back .

INPUT METHODS

To select a text input method, touch and hold Space  to open the **Select input method** menu, then touch the method you want.

 
ANDROID KEYBOARD

Enter text a letter at a time. As you type, your phone suggests words from your dictionary and chosen language. The phone also automatically enters apostrophes in some words, like “dont.”

To add a word to your dictionary, touch the word, then select **+ add to dictionary**.

SWYPE™

Enter words with one continuous motion. Just drag your finger over the letters in the word.

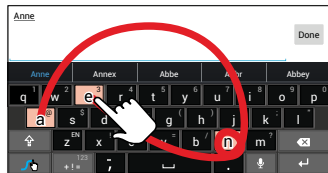

To enter a word, just trace a path through the letters. To capitalize, go above the keypad. For double letters, circle the letter.



Tips:


- To enter apostrophes in common words (like “I’ll”), drag through the **n** as though it was an apostrophe.
- To enter other punctuation, numbers, or symbols, touch Symbols **+!=**.
- To correct a word, *double-touch* it (touch twice, quickly). Swype shows a small menu of other word

options. Swype might also show a menu if it can’t guess your word.


- If Swype doesn’t know a word, you can still touch the letter keys to enter it. Swype remembers, so next time you can just drag over the letters.


TYPING TIPS

To...	
Enter one capital letter	Touch Shift  .
Enter only capital letters	Touch and hold Shift  . Touch again to revert to lowercase.
Move the text entry cursor	Touch the text where you want the cursor to go.
Select text	Touch and hold or double-touch text to select it. Tabs mark the boundaries of the selected text. Drag the tabs to select the text you want.

To...	
Cut or Copy selected text	Touch icons at the top of the screen to Cut or Copy selected text. In a landscape display, touch Edit > Cut or Copy .
Paste cut or copied text at cursor location	Touch the Paste icon at the top of the screen. In a landscape display, touch Edit > Paste .
Delete character to left of cursor	Touch Delete  (hold to delete more).


TEXT INPUT SETTINGS



Find it: Menu  > **System settings** > **Language & input**



- To change the language for your phone and touchscreen keypad, touch **Language**.
- To change the default text input method, touch **Default** under **KEYBOARD & INPUT METHODS**.
- To change text input settings, touch  next to **Google voice typing**, **Android keyboard** or **Swype**.

SOCIAL NETWORKING

my life, your life

You can use the  **Browser** to track your social networking accounts on sites like Facebook™, Twitter, and LinkedIn. If you don't have accounts on these sites, visit their websites to set them up.



 

Many social networks offer dedicated apps that you can install on your phone. You can also download social networking apps from the Google Play™ Store by touching Apps  >  **Play Store**.

 
When you log in to a social networking account on your phone, you may be prompted to sync account contacts, pictures, and status with your  **People** app. You can accept or decline to sync. You can change your sync settings at any time by touching Menu  > **Settings** in the social networking app.

GOOGLE+™

Google+™ makes connecting on the web more like connecting in the real world. Share your thoughts, links and photos with the right circles.

Find it: Apps  >  **Google+**

- **Create a circle:** Touch  >  **Circles**. Touch the  drop-down list at the top to select a circle (like **Acquaintances**), or touch  **New circle** to create a new circle.
- **Add & remove people from a circle:** To add people to a circle, select them, touch **Add**, select the circle, and touch **OK**. To remove people from a circle, select them, touch the circle name, and remove them from the circle.

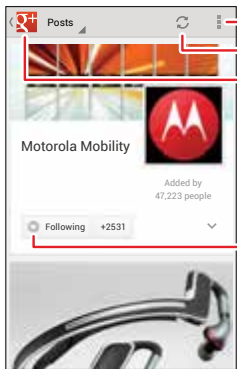






Open options.

Update the stream.

Open your stream, profile, messenger, hangouts, & more.



 


 
Add or remove from circles.

- **Show or delete circles:** Touch  >  **Circles** and touch a circle name. Touch the  drop-down list to see the circle's **People**, **Posts**, and **Photos**. To delete the circle, touch Menu  > **Delete circle**.
- **Add a widget:** In your home screen, touch Apps , touch **Widgets** at the top, then touch and hold **Google+ posts** to drag them to your home screen.
- **Help:** For more about Google+, visit <http://plus.google.com>.
- **Other social networks:** You can also use Facebook™, and more. Use the Google Play™ Store app to find the latest official apps and widgets.

TIPS & TRICKS



 

 



a few handy hints

GENERAL TIPS

- Screen brightness changes as your phone senses the current lighting conditions.
- To see recently dialed numbers, touch  **Phone** > **Recent**.
- To sleep/wake your phone, press the Power key.
- To set screen timeout, touch Menu  > **System settings** > **Display** > **Sleep**.
- Touch Search  and enter text for text search or say Google to voice search.
- To automate everyday tasks, touch Apps  >  **SmartActions**.
- To see the most recent apps you've used, touch and hold Home .
- To change a shortcut in the favorites tray at the bottom of the home screen, touch and hold a shortcut, then drag it in or out of the favorites tray.
- To turn sound on/off, press and hold the Power key, then touch a sound setting.
- To turn airplane mode on/off, press and hold the Power key > **Airplane mode**.

BATTERY TIPS

Want to extend your battery life? Try these:

- To help minimize battery use, touch Apps  >  **SmartActions**. Check out the sample rules that enable battery savings: **Battery Saver**, and **Low Battery Saver**.
- To turn off background data transfers, touch Menu  > **System settings** > **Data usage** > Menu  > **Restrict background data**.
- To turn off Bluetooth™ power, touch Menu  > **System settings**, then drag the **Bluetooth** power  switch to the left to turn it off.
- To turn off Wi-Fi power, touch Menu  > **System settings** then drag the **Wi-Fi** power  switch to the left to turn it off.

 
WEBTOP APPLICATION

smart mobile computing

QUICK START: WEBTOP

Release your phone's true potential so you can get more done.

Just connect your phone to a Motorola Lapdock™, or to an HDTV or monitor, and you're ready to go.

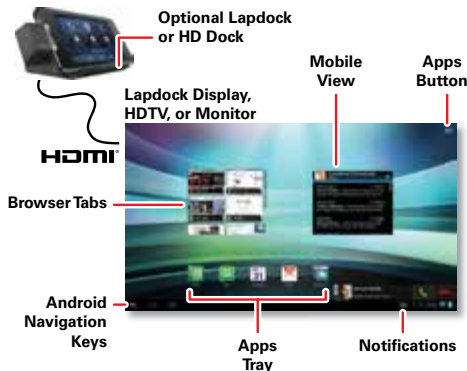

The webtop application and webtop-enabled accessories (sold separately) expand your phone onto any full-sized HDTV or monitor. It's web browsing, email, and more with computer-like precision on a large, high-resolution screen. Add a full size USB or wireless keyboard and mouse for serious productivity.

CONNECT

The webtop application launches automatically when you connect your phone to a lapdock. The other webtop-enabled accessories prompt you to launch the webtop application.




- **Motorola Lapdock™ 500 Pro** includes a 14" display, full-sized keyboard, VGA output, and Ethernet connectivity.
- **Motorola Lapdock™ 100** includes a 10.1" display, keyboard, and trackpad.
- The **HD Dock** or **HD Station** connects to an HDTV or monitor, and a keyboard and mouse. Connect your favorite speakers with a 3.5mm audio jack.
- Use the **VGA Travel Adapter** to project the webtop application onto a bigger screen.
- Use the **HDMI® Cable** to connect and run the webtop application on any HDTV or monitor.


To close the webtop application, disconnect your phone from the accessory.

CONTROLS


In the webtop application display:

- Access all your Android applications by clicking on the Apps button  at the top right of the screen.
- Click on the right or left edges of the home screen to move between home screen panels.
- Click on the right and left edges of the apps screen to flip through pages of applications and widgets.

SMART TRANSITIONS FROM PHONE TO WEBTOP

When viewing a web page on your phone, you can switch to webtop mode to continue viewing the site on a bigger screen. In the desktop browser, click on Menu  > **Request desktop site** to see the desktop version of the web page. When you open a new tab, the browser will attempt to load the desktop version of the website (if available). When you are finished browsing, just undock—all of your browser tabs and history go with you on the phone.

WEBTOP MODE SWITCH


Downloaded applications will launch in their native size by default. You can run an application at a larger size by clicking on  and selecting webtop mode. The application may stop running while switching modes. Simply relaunch it.

DIGITAL LIVING

connect and enjoy

HD VIEWING

You can create your own HD videos (see “**PHOTOS & VIDEOS**” on page 29) to view on your wide screen HDTV or monitor.

- 1 Connect a micro HDMI cable (sold separately) from the micro HDMI port on your phone (see “**YOUR PHONE**” on page 2) to an HDMI port on the HDTV or monitor.
- 2 Adjust the viewable area on the HDMI screen by touching Menu  > **System settings > Display > Shrink to fit screen.**

MIRROR MODE

Connect your phone to your HDTV, monitor, or projector so you can view and interact with your phone on the big screen. Show off your photos, videos, and downloaded



movies. Enjoy the big screen for gaming, movies, the web, and more. Just connect your phone to an HDTV or monitor using a micro HDMI cable (sold separately). Everything you see on your display will appear on the big screen as well.

PHOTOS & VIDEOS

 
see it, capture it, share it!

QUICK START: PHOTOS AND VIDEOS







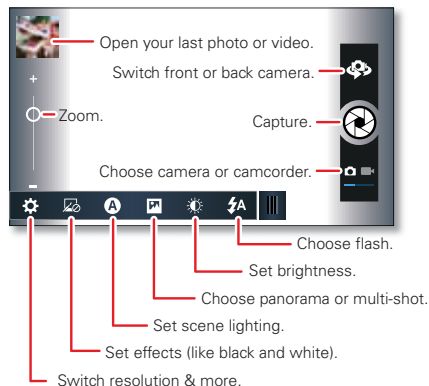


Find it: Apps (⋮) >  **Camera**

Tip: From the phone unlock screen, touch  and flick to .




TAKE & SHARE PHOTOS AND VIDEOS







Note: Photos are stored in your phone's internal memory, unless you switch it to a microSD memory card. Photo resolution can be set to 8MP or **Widescreen** (6MP).

- **Take a photo:** touch .
- **Record a video:** touch  in the camera, then touch  to start or stop recording.
- **View, Share, or Delete:** Touch your last photo/video in the corner of your viewfinder, or touch Apps  >  **Gallery** and touch a photo or video. You can choose  play on media device (DLNA),  share,  delete, Menu , and more.


TIPS AND TRICKS

- **Zoom:** Press the volume keys.
- **Focus and Flash:** To choose an off-center focus point and test the automatic flash, touch a spot in the viewfinder before you take the picture. A green square marks the focus point, and you can touch  to take the picture.
- **Text a Video:** To send a video in a text message, set the video quality first: Touch  to switch to the camcorder, then touch  > **Video Resolution** > **QVGA**. After you record the video, touch its thumbnail, then touch it for sharing options.


- **Memory Card:** Photos are stored in your phone memory unless you touch  > **Storage Location** > **SD Card**.
- **Panoramic Photos:** In the viewfinder, touch Menu  > **Modes** > **Panorama** to take a wide panoramic photo. The camera auto-captures up to six multiple shots as you move the camera, and joins them together to make one large image.
- **HD Videos:** To record an HD-quality video, be sure to select the correct **Video resolution**. From the active camcorder viewfinder screen, touch Menu  > **Settings** > **Video Resolution** > **HD+ (1080p)** or **High Definition (720p)**.
- **Enhance Quality:** To enhance the video quality, touch Menu  > **Effects** or **Audio Scenes**.
- **Clarify:** For the clearest photos and videos, clean the lens with a soft, dry cloth.
- **Zoom:** Press the volume keys.

CAPTURE YOUR SCREEN

Sometimes a picture speaks louder than words. Share a screen capture of your favorite playlist, your new high score, or a friend's contact information. If you can see it on your phone, you can share it with your friends.

To capture your phone's screen, press and hold the Power  and Volume Down keys at the same time.

To see the screen capture, touch Apps (⋮)

>  **Gallery** > **Screenshot**.

CAMERA AND VIDEO SETTINGS

Drag the tab in the lower-left corner of the viewfinder screen (or touch Menu (≡)) to adjust camera settings:

Options	
Settings	<ul style="list-style-type: none">• Widescreen (6MP or 8MP photo resolution)• Video Resolution (1080p, 720p, DVD, VGA, or QVGA)• Volume Key Function (use volume keys to zoom)• Geo-tag (auto location information)• Video Stabilization (reduces hand shaking during video capture)• Storage Location (phone or microSD memory card)• Shutter Tone (turn shutter tone off).
Effects	Set a photo effect: Normal , Black and White , Negative , and more.
Scenes	Set the type of photo you want to take: Auto , Portrait , Landscape , Sport , and more.

Options


Modes	Set to Single shot , Panorama , Multi-shot , or Timer .
Exposure	Select an exposure setting.
Flash	Set Flash On , Flash Off , or Auto Flash .

VIEW PHOTOS & VIDEOS

Find it: Apps (⋮) >  **Gallery**

SHARE PHOTOS & VIDEOS

Find it: Apps (⋮) >  **Gallery** > *photo or video*

Touch , then choose how you want to share—like **Bluetooth**, **Email**, **Text**, or an online album.

MANAGE PHOTOS & VIDEOS



Find it: Apps (⋮) >  **Gallery** > *photo or video*

Touch Menu (≡), then select an option from **Edit**, **Quick upload**, **Set picture as**, **Slideshow**, and more.

Tip: To copy photos to/from a computer, go to “**USB CONNECTION**” on page 49.

EDIT PHOTOS & VIDEOS

Find it: Apps (⋮) >  **Gallery** > *photo or video*

Touch Menu  > **Edit**. You can choose advanced editing features to resize, crop, or change the color. To undo a change, touch . When you're finished, touch **SAVE**.

MUSIC

 
when music is what you need...

QUICK START: MUSIC





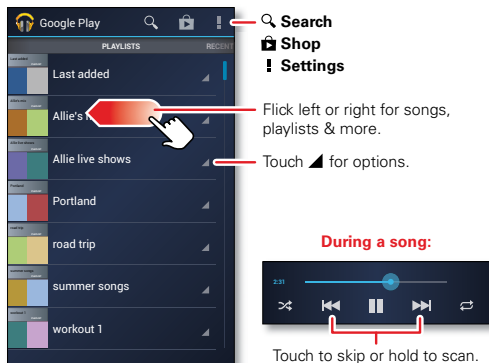

Music everywhere, literally—stream it, buy it, save it, play it. Listen and create playlists anytime.

Find it: Apps  >  **Play Music**

To access your Google Play™ Music app with a computer, visit www.play.google.com/music/listen.



TIPS & TRICKS

- **Go back:** When you open a song or artist list, touch  in the top left to go back.
- **Shuffle or repeat:** During a song, touch the screen to show shuffle  and repeat  at the bottom. Touch  once to repeat the current song list, or twice to repeat only the current song.
- **Volume:** Press the volume keys.
- **Hide the music player:** To use another app while your music plays, touch Home . To return to the music player, flick down the status bar and touch the song title.
- **Home screen:** Control music playback from the home screen by adding the **Google Play Music** widget.
- **Shop:** Touch  to shop for more music.
- **Playlists:** Touch and hold a song in your library to add it to a playlist or show other options. To edit, delete and rename a playlist, touch and hold its name in the music library.
- **During a flight:** Press and hold the Power key > **Airplane mode** to turn off all your network and wireless connections and listen to music during a flight.

SET UP MUSIC


WHAT MUSIC TRANSFER TOOLS DO I NEED?

Note: Copyright—do you have the right? Always follow the rules. See “Content Copyright” in your legal and safety information.

To put music on your computer and then load it on your phone, you need:

- Microsoft™ Windows™ computer or Apple Macintosh computer.
- USB data cable.

Your phone supports a removable microSD memory card up to 32GB capacity. To install a microSD card, go to “**ASSEMBLE & CHARGE**” on page 3.

Tip: To see the available memory on a microSD card, from the home screen touch Menu  > **System settings** > **Storage**.

WHAT AUDIO FILE FORMATS CAN I PLAY?

Your phone can play AAC, AAC+, AMR NB, eAAC+, H.263, H.264, MIDI, MP3, MPEG-4, WAV, WMA10, WMA9 and WMA v9 files.

WHAT HEADPHONES CAN I USE?

Your phone has a 3.5mm headset jack for wired stereo listening. You can go wireless with Bluetooth™ stereo headphones or speakers (see “**BLUETOOTH™ HANDSFREE**”).

DEVICES” on page 43).

GET MUSIC

TRANSFER

 
Transfer music from your computer to your phone using a USB cable connection. See “**USB CONNECTION**” on page 49 to learn how.

WEB

surf the web with your phone


QUICK START: BROWSER

Find it: Apps  >  **Browser**

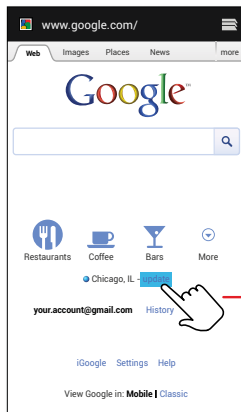

View open browser tabs, or open a new tab.

Touch a link to select it. Touch & hold for more options.

Touch Menu  for browser options.

Tip: To zoom in, touch the display with two fingers, then move them apart.

CONNECT

Your phone uses the mobile phone network (over the air) or a Wi-Fi connection to automatically access the web.



Note: Your service provider may charge to surf the Web or download data.

If you want to use a Wi-Fi network for faster Internet access, touch the status bar at the top of the home screen and drag it down. Touch the **Wi-Fi networks available** notification to select a preferred network. For more info, see “**WI-FI NETWORKS**” on page 41.

Note: If you can't connect, contact your service provider.

 
DOWNLOADS

To download files in your browser, touch a file link or touch and hold a picture to choose **Save image**.

To see the files you downloaded, touch Apps  >  **Downloads**. Touch and hold an item to open it, see details, or remove it from the list.

You can download “**APPS & UPDATES**” on page 13.

BROWSER OPTIONS

Touch Menu  to see browser options:

Options	
Bookmarks	See your bookmarks.
Save to bookmarks	Bookmark the current web page.
Request desktop site	Open the standard desktop website instead of the mobile device version.
Refresh	Reload the current page.
Settings	Adjust browser settings.
Exit	Close the browser app.

QUICK START: CHROME™

Access to the world. Find a webpage, or just explore:

Find it: Apps  >  **Chrome**

 
- **Go to a webpage:** Touch the address bar at the top of a page and enter an address.

- **Add or open bookmarks:** Touch Menu ☰ > ☆ (to add a bookmark) or **Bookmarks** (to see your other bookmarks).

TIPS & TRICKS

- **Go to a webpage:** From the home screen, you can touch the Google search widget to enter a website address.

Note: If you can't connect, contact your service provider.

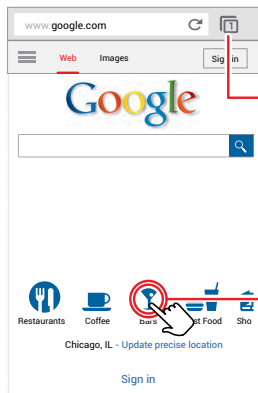

Show other browser tabs, or open a new one.

Touch a link to select it. Touch & hold for more options.

- **Mobile sites:** Some websites automatically show you a “mobile” version of their page. If you want to see the standard computer versions of all websites, touch Menu ☰ > **Request desktop site**.
- **Reload:** If a page doesn't load correctly, touch ↺.
- **Clear history:** In the browser, touch Menu ☰ > **Settings** > **Privacy** > **CLEAR BROWSING DATA**. Then choose history, cache, cookies, and other options.
- **Help:** For more about Google Chrome, visit www.support.google.com/chrome.

WEB CONNECTION

To access the web, your phone uses your Wi-Fi network (or your mobile phone network if no Wi-Fi network is connected).

Note: Your service provider may charge to surf the web or download data over your mobile phone network.

To connect to a Wi-Fi network, see “**WI-FI NETWORKS**” on page 41.



BOOKMARKS

To bookmark a page in your browser, touch Menu ☰ > ☆.

To go to a bookmark, touch Menu ☰ > **Bookmarks**, then touch the bookmark.

DOWNLOADS

 
Warning: Apps downloaded from the web can be from unknown sources. To protect your phone and personal data, only download apps from sources you trust, like “” on page 12.

To download a file, picture, or webpage, touch Apps  >  **Browser** and go to the website:

- **Files:** Touch the download link. To show the file or app, touch Apps  >  **Downloads**.
- **Pictures:** Touch and hold it to choose **Save image**. To show the picture, touch Apps  >  **Gallery** > **Download**.



 
To download apps or phone updates, see “**BROWSE & INSTALL APPS**” or “**UPDATE MY PHONE**”.











BROWSER OPTIONS

To change your browser homepage, security settings, text size, and other options, touch Menu  > **Settings**.

SAFE SURFING & SEARCHING

Keep track of what your browser and searches show:

- **Browse incognito:** To open a tab that won't appear in your browser or search history, touch Apps  >  **Chrome** > Menu  > **New incognito tab**.

- **Browser history, cache, and passwords:** To clear your browser history and other saved information, touch Apps  >  **Chrome** > Menu  > **Settings** > **Privacy** > **CLEAR BROWSING DATA**.
- **Automatic form completion:** When you enter your name in an online form, your browser can automatically enter your address information. If you don't want that, touch Apps  >  **Chrome** > Menu  > **Settings** > **Auto-fill forms**.
- **Browser pop-ups:** To stop pop-up windows from opening, touch Apps  >  **Chrome** > Menu  > **Settings** > **Content settings** > **Block pop-ups**.
- **Search history and location:** In your home screen, touch the Google search widget to open the search window, then touch Menu  > **Settings** > **Privacy**, then uncheck the options you don't want.

YOUTUBE™

Share videos with YouTube users everywhere. You don't need a YouTube account to browse and view videos.

Find it: Apps  >  **YouTube**

Note: If you want a YouTube account, go to www.youtube.com. To create an account or sign in, touch **ACCOUNT**.


PERSONALIZE

add your personal touch

WIDGETS

 
ADD WIDGETS

Fill your home screen with widgets—make it yours.

 
Touch Apps  > **Widgets**, touch and hold a widget, then drag it to a spot on the home screen pages.

Tip: Flick left to see more widgets.


SET UP WIDGETS

You can customize some widgets. Touch a widget to open it, then touch Menu .

Your home screen may already have these widgets:

 
 

- **Favorite contacts:** Quickly call, text, or email your favorite contacts. To add people to your Favorites list, see “**FAVORITES**” on page 20.
- **Calendar:** Sync your calendars and review upcoming events at a glance with the scrollable calendar widget. To add calendar events, see “**CALENDAR**” on page 44.
- **Music playlist:** Set this widget to an artist, album, song, playlist, genre, or just touch Menu  > **Shuffle all**. There's more about “**MUSIC**” on page 32.
- **Weather:** See weather reports for your current location, and for any other locations you specify.

SHORTCUTS

To add app shortcuts to the home screen, touch Apps , touch and hold an app, then drag it to a spot on the home screen pages.

Tip: To change a shortcut in the favorites tray at the bottom of the home screen, touch and hold a shortcut, then drag it in or out of the favorites tray.

 
RINGTONES




- To personalize your ringtones, touch Menu  > **System settings** > **Sound** > **Phone ringtone** or **Default notification**.
- To make your phone ring *and* vibrate, touch Menu  > **System settings** > **Sound** > **Vibrate when ringing**.
- To silence your phone and make it vibrate for incoming calls, press and hold the Power key, then touch .

WALLPAPER




To apply a new wallpaper, touch and hold an empty spot on your home screen, then choose a wallpaper image from **Live wallpapers**, **Gallery**, or **Wallpapers**.

SOUNDS

- To set volume for ringtones, media, and alarms, touch Menu  > **System settings** > **Sound** > **Volumes**.

- To play dial pad tones, touch Menu  > **System settings** > **Sound** > **Dial pad touch tones**.
- To play sounds for screen selections, touch Menu  > **System settings** > **Sound** > **Touch sounds**.
- To customize the sound settings for media and videos, touch Menu  > **System settings** > **Sound** > **Audio effects** > **SPEAKER** (internal) or **WIRED STEREO** (connected external speakers).

DISPLAY SETTINGS

- To set display brightness, touch Menu  > **System settings** > **Display** > **Brightness**.
- To set orientation, touch Menu  > **System settings** > **Display** > **Auto-rotate screen**.
- To set the font size for menus and settings, touch Menu  > **System settings** > **Display** > **Font size**.


DATE & TIME

Set date, time, time zone, and formats:

Find it: Menu  > **System settings** > **Date & time**

LANGUAGE & REGION

Set your menu language and region:

 
Find it: Menu  > **System settings** > **Language & input** > **Language**

LOCATION

where you are, where you're going

GOOGLE MAPS™

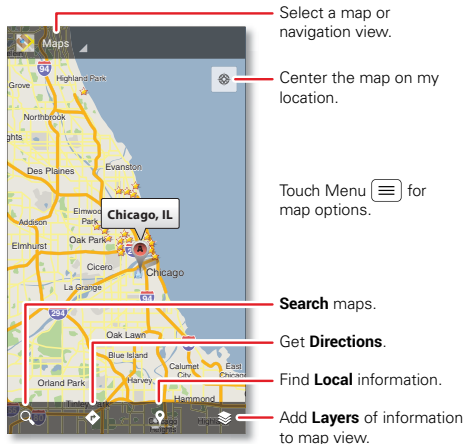


Find it: Apps  >  **Maps**



Note: The map image you see may be a little different.

Google Maps offers powerful, user-friendly mapping technology and local business information—including business locations, contact information, and driving directions.

For help, touch Menu  > **Help**.

Tip: Want to know what's in your immediate area? Try Google Places™. Touch Apps  >  **Maps**, then touch  at the bottom for restaurants, cafes, bars, and more based on your current location.

GOOGLE MAPS™ NAVIGATION

Google Maps Navigation is a complete GPS navigation system with voice guidance that shows you the way.

Find it: Apps  >  **Maps** > **Maps** > **Navigation**


Follow the prompts to speak or type your destination.

For more information, go to www.google.com/mobile/navigation.

GOOGLE LOCAL™

Google Local lets you find the restaurants, cafes, bars, and attractions that are close to you:

Find it: Apps  >  **Local**




Tip: In **Maps**, just touch  at the bottom.

GOOGLE LATITUDE™

See where your friends and family are on Google Maps. Plan to meet up, check that your parents got home safely, or just stay in touch.

Don't worry, your location is not shared unless you agree to it. You need to join Google Latitude, and then invite your friends to view your location or accept their invitations.

To get started, touch Apps  >  **Maps** > **Maps** > **Join Latitude**. Then:

 
- To **start** Google Latitude, touch Apps  >  **Maps** > **Maps** > **Latitude**.
- To **add** friends, touch **FRIENDS LIST** > .
- To **remove** friends, touch **FRIENDS LIST**, touch a friend in your list, then touch **Remove this friend**.
- To **turn off** Google Latitude, touch your Latitude name tag in map view, then touch **Edit privacy settings** > **Sign out of Latitude**.

 
WIRELESS

lose the wires

QUICK START: WIRELESS


Connect your phone to fast Wi-Fi networks or Bluetooth™ devices.

 
To connect, touch Menu  > **System settings**.

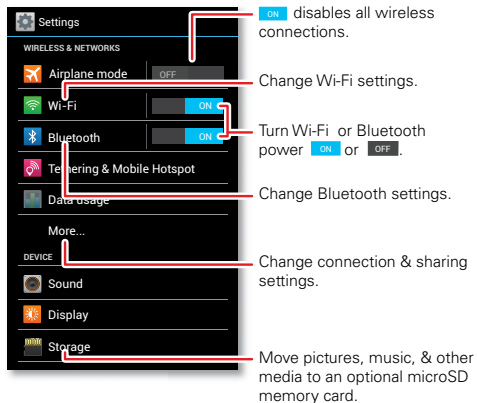

WI-FI NETWORKS


TURN WI-FI POWER ON OR OFF

Turn on: Touch Menu  > **System settings**, then drag the **Wi-Fi** power **OFF** switch to the right to turn it on.


Turn off: Touch Menu  > **System settings**, then drag the **Wi-Fi** power **ON** switch to the left to turn it off.


Note: To extend battery life, turn off Wi-Fi power when not in use.

WI-FI SEARCH & CONNECT


When Wi-Fi is **on**, the Wi-Fi in range indicator  appears in the status bar when a network is available. Drag down the status bar and touch the **Wi-Fi networks available** notification to select and connect to a network.

To search for a network when Wi-Fi is **off**:

- 1 Touch Menu  > **System settings** > **Wi-Fi**.
- 2 Drag the **Wi-Fi** power **OFF** switch to the right to turn on and scan. Your phone lists the networks it finds within range.

Tip: To see your phone's MAC address or other Wi-Fi details, touch Menu  > **Advanced**.

- 3 Touch a network to connect. If necessary, enter **Network SSID**, **Security**, and **Password**, and touch **Connect**.

When your phone is connected to the network, the Wi-Fi connected indicator  appears in the status bar.

Tip: When you are in range and Wi-Fi power is on, you will automatically reconnect to available networks you've connected to before.

WI-FI MODES

For those who like to get a bit more technical, your phone supports the following Wi-Fi modes: 802.11 b, g, n.

 
WI-FI HOTSPOT

You can make your phone a Wi-Fi hotspot to provide portable, convenient internet access to other Wi-Fi enabled devices.

Caution: This application significantly impacts battery life. You may want to run this application with the charger connected.

Note: You need to subscribe to Wi-Fi hotspot service to use this feature. Contact your service provider.

To set up your phone as a Wi-Fi hotspot:

- 1 Touch Menu  > **System settings** > **Tethering & Mobile Hotspot** > **Mobile Hotspot** to turn on the hotspot.
- 2 Touch **Mobile Hotspot settings** > **Configure Mobile Hotspot** to change hotspot security and configuration settings:

- **Network SSID**—Enter a unique name for your hotspot and touch **Next**.
- **Security**—Select the type of security you want: **WEP**, **WPA**, or **WPA2**. Enter a unique password. Other users can access your Wi-Fi hotspot only if they enter the correct password.

Note: Keep it secure. To protect your phone and hotspot from unauthorized access, it is strongly recommended that you set up hotspot **Security** (**WPA2** is the most secure), including password.



- **Broadcast Channel**—Select a channel that minimizes potential interference. You may need to try different channels after your hotspot is active for a time.



- 3 Touch **Save** when the settings are complete.

When your Wi-Fi hotspot is active, other Wi-Fi enabled devices can connect by entering your hotspot's **SSID**, selecting a **Security** type, and entering the correct **Password**.

BLUETOOTH™ HANDSFREE DEVICES

TURN BLUETOOTH POWER ON OR OFF

Turn on: Touch Menu  > **System settings**, then drag the **Bluetooth** power  switch to the right to turn it on.

Turn off: Touch Menu  > **System settings**, then drag the **Bluetooth** power  switch to the left to turn it off.

Note: To extend battery life, turn off Bluetooth power when not in use.

CONNECT NEW BLUETOOTH DEVICES

Note: This feature requires an optional accessory.

To connect with a new Bluetooth headset or other device, you need to pair with it. You only need to do this once for each device—to connect again, just turn on the device.


- 1 Make sure the Bluetooth device you are pairing with is in discoverable mode.

Note: Refer to the guide that came with the Bluetooth device for details.

- 2 Touch Menu  > **System settings** > **Bluetooth**.

- 3 Drag the **Bluetooth** power  switch to the right to turn on and scan. If Bluetooth power is already on, touch **SEARCH FOR DEVICES**.

- 4 Touch a device to connect.

- 5 If necessary, touch **OK**, or enter the device passkey (like **0000**) to connect to the device. When the device is connected, the Bluetooth connected indicator  appears in the status bar.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

RECONNECT DEVICES

To automatically reconnect your phone with a paired device, simply turn on the device.



To manually reconnect your phone with a paired device, touch the device name in the **AVAILABLE DEVICES** list.

DISCONNECT DEVICES

To automatically disconnect your phone from a paired device, simply turn off the device.

To manually disconnect your phone from a paired device, touch the device name in the devices list, then touch **OK**.



CHANGE DEVICE NAME

Touch Menu  > **System settings** > **Bluetooth**, turn Bluetooth power on, then touch Menu  > **Rename phone**. Enter a name and touch **OK**.


MOTOPRINT

Print email, documents, pictures, and contacts directly to shared printers on a Wi-Fi network—no printer drivers necessary. MOTOPRINT automatically discovers networked printers for you. You can even save your favorite printers and geo-tag their location for future use.

PRINT A DOCUMENT OR FILE

To print something from the **Email**, **Quickoffice**, or **Gallery** apps, open it and touch Menu  > **Print** or  > **Print**.

ADD A PRINTER



Open the document or file you want to print, then touch Menu  > **Print** > **Find printers** (home) or select an advanced search option (work).

TOOLS


stay on top of things

CALENDAR

Managing your schedule has never been easier. The calendar automatically shows calendar events from your web-based Google™ account, and syncs events that you enter from your phone or web browser.


Find it: Apps 
>  **Calendar**

You can view your calendar in different ways: Touch the date, then touch **Day**, **Week**, **Month**, or **Agenda**. When you highlight an event, more details appear.

Tip: To add a calendar widget to your home screen, touch Apps  > **Widgets**, touch and hold **Calendar**, then drag it to a spot on the home screen.



ADD CALENDAR EVENTS

From any view, touch Menu  > **New event**. Enter the event start time and other details. You can even set a

reminder so you don't forget about the event. (When you set the reminder time to **0 minutes**, it plays at the event start time.)

Tip: Reminders will play only if you've selected a notification ringtone (see "**RINGTONES**" on page 38).

When you finish entering event details, touch **Save**.

MANAGE CALENDAR EVENTS


To edit an event, touch and hold it, then touch **Edit event**. When you're done, touch **Save**.

To delete an event, touch and hold it, then touch **Delete event**.


To go to today, touch .

 
TASKS

Find it: Apps  >  **Tasks**

To add a task, touch .


 
From the tasks main screen, touch **All tasks** to view your tasks by due date, priority, and more.

Tip: To add a tasks widget to your home screen, touch Apps  > **Widgets**, touch and hold **Task**, then drag it to a spot on the home screen pages.

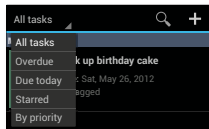


CALCULATOR

Find it: Apps  >  **Calculator**

 
To switch between basic and advanced functions, touch Menu  > **Advanced panel** or **Basic panel**. To clear history, touch Menu  > **Clear history**.

 
CLOCK

Find it: Apps  >  **Clock** > **Set alarm**

- **Alarm:** Touch an alarm to edit it, or touch  to add a new alarm.

When an alarm sounds, touch **Dismiss** to turn it off or **Snooze** to delay for ten minutes.

- **Settings:** To change your alarm sound, snooze delay, or other settings, touch Menu  > **Settings**.

Tip: To set your date, time, time zone, and formats, touch Menu  > **System settings** > **Date & time**.



 

ACCESSIBILITY

See, hear, speak, feel, and use. Accessibility features are there for everyone, helping to make things easier.

Note: For general information, accessories, and more, visit www.motorola.com/accessibility

VOICE RECOGNITION

Use your voice—just touch and speak.



- **Dialing and commands:** Touch Apps  >  **Voice Commands**. To dial, say “**Call**” and then a contact name or phone number. Or, say a command from the list shown, like “**Send Text**” or “**Go To**”.
- **Search:** Touch and hold Search , then say what you want to search for, like “Google Motorola accessories”.
- **Text entry:** Touch a text entry field to open the touchscreen keypad. Touch , then say what you want to type.

Tip: Speak naturally, but clearly. Use the microphone in a similar way to a speakerphone, so no need to shout or hold the phone close to your mouth.

To change your voice settings, see “**VOICE SETTINGS**” on page 46.

TALKBACK (VOICE READOUTS)

Your navigation and selections, read out loud.


To turn on TalkBack voice readouts, touch Menu  > **System settings** > **Accessibility** > **TalkBack**, then drag the **TalkBack**  switch to the right to turn it on.

To use TalkBack voice readouts:

- **Menus and screens:** In menus and screens, touch an item to select or open it. The item is read out loud, or your action is described.





- **Dialer & text entry:** As you type, each number or letter is read out loud.

Tip: Navigate through your apps and menus to hear how TalkBack voice readouts work on your phone.

To change TalkBack settings, touch Menu  > **System settings** > **Accessibility** > **TalkBack** > **SETTINGS**.




CALLER ID


When you want to **hear** who's calling:

- **Read out loud:** Have your caller announced—touch  **Phone** > Menu  > **Settings** > **Caller ID Readout**.
- **Ringtones:** Assign a unique ringtone to a contact—touch  **People**, touch a contact, then touch Menu  > **Set ringtone**.


VOICE SETTINGS

Personalize your voice settings:

- **Voice search:** Touch Menu  > **System settings** > **Language & input** > **Voice Search**. From here, you can set options like language, personalized voice recognition, and censorship.
- **Voice typing:** Touch Menu  > **System settings** > **Language & input** > **Language & input**, then touch  next to **Google voice typing**. From here, you can select input language and block offensive words.

- **Text-to-speech:** Touch Menu  > **System settings** > **Language & input** > **Text-to-speech output**. From here, you can set speed options and listen to a spoken text example.

VOLUME & VIBRATE

 
Choose volume and vibrate settings that work for you. Touch Menu  > **System settings** > **Sound**:

- **Volume:** Touch **Volumes** and use the sliders.
- **Vibrate:** Touch **Vibrate when ringing** to feel your phone ring.

 
ZOOM

Get a closer look. To zoom in, touch the screen with two fingers and then slide them apart. To zoom out, slide your fingers together.

DISPLAY BRIGHTNESS

Set a brightness level that works for you. Touch Menu  > **System settings** > **Display** > **Brightness** > **Adjust brightness level**. Make sure that **Automatic brightness** is unchecked so you can set your own level.




TOUCHSCREEN & KEYS

All these touch features are great, and sometimes it's nice to hear or feel your touches too. Touch Menu  > **System settings** > **Sound**:


- **Touchscreen:** To hear screen touches (click), select **Touch sounds**.
- **Keys:** To feel key touches (vibrate), select **Vibrate on touch**.
- **Screen lock:** To hear when you lock/unlock the screen (click), select **Screen lock sound**.

MESSAGES

From a simple text message to IM, email, and more. Create, send, and receive them all on your phone.

And to make text entry even easier, you can use features like auto-correct, auto-punctuate, and auto-capitalization—touch Menu  > **System settings** > **Language & input**, then touch  next to **Android keyboard**. Of course if you don't want to type at all, then use your voice—touch  on the touchscreen keypad.

TTY

You can use your phone in TTY mode with standard teletype machines. Touch Menu  > **System settings** > **Call settings** > **TTY mode** and select the mode you need:

- **TTY Full:** Type and read text on your TTY device.
- **TTY HCO:** Hearing-Carry-Over—type text on your TTY device and listen to voice replies on your phone's speaker.

- **TTY VCO:** Voice-Carry-Over—speak into your phone and read text replies on your TTY device.

 
Note: You'll need a cable/adaptor to connect your TTY device to the headset jack on your phone.


Refer to your TTY device guide for mode and usage information.

APPS

Want more? No problem. Google Play™ Store provides access to thousands of apps, and many provide useful accessibility features.

Find it: Apps  >  **Play Store**

Select a category or touch Search  to find the app you want.

Tip: Choose your apps carefully, from trusted sites, like  **Play Store**, as some may impact your phone's performance.

MANAGEMENT

stay in control

MEMORY CARD & FILE MANAGEMENT

Your photos, videos, and other files are automatically stored in your phone's internal memory. You can set individual applications (camera, camcorder, etc.) to store files on a microSD card. To install a microSD card, go to "**ASSEMBLE & CHARGE**" on page 3.

Tip: To move media from internal memory to a microSD card, touch Menu  > **System settings** > **Storage** > **Manage internal storage**.


DELETE OR SHARE FILES ON YOUR PHONE


Find it: Apps  >  **Files** > **Device storage** or **SD card**

Touch a file or folder to open, then touch and hold a file to **Delete** or **Share**.

REMOVE OR ERASE A MICROSD CARD

Note: Do not remove a microSD card while your phone is using it or writing files on it.

Before you remove or erase a microSD card you need to unmount it. Touch Menu  > **System settings** > **Storage** > **Unmount SD card**.


To erase a microSD card, touch Menu  > **System settings > Storage > Erase SD card.**



Warning: All data on the microSD card will be deleted.

USB CONNECTION

You can connect your phone to a computer with a USB cable.

Note: The first time you use a USB connection, your computer may indicate that drivers are being installed. Follow any prompts you see to complete the installation. This may take a few minutes.

- 1 With the home screen showing, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer. Your phone should show  in the status bar.


Note: Make sure to connect the phone to a high power USB port. Typically, these are located directly on your computer. Touch Menu  > **System settings > Storage > Menu  > USB computer connection > Media device (MTP) or Camera (PTP).**

- 2 Your phone and microSD memory card appear as two separate removable disks on your computer.

Drag and drop files between your computer and the phone or microSD card folders. When you're done, use "Safely Remove Hardware" before disconnecting the USB cable.


Note: You can't use files on the microSD card while your phone is connected to the computer.

ACCOUNT MANAGEMENT

To **add** email, social networking, or online media accounts on your phone, touch Menu  > **System settings > Accounts & sync > + Add account.**

Add an account by touching it. Enter your user name and password, then follow the prompts to set up the account.

To **edit** an account, touch *account name* > **Account settings.**


To **delete** an account, touch *account name* > Menu  > **Remove account.**

Note: You can't delete the Google™ account you used or created when you set up your phone.




 
SMARTACTIONS™

Wish your phone could automatically reply to texts when you're driving, silence your ringer during meetings, and conserve your battery when it runs low? It can. Smart actions can automate actions you take on your phone.

Smart actions suggests actions to automate, based on how you use your phone. When you see a

suggestion  in the status bar, flick the bar down to accept or delete it.

To open actions, touch Apps  >  **SmartActions**.

- To create an action, touch **Custom**.
- To turn an action off or on, open it and touch  or  at the top.
- To stop smart actions suggestions, touch Menu  > **Settings** and uncheck **Suggestion notifications**.
- For help in **SMARTACTIONS**, touch Menu  > **Help**.

 
DATA USAGE

You can track the amount of data uploaded and downloaded by your phone, and set a limit on your monthly data usage to avoid overage charges from your service provider.


 
Note: Usage information is provided to help you manage your phone. This may not match the amounts charged by your service provider, as they're not measured in the same way.




Find it: Menu  > **System settings** > **Data usage**

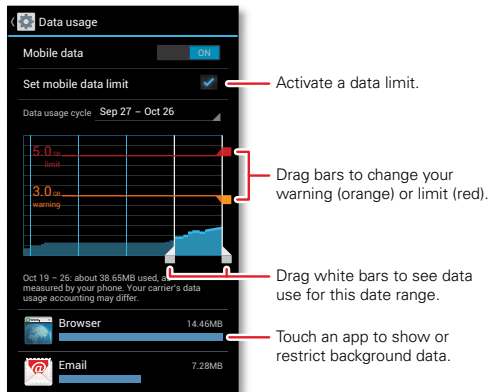


The data usage screen shows information and settings for data transferred over your service provider's mobile network.

Tip: You can also track Wi-Fi and ethernet data usage in separate tabs, by touching Menu  > **System settings** > **Data usage** > Menu  > **Show Wi-Fi usage**.

SET A DATA USAGE WARNING

Touch Menu  > **System settings** > **Data usage**, then drag the right side of the orange bar up/down to set the data warning level. You'll receive a notification when your data usage reaches the specified level.


SET A DATA USAGE LIMIT

Touch Menu  > **System settings** > **Data usage** > **Set mobile data limit**, then drag the right side of the red bar up/down to set the data usage limit.

When you reach your data usage limit, mobile data is turned off automatically and many of your phone's features won't work correctly. You'll receive a notification when mobile data is turned off.

 
 
RESTRICT BACKGROUND DATA USAGE BY APP

Some apps transfer data in the background, when you're not using them. You can restrict background data usage for individual apps to help reduce your overall data usage.

Touch Menu  > **System settings** > **Data usage**, and scroll down to see which apps are transferring data over the mobile network. Touch an app, then touch **Restrict background data**.

 
RESTRICT ALL BACKGROUND DATA

You can restrict background data for all apps across all available networks (mobile or Wi-Fi).

Find it: Menu  > **System settings** > **Data usage**
> Menu  > **Restrict background data**.

Caution: Restricting all background data can cause some features to stop working altogether.

WIRELESS MANAGER

Find it: Menu  > **System settings**, then go to the **WIRELESS & NETWORKS** section

Manage all your wireless connections: Wi-Fi, Bluetooth™, mobile data, airplane mode, and mobile hotspot.


AIRPLANE MODE

Use airplane mode to turn all your wireless connections off—useful when flying. Press and hold the Power key > **Airplane mode**.

Note: When you select airplane mode, all wireless services are disabled. You can then turn Wi-Fi and/or Bluetooth back on, if permitted by your airline. Other wireless voice and data services (such as calls and text messages) remain off in airplane mode. Emergency calls to your region's emergency number can still be made.

NETWORK


You should not need to change any network settings. Contact your service provider for help.

 
Touch Menu  > **System settings** > **More...** > **Mobile networks** to see network settings options.

SECURITY

help keep your phone safe

QUICK START: SECURITY

Find it: Menu  > **System settings** > **Security & Screen Lock**

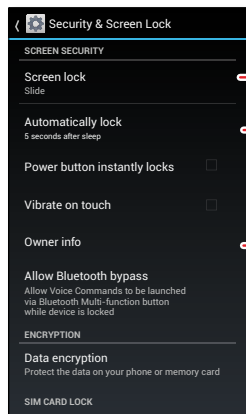 



Select & set up a screen lock method.

Set lock timer.

Enter text to appear on the lock screen.

SCREEN LOCK

To prevent accidental touches, you can make the touchscreen lock when it goes to sleep. Touch Menu  > **System settings** > **Security & Screen lock** > **Screen lock**, then select the lock type:

- **None**—turn off the screen lock.
- **Slide**—flick  to the right to unlock.
- **Face Unlock**—look at your phone to unlock it.
- **Pattern**—draw a pattern to unlock.
- **PIN**—enter a numeric PIN to unlock.
- **Password**—enter a password to unlock.

Note: You can make emergency calls on a locked phone (see “**EMERGENCY CALLS**” on page 17). A locked phone still rings, **but you need to unlock it to answer.**

FACE UNLOCK

Use face recognition software to unlock your phone.

Note: This feature is less secure than a pattern, PIN, or password.

To get started, touch Menu  > **System settings** > **Security** > **Security & Screen lock** > **Face Unlock** > **Set it up.**

Follow the instructions and look toward the front camera lens. When face capture is complete, you'll be prompted

to choose a pattern or PIN as a backup security measure you can use when the phone can't see your face clearly.

 
To unlock the phone, flick 🔓 to the right and look toward the front camera lens.

LOCK PATTERN

To set the lock pattern, touch Menu ☰ > **System settings** > **Security** > **Security & Screen lock** > **Pattern**.

Follow the instructions to draw your lock pattern.

When prompted, draw the pattern to unlock the phone.

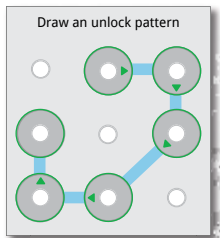

PIN LOCK

To set a PIN, touch Menu ☰ > **System settings** > **Security** > **Security & Screen lock** > **PIN**.

Enter a numeric PIN, then confirm it.

When prompted, enter the PIN to unlock the phone.

PASSWORD LOCK

To set the password, touch Menu ☰ > **System settings** > **Security** > **Security & Screen lock** > **Password**.

Enter a password (up to eight characters), then confirm it.

When prompted, enter the password to unlock the phone.

PERSONALIZE YOUR LOCK SCREEN

To change your timeout, touch Menu ☰ > **System settings** > **Display** > **Sleep**. If you don't touch the screen or press any keys for the amount of time you select, the screen locks automatically.

LOCK & UNLOCK

To lock your phone screen, do any one of these:

- Press the Power key.
- Let the screen time out (don't press anything).
- Switch off the power.

To unlock your phone screen, press the Power key to wake the touchscreen display, then perform the unlock procedure required by the lock screen (slide, face unlock, pattern, PIN, or password).

CAN'T UNLOCK YOUR PHONE?

Face unlock: If your phone doesn't recognize your face, you'll be prompted to enter your backup pattern or PIN code to unlock it.

Pattern, PIN, or password: If you forget your pattern, PIN, or password, contact your service provider.

RESET

To reset your phone to factory settings and erase all the data on your phone, touch Menu  > **System settings** > **Privacy** > **Factory data reset** > **Reset phone**.

Warning: All data on your phone will be deleted. (Nothing on the microSD memory card is deleted.)

REMOTE WIPE A LOST OR STOLEN PHONE

Don't you just hate it when your life is on your phone and it all goes wrong? Lost, or even worse—stolen! If necessary, you can use your email account on a Microsoft™ Exchange ActiveSync 2007 server to clear the personal data from your phone and an installed microSD memory card.

You need to be assigned permissions before you can remote wipe data from your phone and microSD card. Contact your IT system administrator for the information and permissions you need to perform the remote wipe procedure.

Warning: All downloaded apps and user data on your phone and microSD card will be deleted.

TROUBLESHOOTING

we're here to help

CRASH RECOVERY

In the unlikely event that your phone stops responding to touches and key presses, try a forced reboot—press and hold both the Power key and the down volume key for up to 10 seconds.

SERVICE & REPAIRS

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/repair (United States) or www.motorola.com/support (Canada), where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-734-5870 (United States), 1-888-390-6456 (TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Battery Use & Safety

The following battery use and safety information applies to all Motorola mobile devices. **If your mobile device uses a non-removable main battery** (as stated in your product information), **details related to handling and replacing your battery should be disregarded**—the battery should only be replaced by a Motorola-approved service facility, and **any attempt to remove or replace your battery, unless performed by a service representative, may damage the product and void your warranty.**

Important: Handle and store batteries properly to avoid injury or damage. Most battery safety issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't use tools, sharp objects, or excessive force to insert or remove the battery as this can damage the battery.**
- **Don't let the mobile device or battery come in contact with liquids.*** Liquids can get into the mobile device's circuits, leading to corrosion.
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your mobile device or battery near a heat source.*** High temperatures can cause the battery to swell, leak, or malfunction.
- **Don't dry a wet or damp battery with an appliance or heat source,** such as a hair dryer or microwave oven.

DOs

- **Do avoid leaving your mobile device in your car in high temperatures.***
- **Do avoid dropping the mobile device or battery.*** Dropping these items, especially on a hard surface, can potentially cause damage.*
- **Do contact your service provider or Motorola if your mobile device or battery has been damaged in any of the ways listed here.**

* **Note:** Always make sure that any battery, connector and compartment covers are closed and secure to avoid direct exposure of the battery to any of these conditions, even if your product information states that your **mobile device** can resist damage from these conditions.

Important: Motorola recommends you always use Motorola-branded batteries and chargers for quality assurance and safeguards. Motorola's warranty does not cover damage to the mobile device caused by non-Motorola batteries and/or chargers. To help you identify authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. You should confirm that any battery you purchase has a "Motorola Original" hologram.

If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and try charging it again;
- If the message remains, contact a Motorola authorized service center.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it benefits the environment. You can recycle your used batteries in many retail or service provider locations. Additional information on proper disposal and recycling can be found at www.motorola.com/recycling

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.



Warning: Never dispose of batteries in a fire because they may explode.

Battery Charging

Notes for charging your product's battery:

- During charging, keep your battery and charger near room temperature for efficient battery charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

Third Party Accessories

Use of third party accessories, including but not limited to batteries, chargers, headsets, covers, cases, screen protectors and memory cards, may impact your mobile device's performance. In some circumstances, third party accessories can be dangerous and may void

your mobile device's warranty. For a list of Motorola accessories, visit www.motorola.com/products

Driving Precautions

Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle. Using a mobile device or accessory for a call or other application while driving may cause distraction, and may be prohibited or restricted in certain areas—always obey the laws and regulations on the use of these products.

While driving, NEVER:

- Type, read, enter or review texts, emails, or any other written data.
- Surf the web.
- Input navigation information.
- Perform any other functions that divert your attention from driving.

While driving, ALWAYS:

- Keep your eyes on the road.
- Use a handsfree device if available or required by law in your area.
- Enter destination information into a navigation device **before** driving.
- Use voice activated features (such as voice dial) and speaking features (such as audible directions), if available.
- Obey all local laws and regulations for the use of mobile devices and accessories in the vehicle.
- End your call or other task if you cannot concentrate on driving.

Remember to follow the “Smart Practices While Driving” at www.motorola.com/callsmart (in English only).

Seizures, Blackouts & Eyestrain

To reduce eyestrain and avoid headaches, it is always a good idea to hold the screen a comfortable distance from your eyes, use in a well-lit area, and take frequent breaks. Some people may be susceptible to seizures or blackouts (even if they have never had one before) when exposed to flashing lights or light patterns, such as when playing video games, or watching videos with flashing-light effects.

Discontinue use and consult a physician if any of the following symptoms occur: seizures, blackout, convulsion, eye or muscle twitching, loss of awareness, or disorientation.

If you or someone in your family has experienced seizures or blackouts, please consult with your physician before using an application that produces flashing-light effects on your mobile device.

Caution About High Volume Usage

Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected. To protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our website at <http://direct.motorola.com/hellomoto/nss/AcousticSafety.asp> (in English only).



Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Children

Keep your mobile device and its accessories away from small children. These products are not toys and may be hazardous to small children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Supervise access for older children. Similar to a computer, if an older child does use your mobile device, you may want to monitor their access to help prevent:

- Exposure to inappropriate apps or content.
- Improper use of apps or content.
- Loss of data.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Operational Warnings

Obey all posted signs when using mobile devices in public areas.








Potentially Explosive Areas



Potentially explosive areas are often, but not always, posted and can include blasting areas, fueling stations, fueling areas (such as below decks on boats), fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries, unless it is a radio product type especially qualified for use in such areas and certified as "Intrinsically Safe" (for example, Factory Mutual, CSA, or UL approved). In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
 	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not dispose of your battery or mobile device with your household waste. See "Recycling" for more information.
	Do not use tools.
	For indoor use only.

Symbol	Definition
 	Listening at full volume to music or voice through a headset may damage your hearing.

Radio Frequency (RF) Energy

Exposure to RF Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

RF Energy Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions:

- When placing or receiving a phone call, hold your mobile device just like you would a landline phone.
- If you wear the mobile device on your body, ensure that the device is positioned at least 2.5 cm (1 inch) away from the body, and if you use an accessory case or holder, ensure it is free of any metal.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so, such as hospitals or health care facilities.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Medical Devices

If you have a medical device, including an implantable medical device such as a pacemaker or defibrillator, consult your healthcare provider and the device manufacturer's directions before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Specific Absorption Rate (FCC & IC)

YOUR MOBILE DEVICE MEETS FCC AND IC LIMITS FOR EXPOSURE TO RADIO WAVES.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) adopted by the Federal Communications Commission (FCC) and Industry Canada (IC). These limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 1.6 W/kg.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the FCC and IC guidelines for your device model are listed below:

Head SAR	UMTS 1900, Wi-Fi, Bluetooth	0.42 W/kg
Body-worn SAR	UMTS 850, Wi-Fi, Bluetooth	0.48 W/kg

During use, the actual SAR values for your device are usually well below the values stated. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

If you are interested in further reducing your RF exposure then you can easily do so by limiting your usage or simply using a hands-free kit to keep the device away from the head and body. Additional information can be found at www.motorola.com/rfhealth.

European Union Directives Conformance Statement

The following CE compliance information is applicable to Motorola mobile devices that carry one of the following CE marks:

CE0168

 
CE0168!

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

For products that support Wi-Fi 802.11a (as defined in your product information): This device is restricted to indoor use when operating in the 5.15 to 5.25 GHz (802.11a) Wi-Fi frequency band.

The following gives an example of a typical Product Approval Number:

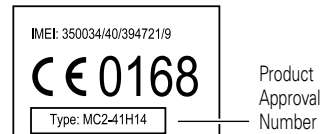

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte (in English only). To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the website.

FCC Notice to Users

The following statement applies to all products that bear the FCC logo and/or FCC ID on the product label.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. See 47 CFR Sec. 15.105(b). These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(a)(3).

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

For products that support Wi-Fi 802.11a (as defined in product information): In the United States, do not use your device outdoors while connected to an 802.11a Wi-Fi network. The FCC prohibits such outdoor use since frequencies 5.15-5.25 GHz can cause interference with Mobile Satellite Services (MSS). Public Wi-Fi access points in this range are optimized for indoor use.

Industry Canada Notice to Users

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.3. This Class B digital apparatus complies with Canadian ICES-003.

Software Notices

Warning against unlocking the bootloader or altering a product's operating system software: Motorola strongly recommends against altering a product's operating system, which includes unlocking the bootloader, rooting a device or running any operating software other than the approved versions issued by Motorola and its partners. Such alterations may permanently damage your product, cause your product to be unsafe and/or cause your product to malfunction. In such cases, neither the product nor any damage resulting therefrom will be covered by warranty.

Important FCC information: You must not make or enable any changes to the product that will impact its FCC grant of equipment authorization. The FCC grant is based on the product's emission, modulation, and transmission characteristics, including: power levels, operating frequencies and bandwidths, SAR levels, duty-cycle, transmission modes (e.g., CDMA, GSM), and intended method of using the product (e.g., how the product is held or used in proximity to the body). A change to any of these factors will invalidate the FCC grant. It is illegal to operate a transmitting product without a valid grant.

Location Services

The following information is applicable to Motorola mobile devices that provide location based functionality. Location sources can include GPS, AGPS and Wi-Fi. Your mobile device can use *Global Positioning System* (GPS) signals for location-based applications. GPS uses satellites controlled by the U.S. government that are subject to changes implemented in accordance with the Department of Defense policy and the Federal Radio Navigation Plan. These changes may affect the performance of location technology on your mobile device.

Your mobile device can also use *Assisted Global Positioning System* (AGPS), which obtains information from the cellular network to improve GPS performance. AGPS uses your wireless service provider's network and therefore airtime, data charges, and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details.

Your mobile device can also use *Wi-Fi* signals to determine your approximate location, using information from known and available Wi-Fi networks.

Your Location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices which are connected to a wireless network transmit location-based information. Devices enabled with location technology also transmit location-based information. Additionally, if you use applications that require

location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.

Emergency Calls

When you make an emergency call, the cellular network may activate the AGPS technology in your mobile device to tell the emergency responders your approximate location. AGPS has limitations and **might not work in your area**. Therefore:

- Always tell the emergency responder your location to the best of your ability; and
- Remain on the phone for as long as the emergency responder instructs you.

Navigation

The following information is applicable to Motorola mobile devices that provide navigation features.

When using navigation features, note that mapping information, directions and other navigational data may contain inaccurate or incomplete data. In some countries, complete information may not be available. Therefore, you should visually confirm that the navigational instructions are consistent with what you see. All drivers should pay attention to road conditions, closures, traffic, and all other factors that may impact driving. Always obey posted road signs.

Privacy & Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Use your device's security and lock features, where available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible.
- **Secure Personal Information**—Your mobile device can store personal information in various locations including your SIM card, memory card, and phone memory. Be sure to remove or clear all personal information before you recycle, return, or give away your device. You can also backup your personal data to transfer to a new device.

Note: For information on how to backup or wipe data from your mobile device, go to www.motorola.com/support

- **Online accounts**—Some mobile devices provide a Motorola online account (such as MOTOBUR). Go to your account for information on how to manage the account, and how to use security features such as remote wipe and device location (where available).
- **Applications and updates**—Choose your apps and updates carefully, and install from trusted sources only. Some apps can impact your phone's performance and/or have access to private information including account details, call data, location details and network resources.
- **Wireless**—For mobile devices with Wi-Fi features, only connect to trusted Wi-Fi networks. Also, when using your device as a hotspot (where available) use network security. These precautions will help prevent unauthorized access to your device.
- **Location-based information**—Mobile devices enabled with location based technologies such as GPS, AGPS or Wi-Fi, can transmit location-based information. See "Location Services" for more details.
- **Other information your device may transmit**—Your device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other third-party servers. This information is used to help improve products and services offered by Motorola.

If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Use & Care

To care for your Motorola mobile device, please observe the following:



liquids

Don't expose your mobile device to water, rain, extreme humidity, sweat, or other liquids.



drying

Don't try to dry your mobile device using a microwave oven, conventional oven, or dryer, as this may damage the mobile device.

**extreme heat or cold**

Don't store or use your mobile device in temperatures below -10°C (14°F) or above 60°C (140°F). Don't recharge your mobile device in temperatures below 0°C (32°F) or above 45°C (113°F).

**dust and dirt**

Don't expose your mobile device to dust, dirt, sand, food, or other inappropriate materials.

**cleaning**

To clean your mobile device, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.

**shock and vibration**

Don't drop your mobile device.

**protection**

To help protect your mobile device, always make sure that any battery, connector and compartment covers are closed and secure.

Recycling

Mobile Devices & Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste, or in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at:

www.motorola.com/recycling



Packaging & Product Guides

Product packaging and product guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

California Perchlorate Label

Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label:

Perchlorate Material – special handling may apply when the battery is recycled or disposed of. See www.dtsc.ca.gov/hazardouswaste/perchlorate (in English only).

There is no special handling required by consumers.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has "Rated for Hearing Aids" printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box. To maintain the published Hearing Aid Compatibility (HAC) rating for this mobile phone, use only the original equipment battery model.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Contact your service provider or Motorola for information on hearing aid compatibility. If you have questions about return or exchange policies, contact your service provider or phone retailer.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be

able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Software Copyright

Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Content Copyright

The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Open Source Software Information

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device, you may send your request

in writing to the address below. Please make sure that the request includes the model number and the software version number.

MOTOROLA MOBILITY LLC
OSS Management
600 North US Hwy 45
Libertyville, IL 60048
USA

The Motorola website opensource.motorola.com (in English only) also contains information regarding Motorola's use of open source.

Motorola has created the opensource.motorola.com website to serve as a portal for interaction with the software community-at-large.

To view additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, please go to Apps > **System settings** > **About phone** > **Legal information** > **Open source licenses**. In addition, this Motorola device may include self-contained applications that present supplemental notices for open source packages used in those applications.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Product Registration

Online Product Registration:

www.motorola.com/us/productregistration (in English only)

Product registration is an important step toward enjoying your new Motorola product.

Registering permits us to contact you for product or software updates and allows you to subscribe to updates on new products or special promotions. Registration is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Service & Repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/repair (United States) or www.motorola.com/support (Canada), where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-734-5870 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

How to Obtain Service or Other Information

1. Please access and review the online Customer Support section of Motorola's consumer website prior to requesting warranty service.
2. If the Product is still not functioning properly after making use of this resource, please contact the Warrantor listed at the Motorola website or the contact information for the corresponding location.
3. A representative of Motorola, or of a Motorola Authorized Repair Center, will help determine whether your Product requires service. You may be required to download, or otherwise obtain and accept software updates from Motorola or a Motorola Authorized Repair Center. You are responsible for any applicable carrier service fees incurred while obtaining the required downloads. Complying with the warranty process, repair instructions and accepting such software updates is required in order to receive additional warranty support.
4. If the software update does not fix the problem, you will receive instructions on how to ship the Product to a Motorola Authorized Repair Center or other entity.
5. To obtain warranty service, as permitted by applicable law, you are required to include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) your address and telephone number. In the event the Product is not covered by the Motorola Limited Warranty, Motorola will inform the consumer of the availability, price and other conditions applicable to the repair of the Product.

To obtain service or other information, please access and review the online Customer Support section of Motorola's consumer website at www.motorola.com.

Motorola Mobility LLC Limited Global Warranty Mobile Phones

Note: This Limited Warranty is not applicable in Quebec, Canada.

FOR CONSUMERS WHO ARE COVERED BY CONSUMER PROTECTION LAWS OR REGULATIONS IN THEIR COUNTRY OF PURCHASE OR, IF DIFFERENT, THEIR COUNTRY OF RESIDENCE, THE BENEFITS CONFERRED BY THIS LIMITED WARRANTY ARE IN ADDITION TO ALL RIGHTS AND REMEDIES CONVEYED BY SUCH CONSUMER PROTECTION LAWS AND REGULATIONS.

Who is Covered?

This Limited Warranty extends only to the first consumer purchaser of the Product, and is not transferable.

What Does this Limited Warranty Cover?

Motorola Mobility LLC or its subsidiaries' warranty obligations are limited to the terms and conditions set forth herein. Subject to the exclusions contained below, Motorola Mobility LLC or its subsidiaries ("Motorola") warrant this Mobile Phone, and any in-box accessories which accompany such Mobile Phone ("Product") against defects in materials and workmanship, under normal consumer use, for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser, or the period of time required by the laws of the country where the Product is purchased, whichever is longer ("Warranty Period"). Repairs made under this Limited Warranty are covered for the balance of the original Warranty Period, or 90 days from the date of service, whichever is longer. Any upgrade to the original product will be covered only for the duration of the original Warranty Period. This Limited Warranty is only available in the country where the Product was purchased. Motorola may provide service outside the country of purchase, to the extent that it is possible and under the terms and conditions of the country of purchase. This Limited Warranty applies only to new Products which are a) manufactured by or for Motorola as identified by the "Motorola" trademark, trade name, or logo legally affixed to them; b) purchased by consumers from an authorized reseller or distributor of Motorola Products; and c) accompanied by this written Limited Warranty.

What Will Motorola Do?

If a covered defect or damage arises and a valid warranty claim is received within the applicable Warranty Period, Motorola, at its sole option, unless otherwise required by applicable law, will either (1) repair, at no charge, the defect or damage using new, used or reconditioned/refurbished functionally equivalent replacement parts; or (2) exchange the Product with a replacement Product that is new or which has been reconditioned/refurbished or otherwise remanufactured from new or used parts and is functionally equivalent to the original Product; or (3) refund the purchase price of any Products covered by the terms and conditions of this Limited Warranty.

Products, parts and supporting documentation provided to Motorola as part of the warranty process, shall become the property of Motorola, and may not be returned. When a replacement or refund is given, the Product for which the replacement or refund is provided must be returned to Motorola and shall become the property of Motorola.

Exclusions (Products and Accessories)

This warranty does not apply to:

- (a) **Consumable parts**, such as batteries or protective coatings designed to diminish over time unless failure has occurred due to a defect in materials or workmanship. As with all batteries, the maximum capacity of the battery will decrease with time and use; this is not a defect. Only defective batteries and batteries that leak are covered by this warranty.
- (b) **Cosmetic damage**, including but not limited to scratches, dents, cracks or other cosmetic damage.
- (c) **Damage caused by use with non-Motorola products.** Defects or damage that result from the use of non-Motorola branded or certified Products, accessories or other peripheral equipment, including without limitation housings, parts, or software, are excluded from coverage.
- (d) **Damage caused by accident, abuse, misuse, liquid contact, fire, earthquake or other external causes**; including but not limited to: (i) improper usage or operation (e.g. operating the Product outside their permitted or intended uses as defined by Motorola, including but not limited to as set forth by Motorola in the Products' User Manual, Quick Start Guide, Online Tutorials, and other documentation), improper storage (e.g. subjecting the Product to extreme temperatures), abuse or neglect (e.g. broken/bent/missing clips/fasteners/connectors); impact damage (e.g. dropping the Product) (ii) contact with liquids, water, rain, extreme humidity, heavy perspiration or other moisture; sand, food, dirt or similar substances (except for Products sold as resistant to such substances, but only to the extent the damage was not caused by incorrectly securing the phone's protective elements or subjecting the Product to conditions beyond its stated specifications or limits); (iii) use of the Products for commercial rental purposes; or (iv) external causes or acts which are not the fault of Motorola, including but not limited to flood, fire, earthquake, tornado or other acts of God, are excluded from coverage.
- (e) **Unauthorized Service or Modification.** Defects or damage resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way, including but not limited to tampering with or altering the software, by someone other than Motorola, or its authorized service centers, are excluded from coverage. Notwithstanding the foregoing, any Product which has had its bootloader unlocked, or whose operating system has been altered, including any failed attempts to unlock the bootloader or alter such

operating system, is not covered by this warranty, regardless of whether such modifications are authorized, approved, or otherwise sanctioned by Motorola.

- (f) **A product or part that has been modified in any manner without the written permission of Motorola.** Products that have been altered in any manner so as to prevent Motorola from determining whether such Products are covered under the terms of this Limited Warranty are excluded from coverage. The foregoing shall include but not be limited to (i) serial numbers, date tags or other manufacturer coding that has been removed, altered or obliterated; (ii) mismatched or duplicated serial numbers; or (iii) broken seals or other evidence of tampering. Do not open the Product or attempt to repair the Product yourself; such conduct may cause damage that is not covered by this warranty.
- (g) **Normal wear and tear or otherwise due to the normal aging of the Product.**
- (h) **Defects, damages, or the failure of the Product due to any communication service or network you subscribe to or use with the Products.**
- (i) **All software, including operating system software, third-party software, applications, and all other software of any kind.** Software distributed by Motorola is provided "AS-IS" and "AS AVAILABLE," "WITH ALL FAULTS" and without a warranty of any kind. The Limited Warranty does not apply to any non-Motorola product or any software, even if packaged or sold with the Motorola hardware, unless otherwise required by applicable local law.
- (j) **Products that have been refurbished, reconditioned, or remanufactured**, except for Products repaired or replaced pursuant to the terms of this Limited Warranty. If damage is outside the scope of warranty coverage, repair services may be available, but all costs associated with such out of warranty repair will be your responsibility.

What Other Limitations are There?

- TO THE EXTENT PERMITTED BY APPLICABLE LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES, WHETHER ORAL OR WRITTEN, STATUTORY, EXPRESS OR IMPLIED. NO ORAL OR WRITTEN REPRESENTATIONS MADE BY MOTOROLA OR ANY SELLER, RESELLER OR DISTRIBUTOR OF THE PRODUCTS, INCLUDING EMPLOYEES AND AGENTS THEREOF, SHALL CREATE ANY ADDITIONAL WARRANTY OBLIGATIONS, INCREASE THE SCOPE, OR OTHERWISE MODIFY IN ANY MANNER THE TERMS OF THIS LIMITED WARRANTY.
- TO THE EXTENT PERMITTED BY APPLICABLE LAW, MOTOROLA SPECIFICALLY DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT AND ALL WARRANTIES AGAINST HIDDEN

Copyright & Trademarks

Motorola Mobility LLC
Consumer Advocacy Office
600 N US Hwy 45
Libertyville, IL 60048
www.motorola.com

Note: Do not ship your product to the above address. If you need to return your product for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:

1-800-734-5870 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

Note: The images in this guide are examples only.

MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. Android, Google and other trademarks are owned by Google Inc. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. All other product or service names are the property of their respective owners.

© 2013 Motorola Mobility LLC. All rights reserved.

Caution: Motorola does not take responsibility for changes/modification to the transceiver.

Product ID: Motorola RAZR (Model XT910)

Manual Number: 68016518001-C

