


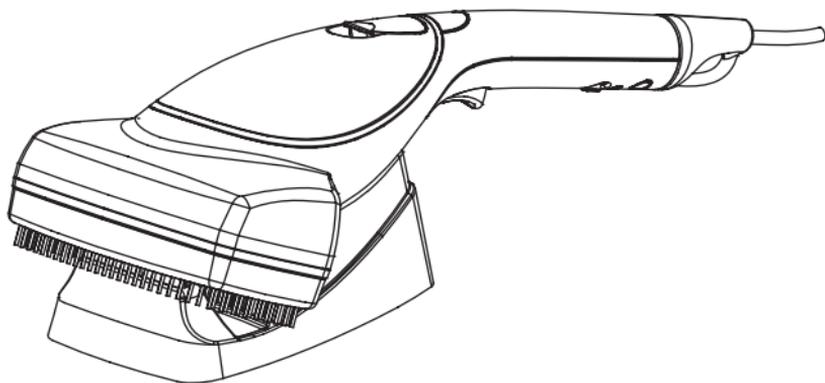

*Fabric Steamer*

Model: G-689

---



INSTRUCTION MANUAL

# IMPORTANT SAFEGUARDS


1. Don't add any cleaning, spray or detergent into water tank. This may not only cause impact on cosmetic of the appliance, but risk of fire.
2. Children should be supervised to ensure that they do not play with the appliance. Keep children away from the appliance.
3. In order to avoid electric shock, do not immerse the appliance into water or any other liquids.
4. Don't touch hot surface or allow the steam outlet direct persons.
5. When not in use, always unplug the appliance from outlet. Never yank cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
6. Do not iron clothes or steam clean clothes on the body as this may cause scald.
7. Check if the voltage indicated in the rating plate corresponding to the mains voltage in your home.
8. Do not attempt to disassemble, repair or modify the unit by yourself. You may injure yourself as a result of fire, or abnormal operation.
9. The appliance must not be left unattended while it is connected to the supply mains.
10. Before cleaning, please unplug at first, and then allow the appliance completely cool down.
11. Never plug or disconnect power cord with wet hand, otherwise electric shock or fire may be caused.
12. Please stop using this appliance when it has been dropped or damaged, it is easy to cause a risk of fire and electric shock.
13. Do not allow cord to touch hot surfaces. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.
14. Please stop using this appliance when power cord or outlet has been damaged, and take it to a qualified serviceman or agent for examination or repair.

15. This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities.

**SAVE THESE INSTRUCTIONS MANUAL**

# PARTS AND FEATURES

- ① Water tank
- ② Water tank cover
- ③ LED cover
- ④ Body
- ⑤ Power cord guard
- ⑥ Stainless steel hot cover
- ⑦ Phenolic cover
- ⑧ Chrome ring
- ⑨ Steam button
- ⑩ Handle cover
- ⑪ ON/OFF Switch
- ⑫ Screw cover
- ⑬ Power light
- ⑭ Pilot light
- ⑮ Refill cup
- ⑯ Base
- ⑰ Bristle brush

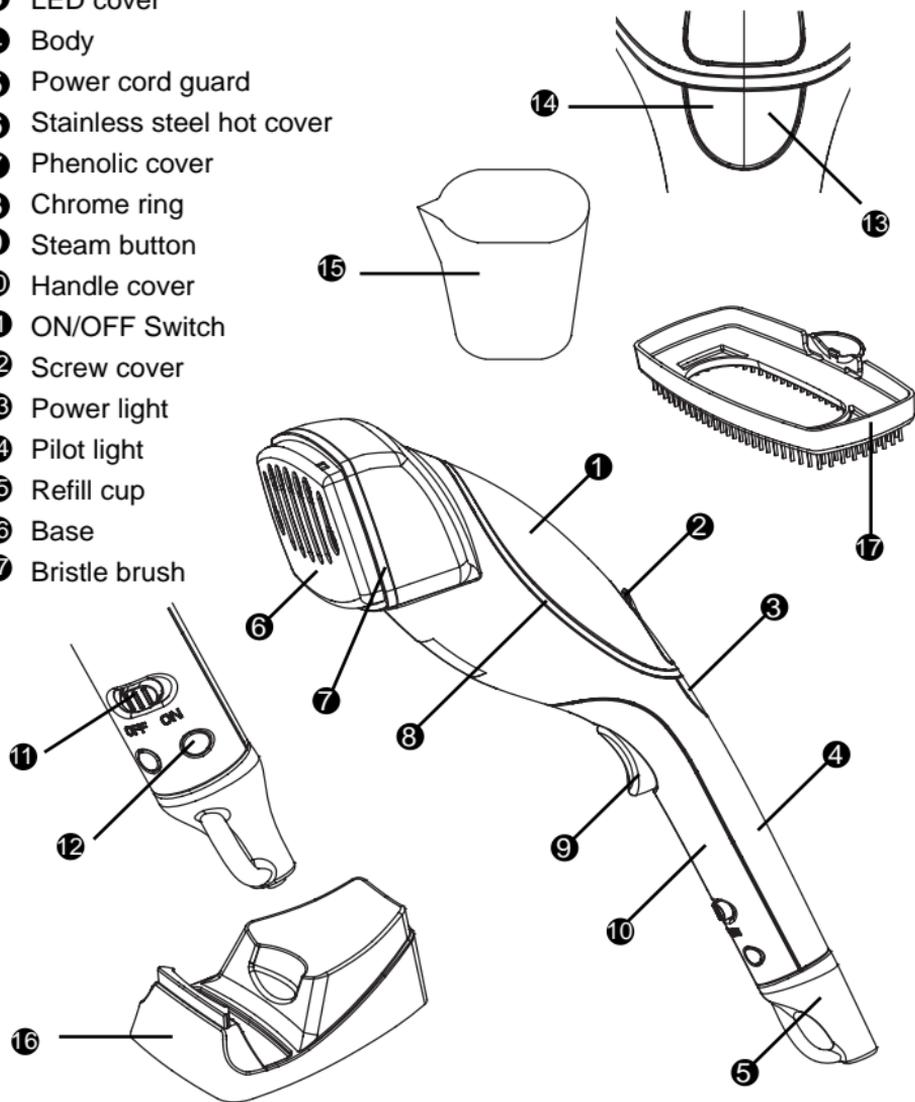

# How TO USE

## Before use

**Caution:** Before removing or attaching the bristle brush, unplug the appliance from the electrical outlet and let it cool completely.

Unpack the appliance, please read the instruction carefully before use, and keep in a safe place for future reference. When reading, please refer to the figures, which are mentioned in the text.

## Settle and remove the brush

- Insert the locking tab in the front of the bristle brush into the recess slot of the stainless steel hot cover, and then press the bristle brush handle. The bristle brush will be locked in place when a “click” sound is heard. (Please see fig1.)
- Hold the bristle brush handle and pull it outwards as the arrow indicated, the bristle brush will be removed.(Refer to fig.2)

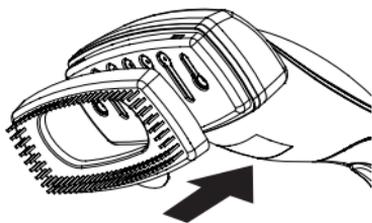


Fig.1

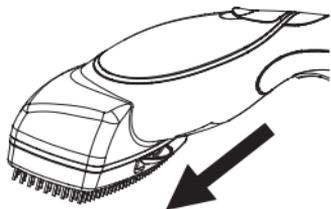


Fig.2

# Filling the water tank

1. Remove the plug from the socket.
2. Open the water inlet cover, fill the water tank by a water cup with 150ml. Maximum capacity.
3. Replace the water inlet cover.
4. Pour out the remaining water after use.(Please see fig3.,4)

**Note:** When the appliance is plugged in, slight steam may come out from the steam holes even the steam button is not pressed. This is normal to the unit.

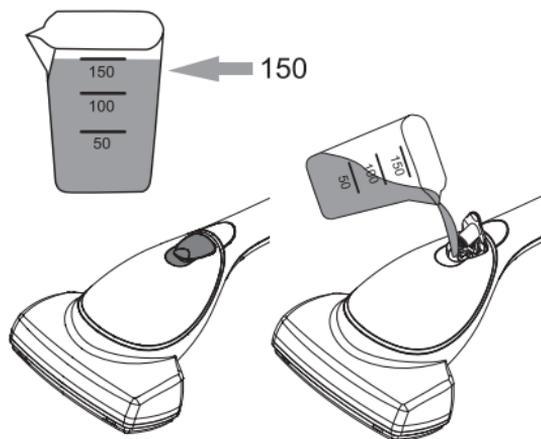


Fig.3



Fig.4

# How to use




## Dry ironing

1. Plug the appliance into the main socket, and power ON. Power indicator light(red) and pilot light (blue) ON. Place the appliance on the base for heating. When complete the first time heating up(the blue light turned off), it is ready for dry ironing.(Please see fig.5)

2. After use, turn off the power switch unplug the appliance from main socket, and then store it when it has been completely cooled down.

## Steam ironing

1. Refer to "Filling the water tank" to fill water into water tank.
2. Plug the appliance into main socket, and power ON. Power indicator light (red) and pilot light (blue) ON . Place the appliance on the base for heating.
3. When complete the first time heating up(the blue light turned off),press steam button, steam will escape from the outlet continuously. it is ready for steam ironing.
4. Allow the soleplate facing the fabric, and move the appliance front and back for steam ironing. The soleplate can be contacted with the fabric or not, this depends on your requirement.
5. After use,turn off the power switch unplug from main socket,empty the remaining water from water tank.Store the appliance after it has been completely cooled down.(Please see fig.6,7)

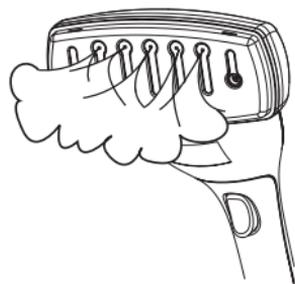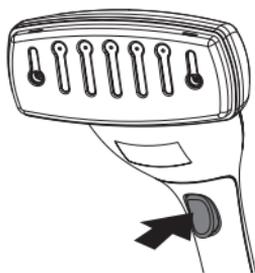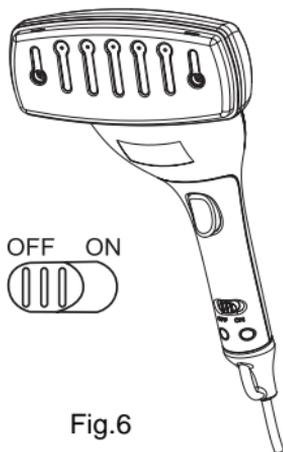

# Steam Cleaning

1. Refer to “Filling the water tank” to fill water into water tank.
2. Assemble the bristle brush as described in “ Settle and remove the brush ”.
3. Plug the appliance into main socket, and power ON. Power indicator light (red) and pilot light (blue) ON . Place the appliance on the base for heating.
4. When complete the first time heating up(the blue light turned off),press steam button, steam will escape from the outlets continuously. it is ready for steam cleaning.
5. Allow the soleplate facing the fabric, and move the appliance front and back for steam cleaning.
6. After use,turn off the power switch unplug from main socket,empty the remaining water from water tank.Store the appliance after it has been completely cooled down.

**Notice:** Normally, the pilot light is cycled to turn on and off while using.

## Intended use

This appliance is designed for killing dust mites, bed bugs, fleas for bedclothes, clothes, curtain and all kinds of fabric. The bristle brush can be used for fabric cleaning. The appliance can be multi-direction steam cleaning.

# IMPORTANT SAFEGUARDS

1. Please read this instruction manual carefully before using this product. The safety instruction included in it will be helpful for you to use this appliance safely and correctly and avoid any injury,hurt being caused to yourself or others.
2. After reading this instruction manual, please store it where is accessible to the user.

## Caution

1. Don't get burnt by the appliance's emission steam,hot water, soleplate and iron rest.
2. Use the appliance only for its intended household use only.
3. Don't rinse the unit under tap water.
4. This appliance must be used and rested on a stable surface.
5. When placing the appliance on the base, ensure that the surface on which the base is placed is stable.
6. The plug must be removed from the socket before filling or empty.
7. The appliance is intended for its ironing and steam cleaning uses(Note: Don't use steam cleaning for leather, fur etc. It is easy to cause burns on these materials in case of improper operation).Please refer to the cleaning methods described on the garment indicator label provided by manufacturer before use.
8. It is normal that there will appear to smoke after power on.This does not indicate a defect or hazard.
9. Don't clean the stainless steam hot cover with hard rough cleanser.
10. Care should be taken when using the appliance due to the emission of steam.
11. During steam ironing, it is normal that the appliance may make buzzing sounds some times, and this will be emitted once release steam button. During steam iron, if water tank has fewer water, it will make continuous buzzing sounds. Please refill water to water tank to avoid damage to the pump.