



This product complies with the EMC requirements of the European Community.



The symbol on the product, packaging, and/or accompanying document indicates that this product should not be disposed with normal household waste. This product shall be taken to the applicable collection point for recycling. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health. For more information about recycling of this product, please contact the shop where you purchased the product, or your local authority.

MUJI
無印良品

Pop-up Toaster **Household Use**
Model MJ-PT6AEU (UK)

User's Manual

- Thank you for your purchase.
- Please read this User's Manual before using this product.
- Retain this User's Manual for future reference.

Contents	Page
Safety advice	1 - 3
Usage and Requests	4
Parts and Functions	5
How to Use	6, 7
Care and Maintenance	8
If this problem arises...	9
Specifications	10

製品番号/製品名/履歴NO. MJ-PT6A ポップアップトースター RX1402A	サイズ/ページ数 A5 (148×210) 12P	材質 白上質紙 A判 44.5Kg	印刷色 1 Color Black	加工 <input type="checkbox"/> 折り <input checked="" type="checkbox"/> 中綴じ	出力形態 <input type="checkbox"/> 海外 <input checked="" type="checkbox"/> 国内 <input type="checkbox"/> FILM <input checked="" type="checkbox"/> CTP
備考 素材は支給データに差し替え2013.12.27 良品計画様フオーマット 2013版(消耗品用タイプ)					

【校正】2014年2月7日

(印)承認	(社)	(印)確認	制作確認
		ICD)長	(印)担当者: 制作者
<input type="checkbox"/> 商品データベースとの整合性 (担当: (商)) <input type="checkbox"/> デザイン仕様との整合性 (担当: (予)) <input type="checkbox"/> 動作仕様との整合性確認			



調理確認欄

(株)良品計画様ご確認印済 特販/営業


Safety advice Please read and comply.










This product and the product's User's Manual contain important information to prevent injury to yourself and others, as well as for the safe and correct use of this product. Understand the meaning of the labels and symbols below, and then read the rest of this User's Manual. Always comply with the instructions in the User's Manual.

• Label Explanation

 WARNING WARNING indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.	 CAUTION CAUTION indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
---	---

• Symbol Explanation

 Prohibited actions	 Mandatory actions
--	---

 WARNING	
	Do not repair, disassemble or modify. This may cause abnormal actions or malfunction.
	Do not immerse in water or splash water onto it. Doing so may result a short circuit or electric shock.
	Do not use near curtains or other combustible materials. Doing so may result a fire.
	Do not use on an unstable surface or surface that is sensitive to heat. Do not use on carpet, on top of tablecloths or plastic surfaces. Doing so may result a fire.
	Use on a single power outlet rated 15A or more at 220-240V. Plugging it together with other appliances may cause the multiple power sockets to heat up abnormally and ignite a fire. Doing so may also result a fire or electric shock.
	Do not touch the inside of the toaster or insert metal objects such as knives or forks. Doing so may result burns or electric shock.
	Do not let children use unsupervised or place the toaster somewhere they can reach. This may lead to an injury.
	Do not let the power cord touch foreign objects or garbage. Doing so may result electric shock, short circuit or ignite a fire.

1. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
2. Children being supervised not to play with the appliance.
3. The appliance is not intended to be operated by means of an external timer or separate remote- control system.
4. This appliance is for household use only.

WARNING Attempting to repair this product on your own is very dangerous. Do not disassemble or modify this product.

Specifications

Power Source	AC220-240V 50Hz
Rated Power Consumption	760-900W
Product Size (approx.)	25cm (9.84inch) wide, 16.5cm (6.50inch) long, 19.5cm (7.68inch) high
Product Weight (approx.)	1.2kg (2.65lbs)
Power Cord (approx.)	1.4m (55.12inch)

★ Points to follow for long term use!

<p>Do you notice any of these following issues?</p>	<ul style="list-style-type: none"> •Body becomes unusually hot. •Power plug, cord becomes unusually hot. •Power cord is damaged or doesn't conduct power consistently when moved. •There is a burnt smell. •Other abnormalities or malfunctions. 	<p>▶</p>	<p>Stop using this product</p> <p>To prevent malfunction or accidents, unplug the Toaster from your power outlet and stop using.</p>
---	---	----------	--

If this problem arises...

When the product is not working properly, please check the following points first.

When...	Check	Action
<ul style="list-style-type: none"> The bread doesn't go down. The bread doesn't pop up even after it's been toasted. 	Are you using unusually-shaped bread?	Do not use unusually-shaped bread.
	Are you using bread that is too small or too thin?	Use bread that is the correct size (page 6).
	Are you using bread that is too big or too thick?	
<ul style="list-style-type: none"> The bread is toasted too lightly. 	Did you adjust the browning level with the browning control dial?	Adjust the browning control dial to '6'.
	Are you toasting frozen bread normally?	Press the DEFROST button.
<ul style="list-style-type: none"> The bread is toasted too dark. The toast is burnt. 	Did you adjust the browning level with the browning control dial?	Adjust the browning control dial to '1'.
	Are you using bread that has been sliced at home?	
	Did you press the DEFROST button even though the bread is not frozen?	Do not press the DEFROST button.
<ul style="list-style-type: none"> The bread is still cold on the inside. 	Are you toasting thick bread that is covered in frost?	Defrost the bread naturally.
	Are you toasting frozen bread without pressing the DEFROST button?	Press the DEFROST button.
<ul style="list-style-type: none"> The control lever doesn't move. 	Did you plug in the power plug into the socket?	Plug the power plug into the socket.

WARNING



Ensure the cord is plugged in completely. If not, it may cause a fire due to electric shock or heating up.
Do not use the product if the plug is damaged or the cord is twisted.



If anything abnormal occurs, turn off the power switch and remove the power plug from the socket.
Not doing so may cause an electric shock or ignite a fire.



Do not damage the power cord, or forcibly bend, pull, twist or bundle it. Placing heavy articles on the power cord, placing it in between heavy articles or altering the cord may cause the cord to break and electric shock or fire to occur.
Doing so may result electric shock or fire from short circuit.



Do not remove the plug with wet hands.
Doing so may result electric shock.



Do not use near open fire such as a stove or near where there is water or oil.
Doing so may result fire or malfunction.



Do not toast bread that is different to the specified Bread Size (page 6).
Doing so may result fire or malfunction.



Do not use near the wall or furniture.
Doing so may result a fire.
The heat may damage the wall or furniture and may cause discoloration and deformation in the wall or furniture.
Use the toaster more than 10cm away from the wall and more than 1m away from the ceiling.



Ensure the crumb tray is fitted when the toaster is being used.
Not doing so may cause a fire.



Do not place objects on top or below the body of the product.
Doing so may result a fire, malfunction or deformation to the body of the product.



Do not leave the toaster unattended whilst it is in operation or plugged in.
Doing so may result a fire.

Safety advice (Continued)

⚠ CAUTION



Do not touch the metal surface of the toaster whilst it is in operation or immediately after use.
Doing so may result burns. The metal surface of the toaster can reach up to 190°C/374°F.



Do not use the toaster in an area where the bottom can get wet or near where water may splash.
Doing so may result a short circuit, electric shock or malfunction.



Do not use the toaster where the power cord is in the path of a walkway or in obstruction to others.
Someone can trip on the cord or drop the toaster which may cause injury or damage.



Unplug the power cord from the socket when not in use.
Not doing so may lead to injury or burns, as well as electric shocks or electric fires due to deterioration of insulation.



Do not use the toaster in an area that is exposed to direct sunlight for long periods.
Doing so may result malfunction.



When unplugging the toaster, remove from the head of the plug, not the power cord.
Not doing so may lead to electric shock or short circuit igniting a fire.



Do not use the toaster if the power cord or plug is damaged or if it is not plugged into the socket properly.
Doing so may result electric shock, short circuit or ignite a fire.



Unplug the toaster when cleaning it.
Not doing so may lead to electric shock or short circuit igniting a fire.



Before cleaning the toaster, leave it to cool for at least 10 minutes after use.
Not doing so may cause burns from touching the hot surface.



Do not toast bread which has been spread with butter or jam.
Doing so may result the bread to catch on fire.

Care and Maintenance

Take regular care of your pop-up toaster.
Always unplug the toaster and allow it to cool before cleaning.


- Never use paint thinners, benzene, cleansers, bleaching agents, chemical wiping cloths or scourers.



- Never wash the toaster.
This may lead to accidents caused by electric shock.




To clean the exterior

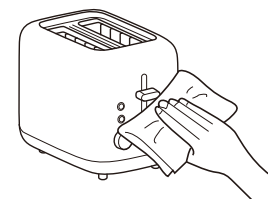

Dip a cloth in water-diluted neutral detergent. Wring the cloth thoroughly before wiping the toaster.
Use a dry cloth to wipe away any residual water.

To clean the Crumb tray

To clean the Crumb tray

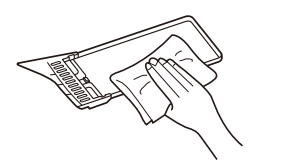


Remove the crumb tray, throw away the breadcrumbs and wipe the tray with a cloth.

Note:

- Do not use the toaster if the tray is unclean.
- After cleaning, make sure to return the tray to the toaster.


How to Use (Continued)

3. Place bread in and start toasting.

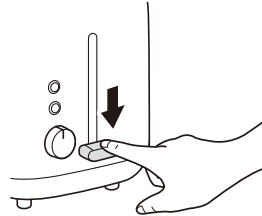

Place bread into the slot and push down the control lever all the way to the bottom.

4. Toasting completed

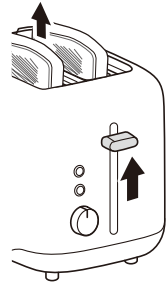

Once the bread has been toasted, the lever will automatically return to the top and the bread will pop up.

5. After use




Remove the power plug from the socket.

<Toasting frozen bread>
After pushing the lever down, press the DEFROST button.
The button will light up.

! Thick bread which is covered in frost may not defrost thoroughly. In such cases, defrost the bread naturally first before toasting.

<Extra Lift Function>

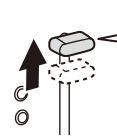

Lift the lever up higher than the original starting position.

This function enables bread to be lifted up higher.
If it is difficult to remove the bread from the toaster, this Extra Lift function will make it easier.
This enables the lever to be lifted higher than the original position.

⚠ Usage and Requests


- Do not use for commercial purposes.
- Do not use for baking.
- Do not use for purposes other than toasting bread.
Do not use for toasting rice cake (mochi).

This may cause fire or malfunction.




- Do not toast bread that is too small, flimsy, too thin, too thick, uneven or rough.

This may lead to fires or malfunction as the bread is unevenly toasted or caught inside the bread slot.

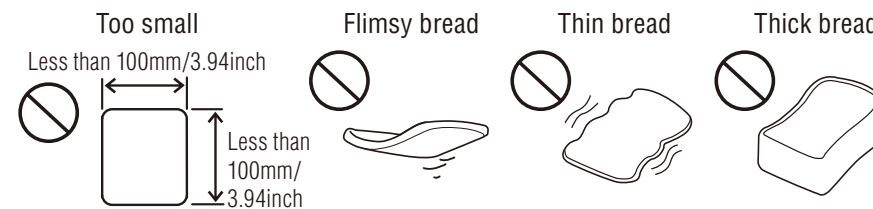


- Do not place objects near the controls or which obstruct the control lever.



Doing so may result fire or malfunction.

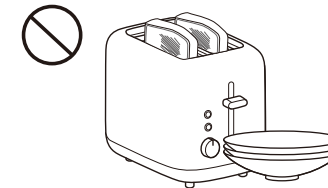

- If you see unusual smoke coming from the toaster during toasting, turn off the power immediately and remove the power plug from the socket.

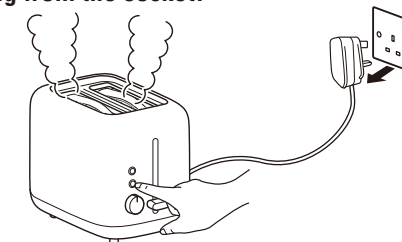

Features and Functions

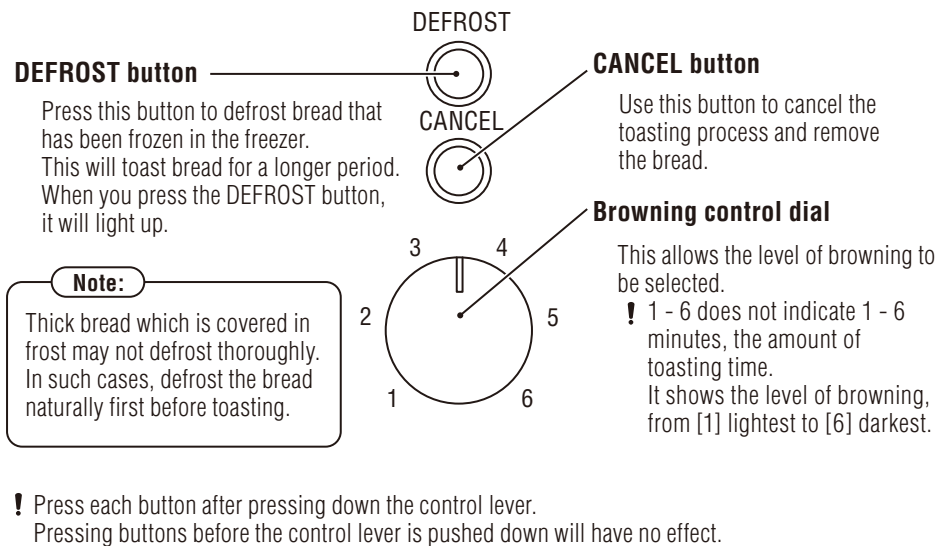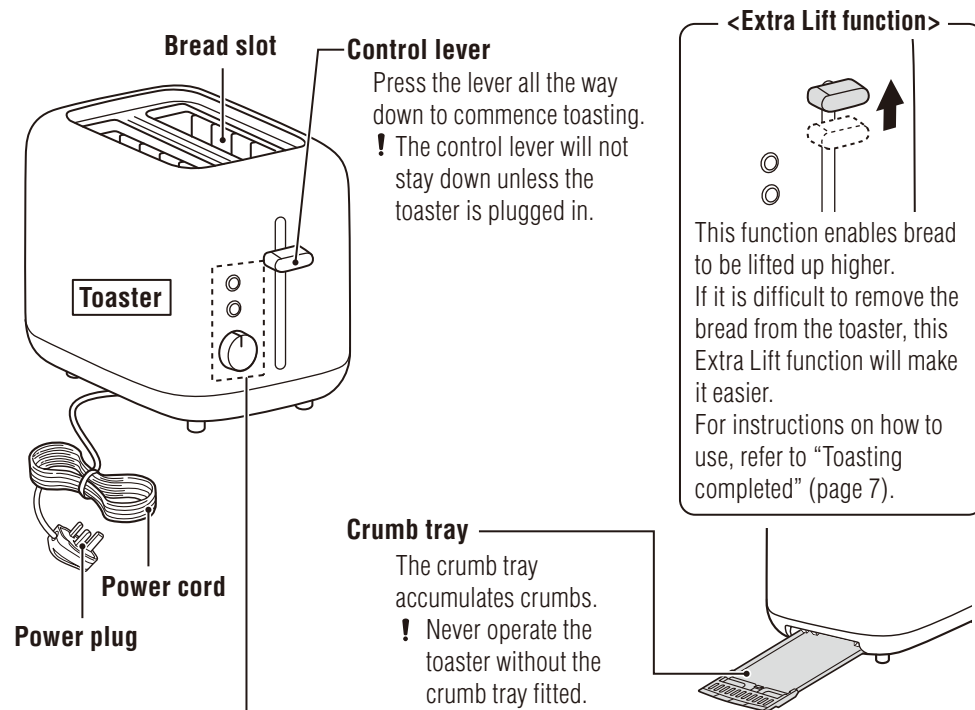


5

How to Use


- When the toaster is first used, it may emit smoke or an unusual smell, this will gradually lessen during usage.

1. Insert the power plug into the socket.

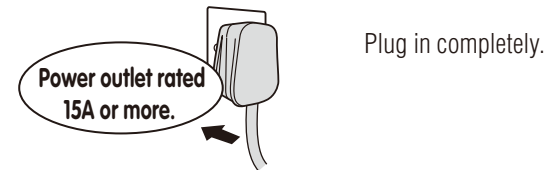

2. Select the desired browning

<When toasting for the first time>

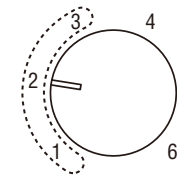

The first time the toaster is used, we recommend setting the control between 1 - 3, and after toasting a few times, it can be set to your preferred level.

<If you want a lighter color>

Turn the dial to '1'.

<If you want a darker color>

Turn the dial to '6'.

! The setting required will vary according to the thickness, quality and moisture content of the bread as well as the room temperature.


! Toasting 2 slices of bread will toast the side closer to the middle of the toaster a darker color than when toasting 1 slice of bread.

! Bread that has been sliced at home may burn easily so turn the browning control dial to '1'. Also, be aware that bread that has been cut on a slant may result in uneven toasting.

! Toasting bread continuously may result in changes in the color of the toast.

Bread Size


Width of bread more than 100mm (3.94inch)
less than 125mm (4.92inch)

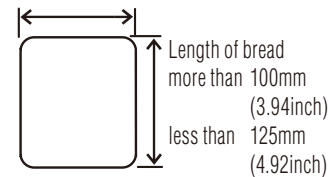

Thickness of bread 15-30mm (0.59-1.18inch)

! Do not toast the following type of bread

- Bread that is flimsy or unusually-shaped
- Bread that is too small or thin
- Bread that is over 30mm (1.18inch) thick
- Bread that has been spread with butter or jam

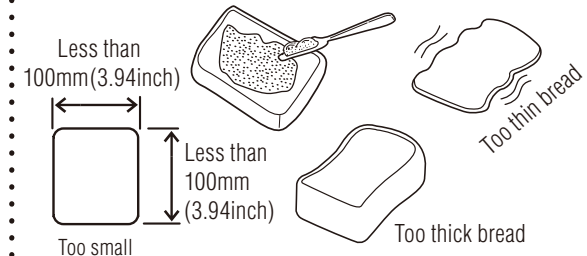

6