

Information on using the KX-NT511

When using a KX-NT511 IP Proprietary Telephone with a KX-NS series PBX, refer to the following information.

Information for Installers

Program Update for KX-NT511

The programme file for the KX-NT511 can be updated by using the Program Update feature. The file must be named as indicated in the table to be recognised by the PBX.

For more information about updating the programme, refer to PC Programming Manual.

| Programme Type | Target of Update | File Name |
|----------------|------------------|-----------|
| PT Programmes | KX-NT511 | PNT511 |

PC Programming Manual References

System Control—Program Update

KX-NT511-specific operation for Installers

The KX-NT511 does not have a CLEAR button, SETUP button, or Navigator Key. Therefore, the following features must be performed differently from the descriptions in the manual. For features that are not listed below, follow the procedures for the KX-NT551 described in the manual.

CLEAR button

To delete 1 character, use [TRANSFER] instead of [CLEAR].

SETUP button

Press flexible button 1, 2, or 3 when "searching" is displayed.

For details about applicable procedures, refer to "Installation Manual References".

Navigator key

To select items on the LCD, use flexible button 1 for left-arrow operation and flexible button 3 for right-arrow operation.

For details about applicable procedures, refer to "Installation Manual References".

Installation Manual References

Assigning IP Addressing Information

Setting VLAN Parameters

Setting LLDP Parameters

Setting Diffserv Parameters

Configuration of IP Ports

ECO mode (KX-NT500 series only)

Information for Users

KX-NT511-specific operation for Users

The KX-NT511 does not have a CLEAR button or PROGRAM button. Therefore, the following features must be performed differently from the descriptions in the manual. For features that are not listed below, follow the procedures for the KX-NT551 described in the manual.

CLEAR button

To delete 1 character, use **[TRANSFER]** instead of **[CLEAR]**.

PROGRAM button

Press and hold one of the flexible buttons for more than 2 seconds to start programming.

To exit programming mode, go off-hook, and then go on-hook.

Unsupported features

The following features described in the User Manual cannot be used with the KX-NT511.

- Using the Headset (Headset Operation)
- Using the Call Log

Phones that do not have a Navigator key cannot use features that require the Navigator key.

- Using the Directories
- Accessing System Features (System Feature Access)
- Recording Outgoing Messages (OGM)

While recording an OGM, you cannot press the **[STORE]** button to stop recording. However, you can go on-hook to stop recording.