
User's Manual


Mail Chime

How It Works


When the mailbox door is opened, the Receiver in the house will buzz four times and display a red LED light. Press the reset button to reset.

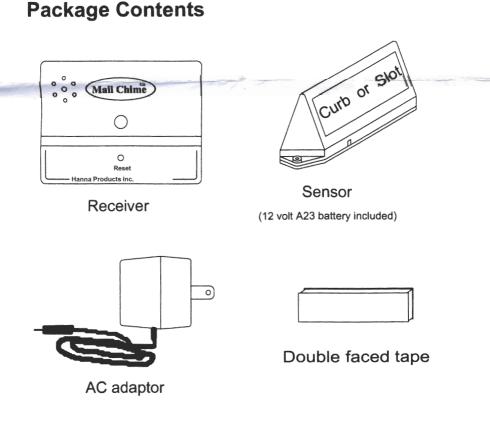

STEP 1

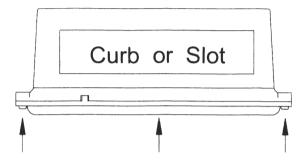


1. Remove bottom case by removing three screws.

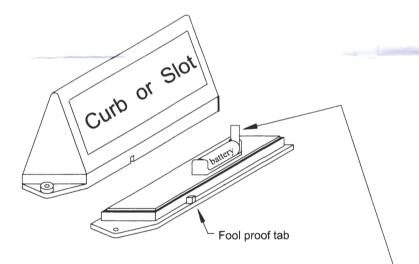


- 2. Hold down on battery and pull plastic strip from battery holder.
- 3. Assemble the case back together.

STEP 2

1. Peel off the protective cover on one side of the double faced tape and stick the tape on the side of the Sensor for your type of mailbox as shown below.

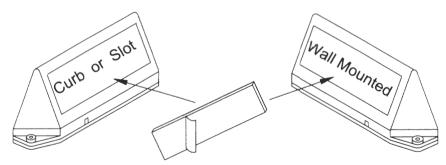


2. Peel off the cover on the other side of the double faced tape and stick the Sensor on your mailbox as shown below.

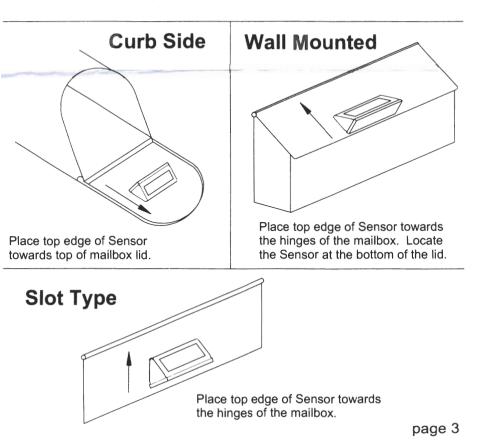

STEP 3

- 1. Plug the AC adaptor into the back of the Receiver.
- 2. Plug the AC adaptor into the wall outlet.
- 3. Straighten the antenna vertically.

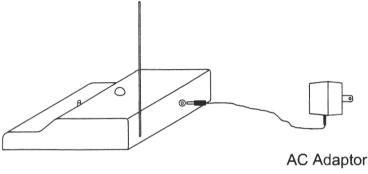

Receiver

Trouble shooting

- 1. Check if you mounted the Sensor correctly for your type of mailbox.
- 2. Check if the battery is installed correctly.
- 3. Try moving the Receiver to a new location in your home.

FCC ID: RNCMAIL-1100

This device complies with Part 15 of the FCC rules. Operation of this device is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Hanna Products Inc.

2602 37th Street, Rock Island, IL 61201 Phone (309) 788-1982 www.hannaproducts@aol.com

Patent No. 6,046,675 Designed in USA Made in China