



X263

User Manual

INTRODUCTION

Thank you for purchasing this Micromax mobile phone. To obtain the best performance of your phone, please read this user manual carefully.

User manual

Table of Contents

1	Safety	6
1.1	Safety Precautions	6
2	Introduction	7
2.1	Phone and Accessories	7
2.2	<u>Your Phone</u>	8
2.3	About your phone	9
2.4	About SIM Card	10
2.5	To switch ON and OFF.....	10
3	Phonebook.....	11
3.1	Send a Text message.....	11
3.2	Send a Multimedia message.....	11
3.3	To View a contact	11
3.4	To Call a contact.....	11
3.5	To Edit a contact	11
3.6	To Delete a contact	11
3.7	To Copy a contact	11
3.8	To Move a contact	11
3.9	To Send a vCard to a contact	12
3.10	Add to Blacklist	12
3.11	To Export vcard	12
3.12	Mark Several.....	12
3.13	To Export and Import.....	12
3.14	Phonebook settings.....	12
4	Calling.....	13

User manual

4.1	Call waiting	13
4.2	Call divert.....	13
4.3	Call Barring	13
4.4	Conference Call.....	13
5	Call Logs.....	13
5.1	Missed calls/dialed calls/received calls	13
6	Messages	14
6.1	Text message	14
6.2	SMS Inbox	14
6.3	SMS Drafts	15
6.4	Outbox.....	15
6.5	Sent messages	15
6.6	Favorite box	15
6.7	Delete folder.....	16
6.8	Templates	16
6.9	SMS Settings.....	16
6.10	MMS	16
6.11	Write MMS	16
6.12	MMS Inbox	16
6.13	MMS Outbox	17
6.14	MMS Drafts.....	17
6.15	MMS Settings	17
6.16	Broadcast message.....	17
7	Profile Setup	18
8	Multimedia	18
8.1	Camera	18
8.2	Image Viewer	19

User manual

8.3	Video Recorder	19
8.4	Video Player	19
8.5	Music Player.....	19
8.5	Sound Recorder	20
8.6	FM Radio.....	20
8.7	Fun & Games	21
8.8	Java applications.....	21
8.9	Fun Zone	21
9	Settings.....	21
9.1	Customized Phone & Call Settings.....	21
9.2	Security Settings	22
10	Organizer & Applications	22
11	File Manager	23
12	WAP & JAVA Services	23
12.1	WAP Browser	23
12.2	Data Account	24
12.3	JAVA	24
13	Maintenance.....	24
14	Taking Care of your Device.....	24
15	After Services	26

1.1 Safety Precautions

 Please read through the following briefings carefully, and act in accordance with these rules, so as to prevent causing any danger or violating any law.

Safe driving

1) Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.

2) Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.



Turn OFF during a flight: Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.



Turn OFF the phone when within an area where blasting takes place: Be sure to strictly observe the related laws and statutes by turning off the phone when you are within, or in the vicinity of, an area where blasting takes place.



Turn OFF the phone when any dangerous goods are in vicinity: Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.



In hospital: Please obey the related rules or bylaws of the hospital when using your phone in a hospital. Be sure to turn off your phone when near any medical equipment. Your use of any wireless transmission equipment, inclusive of the phone, will interfere with any medical equipment that is not protected fully, and other electronic equipment items, too. Should you have any question in this regard, please consult a related physician or medical equipment supplier.



Interference: Each and every phone's performance may be affected due to radio interference.



Professional service: The phone must be installed or repaired by no other personnel than professionals. You are likely to suffer a huge risk when you install or repair this phone by yourself, which also goes against the warranty rules.



Fittings and battery: You shall use the fittings and battery acknowledged by the phone manufacturer only. Using unauthorized accessories may tamper the warranty of the device.



Emergency call: You may enter a telephone number (112, etc.) to ask for emergency help after making sure that the phone has been turned on and is in the service status.

Press the Send Key to call out.

Disclaimer: Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper usage of the mobile phone. Micromax keeps the right to make modifications to any of the content here in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

2 Introduction

2.1 Phone and Accessories

Open the packing box of the phone and check that you have the-

- Transceiver
- Standard Charger
- Standard Battery
- Hands-free Kit
- User Guide
- Service Guide
- Warranty Card



2.3 About your phone

Your X263 supports dual GSM cards. The phone comes with a wireless FM Radio and a Flashlight displayed at the top of the phone. Long press the “0” key you can turn the Flashlight on/off. You have the option of writing messages in both Hindi and English languages.

2.4 About SIM Card

Please store the cards out of childrens reach.

The card and the contacts are vulnerable to damages due to scratching or bending. Therefore, be careful when using, inserting or removing the cards.

Be sure to switch off the phone before you insert or remove the battery or the card, otherwise, the phone may be damaged.

Tips:

Please charge the battery before you use the newly purchased phone. We suggest you charge the battery for 4 hours continuously for the first time.

Charging when the phone is in the ON mode will not influence the normal dialing and answering, but this needs to consume power, thus the time of charging will increase.

We suggest you recharge the battery when the power is used up so as to prolong the life of the battery.

2.5 To switch ON and OFF

To switch ON: Long press End key when the phone is in the OFF mode.

If the phone lock has been activated, you need to enter the 4-digit password to unlock. (The preset unlock code is 0000.)

If the SIM card has been inserted in the phone, and the related PIN code protection is activated, you need to enter the 4-8 digit password to unlock.

Warning: If you enter three wrong PIN codes in a row, the SIM card will be locked and you need to enter the PUK code to unlock. Both the PIN code and PUK code are provided by the network operator.

To switch OFF: In the standby mode, long press End key.

You can store names and phone numbers in the memory of the phone or SIM card.

Menu > Phonebook

3.1 Send a Text message

Menu > Phonebook > Options> Send text message

Allows you to send a text message to the contact

3.2 Send a Multimedia message

Menu > Phonebook > Options> Send multimedia message

Allows you to send a multimedia message to the contact

3.3 To View a contact

Menu > Phonebook > Options> View

View the details of the contact.

3.4 To Call a contact

Menu > Phonebook > Options> Call

Allows you to make a call on the contact you are viewing

3.5 To Edit a contact

Menu > Phonebook > Options> Edit

To edit the contact.

3.6 To Delete a contact

Menu>Phonebook> Options> Delete

In the Contacts list, select the entry you want to delete

3.7 To Copy a contact

Menu>Phonebook> Options> Copy

You can copy all entries stored in the SIM card to the phone memory and vice-versa

3.8 To Move a contact

Menu>Phonebook> Options> Move

Move the record from current storage to the other storage.

3.9 To Send a vCard to a contact

Menu>Phonebook> Options>Send vcard

Allows you to send a contact as a business card to other numbers.

3.10 Add to Blacklist

Menu>Phonebook> Options> Add to Blacklist

Allows you to add the contact number in the Blacklist folder. By doing so the number listed under the blacklist folder will be barred from making calls on your number.

3.11 To Export vcard

Menu>Phonebook>options>Vcard Export

Allows you to export a single vcard.

3.12 Mark Several

Menu > Phonebook > Options> Mark Several

Allows you to mark several contacts together and carry out functions like copy, delete, move to blacklist and more.

3.13 To Export and Import

Menu>Phonebook>options>Export and Import

Allows you to export or import contacts from your phonebook

3.14 Phonebook settings

Menu > Phonebook> Options> Phonebook settings

- Speed dial: Set a desired number on your speed dial list to make instant calls.
- My vCard: View the version of the vCard being used.
- Extra numbers: View SIM 1-2 owner number/service dialing number/fixed dial number
- Memory status: View used SIM/Phone memory
- Copy all contacts: Copy all contacts from SIM to phone and vice-versa
- Move all contacts: Move all from SIM to phone and vice-versa
- Delete all contacts: Delete all the contacts from the phonebook.

Note: The phonebook displays 4 tabs on the top of the screen which are-

All list: That allows you to view contacts stored both in the phone and memory card

Phone list: That allows you to view contacts stored only in the phone memory

SIM list: That allows you to view contacts in either the SIM A or SIM B memory

Caller Groups: Allows you to add contacts under specified categories.

4.1 Call waiting

Menu > Settings > Call settings > SIM A/B call settings>Call Waiting

This function allows you to put the current call on hold and then answer a second one.

If, during a call, a new call comes in, you will hear a special alert sound and the screen will display the number of the new incoming call, which indicates that a third-party call is coming in and waiting for to answer.

4.2 Call divert

Menu > Settings > Call settings >SIM A/B call settings>Call divert

With the Call Divert function (needs network support), you may divert incoming calls to another mobile phone or a direct line telephone, but not to any extensions of a fixed telephone.

The function needs the support from the local network. In some districts, you can use the function only after you apply to the local network operator.

4.3 Call Barring

Menu > Settings > Call settings >SIM A/B call settings> Call barring

The function is a GSM network service and can restrict outgoing and incoming calls selectively. If you need to change the settings of Restrict Calls, please contact your network operator to obtain the password for opening this service.

4.4 Conference Call

The phone supports Three-party Calling. A Three-party Calling, also called a multiparty call or a conference call, is a service based on call waiting. It is applicable to dual standby with GSM network.

The function needs the support from the local network. In some districts, you can use the function only after you apply with the local network operator.

5.1 Missed calls/dialed calls/received calls

When on the standby interface, you can press the call key to enter the call logs.

You may select to view entries stored under missed/received or dialed calls.

View: View the desired entry

Call: Call the desired entry

Send text message: To write SMS to send to the number.

Send multimedia message: To write MMS to send to the number.

Save to phonebook: To save the number to the Phonebook

Add to Blacklist: To add the number to the blacklist.

Edit before call: You can edit the number before call.

Delete: To delete the entry.

Delete all: Delete all the call log entries.

Advance:

(1)SIM A/B Call timers: Allows you to view the call timer

(2)SIM A/B Call cost: Allows you to view the call cost.

(3)SIM A/B text message counter: Allows you to view the number of the sent and the received messages.

6

Messages

6.1 Text message

Menu > Messaging> Text message>Write Message

Write the content of the SMS, Options >

Send to: Choose a contact from the phonebook to send the message to.

Input Method: To select an input method you preferred.

Insert Options: Allows you to insert template/contact/call log/bookmark to the message.

Save to drafts: Allows you to save the message to drafts.

6.2 SMS Inbox

Menu > Messaging > Text message> Inbox

To read a message, move to the entry and press OK

When reading a SMS, you can select Options >

View: View the message received.

Reply: Allows you to reply to the SMS received.

Call sender: Make a call to the sender.

Forward: Forward the entry to others.

Delete: Delete the selected SMS.

Delete same number SMS- Allows you to delete all messages received from this number from the inbox.

Delete all: Delete all the messages from the Inbox.

Save to Phonebook: Save the sender number to phonebook.

Move to favorite: Allows you to move the selected message to the favorite's folder.

Sort by: Allows you to sort/organize messages by Sender, Subject, Unread/read or by Message size

Mark several: Allows you to mark several messages to carry our various functions like Delete, Move, Copy & Unmark.

6.3 SMS Drafts

Menu > Messages> Text message>Drafts

This allows you to read the Messages that failed to send and those saved during editing.

View: Allows you to view the SMS received.

Send: Send the message to a desired contact from the phonebook.

Edit: Edit the message.

Delete: Delete the selected SMS.

Delete all: Delete all the messages from the Inbox.

Sort by: Allows you to sort/organize messages by Recipient, Subject, or by Message size

Mark several: Allows you to mark several messages to carry out various functions like Delete, Move, Copy & Unmark.

6.4 Outbox

Menu > Messaging > Text message>Outbox

Read messages sent by you to other people

When reading an SMS, you can select Options >

View: View the message stored in outbox

Resend: Resend the messages to the recipient again.

Edit: Edit the message.

Delete: Delete the selected SMS.

Delete all: Delete all the messages from the Inbox.

Sort by: Allows you to sort/organize messages by Recipient, Subject, or by Message size

Mark several: Allows you to mark several messages to carry out various functions like Delete, Move, Copy & Unmark.

6.5 Sent messages

Menu > Messaging > Text messages>Sent messages

View all the messages sent to various recipients under this folder.

6.6 Favorite box

Menu > Messaging > Text messages>Favorite box

Move your favorite messages from your inbox folder to this folder

View: View the message

Reply: Allows you to reply to the SMS received.

Call sender: Make a call to the sender.

Forward: Forward the entry to others.

Delete: Delete the selected SMS.

Delete all: Delete all the messages from the Inbox.

Save to Phonebook: Save the sender number to phonebook.

Sort by: Allows you to sort/organize messages by Sender/Recipient, Subject, Unread/read or by Message size

Mark several: Allows you to mark several messages to carry out various functions like Delete, Move, Copy & Unmark.

6.7 Delete folder

Menu > Messaging > Text messages>Delete folder

Allows you to delete the various folders available under the messages section.

6.8 Templates

Menu > Messaging > Text messages>Templates

The phone has preset frequently used phrases which may be selected and added to the text when you are editing SMS. Preset phrases may be modified.

6.9 SMS Settings

Menu > Messaging > SMS A/B settings

Profile settings

Voicemail Server

Common settings

- Delivery Report: Get the delivery report when the message is successfully delivered to the recipient.

- Reply Path: Whether to use the service center which send the message to reply.

Preferred storage

- Select preferred storage.

- SMS sign

- SMS answer

- Save sent message

- SMS blacklist

- SMS backup

- Memory status

6.10 MMS

MMS are messages that contain text, picture, video and ringtone & are sent through the MMS center to another mobile phone or an e-mail account. The phone supports sending and receiving MMS by EDGE, and multiple-sending.

6.11 Write MMS

Menu > Messages > MMS > Write message

Add the recipients to- To, Cc or Bcc.

Add the subject.

Edit the content of the MMS

6.12 MMS Inbox

Menu > Messages > MMS > Inbox > Option

View: Read the highlighted MMS.

Reply: Reply the highlighted MMS

Reply by SMS :Reply the MMS by SMS

Reply all : Reply all the recipients.

Forward: Forward the MMS to others

Delete: Deleted the highlighted MMS

Delete all : Delete all the MMS from the inbox

Properties: To view the detail information of the MMS

Use details: To use the details of the MMS ,such as the number of the sender.

6.13 MMS Outbox

Menu > Messages > MMS > Outbox > Option

View: Read the highlighted MMS.

Send :To resend the MMS

Delete: Delete the highlighted MMS

Delete all :Delete all the MMS from the Outbox

Properties: To view the detail information of the MMS

Use detail :To use the details of the MMS.

6.14 MMS Drafts

Menu > Messages > MMS > MMS Drafts > Option

MMS saved during editing are stored in the Draft.

6.15 MMS Settings

Menu > Messaging > MMS > MMS Settings

1. Server Profile
- 2.Common Settings.

6.16 Broadcast message

Menu>Messaging>Broadcast message

The phone supports Broadcast Message. It is supported by GSM network. Broadcast messages are single-way messages sent to the users of the network operators by the message service center. For the contents and channel setup of broadcast messages, consult your network operator.

7 Profile Setup

Functions	Description
Activate the profile mode	Menu > Settings>User profiles>Desired profile>options >active
Activate 'silent mode' in idle condition	Press “#”key to change the general mode to silent mode, Press “#” again to go to General mode again.
Set the ringtone for incoming calls	Menu >Settings>User profiles >Options> Customize >Tone setup >SIM A/B incoming call
Set the tone for messages	Menu> Settings> User profiles>Options>Customize> >Tone setup>SIMA/B Message Tones
Set the tone for MMS	Menu> Settings>User profiles>Options>Customize>Tone setup> MMS tones
Set the tone for Alarm	Menu> Settings>User profiles>Options> Customize > Tone setup> Alarm tones
Set the tone for “keypad tones”	Menu> Settings>User profiles>Options>Customize>Tone setup>Keypad tones
Adjust the volume of Ring Tone / Key Tone	Menu > Settings> User profiles>Options > Customize > Volume
Set Alert Type of ringing	Menu > Settings> User profiles > Options> Customize>Alert type
Set the ringtone type	Menu > Settings> User profiles > Options > Customize> Ring type
Set the Extra tone	Menu > Settings> User profiles > Options >Customize>Extra tone
Set the Answer mode	Menu> Settings>User profiles>Options>Customize>Answer mode

8 Multimedia

8.1 Camera

Menu > Multimedia > Camera:

The built-in camera allows you to take photos and adjust the camera settings. The options menu contains the following choices:

Photos: View the saved photos.

Camera settings: Set relevant parameters for the camera.

Image settings: Set the size and quality of photo.

White balance: It can set white balance of the camera.

Scene mode: Set the scene mode of photo.

Effect settings: Set the different effect to display of photo.

Storage: Set the storage location for photo.

Restore default: Restore camera settings to default.

8.2 Image Viewer

Menu > Multimedia > Image viewer

On the Image viewer list screen, select Options>

View: To view the picture.

Browse style: Set browse style of photos.

Send: Send present image through MMS or Bluetooth.

Use As: You can use the image as wallpaper, screen saver and caller picture.

Rename: Rename the highlighted file.

Delete: Delete the highlighted file.

Sort by: Sort the images by desired method.

Delete all files: Delete all the files from the list.

Storage: Set the storage location for photo.

8.3 Video Recorder

Menu > Multimedia > Video recorder

Press the Center Key to record. Please insert the memory card to before you start recording:

Before recording, you can set the following as needed. Select Options >

Video Recorder settings: Set relevant parameters for video shooting.

Video settings: Set relevant parameters for the video.

White balance: It can set white balance for video recorder

Effect settings: Set the different effect to display of video.

Storage: Set the storage location for the video file.

Restore default: Restore video setting to default.

8.4 Video Player

Menu > Multimedia > Video player

The Video Player plays all your video files stored in the phone (Phone Memory or on the Memory Card). The video player gives you the following options:

Play: To start playing the video file.

Refresh list: You can refresh the video list.

Settings: Set relevant parameters for the video player.

8.5 Music Player

Menu > Multimedia> Music

The Micromax X263 comes with an inbuilt audio player that plays all your favorite songs stored in the phone memory or T-Flash memory card. It gives you a host of setting options to make your listening experience interesting.

Play: To start playing the audio file.

Details: To show the details of the selected song.

Add to ringtones: Add the selected audio file to the ringtone.

Refresh list: Refresh the audio play list.

Settings: Set some relevant parameters for the audio player.

8.5 Sound Recorder

Menu > Multimedia > Sound recorder

On the Sound Recorder list screen, you can select:

New Record: begin recording. The recordings will be saved in the folder Audio under the File

List: List all the recorded file.

Settings: Set some relevant parameters for the sound recorder.

8.6 FM Radio

Menu > Multimedia>FM radio

Note: Play your favorite radio stations without having to connect to the hands-free. Enjoy wireless radio through the antenna.

Options > channel list

List out all the current channels. You can enter channel list, edit it and display the searched channel list.

Options > Manual tuning

Input the desired broadcasting channel manually.

Options>Auto search

Automatically search FM and setup.

Options> Settings

Select the Radio background type and cell phone speaker, recording format, storage device.

Options> Record

To record the current program being played on the radio.

Options>Append

To append the appendage.

Options>File list

To view the list of recorded files

To Increase/Decrease the volume:

To increase the volume press the * key and to decrease the volume press the # key.

To switch between channels:

To switch between channels pres the number keys on your keypad in accordance to the channel list.

8.7 Fun & Games

Menu > Applications > Fun & Games

Enjoy playing the preloaded games in your phone & cross various levels in it to achieve a high score, thereafter have your friends to try and break your record!

8.8 Java applications

Menu > Applications > Java application

8.9 Fun Zone

In this menu, you can have the view and choose to view and indulge in exciting applications like:

1. Cricket Alerts
2. Love Guru
3. Naughty jokes
4. Mehefil-e-Timepass
5. Astrology pack
6. Art of Living
7. Daal Mein kala
8. Friends Chat

9 Settings

9.1 Customized Phone & Call Settings

Functions	Description
Set time and date	Menu > Settings > phone settings> Time and date
Schedule power on/off	Menu > Settings > Phone settings > Schedule power on/off To disable and enable status; to activate/deactivate, switch on/off and time in turn.
Select display language	Menu > Settings > Phone settings > language
Set Display Settings	Menu > Settings > Phone settings > Display setup Transition/ Screensaver/ Backlight/Main menu style/Wallpaper
Preferred input methods	Menu>settings>phone settings> Preferred input methods
Specify the Dedicated key	Menu > Settings > Phone settings> > Dedicated key By default: Up >Music Down > write message Left > Alarm Right > Calendar

User manual

Set Call waiting	Menu > Settings > Call settings>SIM A/B call settings>Call Waiting
Set Call divert	Menu > Settings > call settings>SIM A/B call settings > Call divert Tip: You can select Cancel all divert to cancel all the divert settings.
Set Call barring	Menu > Settings > call settings>SIM A/B call settings > Call barring
Line switching	Menu> Settings> call settings > SIM A/B call settings> Line switching
Add to Blacklist	Menu > Settings > Call settings > Advance settings>Blacklist
Select network	Menu > Settings >Network settings Select preferred Network: The phone will search and display the list of known networks for you to select the desired one, after which, the phone will try to log in the selected network.
Set reception mode	Menu>Settings>Reception mode
Restore factory settings	Menu>settings>Restore factory settings

9.2 Security Settings

Functions	Description
Phone lock	Menu > Settings> Security settings> Phone lock The preset password is 0000
SIM lock	Menu>settings> Security settings> SIMA/B security setup> SIM lock SIM lock protects the illegal usage of the SIM card.
Auto keypad lock	Menu > Settings > Security settings >Auto keypad lock Note: Press the Left Soft Key and * key to unlock the phone
Privacy protection	Menu>Settings>security settings>Privacy protection
Change phone password	Menu > Settings > Security settings> change phone password

10 Organizer & Applications

Functions	Description
View the calendar	Menu > Organizer > Calendar
Tasks	Menu > Organizer > Tasks
Set the alarm	Menu > Organizer > Alarm
World clock	Menu > Organizer > World clock
Calculator	Menu> Applications >Calculator
Stopwatch	Menu> Applications > Stopwatch
Text Reader	Menu> Applications>Text Reader
Notes	Menu> Applications>Notes
Unit Convertor	Menu> Applications> Unit Converter

User manual

Currency Convertor	Menu> Applications>Currency Convertor
Flashlight	Menu> Applications> Flashlight

11 File Manager

When a USB cable is connected, you can use the phone as a USB mass storage.

Functions	Description
View folders	Menu > File manager> Options > Open (Phone Memory or Memory Card)
Rename	Menu>File manager>Memory card>options>Rename
Format	Menu>File manager>options>Format
Create new folders	Menu > File manager > options> New folder
Details	Menu > File manager > Options > Details

12WAP & JAVA Services

12.1 WAP Browser

Menu > Connectivity> WAP

You need to make the relevant settings in WAP Setup before you use the WAP browser to surf the web.

When the WAP browser is activated, if a homepage is set in WAP Setup, the phone will link the website indicated by the homepage; otherwise, you may enter a website and the phone will connect to it.

When surfing the web, select Options >

Homepage: To link the homepage.

Bookmarks: View or create bookmark

Recent pages: The browser history

Input address: input a website address.

Service inbox : Enable a trusted server to send messages to the phone ,which is saved in the service box

Settings :Set parameters of WAP browser

WAP Setup

WAP settings are required for surfing the web with WAP. Follow the steps below to set up a WAP account:

- Connectivity > Data Account > GPRS > Add account > Add account name/ APN/ Username &

User manual

password > Save.

Then go to:

•Menu > Connectivity> WAP> Settings > Edit account > Select account>Edit>Account Name/ Homepage/ Data Account (select the previously created data account) > Select connection type (HTTP/WAP- Inside HTTP & WAP enter the correct proxy address & port > Done > Save the account >Go to the created account & activate.

Menu > Connectivity >WAP> Settings>Edit account

You can set the following:

Account: To select from the GPRS connection list.

Connection type: To set WAP or HTTP connection mode.

Home page: To set the address of the homepage. The phone has a default and you can modify it.

12.2 Data Account

Menu>Connectivity>Data account

Choose an appropriate GPRS connection as per your chosen network operator.

12.3 JAVA

Menu > Applications> Java application

You can install Java applications to enhance the multimedia functions.

13Maintenance

Use a dry soft cloth to wipe general dirt.

Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of colour.

14 Taking Care of your Device

- Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:
- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.

User manual

- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use chargers indoors

15 After Services

For details, see the After Service Guide supplied with the phone.