 


BUSH

 
Speaker System with docking for iPhone/iPod BAS1662iH

User Manual

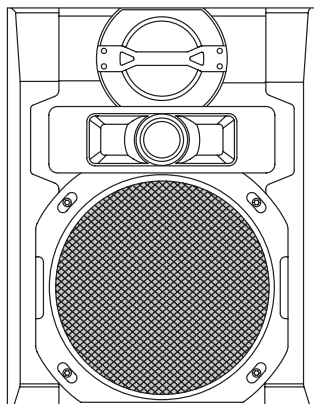

Safety Precautions

* SEE BACK OF UNIT FOR GRAPHIC SYMBOLS *

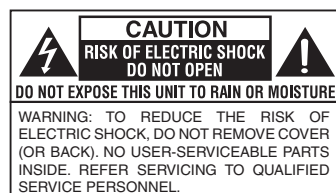

WARNING: THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON APPARATUS.

CE This symbol means that the unit complies with European safety and electrical interference directives.

Waste electrical and electronic products must not be disposed of with household waste. Please refer to the retailer from whom you purchased this item for disposal instructions.

PLACEMENT INFORMATION

- Do not use this unit in places which are extremely hot, cold, dusty, or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of this unit by placing it somewhere with poor air flow, by covering it with a cloth, or by placing it on bedding or carpeting.

The lightning flash with an arrowhead symbol, within the equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to cause an electric shock.

The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in this owner manual.

The symbol for Class II (Double Insulation)

SAFETY INFORMATION

- When connecting or disconnecting the cord, grip the plug and not the AC cord itself. Pulling the cord may damage it and create a hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power.
- The mains plug is used as the disconnecting device. It shall remain readily operable and should not be obstructed during intended use. To be completely disconnected from the supply mains, the mains plug of the apparatus should be disconnected from the mains socket outlet completely.
- Leave a minimum of 60mm around the apparatus for ventilation.
- The ventilation openings should not be impeded by covering with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources such as lighted candles should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- Use of apparatus in moderate climates.

RATING PLATE LOCATION

- The rating plate is on the back of product.

MAINS PLUG (UNIT SUPPLIED WITH MOULDED MAINS PLUG)

- If the mains plug fitted to the AC cord supplied is not suitable for your mains outlet, it may be necessary to cut it off. Carefully dispose of the severed plug. Under no circumstances must it be inserted into a mains socket, otherwise a dangerous electric shock could result.
- If the fuse in the fitted mains plug should fail, replace it with a BS1362 approved fuse rated at 3A. Never use the plug without the fuse cover fitted.

WIRING A MAINS PLUG

As the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

- The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.
- The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.
- No connection is to be made to the earth terminal of the plug which is marked with the letter E or coloured green or green and yellow or marked by the safety earth symbol.

The standard (BS1363) mains plug must be fitted with a 3 Amp fuse approved to BS1362. If any other plug or connection is used a 3 Amp fuse must be fitted in the plug or adaptor or in the distribution board.

 
CAUTION: MOISTURE CONDENSATION

If the equipment is moved from a cold place to a warm one, water in the air will condense on some parts and may cause damage or malfunction if the equipment is operated. Allow at least two hours for the equipment to acclimatise before switching it on.

This unit is designed to operate from a 230V AC ~ 50Hz mains supply.

This symbol means that the unit is double insulated. No connection to earth is necessary.

Please note that when the STANDBY/ON switch is in the standby position, it does not completely disconnect the unit from the mains supply. If the equipment is not to be used for a day or more, disconnect it at the wall outlet.

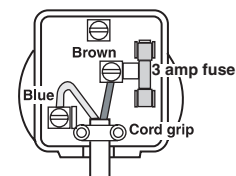

The wires in this mains lead are coloured in accordance with the following code.

BLUE-NEUTRAL
BROWN-LIVE

SAFE USE OF YOUR EQUIPMENT

This equipment has been designed and manufactured to meet UK safety standards but like any electrical equipment care must be taken to obtain the best results from the equipment and assure your own safety. Here are a few tips to help you do this:

READ this instruction manual before you attempt to use the equipment.

NEVER fit make shift stands or legs with woodscrews. Use only approved supports and fasteners specially designed for the equipment.

NEVER let anyone, especially children, push objects into holes, ventilation slots or any other opening; this could result in fatal electric shock!

ALWAYS disconnect the AC power cord when you are not going to use the unit for a long period of time.

ENSURE adequate ventilation of the equipment is not obstructed, for example by curtains above or soft furnishings underneath it.

ENSURE that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the instructions given. Switch off the main supply when making or changing connections.

CONSULT your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DON'T continue to operate the equipment if it is damaged in any way or if it does not function normally. Withdraw the mains plug and consult your dealer.

DON'T leave equipment switched on when it is unattended unless it is part of its normal function to operate in your absence, for example a video cassette recorder with timed recording facility.

More Information

CLEANING THE EXTERIOR

- Disconnect the system from AC power before cleaning the exterior of the unit with a soft dust cloth.
- Clean the exterior with a soft clean cloth or slightly moistened chamois leather. DO NOT use solvents as it may cause damage to the unit.

ESD REMARK:

In case of malfunction due to electrostatic discharge, just reset the product (disconnect and reconnect of the power source may be required) to resume normal operation.

The descriptions and characteristics in this user's manual are for the purpose of general reference only and not as a guarantee.

In order to provide you with the highest quality product, we may make changes or modifications without prior notice.

TROUBLESHOOTING TIPS:

System does not turn on	<ul style="list-style-type: none">Make sure AC plug is secured in the outlet, and outlet has power.Check the outlet by plugging in another device.
No sound	<ul style="list-style-type: none">Adjust volume setting.Make sure you've selected the correct function.
iPhone/iPod does not dock properly or does not install properly.	<ul style="list-style-type: none">Remove your iPhone/iPod from the docking and check for obstruction on the connectors in the docking and on your iPhone/iPod.
iPhone/iPod does not respond to the speaker system.	<ul style="list-style-type: none">Make sure that your iPhone/iPod is working properly before docking into the unit. Please refer to your iPhone/iPod manual for details.

TECHNICAL HELP ON THE OPERATION OF THIS PRODUCT IS AVAILABLE

PLEASE CALL 0845 307 5537

MONDAY TO FRIDAY 9 AM TO 5 PM

Please check and identify the supplied accessory:

☐ Remote Control (with battery)x 1

TO PURCHASE REPLACEMENT ACCESSORIES FOR THIS PRODUCT

 
PLEASE CALL 01302 784839

MONDAY TO FRIDAY 9 AM TO 4:30 PM

Using the Remote Control


- Point the remote control at the REMOTE SENSOR located on the unit.
- When there is a strong ambient light source, the performance of the infrared REMOTE SENSOR may be degraded, causing unreliable operation.
- The recommended effective distance for remote operation is about 16 feet (5 meters).

Take out the plastic sheet before operating the Remote Control.

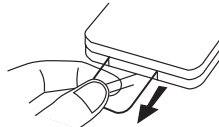


TO CHANGE REMOTE BATTERY

 1. Open the battery door.

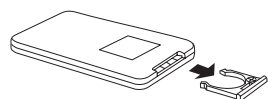

 2. Insert one CR2025 (3V) size battery.

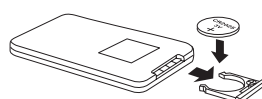

WARNING:

- Do not dispose of battery in fire; battery may explode or leak.
- Batteries should not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION

Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.

 
BATTERY REPLACEMENT

When battery becomes weak, the operating distance of the Remote Control will greatly reduced and you will need to replace the battery.

Note:

- If the Remote Control is not to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.
- Corrosion, oxidation, battery-leakage and any other gradually acidic defect of this nature will invalidate the guarantee.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.

Control Reference Guide

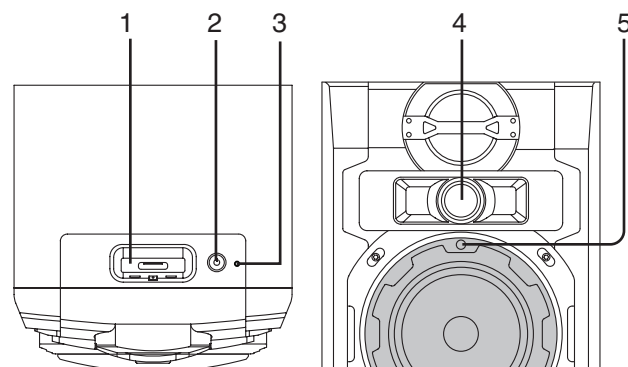


Top view

Front view

1. iPhone/iPod dock
2. ON/STANDBY button
3. Power indicator
Indicator off: The unit is turn on
Indicator on: The unit is in standby mode
4. Volume +/- knob
5. Remote Sensor

REMOTE CONTROL

 1. ON/STANDBY button
2. button
3. button
4. MENU button
5. MUTE button
6. button
7. SELECT button
8. button
9. PLAY/PAUSE button
10. Volume +/- button

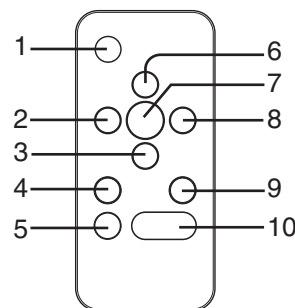

Volume Adjustment

TO ADJUST THE VOLUME

Adjust the volume to the desired level using either the volume knob on the unit or volume buttons on the remote control.

When adjusting the level, the blue LED on the volume knob will flash. Maximum volume is indicated by the LED being on instead of flashing.

Note: Press the MUTE button to turn off the sound. Press the MUTE button again or press the VOLUME +/- buttons to resume the sound.

Listening to your iPod/iPhone

Compatible iPhone or iPod Types

- iPod touch (1st, 2nd and 3rd generation)
- iPod classic
- iPod nano (1st, 2nd, 3rd, 4th and 5th generation)
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

Note: If your iPhone is called while it is docked, playback will be paused.

START PLAYBACK

Gently dock your iPhone or iPod to the 30 pin connector on the unit. Do not force.

1. Press the button to turn on the unit.
2. Press the button to start playing.

Note: When connected, the iPhone or iPod will be charged automatically.

PAUSING PLAYBACK

- Press the button.
- To resume playback, press the button again.

SKIPPING TO A ANOTHER TRACK

Press the button to skip to the beginning of the current track or skip to previous track. Press the button to skip to the beginning of the next track.

LOCATING A PARTICULAR POINT ON A TRACK

Keep either the or button pressed during playback, according to the desired direction, and release at the desired point.

Note: Please refer to the user's guide that was included with your iPod for more details.

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of 1 Year.

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

In the event of a problem with the product within the guarantee period please return it to your nearest store.

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement.

Your statutory rights remain unaffected.

Guarantor; Home Retail Group, 489 – 499 Avebury Boulevard, Central Milton Keynes MK9 2NW