

GOLDAIR

Operating Instructions

Milk Frother



Item: FMF100, FMF100R

General care and safety guide

Thank you for choosing a Goldair Electric Milk Frother. This Goldair appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.

ALWAYS

- ✓ Always ensure hands are dry before handling the plug or the Milk Frother.
- ✓ Always operate the Milk Frother on a secure, dry, level surface.
- ✓ Always use the Milk Frother only with the stand provided.
- ✓ Always allow adequate air space above and on all sides for air circulation. Do not allow the Milk Frother to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. Do not use under cupboards or curtains.
- ✓ Always be sure to unplug from the socket when not in use and before cleaning.
- ✓ Always allow the Milk Frother to cool before cleaning and storing.
- ✓ Carry out regular checks of the supply cord to ensure no damage is evident.
- ✓ Return the Milk Frother after a malfunction, or if it has been damaged in any manner to an authorised electrical service technician for examination, repair or adjustment as special purpose tools are required.

NEVER

- ✗ Never touch hot surfaces.
- ✗ Never use this appliance outdoors.
- ✗ Never use this appliance for any purpose other than its intended use. This appliance is intended for use in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.

TECHNICAL SPECIFICATION

Item: FMF100, FMF100R
Supply: 220-240VAC 50Hz AC
Power: 500W

- ✗ Never operate this Milk Frother on an inclined plane.
- ✗ Never operate this Milk Frother unless the element is fully immersed.
- ✗ Never move this Milk Frother while it is switched on.
- ✗ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the Milk Frother by a person responsible for their safety.
- ✗ Close supervision is necessary when the appliance is near children.
- ✗ Never leave the appliance unattended when in use.
- ✗ Never place this appliance on or near a hot gas or electric burner or where it could touch a heated oven or microwave oven.
- ✗ Never immerse any part of the Milk Frother, or cord set and plug in water or any other liquid to protect against electrical hazards.
- ✗ Never use harsh, abrasive or caustic cleaners to clean this appliance.
- ✗ Never operate the appliance with a damaged cord or plug, after it malfunctions, or if it has been damaged in any manner.
- ✗ The Milk Frother is not intended to be operated by means of an external timer or separate remote-control system.

CAUTION:

**IF THE MILK FROTHER IS OVERFILLED,
HOT MILK MAYBE EJECTED**

CAUTION:

**THE MILK FROTHER GENERATES
HEAT AND STEAM DURING USE.
PROPER PRECAUTIONS MUST BE
TAKEN TO PREVENT THE RISK OF
BURNS, SCALDS, FIRES OR OTHER
DAMAGE TO PERSONS.**

Components



- 1. Lid
- 2. Housing
- 3. Handle
- 4. Heat button
- 5. Foam/froth button

6 _____



7 _____



First use of Milk Frother

For first time use it is recommended that you fill the Milk Frother to the maximum level mark with fresh tap water, then operate, empty and repeat at least two times to clear the Milk Frother of any dust or materials from the manufacturing process. Do not drink this water.

CAUTION:

TOO LITTLE MILK MAY DAMAGE THE HEATING ELEMENT AND OVERFILLING MAY CAUSE HOT MILK TO BE EJECTED.

Operating your Milk Frother

1. Remove the Milk Frother from the base to pour in milk. Insert EITHER HEATING or FROTHING whisk.
2. Pour milk into the Milk Frother to the desired level. Use whole milk (fat content >3%) for best results. Note the unit's capacity range is 80-115ml for frothing/foaming and 80-240ml for heating). Press the lid on and place the Milk Frother back on the base unit.
3. Connect the plug into a power outlet, turn on at power outlet.
4. To FROTH cold milk, press the BOTTOM button. The button will illuminate in. When the cycle is complete (about 100 seconds), the light will flash for about 30 seconds.
5. To HEAT and FROTH milk, press the TOP button. The button will illuminate. When the cycle is complete (about 60 seconds), the light will flash for about 30 seconds.
6. Turn unit off at wall. Remove unit from base. Carefully remove lid and pour milk into your drink.
7. Allow 2-3 minutes between uses to avoid overheating and to allow thermostat to reset.
8. If you bump or press a button during operation, the unit will stop. Simply press the button again to restart.

WARNING: DO NOT REMOVE THE LID WHILE THE MILK IS HEATING/FROTHING

USE ONLY THE STAND PROVIDED WITH THIS APPLIANCE

CAUTION: DO NOT OPERATE THE MILK FROTHER ON AN INCLINED PLANE

DO NOT MOVE THE MILK FROTHER WHILE IT IS SWITCHED ON

CAUTION: ENSURE THAT THE MILK FROTHER IS SWITCHED OFF BEFORE REMOVING IT FROM ITS STAND

Care and cleaning

1. Do not attempt to dismantle the Milk Frother or power base. There are no user serviceable parts. For service or repair, contact an authorised electrician.
2. Always unplug from the plug socket and allow to cool down before cleaning.
3. Remove the heating and foaming/frothing whisks before cleaning.
4. TO CLEAN INSIDE THE MAIN UNIT – wipe inside walls with a soft cloth and warm soapy water. Dry with a soft cloth. Use a soft brush to clean around and under the motor shaft.
5. TO CLEAN OUTSIDE OF MAIN UNIT – use a sponge or soft cloth to wipe clean. DO NOT use abrasive or alkaline cleaning agents. To avoid scratches, DO NOT use hard nylon or metal brushes or cleaning pads.
6. TO CLEAN THE LID – wash with warm soapy water and a soft cloth. Dry with a soft cloth.
7. TO CLEAN THE HEATING AND FOAMING/FROTHING WHISKS – remove from unit. Wash in warm water. Dry and store in safe place. Do not place in dishwasher.

GOLDAIR

SUPPORT AND TECHNICAL ADVICE

Goldair – New Zealand

Monday – Friday 8am-5pm

Phone +64 (0)9 917 4000

Phone 0800 232 633

info@cdb.co.nz

Goldair – Australia

Monday – Friday 8am-5pm

Phone +61 (0)3 9336 4423

Phone 1300 465 324

info@cdbgoldair.com.au

Serving suggestions

CAPPUCCINO

1/3 espresso in cup/glass
Add 2/3 frothed milk
Top with cocoa powder



CAFFE LATTE

1/3 espresso in cup/glass
Add 2/3 heated milk and stir



LATTE MACCHIATO

Pour frothed milk into tall glass
Add espresso carefully, pouring down side of milk



HOT CHOCOLATE

Pour heated milk into mug
Add chocolate powder and stir well



Troubleshooting

Issue	Possible Cause	Action
Indicator light does not work	Plug not inserted correctly Poor contact between unit and base No power at outlet	Check plug is inserted fully Reset unit on base Check power to outlet
Unit starts operating then stops	Temperature is too high Unit damaged due to immersion in water	Allow 2-3 minutes between uses. Rinse inside of unit carefully with cold water to reduce temperature Try electrical repair centre
Motor does not work	Unit has not been cleaned and residual milk has blocked motor shaft	Ensure you clean unit after each use, according to instructions
Unit is not heating	Motor has been damaged	Try repair centre
Milk is burning	Too little or too much milk in unit Unit has been used without cleaning after last use	Keep milk volume within heating capacity of 80-115ml Ensure you clean unit after each use, according to instructions

GOLDAIR

Two year warranty

Thank you for purchasing this Goldair product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **two years**. In non-domestic use Goldair limits the voluntary warranty to **three months**.

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Goldair – New Zealand

CDB Goldair
PO Box 100-707
N.S.M.C
Auckland

Phone +64 (0)9 917 4000
Phone 0800 232 633
www.goldair.co.nz

Goldair – Australia

CDB Goldair Australia Pty
PO Box 574
South Morang
Victoria, 3752

Phone +61 (0)3 9336 4423
Phone 1300 GOLDAIR (1300 465 324)
www.goldair.com.au

IMPORTANT: Please complete and retain this warranty card



Name Purchased from

Address Date of purchase

..... Name of product

Suburb Model no

Attach a copy of the purchase receipt to this warranty card