

Paramount

ITEM NUMBER: ES-207-BK
MODEL NUMBER: BLT-999B-9

PEDESTAL ELECTRIC STOVE

USER MANUAL



READ & SAVE THESE INSTRUCTIONS

Carefully read and review before assembling, installing, operating or maintaining this product. Observe all safety instructions and information.

**FAILURE TO FOLLOW WARNINGS & OPERATIONAL
INSTRUCTIONS CONTAINED IN THIS MANUAL CAN RESULT
IN PROPERTY DAMAGE OR PERSONAL INJURY.**



For customer service, parts
or warranty issues:
Call 1-800-561-5550
or e-mail parts@jrhome.com

QUICK REFERENCE GUIDE

1. Prior to plugging your heater into a convenient outlet, first verify that the circuit breaker for the outlet is on.
2. The heater may emit a slight, harmless odour when first used. This odour is normal and it is caused by the initial heating of internal heater parts and should not occur again.
3. If the heater does not emit heat, consult your User's Guide for further information.

CAUTION

RISK OF ELECTRIC SHOCK

DO NOT OPEN

NO USER-SERVICEABLE PARTS INSIDE

HIGH TEMPERATURE

KEEP ELECTRICAL CORDS, DRAPERY AND OTHER FURNISHINGS AT LEAST 1 METRE FROM FRONT OF THE HEATER AND KEEP THEM AWAY FROM THE SIDES OF HEATER

WARNING

RISK OF FIRE-KEEP COMBUSTIBLE MATERIAL AWAY FROM FRONT OF THE HEATER. SERVICING SHOULD BE DONE ONLY WHILE THE HEATER IS UNPLUGGED FROM POWER SUPPLY.

IMPORTANT SAFETY INSTRUCTIONS:

Basic precautions should always be followed when using electrical appliances to avoid the risk of fire, electric shock and injury to persons.

1. Read all instructions before use.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
3. Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet away from the front of heater and keep them away from the sides of heater.
4. Extreme caution is necessary when any heater is used by or near children and whenever the heater is in operation and unattended.
5. Always unplug the heater when not in use.
6. Do not operate any heater with damaged cord or plug or after the heater has malfunctioned or has been dropped or damaged in any manner. Return heater to an authorized service facility for repair.
7. Do not use outdoors.
8. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heaters where it may fall into a bath tub or other water container.
9. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
10. To disconnect heater, turn control to off, then remove plug from outlet.
11. Connect to properly grounded outlet only.
12. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater.
13. To prevent a possible fire do not block air intake or exhaust in any manner.
14. Do not use on soft surfaces, like a bed, where openings may become blocked.
15. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
16. Use this heater only as described in manual. Any other use is not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
17. Avoid the use of an extension cord because it may overheat and cause a risk of fire.
18. Always use properly grounded, fuse and polarized outlets.
19. Always disconnect power before performing any cleaning or maintenance, or relocation of the heater.
20. When transporting or storing the heater keep in a dry place, free from excessive vibration and store so as to avoid damage.
21. The flame effect is powered by a motor and it is normal for the motor to make some noise as it slowly rotates and helps to create the beautiful 3D flame effect. Some rooms have more or less furnishings than others resulting in varying noise amplification.
22. Every effort is made to ensure packing materials are kept outside of the plastic bag which covers your heater in the box; there is a remote chance that some packing may lodge itself in the heater part of the unit. If you notice this on close inspection, please remove it. When turning your heater on for the first time it is normal for the heater to emit a little 'new heater' smell which quickly pass.
23. You may notice some light coming from under or from the sides of the unit. This is normal and the holes allow the unit to 'breathe'. Do not attempt to block these holes.

When the heat function is used for the first time, a slight odor may be present.

This is normal and should not occur again unless heater is not used for an extended period of time.

LISTING APPROVALS

This heater has been tested in accordance with CSA Standards for fixed and location dedicated electric room heaters in the United States and Canada. If you need assistance during installation, please contact your local dealer.

Model Number:	BLT-999B-9
Description:	Electric Stove
Voltage:	120V AC
Watts:	MAX 1500W
Amps:	12.5Amp Grounded Circuit
Length:	19.7"
Height:	28.9"
Depth:	12.6"

Note: This heater must be electrically wired and grounded in accordance with local codes or, with National Electric Code ANSI/NFPA 70-latest edition of the Canadian Electric Code, CSA C22.1 as appropriate.

 
GROUNDING INSTRUCTIONS

This heater is for use on 120 Volts.

the cord has a plug as show in (A) of Figure 1 given below.

Always plug heaters directly into a wall outlet/ receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip)

To disconnect heater, turn controls to off, then remove the plug from the outlet.

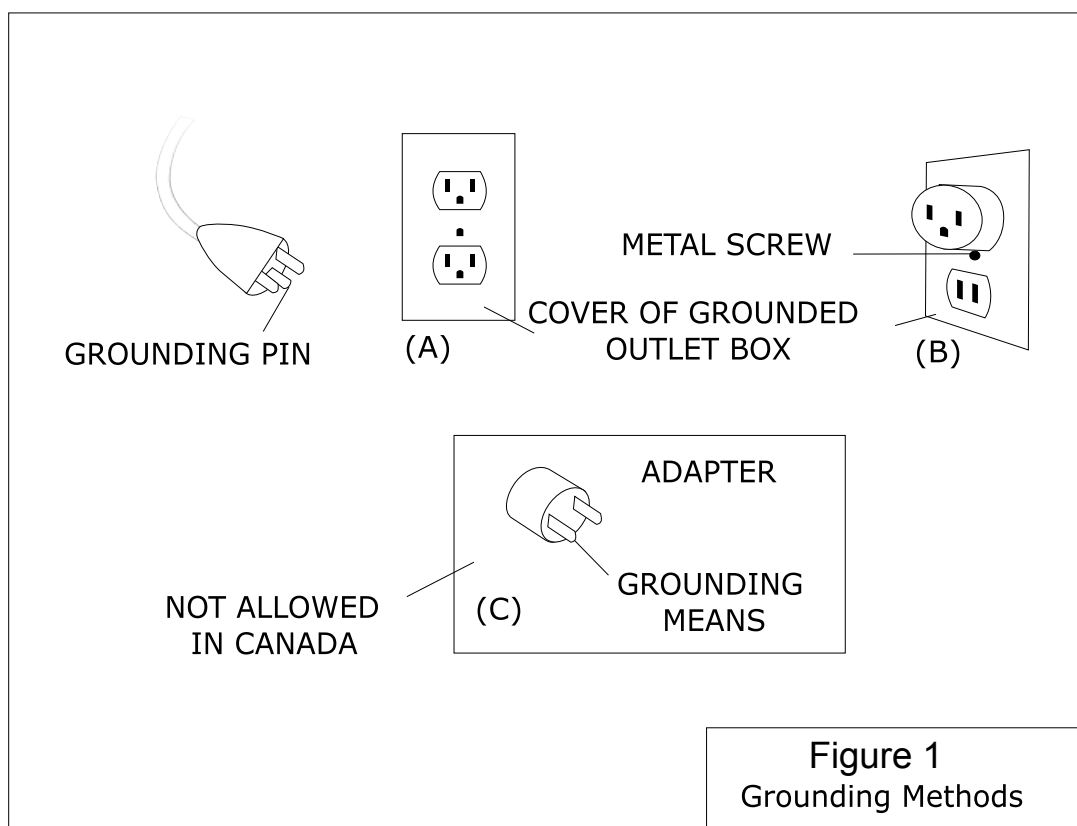


LIGHT BULB REPLACEMENT

CAUTION WHEN CHANGING BULBS

REPLACE ONLY WITH E12 CLEAR, CANDLE TYPE (SCREW FITTING)
RATING 110-120V~,40W MAXIMUM FOR ALL LAMPS.

Light Bulbs are not covered under warranty

 Caution! Bulbs will become very hot; allow at least 10 minutes for bulbs to be cool before touching. The flame effect on this electric stove heater is created by two 40 watt light bulbs with an E-12 (small) socket base. Only use this type of light bulb. To service light bulbs, unplug power cord from outlet, locate access panel on back of stove. Remove screws and panel. Light bulbs may come loose or may be damaged during shipping. If flame effect does not work properly, check to be certain that both bulbs are tight and are in working order. Replace light bulbs as needed. Replace access panel. Do not operate without access panel in place. Do not remove back cover of heater; no serviceable parts.

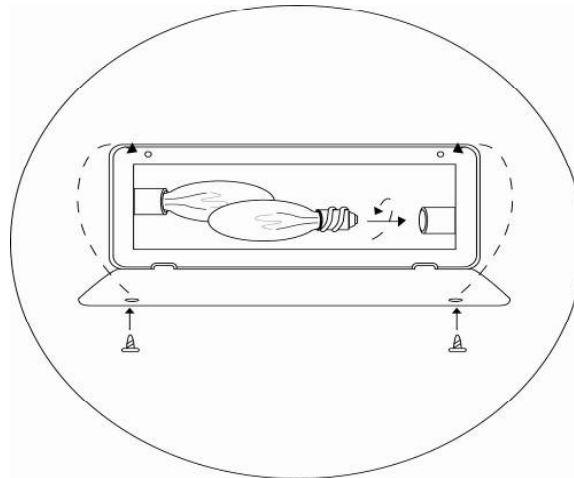

Controls / Operation

After reading safety instructions and this entire manual, be certain that the controls are in the off position.

Main Power Switch:

 
The Main Power Switch is located on the bottom of the unit. The

"I" indicated ON and "O" indicated OFF. Push the switch to "I" to


turn on the unit and flame effect. The Red LED indicator will be turned on

You have the following controls:

1. Power ON/OFF: Power to the unit
 2. Flame brightness controls: Allows you to adjust the flame to suit your mood.
Press + to increase flame brightness and press - to decrease flame brightness.
 3. Low Heat: 750 watts
 4. High heat: 1500 watts
- Please note: The heater touch pad control must be touched 2 times to achieve high heat.
5. Heater Timer: (See details below under Remote control)

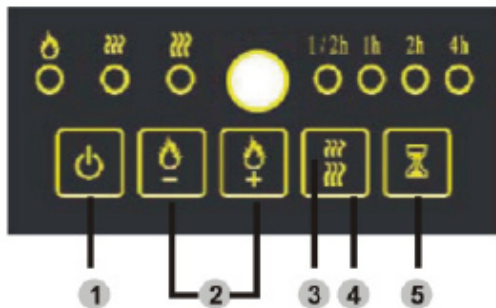

Remote Control

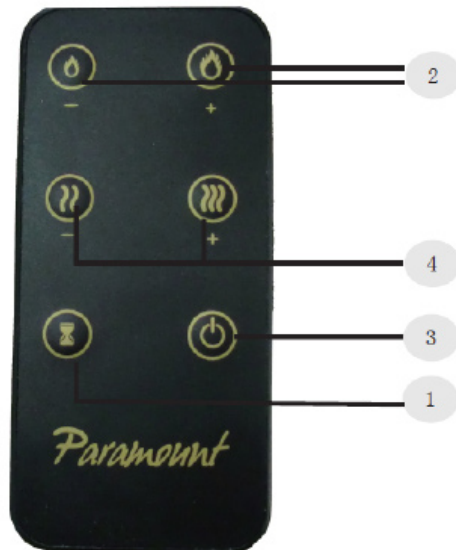 

1. Heater Timer: Allows you to leave your heater On while you sleep with an automatic timer for Shut off. You can set your heater to be on for 1/2 hour increments starting at a 1/2 hour up to Maximum of 7-1/2 hours-press once for each 1/2 hour increment. After you reach 7-1/2 hours the next press will shut off the feature
2. Flame brightness controls: Allows you to adjust the flame to suit your mood. Press + to increase flame brightness and press - to decrease flame brightness.
3. Power ON/OFF: Power to the unit
4. Heater Control: Press once for low heat, and twice for high heat.

Cleaning

Turn heater OFF and unplug from outlet. Use a vacuum or duster to keep heat and vent area clean from dust and dirt. The exterior of the stove should be cleaned with a damp cloth or duster. Do not use abrasive cleaners, liquid sprays, or any other cleaner that may scratch the surface.

IMPORTANT

For questions, concerns or problems with our product please
email our customer service department:
parts@jrhome.com or call 1-800-561-5550.

DATED PROOF OF PURCHASE REQUIRED FOR WARRANTY SERVICE.

WARRANTY

This product is inspected, tested and carefully packaged to minimize the chance of damage during shipment. If a part (excluding light bulbs and fuses*) within one year from the date of purchase proves to be defective in material or fabrication under normal use, the part will be repaired or replaced. The Company's obligation under the warranty is to replace or repair defective parts at our discretion. Any expenses or damage resulting from the installation, removal or transportation of the product will be the responsibility of the owner and are not covered by this warranty. The owner assumes all other risks arising from the use or misuse of the product. The warranty will be void if the product damage or failure is deemed by the Company to be caused by accident, alteration, misuse, abuse, incorrect installation or removal, or connection to an incorrect power source by the owner. The Company neither assumes, nor authorizes any person or entity to assume for it any obligation or liability associated with its products. Light bulbs and fuses are not covered under this warranty. If you have any questions regarding the warranty or service, please call our toll free number: 1-800-561-5550.

Customer Service
JR Home Products
Unit 1 - 5628 Riverbend Drive, Burnaby BC, V3N 0C1
Toll Free: 1-800-561-5550
E-mail: parts@jrhome.com

You MUST register your product to receive warranty service.

Registration can be completed online at www.jrhome.com or by mailing this form.



Warranty Registration Information Form / Formulaire d'enregistrement de la garantie

Name / Nom:
Street / Address:
City / Ville:
Province / Province:
Postal Code / Code postal:

Daytime Phone # / No téléphone jour:
Evening Phone # / No téléphone soir:

E-Mail Address / Courriel:

Product/Produit:
Place of Purchase / Lieu de l'achat:
Date of Purchase / Date de l'achat:
Model # / No de modèle:
Serial # / Numéro de série:

You MUST register your product to receive warranty service.

For warranty service, contact J & R Home Products at the address, phone numbers listed below within 30 days of purchase. Be sure to have your sales receipt and original date of purchase. All warranty service will be coordinated by J&R Home Products service center.

Vous DEVEZ enregistrer votre produit pour vous prévaloir de la garantie.

Afin de faire valoir la garantie, communiquez avec J & R Home Products à l'adresse et aux numéros indiqués ci-dessous dans les 30 jours suivant la date d'achat. Ayez en main votre reçu et la date d'achat. Toutes les demandes liées aux garanties seront traitées par le centre de service de J&R Home Products.