

YAMAHA SINGLE-AXIS ROBOT FLIP-X series

YMS

User's Manual

ENGLISH 

Introduction

The YAMAHA YMS series is a family of single-axis industrial robots that use the absolute positioning method as a standard feature to improve ease of use, resistance to environmental conditions and maintenance work. A wide variety of product lineup allows you to select the desired robot model that best matches your application.

This instruction manual describes the safety measures, handling, adjustment and maintenance of YMS series robots for correct, safe and effective use. Be sure to read this manual carefully before installing the robot. Even after you have read this manual, keep it in a safe and convenient place for future reference.

This instruction manual should be used with the robot and considered an integral part of it. When the robot is moved, transferred or sold, send this manual to the new user along with the robot. Be sure to explain to the new user the need to read through this manual.

Specifications of robot models other than standard models may be omitted in this manual if they are common to those of standard models. In this case, refer to the specifications of standard models.

For details on specific operation and programming of the robot, refer to the separate "YAMAHA Robot Controller User's Manual".

NOTES

- The contents of this manual are subject to change without prior notice.
- Information furnished by YAMAHA in this manual is believed to be reliable. However, if you find any part unclear or inaccurate in this manual, please contact YAMAHA sales office or dealer.

YAMAHA MOTOR CO., LTD.
IM Operations

MEMO

General Contents

Chapter 1 Safety

1-1	Safety Information	1-1
1-2	Essential Caution Items	1-2
1-3	Special Training for Industrial Robot Operation	1-6
1-4	Robot Safety Functions	1-6
1-5	Safety Measures for the System	1-7
1-6	Trial Operation	1-7
1-7	Work Within the Safeguard Enclosure	1-8
1-8	Automatic Operation	1-8
1-9	Adjustment and Inspection	1-9
1-10	Repair and Modification	1-9
1-11	Warranty	1-10

Chapter 2 Product Features And Operating Cautions

2-1	Product Features	2-1
2-2	Robot part names (Fig. 1)	2-2
2-3	Operating Cautions	2-3

Chapter 3 Installation and Connections

3-1	Installation Cautions	3-1
3-2	Installing the robot	3-2
3-2-1	Installation Using The Body Mounting Taps	3-2
3-2-2	Installation Using The T-Slots	3-3
3-3	Attaching the end effector	3-5
3-4	Connections	3-6
3-4-1	Connecting the robot cables	3-6
3-5	Setting the parameters	3-6
3-6	Trial Operation	3-6

Chapter 4 Periodic inspection and maintenance

4-1	Before beginning work	4-1
-----	-----------------------------	-----

Chapter 5 Specifications

5-1	Robot specifications	5-1
5-1-1	YMS45	5-1
5-1-2	YMS55	5-2



MEMO

1-1 Safety Information

Industrial robots are highly programmable, mechanical devices that provide a large degree of freedom when performing various manipulative tasks.

To ensure correct and safe use of YAMAHA industrial robots, carefully read this manual and make yourself well acquainted with the contents. **FOLLOW THE WARNINGS, CAUTIONS AND INSTRUCTIONS INCLUDED IN THIS MANUAL.** Failure to take necessary safety measures or mishandling due to not following the instructions in this manual may result in trouble or damage to the robot and injury to personnel (robot operator or service personnel) including fatal accidents.

Warning information in this manual is shown classified into the following items.



DANGER

FAILURE TO FOLLOW DANGER INSTRUCTIONS WILL RESULT IN SEVERE INJURY OR DEATH TO THE ROBOT OPERATOR, BYSTANDERS OR PERSONS INSPECTING OR REPAIRING THE ROBOT.



WARNING

FAILURE TO FOLLOW WARNING INSTRUCTIONS COULD RESULT IN SEVERE INJURY OR DEATH TO THE ROBOT OPERATOR, BYSTANDERS OR PERSONS INSPECTING OR REPAIRING THE ROBOT.



CAUTION

Failure to follow CAUTION instructions may result in injury to the robot operator, bystanders or persons inspecting or repairing the robot, or damage to the robot and/or robot controller.



NOTE

Explains the key point in the operation in a simple and clear manner.

It is not possible to list all safety items in detail within the limited space of this manual. So it is essential that the user have a full knowledge of basic safety rules and also that the operator makes correct judgments on safety procedures during operation.

This manual and warning labels supplied with or affixed to the robot are written in English. If the robot operator or service personnel does not understand English, do not permit that person to handle the robot.

1-2 Essential Caution Items

Particularly important cautions for handling or operating the robot are described below. In addition, safety information about installation, operation, inspection and maintenance is provided in each chapter. Be sure to comply with these instructions to ensure safe use of the robot.

(1) Observe the following cautions during automatic operation.

- Install a safeguard (protective enclosure) to keep any person from entering within the movement range of the robot and suffering injury due to being struck by moving parts.
- Install a safety interlock that triggers emergency stop when the door or panel is opened.
- Install safeguards so that no one can enter inside except from doors or panels equipped with safety interlocks.
- The warning labels shown in Fig. 1-1 are supplied with the robot and should be affixed to conspicuous spots on doors or panels equipped with safety interlocks.



DANGER

SERIOUS INJURY OR DEATH WILL RESULT FROM IMPACT WITH MOVING ROBOT.

- KEEP OUTSIDE OF GUARD DURING OPERATION.
- LOCK OUT POWER BEFORE APPROACHING ROBOT.

(2) Use caution to prevent hands or fingers from being pinched or crushed.

Warning labels 2 (Fig. 1-2) are affixed to the robot.

When moving the robot or performing teaching, use caution to prevent hand or fingers from being pinched or crushed by the robot movable parts.



WARNING

MOVING PARTS CAN PINCH OR CRUSH.

KEEP HANDS AWAY FROM ROBOT ARMS.



Fig. 1-1 Warning label 1

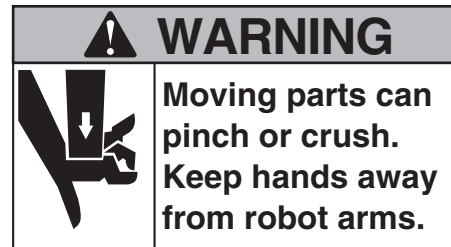


Fig. 1-2 Warning label 2

(3) Follow the instructions on listed on warning labels and in this manual.

- Be sure to read the warning labels and this manual carefully and make sure you thoroughly understand their contents before attempting installation and operation of the robot.
- Before starting robot operation, be sure to reread the procedures and cautions relating to your work as well as descriptions in this chapter (Chapter 1, "Safety").
- Never install, adjust, inspect or service the robot in any manner that does not comply with the instructions in this manual.
- The warning labels shown in Fig. 1-3 are supplied with the robot and should be affixed to the robot or conspicuous spots near the robot.

**WARNING**

**IMPROPER INSTALLATION OR OPERATION CAN RESULT IN SERIOUS INJURY OR DEATH.
READ THE USER'S MANUAL AND ALL WARNING LABELS BEFORE OPERATION.**



Fig. 1-3 Warning label 3

(4) Do not use the robot in environments containing inflammable gas, etc.**WARNING**

- THIS ROBOT WAS NOT DESIGNED FOR OPERATION IN ENVIRONMENTS WHERE INFLAMMABLE OR EXPLOSIVE SUBSTANCES ARE PRESENT.
- DO NOT USE THE ROBOT IN ENVIRONMENTS CONTAINING INFLAMMABLE GAS, DUST OR LIQUIDS. EXPLOSIONS OR FIRE MIGHT OTHERWISE RESULT.

(5) Do not use the robot in locations possibly subject to electromagnetic interference, etc.**WARNING**

AVOID USING THE ROBOT IN LOCATIONS SUBJECT TO ELECTROMAGNETIC INTERFERENCE, ELECTRO-STATIC DISCHARGE OR RADIO FREQUENCY INTERFERENCE. MALFUNCTIONS MIGHT OTHERWISE OCCUR.

(6) Use caution when releasing the brake of a vertical use robot.**WARNING**

- THE VERTICAL AXIS WILL SLIDE DOWN WHEN THE BRAKE IS RELEASED, CAUSING A HAZARDOUS SITUATION.**
- PRESS THE EMERGENCY STOP BUTTON AND PROP UP THE VERTICAL AXIS WITH A SUPPORT STAND BEFORE RELEASING THE BRAKE.
 - BE CAREFUL NOT TO LET YOUR BODY GET CAUGHT BETWEEN THE VERTICAL AXIS AND INSTALLATION BASE WHEN RELEASING THE BRAKE TO PERFORM DIRECT TEACH.

(7) Provide safety measures for end effector (grripper, etc.).



WARNING

- END EFFECTORS MUST BE DESIGNED AND MANUFACTURED SO THAT THEY CREATE NO HAZARDS (FOR EXAMPLE, A WORKPIECE THAT COMES LOOSE) EVEN IF POWER (ELECTRICITY, AIR PRESSURE, ETC.) IS SHUT OFF OR POWER FLUCTUATIONS OCCUR.
- IF THERE IS A POSSIBLE DANGER THAT THE OBJECT GRIPPED BY THE END EFFECTOR MAY FLY OFF OR DROP, THEN PROVIDE APPROPRIATE SAFETY PROTECTION TAKING INTO ACCOUNT THE OBJECT SIZE, WEIGHT, TEMPERATURE AND CHEMICAL PROPERTIES.

(8) Cautions when removing the motor and brake. (Vertical use robots)



WARNING

- THERE IS A HIGH RISK THAT THE UP/DOWN AXIS WILL FALL WHEN REMOVING THE MOTOR AND BRAKE.
- TURN OFF THE ROBOT CONTROLLER AND PROP UP THE VERTICAL AXIS WITH A SUPPORT STAND BEFORE REMOVING THE MOTOR.
- BE CAREFUL NOT TO LET YOUR BODY GET CAUGHT BETWEEN THE VERTICAL AXIS PARTS AND INSTALLATION BASE.

(9) Take the following safety precautions during inspection of controller.



WARNING

- WHEN YOU NEED TO TOUCH THE TERMINALS OR CONNECTORS ON THE OUTSIDE OF THE CONTROLLER DURING INSPECTION, ALWAYS FIRST TURN OFF THE CONTROLLER POWER SWITCH AND ALSO THE POWER SOURCE IN ORDER TO PREVENT POSSIBLE ELECTRICAL SHOCK.
- NEVER TOUCH ANY INTERNAL PARTS OF THE CONTROLLER.
- REFER TO THE "YAMAHA ROBOT CONTROLLER USER'S MANUAL" FOR PRECAUTIONS ON HANDLING THE CONTROLLER.

(10) Consult us for corrective action when the robot is damaged or malfunctions occur.



WARNING

IF ANY PART OF THE ROBOT IS DAMAGED OR ANY MALFUNCTION OCCURS, CONTINUING THE OPERATION MAY BE VERY DANGEROUS. PLEASE CONSULT YOUR YAMAHA SALES OFFICE OR DEALER FOR CORRECTIVE ACTION.

Damage or Trouble	Possible Danger
Damage to machine harness or robot cable	Electrical shock, malfunction of robot
Damage to exterior of robot	Flying outwards of damaged parts during robot operation
Abnormal operation of robot (positioning error, excessive vibration, etc.)	Malfunction of robot
Z-axis brake trouble	Dropping of load

(11) Be careful not to touch the motor or speed reduction gear casing when hot.



WARNING

THE MOTOR AND SPEED REDUCTION GEAR CASING ARE EXTREMELY HOT AFTER AUTOMATIC OPERATION, SO BURNS MAY OCCUR IF THESE ARE TOUCHED. BEFORE HANDLING THESE PARTS DURING INSPECTION OR SERVICING, TURN OFF THE CONTROLLER, WAIT FOR A WHILE AND CHECK THAT THE PART HAS COOLED.

(12) Do not remove, alter or stain the warning labels.**WARNING**

IF WARNING LABELS ARE REMOVED OR DIFFICULT TO SEE, THEN ESSENTIAL PRECAUTIONS MIGHT NOT BE TAKEN, RESULTING IN ACCIDENTS.

- DO NOT REMOVE, ALTER OR STAIN THE WARNING LABELS ON THE ROBOT.
- DO NOT ALLOW THE WARNING LABELS TO BE HIDDEN BY DEVICES INSTALLED ONTO THE ROBOT BY THE USER.
- PROVIDE PROPER LIGHTING SO THAT THE SYMBOLS AND INSTRUCTIONS ON THE WARNING LABELS CAN BE CLEARLY SEEN EVEN FROM OUTSIDE THE SAFEGUARD ENCLOSURE.

(13) Protective bonding**WARNING**

BE SURE TO GROUND THE ROBOT AND CONTROLLER TO PREVENT ELECTRICAL SHOCK.

(14) Be sure to make correct parameter settings.**CAUTION**

The robot must be operated with correct acceleration coefficients according to the tolerable moment of inertia and manipulator tip mass or moment of inertia. If these are not correct, drive unit service life may end prematurely, and damage to robot parts or residual vibration during positioning may result.

1-3 Special Training for Industrial Robot Operation

Companies or factories using industrial robots must make sure that every person, who handles the robot such as for teaching, programming, movement check, inspection, adjustment and repair, has received appropriate training and also has the skills needed to perform the job correctly and safely. Since the YMS series robots fall under the industrial robot category, the user must observe local regulations and safety standards for industrial robots, and provide special training for every person involved in robot-related tasks (teaching, programming, movement check, inspection, adjustment, repair, etc.).

1-4 Robot Safety Functions

(1) Overload detection

This function detects an overload applied to the motor and shuts off the servo power.

If an overload condition occurs, take the following measures.

1. Insert a timer in the program.
2. Reduce the acceleration coefficient.

(2) Soft limits

Soft limits can be set on each axis to limit the working envelope in manual operation after return-to-origin and during automatic operation.

Note: The working envelope is the area limited by soft limits.

(3) Mechanical stoppers

If the servo power is suddenly shut off during high-speed operation by emergency stop or safety functions, these mechanical stoppers prevent the axis from exceeding the movement range.

Note: The movement range is the area limited by mechanical stoppers.



WARNING

AXIS MOVEMENT WILL NOT STOP IMMEDIATELY AFTER THE SERVO POWER SUPPLY IS SHUT OFF BY EMERGENCY STOP OR OTHER SAFETY FUNCTIONS.

(4) Vertical axis brake

An electromagnetic brake is installed on the vertical use robot to prevent the vertical axis from sliding down when servo power is turned off. This brake is working when the controller is off or the vertical axis servo power is off even when the controller is on.

The vertical axis brake can be released by means of the programming unit or by a command in the program when the controller is on.



WARNING

THE VERTICAL AXIS WILL SLIDE DOWN WHEN THE BRAKE IS RELEASED, CREATING A HAZARDOUS SITUATION.

- **PRESS THE EMERGENCY STOP BUTTON AND PROP THE VERTICAL AXIS WITH A SUPPORT STAND BEFORE RELEASING THE BRAKE.**
- **USE CAUTION NOT TO LET YOUR BODY GET CAUGHT BETWEEN THE VERTICAL AXIS AND INSTALLATION BASE WHEN RELEASING THE BRAKE TO PERFORM DIRECT TEACH.**

1-5 Safety Measures for the System

Since the robot is commonly used in conjunction with an automated system, dangerous situations are more likely to occur from the automated system than from the robot itself. Accordingly, appropriate safety measures must be taken on the part of the system manufacturer according to the individual system. The system manufacturer should provide a proper instruction manual for safe, correct operation and servicing of the system.

1-6 Trial Operation

After making installations, adjustments, inspections, or maintenance or repairs to the robot, make a trial run using the following procedures.

(1) If a safeguard enclosure has not yet been provided right after installation of the robot, rope off or chain off around the movement area of the manipulator in place of the safeguard, and observe the following points.

1. Use sturdy, stable posts which will not fall over easily.
2. The rope or chain should be easily visible by everyone around the robot.
3. Place a sign to keep the operator or other personnel from entering the movement range of the manipulator.

(2) Check the following points before turning on the controller.

1. Is the robot securely and correctly installed?
2. Are the electrical connections to the robot correct?
3. Are items such as air pressure correctly supplied?
4. Is the robot correctly connected to peripheral equipment?
5. Have safety measures (safeguard enclosure, etc.) been taken?
6. Does the installation environment meet the specified standards.

(3) After the controller is turned on, check the following points from outside the safeguard enclosure.

1. Does the robot start and stop as intended? Can the operation mode be selected correctly?
2. Does each axis move as intended within the soft limits?
3. Does the end effector move as intended?
4. Are the signal transmissions to the end effector and peripheral equipment correct?
5. Does emergency stop work?
6. Are the teaching and playback functions normal?
7. Are the safeguard enclosure and interlock working as intended?
8. Does the robot move correctly during automatic operation?

1-7 Work Within the Safeguard Enclosure

(1) Work within the safeguard enclosure

When work is required inside the safeguard enclosure, always turn off the controller and place a sign indicating that the robot is being adjusted or serviced in order to keep any other person from touching the controller switch or operation panel, except for the following cases.

- 1) Soft limit settings (See Section 4 in Chapter 4.)
- 2) Teaching

For item 1), follow the precautions and procedure for each section. To perform item 2), refer to the description in (2) below.

(2) Teaching

When performing teaching within the safeguard enclosure, comply with the instructions listed below.

- 1) Check or perform the following points from outside the safeguard enclosure.
 1. Make sure that no hazards are present within the safeguard enclosure by a visual check.
 2. Check that the programming unit HPB or TPB operates correctly.
 3. Check that no failures are found in the robot.
 4. Check that emergency stop works correctly.
 5. Select teaching mode and prohibit automatic operation.
- 2) Never enter the movement range of the manipulator while within the safeguard enclosure.

1-8 Automatic Operation

Automatic operation described here includes all operations in AUTO mode.

(1) Check the following before starting automatic operation.

1. No one is within the safeguard enclosure.
2. The programming unit and tools are in their specified locations.
3. The alarm or error lamps on the robot and peripheral equipment do not flash.
4. The safeguard enclosure is securely installed with safety interlocks actuated.

(2) Observe the following during automatic operation or in cases where an error occurs.

- 1) After automatic operation has started, check the operation status and warning lamp to ensure that the robot is in automatic operation.
- 2) Never enter the safeguard enclosure during automatic operation.
- 3) If an error occurs in the robot or peripheral equipment, observe the following procedure before entering the safeguard enclosure.
 1. Press the emergency stop button to set the robot to emergency stop.
 2. Place a sign on the start switch, indicating that the robot is being inspected in order to keep any other person from touching the start switch and restarting the robot.

1-9 Adjustment and Inspection

Do not attempt any installation, adjustment, inspection or maintenance unless it is described in this manual.

1-10 Repair and Modification

Do not attempt any repair, parts replacement and modification unless described in this manual. These works require technical knowledge and skill, and may also involve work hazards.

1-11 Warranty

The YAMAHA robot and/or related product you have purchased are warranted against the defects or malfunctions as described below.

Warranty description : If a failure or breakdown occurs due to defects in materials or workmanship in the genuine parts constituting this YAMAHA robot and/or related product within the warranty period, then YAMAHA will repair or replace those parts free of charge (hereafter called "warranty repair").

Warranty Period : The warranty period ends when any of the following applies:

- (1) After 18 months (one and a half year) have elapsed from the date of shipment
- (2) After one year has elapsed from the date of installation
- (3) After 2,400 hours of operation

Exceptions to the Warranty : This warranty will not apply in the following cases:

- (1) Fatigue arising due to the passage of time, natural wear and tear occurring during operation (natural fading of painted or plated surfaces, deterioration of parts subject to wear, etc.)
- (2) Minor natural phenomena that do not affect the capabilities of the robot and/or related product (noise from computers, motors, etc.).
- (3) Programs, point data and other internal data that were changed or created by the user.

Failures resulting from the following causes are not covered by warranty repair.

- 1) Damage due to earthquakes, storms, floods, thunderbolt, fire or any other natural or man-made disasters.
- 2) Troubles caused by procedures prohibited in this manual.
- 3) Modifications to the robot and/or related product not approved by YAMAHA or YAMAHA sales representatives.
- 4) Use of any other than genuine parts and specified grease and lubricants.
- 5) Incorrect or inadequate maintenance and inspection.
- 6) Repairs by other than authorized dealers.

YAMAHA MOTOR CO., LTD. MAKES NO OTHER EXPRESS OR IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. THE WARRANTY SET FORTH ABOVE IS EXCLUSIVE AND IS IN LIEU OF ALL EXPRESSED OR IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR WARRANTIES ARISING FROM A COURSE OF DEALING OR USAGE OF TRADE.

YAMAHA MOTOR CO., LTD. SOLE LIABILITY SHALL BE FOR THE DELIVERY OF THE EQUIPMENT AND YAMAHA MOTOR CO., LTD. SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL DAMAGES (WHETHER ARISING FROM CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY). YAMAHA MOTOR CO., LTD. MAKES NO WARRANTY WHATSOEVER WITH REGARD TO ACCESSORIES OR PARTS NOT SUPPLIED BY YAMAHA MOTOR CO., LTD.

2-1 Product Features

This is a single-axis robot with a linear motion rod that permits positioning to any desired position.

1. Compact Design

The built-in YMS series motor features a no-coupling, compact design, resulting in an overall length that is the shortest in its class.

2. Superior Maintainability

Although the built-in motor is connected directly to the ballscrew, the motor can be removed independently. This permits quick and easy maintenance, with minimal downtime in the event of a problem.

3. Durable

Long-term maintenance-free operation is achieved due to a lubrication unit that uses a high oil content fiber net for the ballscrew nut section, and a contact scraper for the rod bearing section. Long-term maintenance-free operation is especially important on rod type robots due to the difficulty in disassembling them. Moreover, the contact scraper also serves to prevent instability (looseness) when the rod is extended.

4. High Reliability

The position detection mechanism features a resolver that ensures highly reliable operation in a wide variety of environments.


5. Low Cost

High level functions at a low cost. Paired with the multi-function ERCD controller which now offers a new pulse train input function, this robot reduces both the time and cost of constructing a system.

6. Absolute function

This robot can also be paired with the ERCX controller to enable an absolute position function which requires no return-to-origin at power ON.

2-2 Robot part names (Fig. 1)

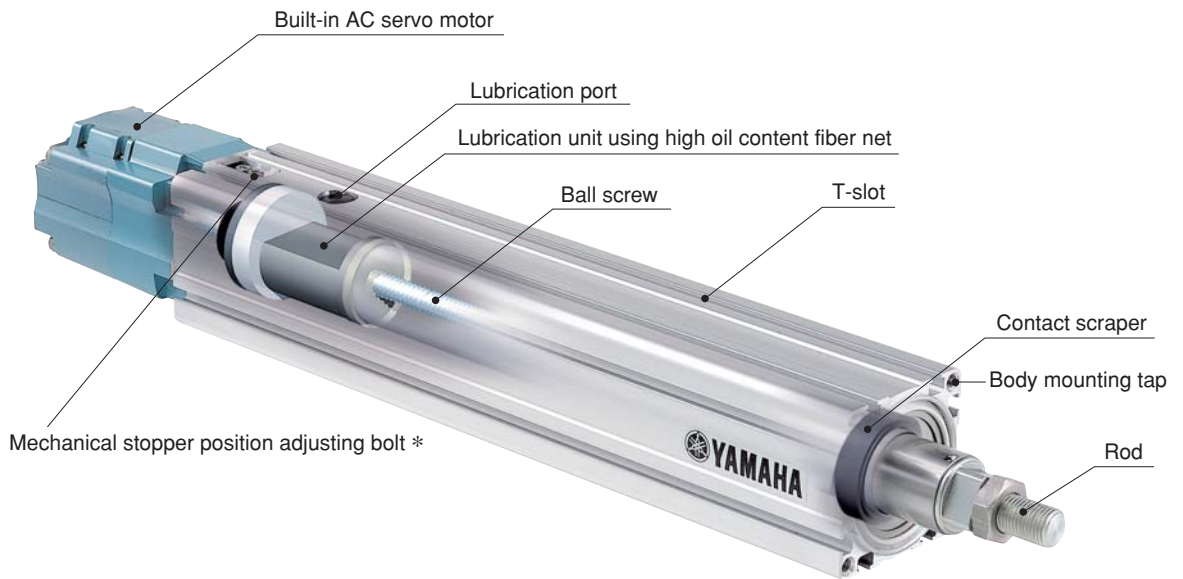


* The mechanical stopper is factory-adjusted to the optimal position, and its adjusting bolt should never be loosened. If accidentally loosened, please contact your YAMAHA representative for assistance.

**WARNING**


POSITIONAL DEVIATIONS WILL OCCUR IF THE MECHANICAL STOPPER ADJUSTING BOLT LOOSENED.

2-3 Operating Cautions

- Do not exceed the load weight capacity specified in the catalog.
- Specify the appropriate parameter settings with reference to Chapter 3, Section 3-5 (Setting the parameters).
- This robot's return-to-origin direction is toward the motor only, and must not be changed.

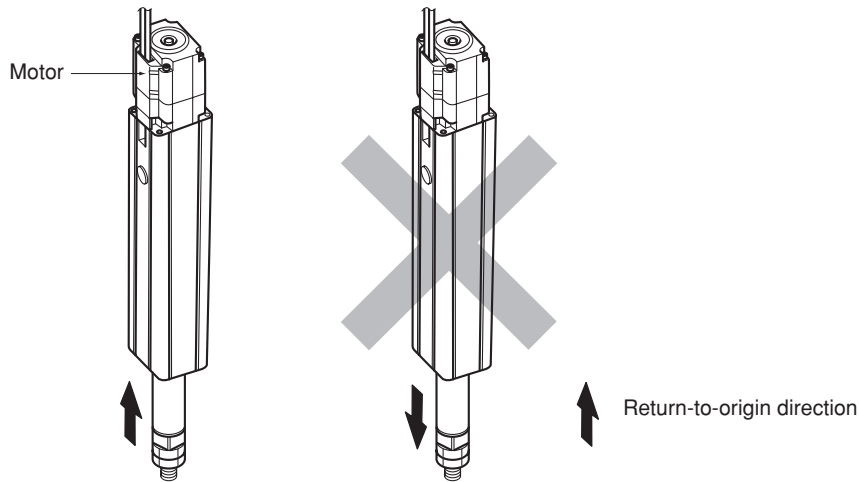

- Be sure that the robot's return-to-origin motion range is free of external interference/obstacles.

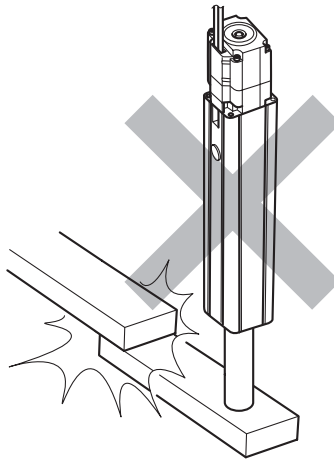


WARNING

MALFUNCTIONS WILL OCCUR IF THE RETURN-TO-ORIGIN DIRECTION IS SET IN THE DIRECTION OPPOSITE FROM THE MOTOR. MOREOVER, THE PRESENCE OF OBSTACLES/INTERFERENCE IN THE RETURN-TO-ORIGIN RANGE WILL RESULT IN POSITIONAL DEVIATIONS.


MEMO

3-1 Installation Cautions

* Install in a manner which ensures that radial loads are not applied to the rod.

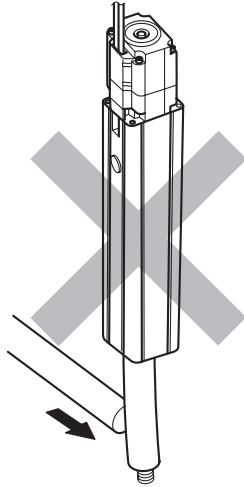


* The rotation direction's inertial moment must not applied to the rod.

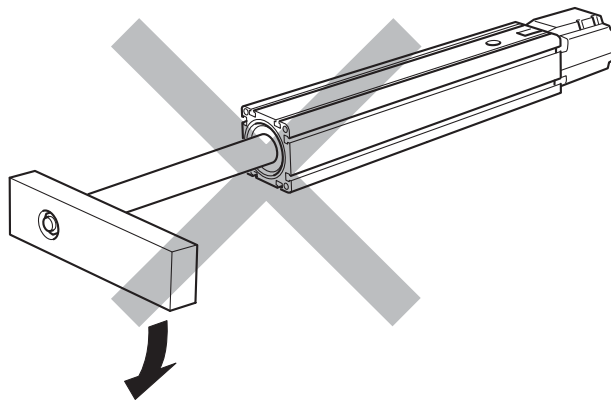

* When the robot body is mounted in a horizontal posture, the load must be supported by the linear guide and the bushing.

(Fig. 1)

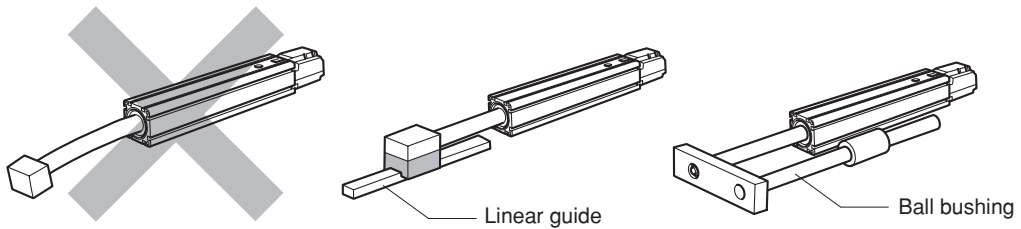


CAUTION
Applying radial loads and the inertial moment to the rod will shorten the robot life, and cause robot failures.

3-2 Installing the robot

3-2-1 Installation Using The Body Mounting Taps

Install the robot using the 4 body mounting taps located at the end of the robot body, as shown below.

(Fig. 2)

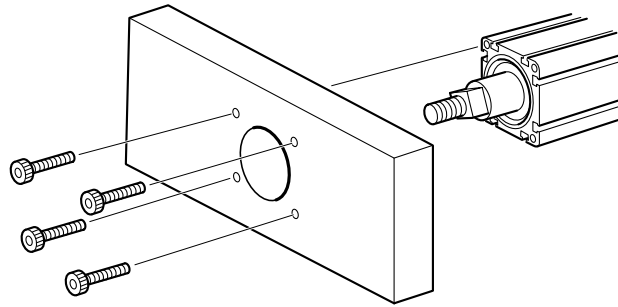

* Mount the robot body using all 4 of the taps. Failure to secure all 4 of the screws may result in insufficient rigidity.

YMS45

Mounting bolt type: M4 × 0.7

Mounting bolt nominal length:

The mounting tap depth is 10mm. The selected screws should therefore have an engaged nominal length of between 6mm and 10mm.

YMS55

Mounting bolt type: M5 × 0.8


Mounting bolt nominal length:

The mounting tap depth is 12mm. The selected screws should therefore have an engaged nominal length of between 8mm and 12mm.

3-2-2 Installation Using The T-Slots

The robot body can also be mounted by using the T-slots located on the side of the robot body (see Fig. 3). Place nuts in the T-slots, then use bolts to secure the body.

(Fig. 3)

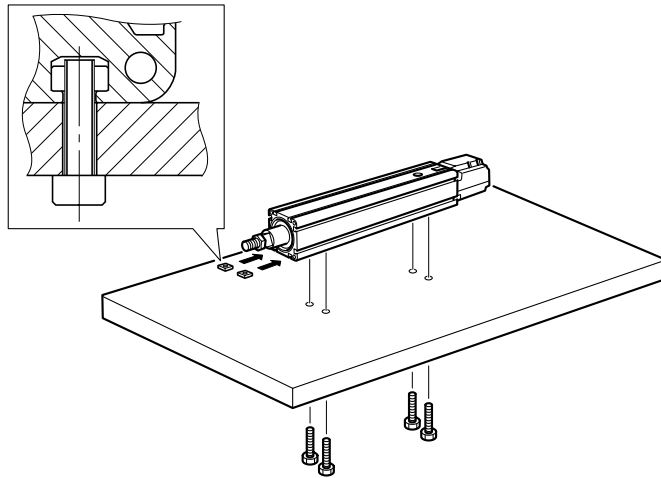


- * Mounting bolts YMS45: M3
 YMS55: M4
- * Mounting nuts Use commercially available square nuts (material: steel or SUS).




WARNING
BE SURE TO USE STEEL OR SUS SQUARE NUTS. USING SQUARE NUTS OF OTHER MATERIALS CAN CAUSE THREAD FAILURE AND BEARING SURFACE PITTING, ETC., RESULTING IN INSUFFICIENT MOUNTING TIGHTNESS.

- * Mounting bolt quantity: 4 bolts or more
Use Both the T-slots on each face, with 2 or more bolts in each T-slot.
- * Bolt positions
The outermost bolts should be located near the ends of the T-slots, and the bolt pitch should be uniform.

(Fig. 4) Layout : Good example/Bad example

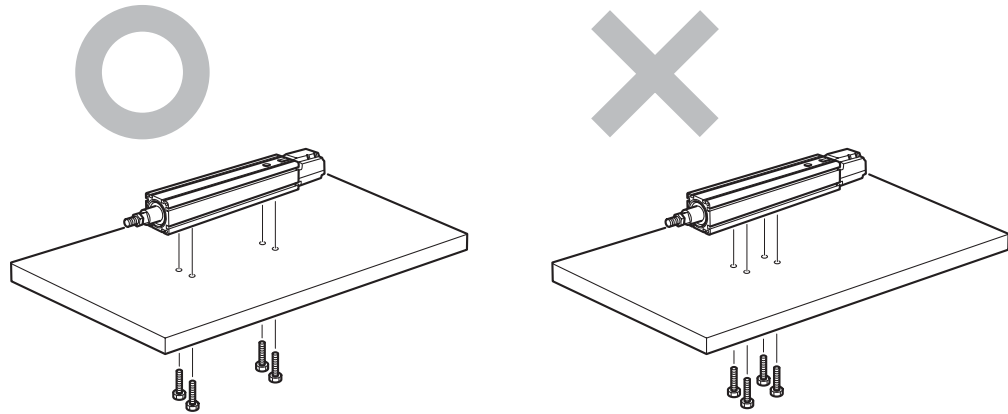

Pitch : Good example/Bad example

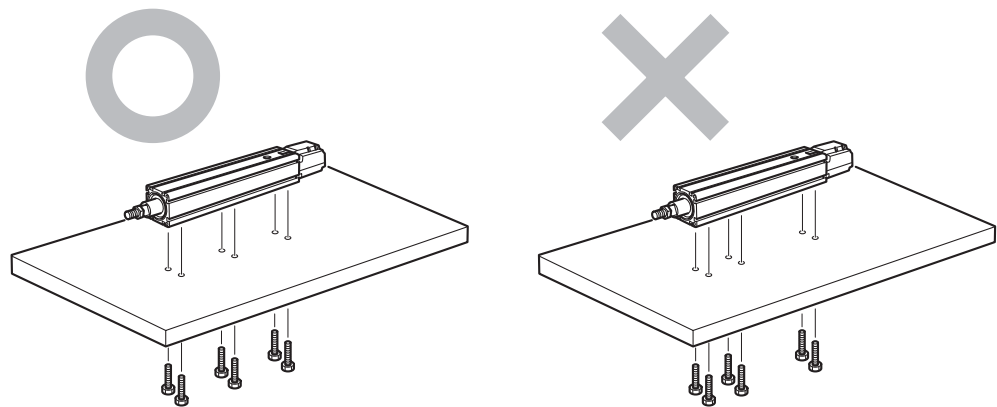

WARNING
BE SURE TO USE BOTH THE T-SLOTS, WITH 2 OR MORE BOLTS BEING SECURED IN EACH T-SLOT (TOTAL OF 4 OR MORE BOLTS).

- * Mounting bolt nominal length:
After verifying the T-slot dimensions at the outline drawing (Chapter 5, Specifications), select a bolt nominal length which provides adequate engagement with the nut.



WARNING
A BOLT WHICH HAS INSUFFICIENT ENGAGEMENT WITH THE NUT CAN CAUSE LOOSENESS AND THREAD FAILURE, RESULTING IN INSUFFICIENT MOUNTING TIGHTNESS.




WARNING
IF THE ROBOT BODY IS MOUNTED IN A VERTICAL POSTURE USING THE T-SLOT MOUNTING FORMAT, BOLT LOOSENING CAN CAUSE THE ROBOT BODY TO FALL, POSSIBLY RESULTING IN A SERIOUS ACCIDENT. SAFETY MEASURES SHOULD THEREFORE BE TAKEN TO PREVENT BOLT LOOSENING AND ROBOT FALLS.

3-3 Attaching the end effector

To mount the end effector, insert its mounting hole onto the rod's threaded end, then secure it with a nut, as shown below.

(Fig. 5)

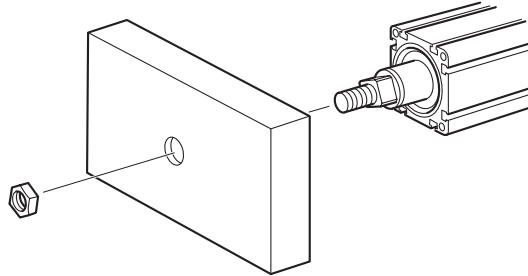

- * If the robot is mounted in a vertical posture, configure so that the end effector and workpiece center of gravity is aligned with that of the rod. In cases where this is not possible, support the offset load with the bushing and linear guide, etc., so that the inertial moment is not applied directly to the rod.
- * If the robot is mounted in a horizontal posture, support the load with the bushing and linear guide, etc., so that the inertial moment is not applied directly to the rod.
- * Take appropriate measures to prevent nut loosening.




WARNING

FAILURE TO TAKE MEASURES TO PREVENT LOOSENING CAN CAUSE THE END EFFECTOR TO FALL OFF DURING OPERATION, POSSIBLY RESULTING IN A SERIOUS ACCIDENT.

3-4 Connections

3-4-1 Connecting the robot cables

Plug the cable from robot body into the robot cable connector, then cover the connection with the hood.

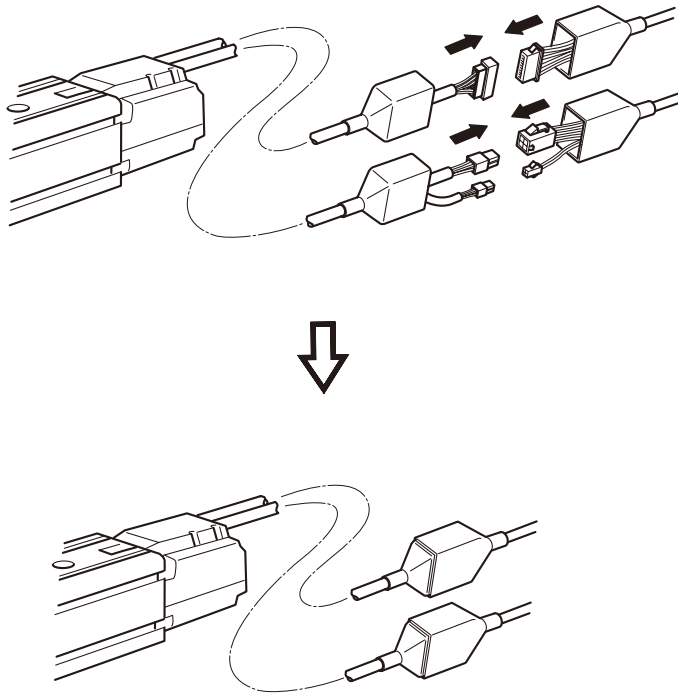

3-5 Setting the parameters

Specify a load capacity parameter setting (PRM3) which is equivalent to the sum of the end effector and workpiece weights. For setting procedure details, refer to the ERCD/ERCX controller user's manual.

3-6 Trial Operation

Execute a return-to-origin operation.

Begin automatic operation in the low-speed mode.

If no problems are observed, execute high-speed automatic operation.

4-1 Before beginning work

Periodic inspection and maintenance are essential to ensure safe and efficient operation of YAMAHA robots. This chapter describes periodic inspection items and procedures for the YMS series. Before beginning work, read the precautions below and also in Chapter 1 "Safety" and follow the instructions.



DANGER

IF THE INSPECTION OR MAINTENANCE PROCEDURE CALLS FOR OPERATION OF THE ROBOT, STAY OUT OF THE WORKING AREA OF THE ROBOT DURING OPERATION. DO NOT TOUCH ANY PARTS INSIDE THE CONTROLLER.

KEEP WATCHING THE ROBOT MOVEMENT AND SURROUNDING AREA SO THAT THE OPERATOR CAN PRESS THE EMERGENCY STOP BUTTON IF ANY DANGER OCCURS.



WARNING

- WHEN THE ROBOT DOES NOT NEED TO BE OPERATED DURING ADJUSTMENT OR MAINTENANCE, ALWAYS TURN OFF THE CONTROLLER AND THE EXTERNAL SWITCH BOARD.
- DO NOT TOUCH INTERNAL PARTS OF THE CONTROLLER FOR 5 SECONDS AFTER THE CONTROLLER HAS BEEN TURNED OFF.
- WHEN ONLY MAKING ELECTRICAL INSPECTIONS AND REQUIRING NO MECHANICAL MOVEMENT OF THE ROBOT, KEEP THE EMERGENCY STOP BUTTON PRESSED.
- USE ONLY LUBRICANT AND GREASES SPECIFIED BY YAMAHA SALES OFFICE OR REPRESENTATIVE.
- USE ONLY PARTS SPECIFIED BY YAMAHA SALES OFFICE OR REPRESENTATIVE. TAKE SUFFICIENT CARE NOT TO ALLOW ANY FOREIGN MATTER TO CONTAMINATE THEM DURING ADJUSTMENT, PARTS REPLACEMENT OR REASSEMBLY.
- DO NOT MODIFY ANY PARTS ON THE ROBOT OR CONTROLLER. MODIFICATION MAY RESULT IN UNSATISFACTORY SPECIFICATIONS OR THREATEN OPERATOR SAFETY.
- WHEN ADJUSTMENT OR MAINTENANCE IS COMPLETE, RETIGHTEN THE BOLTS AND SCREWS SECURELY.
- DURING ROBOT ADJUSTMENT OR MAINTENANCE, PLACE A SIGN INDICATING THAT THE ROBOT IS BEING ADJUSTED OR SERVICED TO PREVENT OTHERS FROM TOUCHING THE CONTROL KEYS OR SWITCHES. PROVIDE A LOCK ON THE SWITCH KEYS OR ASK SOMEONE TO KEEP WATCH AS NEEDED.

When applying grease to the internal linear guide, take the following precautions.



WARNING

PRECAUTIONS WHEN HANDLING GREASE:

- INFLAMMATION MAY OCCUR IF THIS GETS IN THE EYES.
BEFORE HANDLING THE GREASE, WEAR YOUR SAFETY GOGGLES TO ENSURE THE GREASE WILL NOT COME IN CONTACT WITH THE EYES.
- INFLAMMATION MAY OCCUR IF THE GREASE COMES INTO CONTACT WITH SKIN. BE SURE TO WEAR PROTECTIVE GLOVES TO PREVENT CONTACT WITH SKIN.
- DO NOT TAKE ORALLY OR EAT. (EATING WILL CAUSE DIARRHEA AND VOMITING.)
- HANDS AND FINGERS MIGHT BE CUT WHEN OPENING THE GREASE CONTAINER, SO USE PROTECTIVE GLOVES.
- KEEP OUT OF THE REACH OF CHILDREN.
- DO NOT HEAT THE GREASE OR PLACE NEAR AN OPEN FLAME SINCE THIS COULD LEAD TO SPARKS AND FIRES.

EMERGENCY TREATMENT:

- IF GREASE GETS IN THE EYES, WASH LIBERALLY WITH PURE WATER FOR ABOUT 15 MINUTES AND CONSULT A PHYSICIAN FOR TREATMENT.
- IF GREASE COMES IN CONTACT WITH THE SKIN, WASH AWAY COMPLETELY WITH SOAP AND WATER.
- IF TAKEN INTERNALLY, DO NOT INDUCE VOMITING BUT PROMPTLY CONSULT A PHYSICIAN FOR PROPER TREATMENT.

Daily inspection

Check the following points on a daily basis, before and after robot operation.


Checkpoints	Check items
Cables	Check for scratches, dents, excessive bends. Verify that the connector is securely plugged in.
Robot	Check for unusual vibration and noise.

Six-month inspection


Applying grease

Lubricate by using a grease gun to apply grease at the lubrication port.

 
(1) Lower the shaft by manual operation to a point 50mm above the origin position.



(2) Open the lubrication port cover.

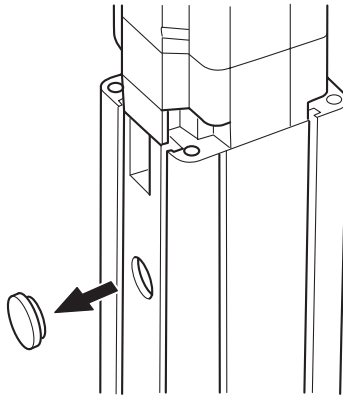

(3) Use a grease gun to apply grease (several cc) to the ballscrew.

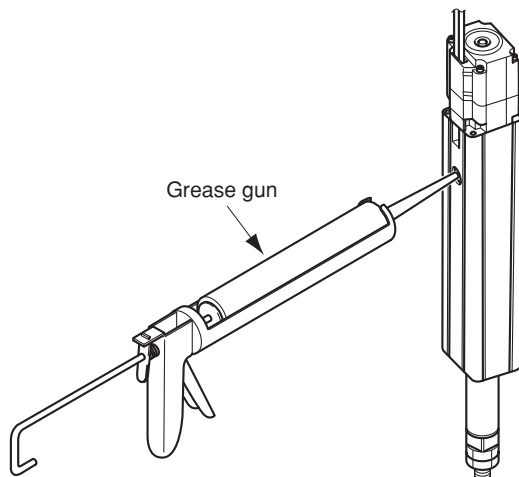

5-1 Robot specifications

5-1-1 YMS45

Basic specifications


Robot model	YMS45	
Motor output (W)	30	
Repetitive positioning accuracy (mm)	±0.02	
Reduction mechanism	Ball screw (C10 Class)/φ8mm	
Ball screw lead (mm)	12	6
Maximum speed (mm/sec)	600	300
Maximum payload (kg)	Horizontal use	4.5
	Vertical use	1
Thrust rating (N)*1	32	64
Stroke (mm)	50 to 200 (50 pitch)	
Cable length	3.5m (standard cable), 5m or 10m	
Compatible controllers	ERCDC/ERCX (3A)*2	

*1 : The thrust control accuracy is not guaranteed.

*2 : This is the required power supply capacity. An insufficient power supply capacity can reduce performance.

*Be sure that radial loads are not applied to the rod.

YMS45 (BK spec.)

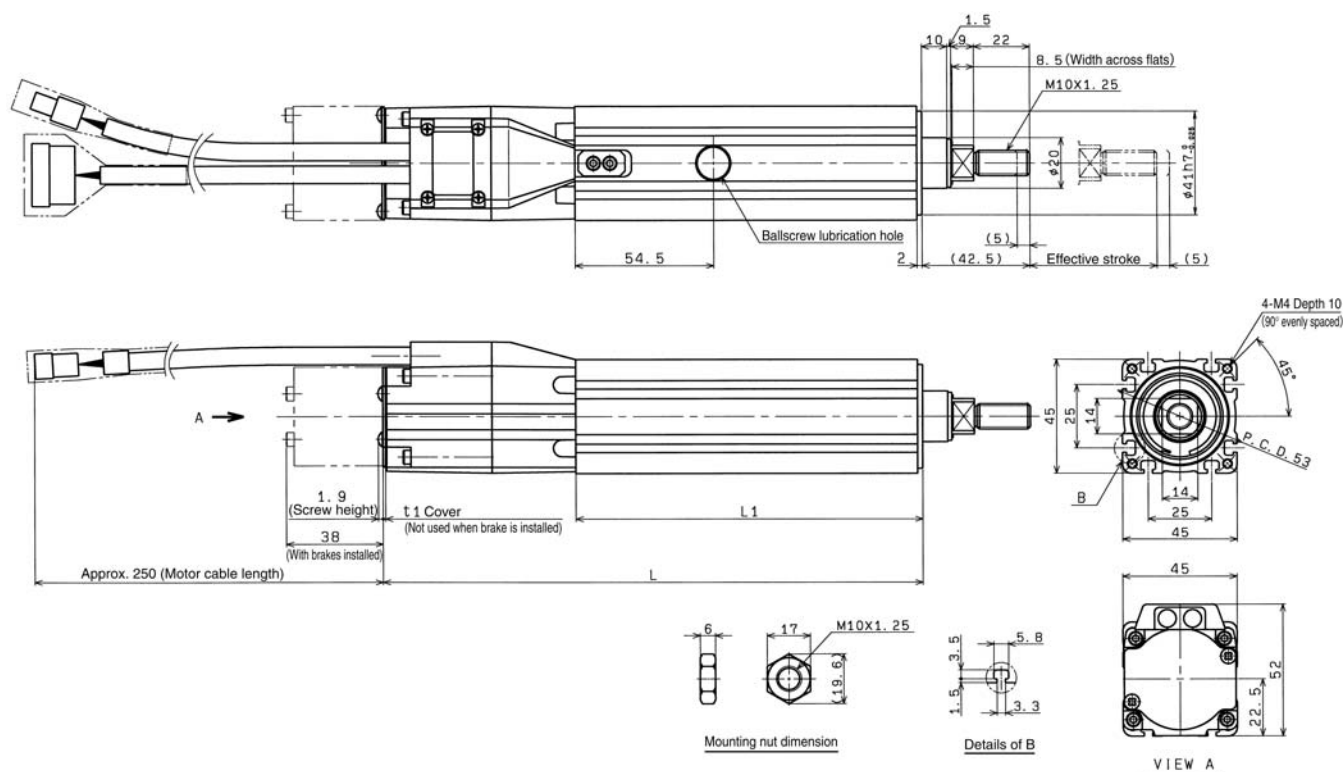

Effective stroke	50	100	150	200
L1	136.5	186.5	236.5	286.5
L	212.5	262.5	312.5	362.5
Weight (kg)*1	1.1	1.3	1.5	1.7

*1: Weight without brake. When a brake is installed, the weight is 0.2kg heavier than the table values for the brakeless body weight.

5-1-2 YMS55

Basic specifications

Robot model		YMS55	
Motor output (W)		30	
Repetitive positioning accuracy (mm)		±0.02	
Reduction mechanism		Ball screw (C10 Class)/φ12mm	
Ball screw lead (mm)		12	6
Maximum speed (mm/sec)*1		600	300
Maximum payload (kg)	Horizontal use	5	9
	Vertical use	1.5	4
Thrust rating (N)*2		32	64
Stroke (mm)		50 to 300 (50 pitch)	
Cable length		3.5m (standard cable), 5m or 10m	
Compatible controllers		ERCD/ERCX (4.5A)*3	


*1 : When the stroke is 300mm, the maximum speeds are 450mm/sec and 225mm/sec (75%).

*2 : The thrust control accuracy is not guaranteed.

*3 : This is the required power supply capacity. An insufficient power supply capacity can reduce performance.

*Be sure that radial loads are not applied to the rod.

YMS55 (BK spec.)

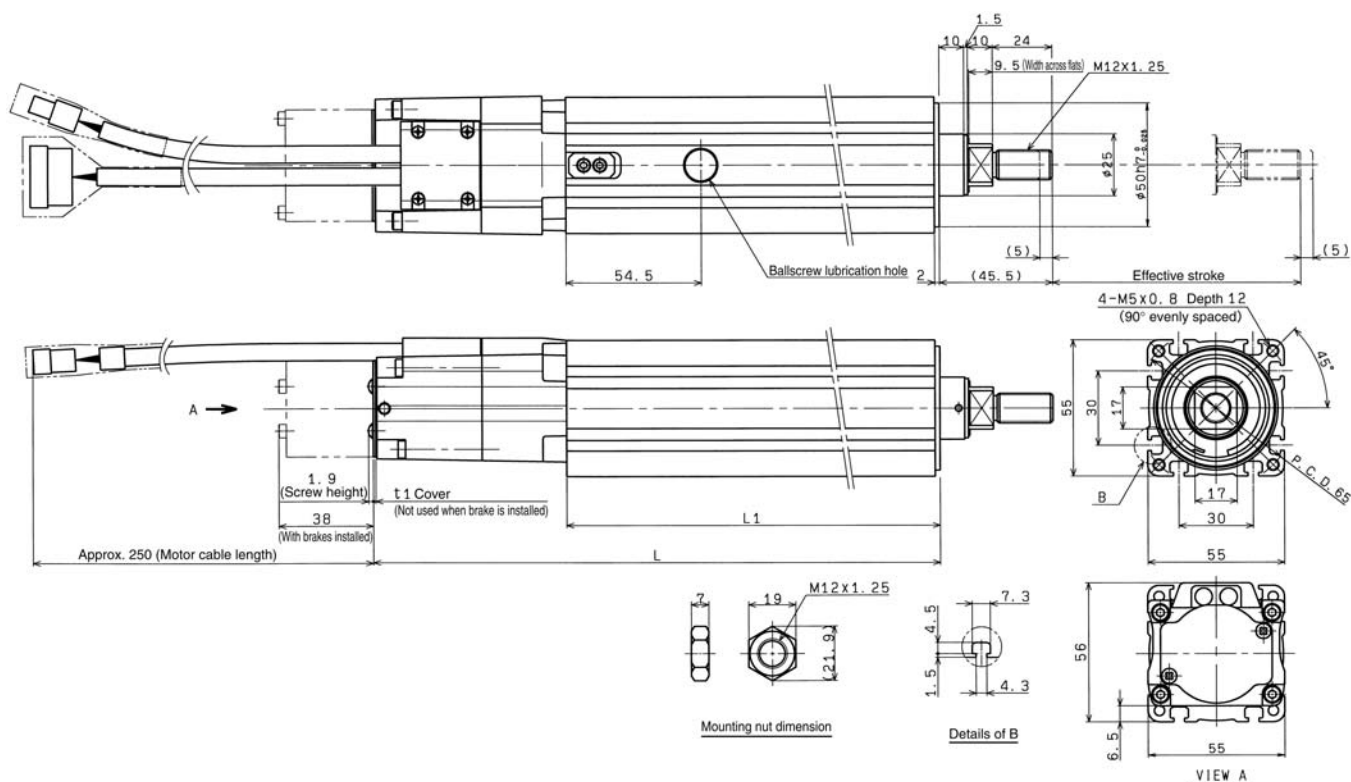

Effective stroke	50	100	150	200	250	300
L1	150.5	200.5	250.5	300.5	350.5	400.5
L	228.5	278.5	328.5	378.5	428.5	478.5
Weight (kg)*1	1.7	2	2.4	2.7	3.1	3.4

*1: Weight without brake. When a brake is installed, the weight is 0.2kg heavier than the table values for the brakeless body weight.

MEMO

User's Manual

YAMAHA

Rod Type Single-axis Robots

YMS Series
YMS45
YMS55

May 2007

Ver. 1.02

This manual is based on Ver. 1.02 of Japanese manual.

© YAMAHA MOTOR CO., LTD.

IM Operations

All rights reserved. No part of this publication may be reproduced in any form without the permission of YAMAHA MOTOR CO., LTD. Information furnished by YAMAHA in this manual is believed to be reliable. However, no responsibility is assumed for possible inaccuracies or omissions. If you find any part unclear in this manual, please contact YAMAHA or YAMAHA sales representatives.