

How to Turn 'Closed Captioning' Feature On and Off

[Click on the model number of your Gadget from the chart below]

<p><u>DTA</u></p> 	<p><u>DCX 700</u></p> 
<p><u>DCX 3510</u></p> 	<p><u>DCH 200</u></p> 
<p><u>DCT 2524</u></p> 	<p><u>DCT 2244 and DCT 2444</u></p> 
<p><u>DCH 6416 and DCH 6200</u></p> 	<p><u>DCT 6416</u></p> 
<p><u>A140</u></p> 	<p><u>A540</u></p> 
<p><u>A130</u></p> 	<p><u>A530</u></p> 

For Gadget Models: DCH6200, DCH6416, DCX3510 & DCX700

** To locate the model number, look on the back or the bottom of your gadget or refer to the chart above.

1. On your remote control press the **Menu button**
2. Using the arrow keys on your remote, make sure the **Home icon** is highlighted in yellow, then click **ok** on the remote



3. A new screen will appear. Using the arrow key, scroll down the page until you see a **setup** option, then click **ok**



4. Using the arrow keys on your remote, navigate to **Closed captioning setup**. Select it by pressing the **ok** button on your remote.



5. Use the right and left arrow keys on the remote to choose either, **off** or **on**, depending on your preference. Then press **ok**.



6. Click the **exit** button on your remote to return to your programming.

For Gadget Models: DTA

** To find the model number, look on the back or the bottom of your gadget or refer to the chart above.

1. Press the **menu** button on your remote control
2. Using the down arrow key on your remote scroll down until **closed captioning** is highlighted in yellow



3. Press the **right arrow key** on your remote once to transfer to the right side sub-menu
4. Make sure **closed captioning** is highlighted in yellow



5. Use the **left and right arrow keys** to choose between **on** or **off** setting, whichever you prefer
6. Press the **exit** button on your remote to return to your programming.

For Gadget Models: DCH200, DCT2524, DCT2244, DCT2444


** To locate the model number, look on the back or the bottom of your gadget or refer to the chart above.

These models require that you turn closed captioning on and off through the TV. Please refer to the User's Manual that came with your TV for instructions.

For Gadget Models: A130, A530, A140, A540

** To locate the model number, look on the back or the bottom of your gadget or refer to the chart above.

1. Access the main menu by pressing the **menu** button on the remote control
2. Using the **down arrow** on your remote scroll to **My Settings**

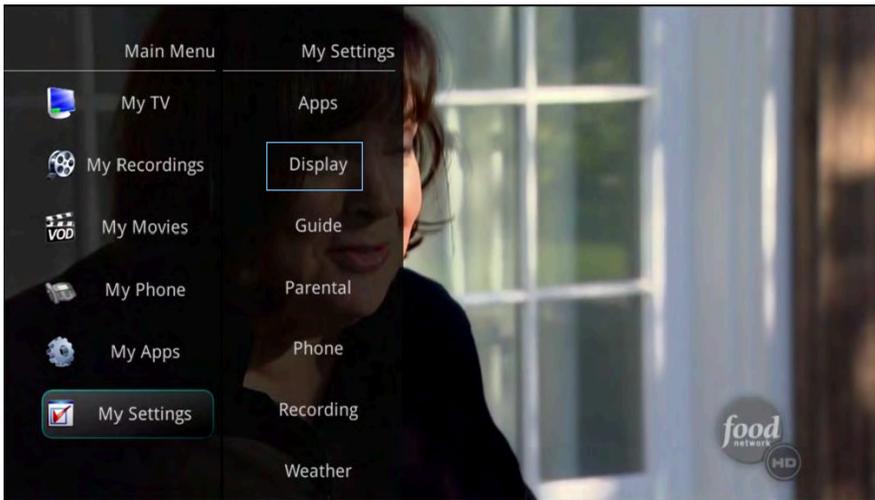

3. Under **My Settings**, arrow to the right and select **Display** by clicking the **ok button** on your remote control.
4. Using the **down arrow key** on your remote, highlight the **on** or **off** next to the heading "Closed Captioning". Use the arrow keys to select whether you would like your closed captioning on or off. Then **click ok**.



5. Press the **exit** button to return to your programming.