



DG-OHM Compact DVB Digital Video Broadcasting
HD & FULL HD
Universal field strength meter

USER'S MANUAL



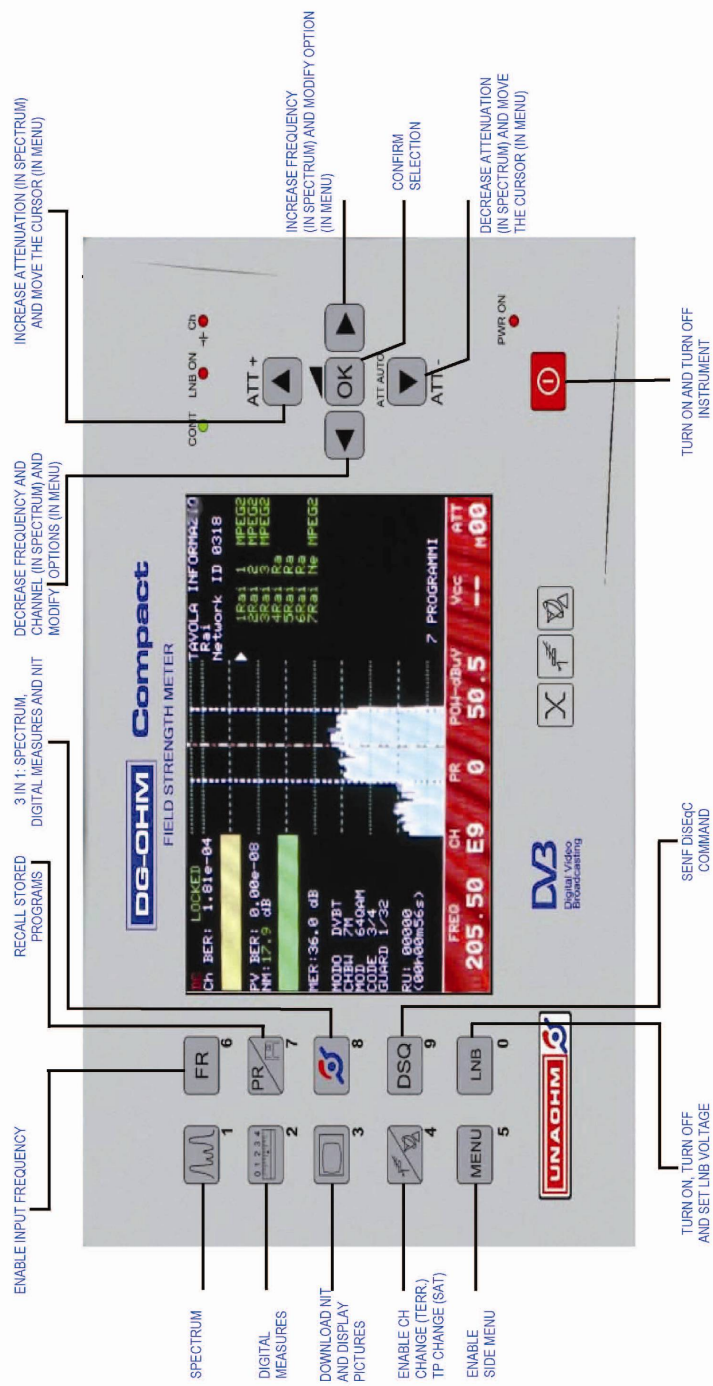


TABLE OF CONTENTS

1 GENERAL WARNINGS	3
1.1 WARNINGS	3
1.2 PRECAUTIONS	4
1.3 MAINTENANCE	4
1.4 NOTES	4
2 INTRODUCTION	5
2.1 METHOD OF USE	5
2.2 MAIN CHARACTERISTICS	6
2.3 MECHANICAL CHARACTERISTICS	6
3.0 TECHNICAL SPECIFICATIONS	7
3.1 SUPPLIED ACCESSORIES	7
3.2 OPTIONAL ACCESSORIES	7
4 KEYBOARD	8
4.1 STATUS BAR	8
5 INSTRUCTIONS FOR USE	9
5.1 POWER	9
5.2 START-UP AND SHUT DOWN	9
5.3 BATTERY USE	9
5.4 PREPARATION FOR START-UP	9
6.0 TUNING	10
6.1 TERRESTRIAL TUNING	10
6.2 SATELLITE TUNING	10
6.2.1 AUTOMATIC SATELLITE TUNING FOR TRANSPONDER	11
6.2.2 MANUAL SATELLITE TUNING	11
7.0 ATTENUATOR	12
8.0 MENU	13
8.1 MAIN MENU	13
8.2 DIGITAL MENU	13
8.3 TV MENU	13
8.4 DiSEqC MENU	14
8.5 PROGRAMME MENU	14
8.6 LNB MENU	14
8.7 DATA LOGGER MENU	14
9.0 TERRESTRIAL ANTENNA INSTALLATION	15
9.1 POINTING	15
9.2 OPTIMISATION	16
9.3 TV PICTURES	17

10.0 SATELLITE DISH INSTALLATION	18
10.1 POINTING	18
10.2 OPTIMISATION	19
10.3 TV PICTURES	19
11.0 SPECIAL FUNCTIONS:	20
11.1 3 IN 1 FUNCTION	20
11.2 CONSTELLATION	20
11.3 AER (ECHOES ANALYSIS FOR DIGITAL TERRESTRIAL)	21
11.4 CLC FUNCTION (LENGTH CALCULATION FROM CABLE FAULT POINT)	22
11.5 DiSeqC SCR FUNCTION	23
11.6 LTE	25
12.0 PROGRAMME MEMORIES	26
12.1 SAVING PROGRAMME MEMORIES	26
12.2 PROGRAMME TABLE	26
12.3 PROGRAMME RECALL	27
13.0 DATA LOGGER	27
13.1 INSTANT DATA LOGGER	27
13.2 UHF DATA LOGGER	28
13.3 SATELLITE DATA LOGGER	29
14.0 FIRMWARE UPDATE VIA PC	30
15.0 WARRANTY	31

1 GENERAL WARNINGS



MARKING

This equipment is in conformity with the following standards and documents:

- ELECTROMAGNETIC COMPATIBILITY (EMC) EN55011, EN61000-3-2, EN61000-3-3, EN61000-4-2, EN61000-4-3, EN61000-4-4, EN61000-4-5, EN61000-4-8, EN61000-4-11, ENV50204
- SAFETY EN61010-1

ATTENTION: The safety standards and precautions listed below must be applied scrupulously during all phases of use and maintenance of the instrument in order to prevent damage to persons, animals and objects.

NOTE: UNAOHM TECHNOLOGY S.r.l. will not be liable for any incorrect use of the instrument or any use other than that specified.

1.1 WARNINGS

- Power the instrument with a voltage which falls within the limits specified in the characteristics.
- Do not use the equipment without the relative locks.
- The instrument has been designed for use in covered areas. Therefore do not expose it to rain or dripping.
- Do not use the equipment in an explosive atmosphere constituted by flammable gases, vapours, smoke and powders.
- The instrument can be used in overvoltage Category IIa and pollution grade 2.
- Do not turn on the equipment immediately after moving it from a very cold area to a very hot area in order to avoid formation of condensation.
- Do not obstruct any cooling slots and do not place the equipment close to heat sources.
- For prolonged use in the laboratory or in fixed stations, we recommend removing the equipment from the bag for transport in order to allow greater heat dissipation.
- Do not apply DC voltage or RF signals greater than those prescribed to the input connectors.
- We recommend periodically inspecting the transportation strap, relative attachments and clasps which could become damaged with use. Replace these as soon as signs of wear are detected.
- For equipment with battery installed remember:
 - 1°) Never short circuit the battery. It could explode.
 - 2°) Never submerge the battery in water or throw it in a fire.
 - 3°) Never bore a hole in or attempt to open the battery.
 - 4°) If it must be replaced, use original UNAOHM batteries and dispose of the old battery in appropriate containers.
 - 5°) Never connect the battery with inverted polarity.

1.2 PRECAUTIONS

- The liquid in the monitor is harmful. In the event the module breaks with possible leakage of the liquid, we recommend not touching it with your hands or other parts of the body, particularly with the eyes or mouth. As a precaution immediately wash with water and soap.
- Do not expose the LCD monitor to direct sunlight for an extended period of time or to intense ultraviolet rays. These can deteriorate it.
- Keep the equipment in a location with temperatures higher than the minimum prescribed for storage. Otherwise the liquid in the crystal will solidify causing damage to the monitor. The same goes for temperatures higher than the maximum; the liquid in the crystal returns to the isotropic state and this process is not reversible.
- One of the most frequent causes for technical support intervention is internal short circuits due to foreign bodies, even very small ones, which enter the equipment despite all of the measures taken to prevent this possibility. It is therefore recommended, in particular when joining coaxial cables, not to do so in the immediate vicinity of the equipment because even very small pieces of the mesh shielding could penetrate the equipment and cause occasional short circuits which are not easily detected by technical support engineers.

1.3 MAINTENANCE

Opening the instrument and any operations must be done exclusively by UNAOHM qualified personnel or at authorised service centres having basic electro-technical and electrical safety knowledge.

- Before intervening disconnect the power cable.
- For the units equipped with a battery remember the notes included in section 1.1.
- Be careful not to come into contact with circuits which, even though not powered, still maintain an electrical charge (condensers).
- Use suitable measures against accumulation of electrostatic charges. Do not touch circuits inside the equipment without first putting on an appropriate antistatic strap.
- To clean the external parts:
 - 1° Remove the power supply cable.
 - 2° Use soft cloths. Use non-aggressive detergents and do not use hydrocarbon based substances.
 - 3° Do not allow liquids or other substances to penetrate inside the instrument.

1.4 NOTES

- Some fixed or less bright points (pixels) may remain on the LCD monitor screen. This is to be considered normal and falls within the production tolerances of the monitor manufacturer.
- The specified explanations are understood to be with the equipment at running temperature (in other words, 10 minutes after start up).
- Do not drop the equipment or subject it to strong shocks. If the instrument is transported in a vehicle, place it on a non-rigid support in order to avoid strong vibrations.
- Before using the instrument read the instructions contained in this user manual carefully.

- The instrument may operate, besides in a horizontal position, also in a vertical position, resting on the bottom.
- It is strongly recommended to regularly perform (at least annually) the periodic functional test on the instrument, accompanied by any necessary calibration.
We also recommend replacing worn straps or bags to prevent accidents as indicated in the previous paragraph 1.1.

2 INTRODUCTION

The DG-OHM Compact is the UNAOHM model which best meets installer requirements of **size, weight, and ease of use, while at the same time faithfully maintaining UNAOHM performance (real time continuous coverage 45 – 2.250 MHz spectrum analyzer).**

The DG-OHM Compact is available in the following configurations:

- ✓ **DG-OHM HD** (DVB-T + DVB-S/S2 + MPEG4)
- ✓ **DG-OHM FULL HD** (DVB-T/T2 + DVB-C + DVB-S/S2 + MPEG4)

Digital configuration table:

DG-OHM	DVB-T	DVB-T2	DVB-C	DVB-S DVB-S2	PICTURES + NIT MPEG2 / MPEG4
FULL HD	OK	OK	OK	OK	OK
HD	OK	*	*	OK	OK

* = UPGRADABLE LATER

2.1 METHOD OF USE.

The DG-OHM Compact model has been designed to meet the needs of different installers. Installers with less requirements prefer direct, quick and easy use, using AUTOMATIC mode. Installers with more specific requirements can also use this instrument in manual mode, with the possibility of manually modifying or setting all parameters.

Automatic operating mode (standard mode):

- terrestrial navigation: automatic tuning of frequency directly for channels
- satellite navigation: direct recall tuning of pre-stored transponders with a full list of associated satellites and transponders

Professional operating mode (user mode):

The user can manually set all parameters including frequency, LNB voltage, Local Oscillators, digital parameters, etc.

2.2 MAIN CHARACTERISTICS

Spectrum analyzer: real time total coverage from 45 to 2250 MHz

Digital measurements: BER, MER, NM, etc. for standard digital DVB-T/T2, DVB-C, DVB-S/S2

Clear SD and HD picture viewing

Constellation diagram

LTE function: LTE signal interference analysis toward DVB-T channels.

TP SAT function: automatic direct recall tuning of transponders.

AER function: echoes analysis for terrestrial signals.

CLC function: cable length calculation from the fault point (in combination with external noise generator).

DATA LOGGER function: instant, UHF, Satellite.

Diseqc: 1.1, 1.2(motor), 2.0, SCR.

2.3 MECHANICAL CHARACTERISTICS

Holder: ABS polymer

Innovative solutions:

- multi-function tilting cover:
 - Closed: used for protection during transport.
 - Adjustable opening: to further protect from sunlight.
 - Flap opening: as a pedestal for secure support.
- transport strap for safe use with hands free.
- side handle for transport and safe handling.

Monitor: Professional colour 5.7" LCD with wide viewing angle and back light control

Weight: less than 2 Kg

Size (cm): 24(L) x 16(A) x 9(P)

Li-Ion battery autonomy: autonomy over 5 hours, fully charged in 4 hours

USB port: PC connection for firmware updates and download of measurements stored with the data logger (also with any software for remote control)

RCA video input: to test decoder and video camera video signals.

3.0 TECHNICAL SPECIFICATIONS

Characteristic	DG-OHM HD	DG-OHM FULL HD
Real time spectrum analyzer	✓	✓
Frequency band	45 – 2250 MHz	45 – 2250 MHz
DVB-T	✓	✓
DVB-T2	-	✓
DVB-H	✓	✓
DVB-C	-	✓
DVB-S	✓	✓
DVB-S2	✓	✓
MPEG4	✓	✓
MPEG2	✓	✓
NIT	✓	✓
Constellation diagram	✓	✓
DiSEqC	1.1, 1.2, 2.0	1.1, 1.2, 2.0
SCR	✓	✓
LTE analysis	✓	✓
Echoes analysis	✓	✓
Data Logger	✓	✓
Length calculation from the cable fault point	✓	✓
Automatic terrestrial channel search	✓	✓
USB port	✓	✓
5.7" colour high brightness LCD	✓	✓
Dimensions	24 x 16 x 9 cm	24 x 16 x 9 cm
Weight	2 kg	2 kg
Li-Ion battery autonomy	5h	5h
Measurement precision	± 1.5 dB	± 1.5 dB
Voltage supplied by BNC	0V, 13V, 18V	0V, 13V, 18V
Attenuator	auto / man step 10dB	auto / man step 10dB









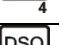
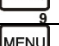
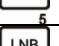
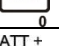


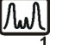

3.1 SUPPLIED ACCESSORIES

1 External network power supply.
1 Li-Ion 4.5 Ah battery.
1 Instructions manual
1 Instrument container case.


3.2 OPTIONAL ACCESSORIES

NG 500 External noise generator.
FCV 300 2-3 GHz Down converter.
Professional transport carrying case.

4 KEYBOARD

Button	Single Press	Press and Hold
	Spectrum	Modifies spectrum expansion
	Activates frequency entering	Changes frequency increase digit
	Digital measurements	OFDM / QAM selection (for FULL HD only)
	Stored programme recall	Programme table
	NIT download and picture viewing	TV menu
	3 in 1: spectrum, digital measurements and NIT	On the digital screen, stores instant measurements and, in spectrum, opens Data Logger
	Activates modifications of terrestrial CH and satellite TP	Switches terrestrial / satellite band
	Sends DiSEqC command	DiSEqC menu
	Activates side menu	Activates main menu
	LNB On/Off and voltage regulation	Menu with LNB settings
	In spectrum, increases attenuation and in menus, moves the cursor	-----
	In spectrum, decreases frequency and channel and, in menus, modifies options	Fast decrease
	Confirms selection	Adjustments menu
	In spectrum, increases frequency and channel and, in menus, modifies options	Fast increase
	In spectrum, decreases attenuation and in menus, moves the cursor	Automatic attenuator
	-----	Instrument On/Off

4.1 STATUS BAR

The status bar at the bottom of the screen superimposes all main information for constant viewing. You can make it transparent in TV pictures mode by simply pressing (single click) the  button and modifying the BLACK or TRANSPARENT choice in the box.

In addition, the status bar will change colour depending on the environment to be measured:

1. Red: power measurements for digital terrestrial.
2. Green: level measurement (CHBW: 1 MHz) for terrestrial band analogue signals.
3. Light blue: level measurements for satellite band analogue signals.
4. Blue: power measurements for digital satellite.

Frequency	Channel/tps	programmes	Power/level	Vcc (voltage)	ATT
698.00	49	03	86.6	--	20

5 INSTRUCTIONS FOR USE

5.1 POWER

The DG-OHM Compact can be powered 3 ways:

- voltage alternating from 90V to 260V by means of included external power supply
- Li-Ion battery which, when fully charged, has an autonomy of more than 5 hours
- external continuous voltage between 11.5V and 15V with current of at least 3A


5.2 START-UP AND SHUT DOWN

The instrument turns on and off by holding down the  button for a few seconds.

5.3 BATTERY USE

The battery charges while the instrument is in stand-by with the power on.

2 LEDs which switch on depending on charging conditions are found on the front of the


instrument, above the  button:

- red LED on: instrument off with charging battery
- green LED on: instrument off with battery fully charged
- LED off: instrument on


Some important notes on battery use:

- Before using new batteries, it is a good idea to perform three complete charging and discharging cycles.
- To view the battery charge status and therefore residual autonomy, see the battery icon on the upper left of the screen. When the battery charge is low, the icon will become red before the instrument switches off. At this point, we recommend interrupting use of the instrument and recharging the battery as soon as possible. If you continue to use the instrument (5 - 10 minutes max), the instrument will switch off.
- When the equipment remains inactive for long periods, we recommend charging the battery at least once a month to prevent deterioration.
- We recommend switching on the instrument at least once a month for a few hours.

5.4 PREPARATION FOR START-UP

Upon start-up, the instrument returns to the same conditions of use at the last shut down if it was shut down using the  button, with the following exceptions:










- Power supply voltage (for safety reasons) in output from the input connector RF IN is always excluded whenever TPSAT is not used.
 - The measurement status of the digital sections QPSK , OFDM or QAM is not restored.
- Each time a button is pressed a short acoustic tone is heard in confirmation of the operation.

To mute the "beep," press the  button, position the cursor on BUZZER and select OFF.

6.0 TUNING






6.1 TERRESTRIAL TUNING

Terrestrial tuning can be carried out by frequency, channel or programme. In order to select a mode press the corresponding button:

1. Single click the  button to activate the programme mode, allowing navigation (by means of the   buttons or setting a number from the numeric keypad) by programme.
2. Single click the  button to activate the channel mode, allowing navigation (by means of the   buttons or setting a number from the numeric keypad) by channel.
3. Single click the  button to activate the frequency mode, allowing navigation (by means of the   buttons or setting a number from the numeric keypad) by frequency.










Regardless which mode has been selected, when you directly set a frequency, channel or programme, when the relative button is pressed, the message "123" will appear on the upper left of the screen to alert the user that he can select the numerical value by means of the keyboard, which has now been transformed into a numeric keypad, and then confirm with the OK button.



It is also possible to tune the frequency setting simply by modifying the digit or step (thousands, hundreds, tens, units, tenths, hundredths of MHz) of increase or decrease.

To modify the step: press and hold the  button, position the cursor on the digit to be modified with the   buttons, confirm the step to be modified with the OK button, modify the digit using the   buttons.

6.2 SATELLITE TUNING

Satellite tuning can be carried out by frequency, transponder (TP-SAT) or programme. In order to select a mode press the corresponding button:







1. Single click the  button to activate the programme mode, allowing navigation (by means of the   buttons or setting a number from the numeric keypad) by programme.
2. Single click the  button to activate the transponder (TP-SAT) mode, allowing navigation (with the   buttons), directly recalling all transponder settings (L.O. frequency, high or low band polarity, digital parameters).
3. Single click the  button to activate the frequency mode, allowing navigation (by means of the   buttons or setting a number from the numeric keypad) by frequency.

Regardless which mode has been selected, tuning is to be carried out with the   increase or decrease keys. Otherwise, set values using the numerical keypad, confirming with the OK button.

6.2.1 AUTOMATIC SATELLITE TUNING FOR TRANSPONDER (TPSAT function)

TRANSPONDER tuning (automatic mode) provides HOT BIRD 13° EST satellite as a default setting.








Should the need arise to change the satellite on which you are navigating in automatic mode, proceed as follows:






1. press and hold the  button to activate the TV menu
2. press OK on "Satellite"
3. move the cursor using the   buttons on the satellite to be selected and press OK
4. Single click on the  button to exit from the TV menu.
5. In this way, the instrument will return to spectrum analyzer mode, allowing navigation by transponder, by means of the   (increase and decrease) keys of the previously selected satellite (the symbol √ will indicate the selected satellite).

TV MENU	
SATELLITE	Eutelsat 16 E
TAB. CHANNELS	√ Hot bird 13 E
LTE	Astra 19.2 E
SOURCE	Hellas



6.2.2 MANUAL SATELLITE TUNING

Alternatively, you can use the **manual (professional mode)** procedure to enter the following parameters:

1. **Local oscillator:** from the spectrum analyzer mode ()¹, single click on the  button to activate the side menus. Select the last box; press OK to select modify. Use the   (increase and decrease) buttons to modify the setting:
 - OL1, to set low satellite band frequencies (frequencies lower than 11750).
 - OL2, to set high satellite band frequencies (frequencies exceeding 11750).
 - IF, to set satellite frequencies converted in IF (from 900 to 2250).
2. **Frequency:** press the  button. The message "123" will appear on the upper left of the screen to alert the user that he can enter the frequency value with the keyboard, which has now been transformed into a numeric keypad, or else with the   increase and decrease buttons.
 It is also possible to tune the frequency setting simply by modifying the digit or increase or decrease step (thousands, hundreds, tens, units, tenths, hundredths of MHz).






To modify the increase step: press and hold the  button, position the cursor on the digit to be modified with the   buttons, confirm the step to be modified with the OK button, modify the digit using the   buttons.

3. **Satellite polarity:** single press the  button to activate or deactivate output voltage and make the Vcc camp active in the status bar, which will flash.

Use the   increase and decrease keys to select the 4 polarities:

- VL vertical low (13Volt)
- HL horizontal low (18 Volt)
- VH vertical high (13Volt + 22KHz).
- HH horizontal high (18Volt + 22KHz).



(ATTENTION: in terrestrial, voltages 0Volt, 13Volt, 18Volt will be enabled to power external devices such as pole control units, etc.)

4. **Symbol rate:** from the digital screen, single click on the  button to activate the side menu. Select the PARAMETERS box. Using the   (up, down) buttons, press ; the cursor will move to SYMB. R.. Subsequently, press  to move the cursor to the right on the numerical value of the symbol rate and, using the keyboard which has converted into a numerical keypad, you can enter the value of the new symbol rate.


7.0 ATTENUATOR

If the signals measured by the MARKER exceed or are less than the values detected by the instrument in its current conditions, this situation will be signalled with the appearance of a > (greater than) or < (less than) symbol, indicating the need to insert or remove attenuation cells allow correct reading of the signal level or power.

It is possible to manually act on attenuators using the following keys:

1.  : ATT+ : will add an attenuation cells at steps of 10 db
2.  : ATT- : will remove attenuation cells at steps of 10 db

It is, however, possible to use the AUTOMATIC ATTENUATOR. This activation will enable the instrument to automatically calculate the attenuation cell to measure level or power. To

activate, press and hold the  button from spectrum analyzer mode.

The attenuation cell value will be indicated in the status bar under ATT.


STATUS BAR:

Frequency	Channel/tpsatsat	programmes	Power/level	Vcc (voltage)	ATT
698.00	49	03	86.6	--	20

8.0 MENU

Some buttons, when pressed and held, activate a menu relative to the button which permits further operations to be performed.

8.1 MAIN MENU

Press and hold the  (menu) button to activate the main menu.

MAIN MENU	
Configuration	Displays all information on SW versions, HW components present, S/N, etc.
Loc. Oscillator	Permits the setting of pre-defined L.O. or USER L.O.
Language	Language selection (Italian, English, French, German, Spanish)
Buzzer	Activates or deactivates the beep heard when keys are pressed
Spectrum	Sets the spectrum as: classic, line, combined

8.2 DIGITAL MENU

Press and hold the  (digital measurements) button to activate the selection menu.

MODE	
OFDM	Activates the COFDM board for DVB-T; DVB-TS (full hd only) digital terrestrial measurements.
QAM	Activates the QAM board for DVB-C (full hd only) for digital measurements via cable.

8.3 TV MENU

Press and hold the  (TV) button to activate the selection menu.

TV	
Satellite	Displays satellite list (TPSAT) in order to select the one that will be used in SAT mode.
Channels table	To view and select the suitable channel table (Italy default)
LTE	Activates specific LTE function to better control filter functionality and the coexistence of digital terrestrial signals with LTE signals.
Source	Allows the selection of video input for decoder testing or EXT video camera selection.

8.4 DiSEqC MENU

Press and hold the  (DSQ) button to activate the DiSEqC menu.

DiSEqC MENU	
2 way DiSEqC	Sets and transmits commands to switch DiSEqC on 2 satellites.
4 way DiSEqC	Sets and transmits commands to switch DiSEqC on 4 satellites.
DiSEqC Level	Sets the DiSEqC level between: 1.0 , 1.1 , 2.0
List	Opens the DiSEqC list with all available commands
Motor 1.2	Allows the user to move, drive or manage a DiSEqC motor.
DiSEqC SCR	Activates the SCR function for control of the LNB SCR

DiSEqC is a registered trademark of EUTELSAT.

8.5 PROGRAMME MENU


Press and hold the  (PR) button to activate the programme management menu.

8.6 LNB MENU

Press and hold the  (LNB) button to activate the selection menu.

LNB	
Step	Sets the 4 polarities for driving the LNB (VH, VL, HH, HL)
Amperes	Activates amperometric mode: measures absorption of devices connected to the BNC
Auto recovery	Automatic function for short-circuit resolution




8.7 DATA LOGGER MENU

Press and hold the  button to activate the selection menu.

DATA LOGGER	
Instant	Allows viewing of instant measurements
UHF	Allows start-up or viewing of the UHF DATA LOGGER (from CH 21 to CH 60)
Satellite	Allows start-up or viewing of the Satellite DATA LOGGER (for the stored TPSAT)

9.0 TERRESTRIAL ANTENNA INSTALLATION

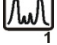
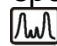
The pointing of a terrestrial antenna must be carried out in 3 different phases:

1. POINTING (phase 1  button)
2. OPTIMISATION (phase 2  button)
3. CLEAR NIT AND TV PICTURES VIEWING (phase 3  button)


To help better remember the order of the three phases, please note that the numbers associated with the button precisely follow the order of the phases.

9.1 POINTING (phase 1 button)


The first pointing phase has the task of identifying the direction from which digital terrestrial signals are received and, at the same time, thanks to the spectrum in real time, to search for the antenna position that will get the most amount of signals, or rather the most power.

The field meter must be set to spectrum analyzer mode, , initially entering the FULL spectrum viewing mode (press  to change from SPAN to FULL). This will allow us to pinpoint the location of the repeater.

Next, select a specific channel, to be chosen from the importance of MUX content (paid channels or guaranteed channels such as RAI, Mediaset) or choose another low quality channel. In the latter case, obviously improving the quality of a poor quality MUX, other channels arriving from the same direction can benefit or at least not suffer. The fact remains that, in many cases, pointing is also a position compromise that must meet the requirements of the involved MUX.

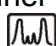Once a channel or specific MUX has been set, you will need to modify the SPAN. Press and hold the  button to set SPAN from FULL to 5-6-7 as preferred. This operation will allow us to zoom in on the signal to improve its pointing.


In fact, by means of small movements on the antenna, you can try to get a MUX that is powerful and squared. This operation will allow us to perform pointing for the most power possible.

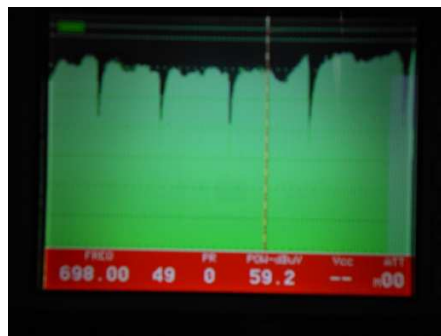

Picture of the real time spectrum analyzer representing the captured MUX.

9.2 OPTIMISATION (phase 2 button)

Once the first phase of pointing to maximum power has been performed, now we have to carry out a second step to optimise the quality. In fact, for digital signals, we do not always improve the quality with quantity; this is why we carry out pointing for the quantity and then, later, optimisation for quality.


Press the  button to activate the COFDM board, which will perform BER, MER, etc. quality measurements. In this phase, we will have to make small movements on the antenna to find the position that guarantees the best BER, MER and NM.

Digital signal quality is highlighted not only in numbers (ex. $1 \text{ e-} 5$, meaning error out of 100,000 symbols), but also through the quality bar image which will get longer as quality improves, or which will become shorter as quality gets worse, until the signal is so degraded in quality that it will give the "NO CARR" or "UNLOCKED" message, or the complete absence of quality.

In addition, the quality measurement bars can light up three different colours to give an immediate idea of the quality:

- GREEN optimal condition of errors (few)
- YELLOW fair condition / some errors
- RED critical condition of errors


Once signal quality has been optimised, our quantity may have decreased, but this will not influence our situation negatively.

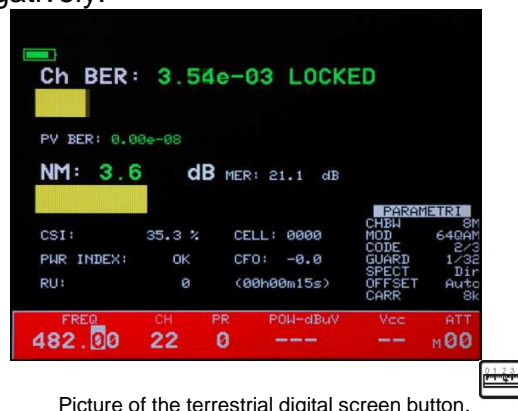





Picture of the terrestrial digital screen button.

LOCKED:	SIGNAL LOCKED ON
UNLOCKED / NO CARR:	SIGNAL NOT LOCKED ON : due to poor quality or absence of signal, no TV pictures can be seen.
Ch BER:	BER channel measurement (bit error ratio, or rather the number of bit errors over time).
Pv BER:	Post Viterbi BER measurement (bit errors over time after the correction of Viterbi).
MER:	Modulation error ratio (errors on modulation)
NM:	Noise Margin (guarantee margin in dB).
CELL:	Recognition code of the repeater from which the signal is being received.
RU:	Uncorrected errors.

9.3 CLEAR NIT AND TV PICTURES VIEWING (phase 3 button)

Once phase 2 has been completed and, therefore, the best quality and quantity signal has been obtained, simply press the  button to activate the MPEG4 board, which will communicate the N.I.T. network information table (list of channels contained in the MUX) and will allow for selection of a television broadcaster to display clear pictures.

In NIT mode, press the  button (single click), select TRASPARENT mode to have the words superimposed on the pictures, or select BLACK to have the black background with no images behind.


To select the viewing of a television broadcaster, from the NIT screen, simply use the   button to move and then single press the  button to see the clear digital pictures.





Clear digital terrestrial TV mode picture



From the digital TV screen, press the  button to recall the side menus which will allow:

STATUS B.	Status bar management: Activates/deactivates (full screen viewing)
CHANNEL INFO	Select the broadcaster and relative information: channel name, video PID, audio PID
AUDIO	To select audio for that channel
DIGITAL MEASUREMENTS	View the main digital measurements together with pictures

Management of adjustments such as brightness, contrast, volume by pressing and holding the  button which will activate the control bars.




Use the   keys to select the various settings:

- VOLUME (only in TV mode)
- CONTRAST
- BRIGHTNESS


Use the   keys to increase or decrease relative contents.

10.0 SATELLITE DISH INSTALLATION

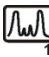The pointing of a satellite antenna must be carried out in 3 different phases:

1. POINTING (phase 1  button)
2. OPTIMISATION (phase 2  button)
3. CLEAR NIT AND TV PICTURES VIEWING (phase 3  button)

To help better remember the order of the three phases, please note that the numbers associated with the button precisely follow the order of the phases.

Press and hold the  button to switch from terrestrial to satellite and vice versa. Once you have switched to the satellite range (BLUE status bar), the pre-stored TRANSPONDERS will already be active in the status bar.

Press the   key to select the desired Transponder.


10.1 POINTING (phase 1 button)

Set a SPAN value, press and hold the  button to obtain a zoom on a specific signal.

Now, simply position the satellite dish with elevation appropriate to the location.


Next, move the satellite dish horizontally to capture the searched satellite.


Thanks to the **REAL TIME SPECTRUM**, you will simply need to move the satellite dish horizontally until the MARKER positions in the middle of the received signal, as shown below.

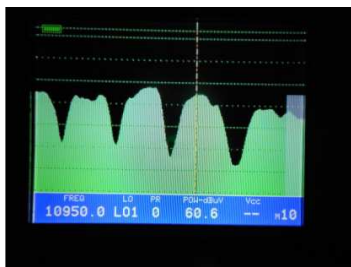

In this situation, the TP will not necessarily be exactly the desired satellite, because there may be TP with parameters similar to ours but of other orbital positions.

Therefore, once you are in the above-indicated situation, make sure that the signal is

LOCKED, pressing the  button.

If the signal locks, regardless of the quality (but without RU) press the  button, which will download the NIT and, in particular, the orbital position that we are going to compare with the one in question.

If they match, we have pointed the right satellite. Next, we will have to carry out an optimisation phase to obtain the best quality.

10.2 OPTIMISATION (phase 2 button)


After verification of the correct satellite dish position by reading the orbital position from the NIT, we will need to optimise signal quality, to ensure viewing even in critical conditions, by slightly moving the dish.



Digital satellite screen picture.

LOCKED:	SIGNAL LOCKED ON
UNLOCKED / NO CARR:	SIGNAL NOT LOCKED ON : due to poor quality or absence of signal, no TV pictures can be seen.
Ch BER:	BER channel measurement (bit error ratio, or rather the number of bit errors over time).
Pv BER:	Post Viterbi BER measurement (bit errors over time after the correction of Viterbi).
MER:	Modulation error ratio (errors on modulation)
NM:	Noise Margin (guarantee margin in dB).
CFO:	Central frequency offset (indicates the conversion error of the LNB local oscillators).

10.3 CLEAR NIT AND TV PICTURES VIEWING (phase 3 button)

Once phase 2 has been completed and, therefore, the best quality and quantity signal has been obtained, simply press the  button to activate the MPEG4 board, which will communicate the N.I.T. network information table and will allow for selection of a television broadcaster to display clear pictures (see paragraph 9.3).


11.0 SPECIAL FUNCTIONS

Model DG-OHM allows users to carry out special functions to particularly analyze further aspects in addition to the measures themselves.

11.1 3 IN 1 FUNCTION

This particular function allows users to obtain a complete analysis on a single screen, both in terrestrial and in satellite.





To activate this function, simply position the MARKER at the middle of the MUX or a TRANSPONDER and single click on .

The screen specified above will be displayed. The screen will be divided in 3, keeping the real time spectrum analyzer in the middle, with all real time digital measurements on the left side and NIT with all information relative to the signal on the right side of the screen, allowing for overall viewing of all information.

This function can also be used for satellite to discover the orbital position of an unknown signal.

11.2 CONSTELLATION

To activate a constellation diagram, which will allow for a graphical representation of the quality of the signal, simply single click the  button from the digital screen (press ), both terrestrial and SAT. This operation will activate the side boxes, where you can select CONST.



Constellation diagram

11.3 AER (ECHOES ANALYSIS FOR DIGITAL TERRESTRIAL)




This function allows ether analysis of mother signal behaviour and of any relative echoes which may disturb or negatively influence the MUX.

ECHOES are defined as all those rebounds in ether by the mother signal, which bounce off surface as buildings, lakes, etc. These then tend to get to the antenna with a signal delay with respect to the mother signal.


These are defined as destructive ECHOES if their delay with respect to the arrival of the mother signal (the most powerful) exceeds the time known as the guard interval.

Non-destructive ECHOES are those whose delay times remain within the guard interval.

GUARD INTERVAL REFERENCE TABLE (8k carrier)				
GUARD	1/32	1/16	1/8	1/4
MAXIMUM DELAY (μ s)	28	56	112	224
MAXIMUM DISTANCE (Km)	8.4	16.8	33.6	67.2

To activate the echoes analysis: press the  button to switch to quality measurements. Once the signal has been LOCKED, press the  button to open the side box. Select AER and press .




On the AER screen (photo above), you can press the  button to activate the side menus for further management or viewing of the quality measurements (BER , MER...).




As you can see in the photo, the mother signal (the most powerful) will be highlighted, automatically placing a yellow marker. The two markers at the end show the guard interval; therefore, any echoes inside this area are not destructive, as they remain within the guard interval. Vice-versa, any signals outside this area can be destructive, as they go outside the guard interval.


The red marker allows us to highlight any echoes and get information:






- DS (delta space): identifies the distance of any echoes.
- DT (delta time): identifies the delay of any echoes.
- GUARD MKR: indicates the time limit of the guard interval.


11.4 CLC FUNCTION (DISTRIBUTION CONTROL, LENGTH CALCULATION FROM THE CABLE FAULT POINT)

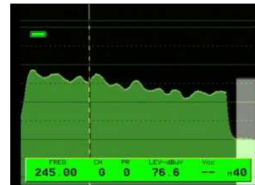This function calculates the distance of a fault on a cable due to impedance mismatch. Such defects, caused by distribution, may depend on an open, bent, or generally ruined cable. To use the CLC function, you will need to work with a noise generator and set the DG-OHM in spectrum analyzer mode,  button.

1. Connect the instrument input BNC to a noise generator by means of the T-connector.
2. Activate the noise generator.
3. Attenuate the signal in order to put it in a readable scale (using the   buttons) or activate the automatic attenuator (press and hold ).




4. Connect the distribution cable to the T-connector.
5. If distribution presents an impedance mismatch, linearity will not be seen on the spectrum, but valleys or holes.
6. Set the SPAN with a value suitable for obtaining 2 valleys on the screen (press and hold ). Point the first marker on the first valley or hole.
7. Activate the CLC functions: single press  to open the side boxes. Select CLC ON and press  to deactivate the side menus.
8. Move the second marker (using the   keys) in frequency until you find the next or previous valley or hole.
9. Read the distance of the impedance mismatch as follows:
 - PEE: distance by mismatched expanded cables.
 - PE: distance by mismatched compact cables.

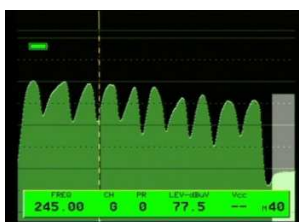

Point 5






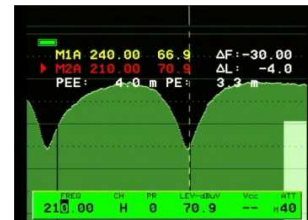

Point 6




Point 7 ; point 8

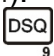


11.5 SCR FUNCTION

- Set the field meter to satellite frequency range (press and hold ) and in spectrum analyzer mode ().
Press and hold the  to activate the menu.
Select DiSEqC SCR and confirm with .
Select MONO FEED and press .

DiSEqC	
2 WAY DiSEqC	
4 WAY DiSEqC	
DiSEqC Level	
DiSEqC User	
MOTOR (1.2)	
DiSEqC SCR	MONO FEED
	DUAL FEED



- Select 1 of the 4 frequencies relative to the 4 SCR channels and press .


DiSEqC SCR
SCR A : 1,210 MHz
SCR B : 1,420 MHz
SCR C : 1,680 MHz
SCR D : 2,040 MHz
SCR E : USER

- After selecting one of the 4 channels to check, the instrument will return to the SPECTRUM mode indicating SCR at the top right in order to signal the particular mode of use.
- To check correct operation of the selected SCR channel, you can use the pre-stored transponders or else the parameters of the desired transponder must be manually set as follows:
 - Set TRANSPONDER frequency with the local oscillator and not 11F frequencies, for example TP124 RAI, type 10.992 and not 1.242,00.
Then press  and enter the numerical sequence followed by .
 - Set the polarity through the side menu () POL V or POL H.

- c. Select TRANSMIT from the side menu to send the request to the SCR LNB made up of:

TRANSPONDER FREQUENCY	POLARITY
10992	V (VERTICAL)



If the LNB is operational on that channel (A, B, C, D), the selected transponder (TP) on the spectrum will be seen cut in half by the MARKER. This way, we will have correctly selected its recall for frequency and polarity, therefore the check its quality as also takes place for classic use we will press  ₂ to measure quality (BER MER etc.) and then  ₃ to download the NIT and view the images.

In SCR mode, if the  ₅ button is pressed, the side menu appears which allows further functions:

SCR A	Selection of the 4 SCR channels A-B-C-D
POL V	Polarity setting V= vertical ; H= horizontal
TRANSMIT >>	Send request to the SCR LNB
SPAN 6	Select for spectrum view: SPAN-FILTRO-V.FILTER-MKR
EXIT	Exit the SCR mode to return to classic use.

ATTENTION:



Due to the diversity of SCR LNB technology with respect to the classic universal LNB, pay close attention to the following points:

- 1) Programme memories cannot be used for SCR.
- 2) To set the frequency, we recommend using a numeric keypad as indicated above. Increasing with the   buttons may be slow, as the transponder frequency setting is not made by the internal tuner of the field meter, but by the LNB SCR, which receives the request from the instrument and then modifies it and responds later.
- 3) The vertical/horizontal polarity is no longer recalled by means of varying LNB voltage (13Volt = vertical, 18Volt=horizontal), but will form part of the package that we will send to the LNB SCR frequency, such as V = vertical or H = horizontal.
- 4) To obtain the high band, we no longer activate the 22KHz, since it will be the LNB SCR itself to understand by means of the transponder frequency we will send.
 - a. Fr TP < 11,750 low band.
 - b. Fr TP > 11,750 high band.

11.6 LTE

The LTE function will analyze the best coexistence of digital terrestrial signals with the latest LTE signals which, because of their frequency and power, without proper protection would risk interfering with the last available MUX DVB-T.

This function will help to calibrate the LTE signal protection filters or to assess any performance of those used.

To activate the LTE function, press and hold  3, select LTE and press .

The instrument will automatically set the SPAN values and more selective filters to analyze the best of their coexistence.

The markers will then automatically be positioned on the frequencies of channel 60 and channel 61, activating continuous calculation in real time, comparing the power of channel 61 to that of channel 60.

Δ LTE communicates the resulting ratio between the two signals in real time:

- Δ LTE > 30 critical condition (filter not working properly or absent)
- Δ LTE just under 30 (filter working just enough)
- Δ LTE < 25 (filter working very well)






12.0 PROGRAMME MEMORIES

The DG-OHM model allows the user to save 50 programme memories, from PR00 to PR49, mixed between satellite and terrestrial as desired.

The saved programme memory can be read or recalled in the status bar under PR.

12.1 SAVING PROGRAMME MEMORIES

To save a programme memory, proceed as follows:

1. Set the instrument to spectrum analyzer mode (.
2. Tune and set the instrument with the parameters to be saved (frequency, LNB voltage channel, digital parameters, etc.).
3. Press and hold . The table of programmes will appear and will allow the user to manage programme saving and deleting.
4. Single click  to exit from the programme table.

12.2 PROGRAMME TABLE

Press and hold  (in spectrum analyzer mode) to activate the programme table.

The status relative to programme content to be saved will be indicated in the first table at the top.

Terrestrial programme:



STATUS:

**	49 (ITA)	698.00	DVB-T	8M	OFF
	Channel	Frequency	Standard	Chbw	Voltages

Satellite programme:


STATUS:

**	110/13.0E	10719.0	DVB-S	27500	VL
	Transponder	Frequency	Standard	Symbol rate	Polarity

Use   to select where to save the programme.


Use  to highlight the SAVE / DELETE field.

If the memory is free, SAVE will be indicated to save the memory in that position, while if the position is already occupied, DELETE will be indicated.

Use  to implement SAVE/DELETE.





To overwrite an already occupied programme, simply delete it and then save new content in that position.

Use  to return to navigating programme positions.


Single click  to deactivate the programme table.

PR POSITION	CHANNEL/TP	FREQUENCY	STANDARD	CHBW/SYMBOL R.	POLARITY	
PR	CH / TP	FREQ	TYPE	BW / SR	POL	
0	49 (ITA)	698.00	DVB-T	8M	OFF	DELETE
1	124/13.0E	10992.0	DVB-S	27500	VH	DELETE
2						SAVE
3	OFF	12731.0	DVB-S2	29900	HH	DELETE
4	E8	198.50	DVB-T2	7M	OFF	DELETE



12.3 PROGRAMME RECALL



To recall programme memories, single click  7, then the message "123" will appear on the upper right, and the relative PR field will flash.
It will be possible to select the programme memory number using the numerical keypad, then confirming by pressing .
Press   to decrease or increase the memory selection.

13.0 DATA LOGGER

Press and hold  8 to activate the DATA LOGGER management menu (see par. 8.7), to select from INSTANT, UHF, SATELLITE.
The DATA LOGGER function allows the user to carry out a series of automatic measurements, then saving the relative data in special DG-OHM memories.
After having detected and measured within an instrument memory, you will then later be able to download them onto a PC using special remote control software, downloadable from our website www.unaohm.it From here it will be possible to obtain reports or certifications regarding your television system.

13.1 INSTANT DATA LOGGER








The INSTANT DATA LOGGER allows the user to save all measurements (Power, BER, PVBER, MER etc.) relative to the MUX or TRANSPONDER being analyzed and that is active at that moment. Simply press and hold  8 from the digital screen (press  2), up to a maximum of 50 instant memories mixed between MUX and TRANSPONDERS.
Once the measurements have been saved, the information containing the INSTANT DATA LOGGER position in which measurements have been saved, or the first available, will appear on the middle bottom of the screen.

To read all measurements saved in the INSTANT DATA LOGGER, activate the DATA LOGGER menu (press and hold )₈, select INSTANT and press  under DATA DISPLAY. The table for managing and/or viewing the INSTANT DATA LOGGER will be displayed.

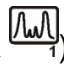13.2 UHF DATA LOGGER

The UHF DATA LOGGER has been designed to measure and save all measurement values (Power, BER, PVBER, MER, etc.) relative to the UHF range, or rather from channel 21 to channel 60, allowing a maximum of 3 acquisitions for the entire UHF frequency range.

To start up full UHF acquisition, proceed as follows:


1. Set the instrument to spectrum analyzer mode (single click .
2. Press and hold  to open the DATA LOGGER menu.
3. Use    to select UHF and press .
4. Select one of the 3 possible acquisitions where data will be saved and press  to start up the measurement cycle from CH21 to CH60.

DATA LOGGER		
Instant		
UHF	START LOGGER	1
Satellite	VIEW DATA	2
		3

To verify measurements made, select VIEW DATA with relative 1,2,3 acquisition. The DATA LOGGER table will be activated, allowing you to view saved data.

POSITION	CHANNEL	STANDARD	MUX POWER					
Nr.	CH	DVB	POW	BER	PVBER	MER	NM	CELL
0	21 (ITA)	T	62.5	1.4e-4	0.0e-8	25.0	5.4	655
1	22 (ITA)	T	70.2	7.4e-6	0.0e-8	34.5	12.3	655
2	23 (ITA)	T	40.8	3.0e-5	0.0e-8	26.2	8.2	5122
3	24 (ITA)	T	55.3	6.4e-3	0.0e-8	23.1	3.5	0
4	25 (ITA)	T	35.2	----	----	---	--	----
5	26 (ITA)	T	38.6	1.2e-2	4.2e-5	19.3		4636







Dashes in place of measurements will appear when the signal is too critical and has not even been locked (UNLOCKED or NO CARR).

Single click  to exit from the DATA LOGGER menu.

13.3 SATELLITE DATA LOGGER

The SATELLITE DATA LOGGER has been designed to measure and save data (Power, BER, PVBER, MER, etc.) relative to the main transponders of the satellite (TPSAT) active in the instrument.

If you should want to activate the DATA LOGGER for another satellite, proceed as per paragraph 6.2.1 and start up acquisition as follows:


1. Set the instrument to spectrum analyzer mode (single click ).
2. Press and hold  to open the DATA LOGGER menu.
3. Use   to select SATELLITE and press .
4. Select one of the 3 possible acquisitions where data will be saved and press  to start up the measurement cycle relative to the active TPSAT transponders.

DATA LOGGER		
Instant		
UHF		
Satellite	START LOGGER	1
	VIEW DATA	2
		3

To verify measurements made, select VIEW DATA with relative 1,2,3 acquisition. The DATA LOGGER table will be activated, allowing you to view saved data.

POSITION	Transponder	STANDARD	TP POWER					
Nr.	TP/FR	DVB	POW	BER	PVBER	MER	NM	CFO
0	124/13.0E	S	62.5	1.4e-4	0.0e-8	9.5	5.4	0.5
1	52/13.0E	S	70.2	7.4e-6	0.0e-8	11.0	7.3	1.2
2	13/13.0E	S2	59.8	3.0e-5	0.0e-8	8.1	3.4	0.5
3	101/13.0E	S2	61.5	--	----	--	--	--
4	54/13.0E	S	52.2	3.4e-2	1.5e-6	6.1	1.3	1.2
5								

Dashes in place of measurements will appear when the signal is too critical and has not even been locked (UNLOCKED or NO CARR).

Single click  to exit from the DATA LOGGER menu.

14.0 FIRMWARE UPDATE VIA PC

To update the DG-OHM field meter, you will have to download and install (only for first update) the UPLOADER software (which will then have to be kept in the PC for future updates) from the website www.unaohm.it DOWNLOAD section. This software will have the task of interfacing between the PC and the DG-OHM.

You will also have to download and install USB drivers for the operating system present on your computer (XP, Vista, Windows 7), so as to have a virtual COM port to use for connection between the devices.

At the next update, you will not need to download previous files but will simply have to download the new firmware version for installation (i.e. dg1.1.upg) in the instrument.

1. USB DRIVER INSTALLATION

- Download the USB driver file.
- Extract the zip file contents and save them on the desktop or in a folder (as with the file uploader).
- Connect the instrument to the PC with a cable.
- The message *New hardware found* will appear on the computer.
- Select the message *Installation for experts* and select the folder with the USB drivers.
- Wait for an alert of automatic recognition of the end.
The new HW is ready for use.

Attention! ALWAYS USE THE SAME USB PORT.

Repeat the drivers procedure whenever using a different port.

If you do not know which COM(xx) port to use, you can verify the type on your computer, from the HARDWARE - DEVICE MANAGER - COM and LPT PORTS control panel.

2. DG-OHM FIRMWARE UPDATE

- Switch off the instrument and connect it to the home network.
- Download the *.upg file for the instrument FROM WEBISTE www.unaohm.it, download section.
- Connect the instrument (switched off) to the PC via USB cable.
- Start up the uploader programme.
- Select the COM port from the uploader programme.
- Switch on the instrument and, after a few seconds, you will see the message *INSTRUMENTS ON LINE*.
- Then, the preliminary version of the firmware *BOOTLOADER VER.x.y* will be detected.
- Select the *.upg downloaded from the website www.unaohm.it.
- Select *.Start.* on the uploader programme.
- To verify proper updating, wait for the message:
 - *Verification Successful:* update completed correctly.
 - *Verification failed:* update not completed correctly.
- Click on *Restart* in the uploader programme to re-start the instrument.
- Close the uploader programme and disconnect the instrument.

If you encounter problems during the upgrade, repeat the operation. If problems persist, contact UNAOHM technical support.

14. WARRANTY

The conditions of warranty are stated in the "GENERAL CONDITIONS OF SALE" available for consultation at www.unaohm.it.

Revision operations are carried out by Technical Support at our facility located at Via G. Di Vittorio, 49 20068 Peschiera Borromeo (Milan), where the units must be sent. Shipment must be carriage unpaid with adequate packing, preferably in the original packing in order to prevent damage during transportation.

In order to take advantage of the warranty a copy of the invoice or fiscal sales receipt relative to the purchase of the instrument must be produced.

The warranty will be considered void in case of tampering, modifications or repairs carried out by unauthorised personnel.

The power batteries and piles are not included in the warranty.

SERVICE NOT COVERED UNDER WARRANTY

We are available for our esteemed customers for the repair of instruments manufactured by us, even after the warranty period, to restore the equipment to its original condition (as long as it is economically convenient).


The availability of mechanical and electronic spare parts is guaranteed for up to 5 years when the circuits are manufactured with discreet components. In the event integrated circuits are used, the supply of replacement parts is ensured while our supplies last and subject to their availability on the global market.

The repair of instruments which are no longer covered under warranty is normally carried out against payment.

Any request for an estimate must be done expressly upon delivery of the instrument. In the event that the estimate is not accepted, the expenses sustained by us for preparation of the same will be charged to the customer (fixed fee).

In order to prevent pointless loss of time it is very important that the equipment is returned with accompanying documents and with its technical data sheet, filled out entirely, available from the support section of the website www.unaohm.it.

RECOMMENDATIONS

It is always advisable in the event of a possible instrument fault to contact the service department toll-free at  to verify the actual presence of a defect with a technician, to avoid the unnecessary sending of instruments, costing time and money to both customers and the company itself.

MISCELLANEOUS

The electrical diagram of the equipment is not provided (not even on request). Any illustrations and

diagrams inserted in the brochure are purely indicative. We reserve the right to make any change which may become necessary without updating the instruction manual.