Legal Notices

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of "VIDEOCON" is prohibited. "VIDEOCON" operates on a policy of continuous development. "VIDEOCON" reserves the right to make changes and improvements to any of the products described in this document without prior notice. Under no circumstances shall "VIDEOCON" be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided as it is. Except as required by applicable law, no warranties of any kind, either deselected or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. "VIDEOCON" reserves the right to revise this document or withdraw it at any time without prior notice. The availability of particular products may vary by region. Please check with "VIDEOCON" Executive.

1

control. Without limiting the generality of this

disclaimer, "VIDEOCON" expressly disclaims

any responsibility or liability for any interruption

or suspension of any content or service made

liable for customer service related to the content

and services. Any question or request for service

relating to the content or services should be

made directly to the respective content and

Your phone meets the SAR requirements

for exposure to radio waves, recommended

by Govt. of India. Your mobile phone is a radio

transmitter and receiver. It is designed and

manufactured so as not to exceed the limits

for exposure to radio-frequency (RF) energy,

as recommended by the Govt. of India. These

limits are part of comprehensive guidelines

and establish permitted levels of RF energy

for the general population. The limits include a

substantial safety margin designed to ensure

the safety of all persons, regardless of age and

The exposure standard for mobile phones

· In idle mode, enter the phone number

to call and then press Dial Key1/2

selecting the desired SIM card to initiate a

• Press Dial Key1/2 to answer an

• In the idle mode, press Dial Key 2 once

to view the Call History of both the SIM

• Press and hold to Switch On or Off the

· Cancel active Menu and return to the idle

In menu, press OK key to select the

• In idle mode, use the 0-9 keys to enter a

functions that display in the lower left of the

employs a unit of measurement known as

SAR (Specific Absorption Rate). The SAR limit 7

"VIDEOCON" is neither responsible nor

available through this device.

service providers

SAR

health

Dial Kev1/2

incoming call

· End or reject calls

cards

Power/ End Key

device

screen

OK key

Keypad

display screen

expressly disclaims any implied warranties, including but not limited to, warranties of merchantability or fitness for a particular purpose

User's Manual

V1417

"VIDEOCON" does not guarantee the accuracy, validity, timeliness, legality, or completeness of any content or service made available through this device and under no circumstances, including negligence, shall "VIDEOCON" be liable, whether in contract or tort, for any direct, indirect, incidental, special or consequential damages, attorney fees, expenses, or any other damages arising out of, or in connection with, any information contained in, or as a result of the use of any content or service by you or any third party, even if advised of the possibility of such damages." Third party services may be terminated or interrupted at any time, and "VIDEOCON" makes no representation or warranty that any content or service will remain available for any period of time.

Videocon reserves the right, in its sole discretion to change/modify/update the software (including without limitation, the availability of any feature or content) of the phone at any time without prior notice.

Content and services are transmitted by third parties by means of networks and transmission facilities over which "VIDEOCON" has no

Know your device Phone Lavout



Key Layout

Left soft key

In idle mode, press Left soft key to access the main Menu. When navigating the menu press OK (Left soft key) to select the desired option

Right soft key In idle mode, press right soft key to access

Software Update Information

To enhance device performance, we recommend that you get in touch with the nearest "VIDEOCON" Authorized Service Center. regarding the availability of updated firmware for vour device. Please see the enclosed Service Center Directory for the Authorized Service Center nearest to your location.

Safety Precautions

Please comply with these precautions to avoid putting yourself or other around you in a dangerous or illegal situation, and ensure peak performance of your device.

Icons	Description
	ROAD SAFETY Do not use your device while driving.
	INTERFERENCE All wireless devices could affect your device performance.
	HOSPITALS Switch off the device near hospitals and medical equipment.
\triangle	AIRCRAFT Switch off the device in aircraft. Wireless devices can cause interference in aircraft.

2

recommended by the Govt. Of India is 1.6 Watt/ kg taken over a volume containing a mass of 1 gram of tissue. The highest SAR value for V1417 is 1.28W/Kg. Press *#07# to check the SAR value on your phone display



Getting Started

Assembling the device

3

2.If the battery is in the compartment, lift and pull it out in the direction of the arrow (shown below)

1. Gently hold the back cover of the device



3 Insert the SIM cards into their respective slots. Make sure that the contact areas on the cards are facing the connectors on the device as shown below



To switch on the phone, press and hold

· In idle mode, press Left Soft key to

access various device functions, and

settings required for configuring the

• Use the navigation keys to scroll to menu.

• Press the **OK** key, to confirm the

· Press Back to move up one level. Press End key to return to idle mode.

To make a call using the keypad, enter the

phone number including the area code. Press

Delete to erase a digit, or press and hold

the Power/ End key. To switch off the phone,

press and hold the Power/End key again.

Switch on or off the device

To access your device menu:

highlighted option

Basic Operations

Accessing menu

device.

Make a Call

Using Keypad

numbers.

Multimedia

Camera

received calls.

• Press "#" key to toggle between Silent,

Meeting and General user profiles.

Notification (indicator) icons provide information such as battery level, network signal

lcons	Description	
	Battery level indicator	
iimil	Network signal strength	
X	Unread SMS	
合	Indoor profile is On	
盘	Outdoor profile is On	
\$\$	Meeting profile is On	

REFUELLING Switch off the device when refueling. Do not use the device at refueling point. BLASTING AREAS Switch off the device near blasting areas. BLASTING AREAS USE SENSIBLY Use in normal condition. Do not touch the antenna unnecessarily. OUALIFIED SERVICE ۶ Only qualified personnel may install o epair phone BATTERIES Use only approved batteries. Do not

connect incompatible products. WATER-RESISTANCE ••• Your device is not water-resistant. Keep it

Important safety measures

Your phone is designed to comply with all the necessary precautions and requirements and should be treated with care. The suggested safety measures will help you to use this product without causing you any health hazard.

- · When buying a cell phone, make sure it has a low SAR (Specific Absorption Rate). Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter. · Either keep calls short or send a SMS
- instead. This advice applies especially to children adolescents and pregnant women.
- · Whenever possible, only use cell phone when the signal quality is good. · People having active medical implants should keep their cell phone at least 15cm away from the implant. • The FCC advice: "Many people mistakenly assume that using a cell phone with a lower reported SAR value necessarily decreases a user's exposure to RF
- emissions, or is somehow "safer" than using a cell phone with a high SAR value While SAR values are an important tool in judging the maximum possible exposure to RF energy from a particular model of 4

4.Insert memory card. Take compatible micro SD card, and place it into its respective slot



5. Align the contacts of battery with corresponding connectors in the battery compartment, and then replace the back cover

Charge the battery

To charge the device battery: 1.Take the USB cable from the device packaging, and attach it to power adapter. Now connect the power adapter into a standard AC wall outlet. 2.Connect the micro USB connector on the cable into its designated port on the bottom of the device. The battery level indicator on the device screen will start scrolling horizontally to indicate that the battery is being charged.

Note: Exercise extreme caution while connecting the charger to the device. The connectors on the 10

Press Dial Key1/2 by selecting desired SIM card, which you want to use to initiate the call.

Using Phonebook

Press Right soft key in the idle mode to access Contacts or press Menu-> Phonebook to view the contacts. Use the up and down navigation keys to select the contact you wish to call, and press Dial Key1/2 by selecting desired SIM card, which you want to use to initiate the call

Using the Call History

Press Menu -> Call History and retrieve a number from the recently dialed, missed, or received lists, and then press Dial Key1/2 by selecting desired SIM card, which you want to use to initiate the call

Using Headset

Use the headset from the product packaging and connect it to its designated slot at the bottom of the device. The headset acts as the antenna for your device and helps to detect radio signals from nearby stations.

cell phone, a single SAR value does not provide sufficient information about the amount of RF exposure under typical usage conditions to reliably compare individual cell phone models.

• World Health Organization (WHO) Advice: Organizations such as the World Health Organization and the US Food and Drug Administration have stated that if people are concerned and want to reduce their exposure they could use a hands-free device to keep the phone away from the head and body during phone calls, or reduce the amount of time spent on the phone.

Disclaimer

Some applications accessible through your mobile belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Those applications are provided solely for your personal noncommercial use. You may not use any application in a manner that has not been authorized by the application owner or provider.

"Third party content and services are provided "as is." "VIDEOCON" does not warrant content or services so provided, either expressly or impliedly, for any purpose. "VIDEOCON"

5

charger and on the phone may get damaged if too much force is applied while connecting them.

3.If the battery is completely discharged, it may take a while before the on-screen charging indicator starts scrolling. 4.When the battery is fully charged, the battery level indicator on the device screen will stop scrolling. 5. Once the charging is complete, disconnect

the charger from the device and then from the wall outlet.

Battery Use

- To extend the battery life of your device: · Use the standard wall charger to charge the battery for the first time.
- · During the first 3-4 charge cycles, charge the battery until the battery indicator on
- the display stops scrolling · Avoid partial charging. Also, wait for the
- battery to discharge completely before charging it again
- Charge the battery using the USB cable only if the recommended wall charger isn't
- readily available.
- · Avoid keeping the device on vibrate mode.

11

Soft key to Silent the ringtone. Press Power/End key to reject or cancel the call

Working with Call Options During an active call, press H-Free (Right Soft key) to put the call on loudspeaker, or press H-Held again to use the earpiece of the phone. Select Options (Left Soft key) to view the following options • Add new call: To add a new caller in the

- conversation · Hold: Select Hold to put active call on
- Start recording: To start recording of
- the call.
- Mute: Turn on/off the microphone during an active call
- Adjust volume: To adjust volume of the
- · Contacts: During an active call, you can
- access the contacts
- · Call History: View the dialed, received, missed, and rejected calls.
- Messages: Allows you to view the

8

its corresponding menu. • You can operate **Torch** from number key 'O'. Press and hold 'O' to switch on the torch and press and hold it again to turn off the torch.

Notification Icons strength, current date & time and so forth.

Contacts

Use to perform functions that display in the lower right of the display screen. For example, it works as a key to navigate the previous screen.

12

To write a text message:

screen.

number to call. • In idle mode, press and hold "1" key to enter SIM1/SIM2 Voice mail • In the application menu, select the corresponding number to quickly access

13

8 Silent profile is On ര Earphone inserted _ Alarm is activated 14

- Delete to erase the complete number For international calls, add the "+"character that replaces the international access code, and enter the country code, area code (omit the leading 0, if necessary), and phone number.
 - 15

· Dialed Calls: List of the recently dialed

· Received Calls: Displays the list of latest

· Missed Calls: Calls you were unable to

answer before the termination of ringing.

• Rejected Calls: Displays the list of calls

Press the ok key to access other

options: such as edit, details, call, save,

edit before call, write message, add to

Use the in-built camera to take and save

which you have blacklisted.

blacklist, delete, delete all, Mark,

Answer calls

functions:

To answer an incoming call, press the Dial Key 1/2 or Left soft key (Answer). To put phone's ringtone on silent mode, press Right

16

image. Before taking a picture, press Options

(Left soft key) to view and use other camera

• Video Mode: To switch for video recording.

• Effect: To select different effects to want

· Settings: This option include Size,

Press Menu→Multimedia→Video

To record a video, position the camera

Recorder, to launch the Video recorder

towards the moving object, and select the OK

key (Record). The video that you record will

he of 3GP and AVI file formats. Note that this

To stop recording, press the Stop (Left

soft key), the recorded videos will be saved

automatically in the selected storage space.

To watch the recorded videos, select Video

player. Press Options (Left Soft Key) to

· View video directory: Allows you to

view the recorded videos on the phone.

22

· Camera mode: To switch to camera

feature is memory card dependent.

perform additional functions.

mode

Quality, Banding, Shutter sound,

to add to picture.

Video Recorder

application.

Auto save and Storage

messages stored in your phone.

Compose and send a text message Your device supports text messages beyond the limit for a single message.

- 17
- · Effect: To select different effects to want to add to picture.
- Quality, Banding, Shutter sound, Auto save and Storage
- Audio Player

device for entertainment purpose.

Press Menu → Multimedia → Audio Player, to launch the audio player application. to the default plavlist.

The supported file formats are MIDI, MP3. play mode and so forth.

- To play music through audio player:
- · Press OK Key to play or pause the audio.
- Press the Left and Right Navigation keys to switch the Previous and Next
- keys to rewind and forward the song
- Press "#" and "*" key to increase and
 - 23

- · Settings: This option includes Size,

Your phone provides a friendly audio player

The device automatically searches the songs or music stored in the memory card and adds them

AMR and WAV. After refreshing the list, press **Options** to perform additional functions, such as music list, music mark, add, set as ringtone.

- songs respectively.
- · Long press Left and Right navigation
- respectively.

- 1 Press Menu→Message→Write Message, to display the Write message 2.In the Write message screen, type the
- message text. Press Options -> Insert template to use built-in template. 3 Press Options→Add contact info to send contact details.

Note: While writing a text message, press '#' key to togale the letter to Hindi and English alphabet and number.

- 4 Press Options->Send and manually enter the phone number or select Phonebook to add a contact from the device **phonebook**. Scroll to the desired contact and press Select (OK key) and then press OK (Left soft key) to select the contact number. Select Send to send the message after selecting the desired SIM card. 5. Press Back to return to the Write
- message screen, and modify the message Press Send and select SIM1 or SIM2 to send the message.

Lock the keypad

- The device keypad is set to lock automatically
 - 18

after configurable time delay when the device is in the idle mode and no function has been used. To unlock the keypad manually, press Left soft key followed by Lock/Unlock Key (*). Similarly, to lock the keypad, press Left Soft Key followed by Lock/Unlock Key (*) in succession.

Press Menu -> Settings -> Security Settings→Auto Keypad Lock, Select Off to disable automatically locking of the keypad, or set the duration (in seconds/min) after which the keypad is locked automatically.

Note: When the keypad is locked, you can press Dial Key1/2s to answer an incoming

V-Connect

Internet

Internet service provides all the basic services of a computer based web browser but is simplified to operate within the restrictions of a mobile phone. Enter the URL of the website or webpage you want to visit. Internet service has the following options:

• Bookmarks: Bookmarks enable you to mark a place in an electronic document or a pointer (primarily to an internet URL) in 19

- a browser.
- · History: the viewed will be saved here. · Offline pages: List of recently visited websites. Press **options** to access the following options:
- Homepage: Allows you to open the default URL on the phone. This will enable you to go to the same page every time you access the homepage · Settings: set about the internet service Such as: Clear logs, set font, set homepage, etc. • Exit: exit.

STK

Short for SIM Toolkit, it is a standard for providing value added services and e-commerce over the GSM networks, using the phone to make the necessary transactions. Services depend on your network service provider.

Call History

On the idle screen, press Menu→Call History The Call History menu comprises following

options • ALL: To show all calls

20

- previous screen.

- pictures. Select Menu→ Multimedia→ Camera, to launch the camera function
- Alternatively, press the Up navigation key in the idle mode to launch the Camera. To take a picture, focus the camera towards the object
- you wish to click, and then press the **OK key**. Press Back (Right Soft Key) to return to the
- Note: Do not move your hand until the captured photo displays on the screen as a still

21

decrease the volume respectively Press Up navigation key to stop the audio player

Video Player Play videos stored on the micro SD card. If you are a first-time user. let the device automatically search for videos stored either on the Video folder of memory card and adds them to the default playlist. With the video player, you can watch videos in 3GP and MP4 formats. You can also select **Options** to perform additional functions: • Play List: Select Play list to view and directly play the selected record. While watching a selected video: Press OK key to pause and resume the video. Press Left and Right Navigation keys to switch between the videos. Long press Left and Right navigation keys to rewind and forward the video respectively. Press "*" to increase volume and "#" to decrease volume. Press options to view following options • Open: To open the file you want. · FullScreen play: Select it to watch the

24

video in full screen

File Manager

File Manager comprises two tabs phone and memory card. With Left and Right navigation keys you can access files and folders available in phone or memory card.

- With navigation key, you can select phone or memory card, and then press **Option** to view the additional options:
- New folder: You can create a new folder in memory card.
- · Delete: Select to delete the selected folder. Details: Select to view the details of the
- selected folder. • Edit: Select to rename or copy the selected folder.
- Search: Select search, and then enter the
- name of the folder that you want to search. · Sort: Select sort to arrange the memory
- card folders by name, date, size, and type.
- Mark: You can mark and unmark the selected folder or all the folders available
- in the Phone or memory card. • More: Select to view the capacity of phone memory, memory card and also

provide you the option to format the memory card and phone memory.

30

Note: Delete option is only available for memory card

keypad light time as 5 secs, 10 secs, 20 secs, night mode, or off

Security Settings

Adjust settings to secure your device and data:

• PIN: PIN code is the personal identification number for SIM card. By default the initial password set by network operator is 0000. If activated the power-on PIN code, then you have to enter PIN password each time you switch on the device. You can modify the PIN code to prevent your SIM card being used by others. Select the desired SIM type and have the following options: • On– You have to enter PIN code each time you switch on the device. • Modify – You have to activate PIN code before modifying it. Off – You have to enter the correct PIN code before deactivating it. Modify PIN2: PIN2 code is the personal

identification code required for certain functions such as set fixed number, set · Privacy: It allows you to secure your phone functions to avoid any unauthorized access. You can select the functions on which you want to activate the feature,

 Adjust Brightness: To adjust brightness of the video

Shuffle: Select On or Off, which will allow you to play all the videos in the order. Details: Allows you to view the details of recorded videos, such as title, date, time, resolution, duration and size of the video. • Setting reset: To reset the default settings of video payer.

Image Viewer To view photos stored on your device, press Menu→Multimedia→Image viewer. The Image viewer stores all the pictures which are available in Photos folder of memory card. The available options are change folder, send,

slide play, delete, set image as wallpaper,

Sound Recorder With audio recorder, you can record voice conversations and save the voice recordings as a sound clip, and play the sound clip. Sound recorder supports the WAV file format. Select Option for other options: · Start Recording: Start recording sound. · Record File List: View the list of recorded sounds. • Storage: You can save the recorded conversation to phone memory or micro 25

Settings

rename and so forth.

Use Settings to customize the device settings, such as phone settings, display settings, call settings, network settings, security settings and other options, which can be accessed by navigation keys to secure the data you have stored on the device. Press Menu->Settings to display the

settings menu. Dual SIM Settings

You have following options listed under Dual SIM:

• Standby mode: You can select the standby mode for SIM card, either to have only SIM1 enable, only SIM2 enable, or to have dual SIM dual standby. • Flight Mode: Disables all RF based communication for both SIM1 and SIM2. However, you can use other features/ functions of the phone, such as audio player, camera, games, and alarm. Reply by original SIM - You can select the function to reply from current SIM card for phone call and SMS. · Set SIM name: You can change the

name of SIM1/SIM2 card.

31

such as Call History, Messages, Camera, Phonebook, File Manager, Calendar, and Mass Storage. The default password in "0000". Under Settings, input the password to access the available options, which you want to lock. You can also change the password, under Change password by entering the old password. · Auto Keypad Lock: Enable Auto keypad lock to have the devices disable the keypad after staying idle for some time. This has to be done to prevent your device against accidental dialing. For more information on this feature, refer to the "Lock the keypad" section mentioned earlier in this document • Power-On Password: You have to set the power on password. Once you activate this function, you have to enter the password each time you switch the device on.

 Blacklist: To add calls to blacklist · Whitelist: To add calls to whitelist

User Profiles

37

deadline date to select the end date

SD card File format: To select between AMR and WAV

FM Radio

The FM radio application turns the mobile phone into a portable FM radio device. The quality of the radio broadcast depends on the coverage of the radio station in that particular

Use the headset from the product packaging and connect it to the device to operate FM radio. The headset acts as the antenna for your device that helps to detect radio signals from nearby

Listening to the FM radio To listen to the FM radio: 1. The headset acts as an antenna and helps receive radio broadcast signals. To operate FM radio via headset, you can connect the headset into the designated headset jack of your device. 2. In idle mode, press Menu→Multimedia →FM radio or you can use navigation key to directly launch the FM radio application from smart style screen of the phone. 3.Turn on the FM radio. If you turn on the FM radio for the first time, confirm the 26

Call Settings Use to customize the call settings for both the SIM cards. The available options for call settings are:

Network Settings

Network selection provides you the option to select a desired network and addition of a new network to the network list for both the SIM cards. Under network selection, the available options are: • Auto Select: Let the device to

automatically select the network for the selected SIM card. · Manual Select: You can manually select

the network for the selected SIM card

Call Divert

This feature allows you to divert incoming calls from SIM1/2 to another phone number The options available are unconditional transfer, divert if busy, divert if no answer options, divert if unreachable, and cancel all diverts. You can select the available option and activate off and also check the query status for the call divert.

Call Barring Use this function to restrict the calls you make or receive with your device. Under call barring, the options are all outgoing calls, all

32

your phone and press **Options**→Customize to customize the settings of the current profile, such as ring settings, adjust volume, call alert, message alert, alarm & calendar remind, key tone and so forth for your device to different types of call environments. You can also Rename the desired profile.

Connections Contact the network operator to obtain the following network services: ◆ Network account: You can manage

network account through this function. • GPRS Service: You can select to turn on/off this function. + Data connection settings: You can

select connect when needed or always

Phonebook

connect.

Save and update contact information, such as name and phone number of your contacts You can set caller image and a personalized one to the contact and organize you

Press Menu→Phonebook to open the

38

automatic tuning for channels. 4.Use the left and right navigation keys to change the frequency of the channels. 5.Use "#"to increase the volume, and "*" to decrease the volume. 6.Press OK key to turn on or off the FM while playing FM Radio.

Games

Messages

voice message.

provider supports.

folder

Advanced

Press Menu->Games, to play game.

Push Box game, you can start new game, resume

a game, select level of the game among 1 to 15.

or select help to know more about the game.

The available game is Push Box. Under

In Messages, you can send and receive

SMS, MMS and Broadcast message and set up

From the idle screen, press Menu→

Messages to view the available functions of

messaging. Message functions are available

depending on network services that your service

The various options for messages are:

mentioned earlier in the document.

in the Outbox folder.

Inbox: Use to view received messages

· Outbox: If the device is unable to

transmit a message, it is stored temporarily

• Drafts: While writing a message, press

28

then the phone will stop the auto call recording

function. You need to ensure to take back-up

of earlier conversations periodically on a PC so

• Call time minute reminder- You will

get a reminder at the 50th second of every

minute during your call, so that you may

end the call timely to save the phone fare

· Vibration When Connected- Provide

you a vibration alert whenever the voice

· Reject By SMS - You can select whether

to reply an SMS after rejecting a call

and also you can select any-key answer

option, so that you can receive a call by

Auto Redial – You can select to redial

You have following options listed under

• Time And Date: Lets you set time/date,

time format, and date display type for your

Language settings: Select the

34

know more about write SMS please refer to

"Compose and send a text message"

You can make a voice call by SIM1/2 card.

Delete the selected contacts. You can

choose to delete contacts from the selected SIM

section mentioned earlier in this document.

the number automatically when a call is

that memory card is kept sufficiently free.

You may select activate or off.

call connected.

pressing any key.

not connected.

Phone Settings

device.

phone settings:

Option→Save to keep it in the **Drafts**

· Write Message: Allows you to compose

and send text messages. To know more

about write message refer to "Compose

and send a text message" section

Note: You can change the channels of the radio with numeric keypad of the device.

FM radio Options In FM radio, press Options to access the following options: · Auto Search And Save: Your device will search and save channels automatically. Channel List: View and edit your favorite channels, also give name to the channels. • Save: You can save the channel's name. · Manual Search: Manually search the channel frequency. • Open Speaker: You can turn on or off the speaker. • Background Play: You can play FM radio in the background while using other applications.

27

incoming calls, incoming calls when roaming international calling, Dial when international roaming, and so forth. In order to activate this service, you need to check the availability with your network service provider. While changing the barring password, you may required to put the old password.

Call Waiting

You can activate or deactivate this function to answer an incoming call in between an existing call. Under Query status, you can view the current activation or deactivation status. Hide ID

Enables to set the caller ID status of the device. It is a network based service. You can

select the option as hide ID, display own ID, and display ID by network.

Auto Call Recording Select On or Off to record the incoming calls automatically. The recorded phone conversations will be saved in the Audio folder of memory card. If the number is saved in the contacts list, then phone will create the folder with the saved name else it will save with the phone number. All the future conversations will be saved in the same folder. This feature is memory card dependent Please note if the memory card storage is full,

33

access all contacts. The **Phonebook** comprises following tabs such as All, Unclassified, SIM1, SIM2, Family, Friends, Business, and so forth. Use Left/Right navigation keys to access the following tabs. Press **Option** to view the following options:

New

To add a new contact: 1.Press **Menu→Contacts**, and then press **Option** → **New** to add a new contact. 2. Choose the desired storage location such as SIM1/SIM2 or phone, and then select Name to enter the **Name** of the contact. 3.Select **Mobile** to enter the number, and then press **OK** to save the contact.

Note: If you choose the storage location other than SIM1 or SIM2, then you can enter home number e-mail, and also assign image, ringtone, group with that number

of the contact in the name screen. Use the

Search Search a contact just by entering the name

Call

Delete

cards.

Mark

Lets you mark a single or several contact numbers to send a text message or to delete the selected contacts from phonebook.

Copy

Use Copy function to copy the selected contact to phone memory, to SIM 1/2, and to memory card.

Advanced

· Memory Status: View the used and available memory for storing contacts.

via which you receive messages on various topics from your service provider, can set the receive mode to ON/OFF. This service also provides location update, and messages promoting operator products or services. When you receive such a message Broadcast messages are flashed on the device screen, but can be viewed later from the Broadcast message folder. If Broadcast Message Receive mode is on, it will also. To activate Broadcast message Press **Options** to perform additional functions: • Templates: Use built-in message

Sentbox: Use to view the sent messages

• Broadcast Message: A network service,

templates to compose message quickly. Templates stores 5 preloaded and 5 editable text messages for ready usage. Settings: View SIM 1/2 message center check message validity period, view status report, select preferred options to save sent messages, and view preferred storage location for storing messages for SMS and broadcast message. • Message Capacity: View the used

and available memory of SIM1/SIM2 and phone memory.

29

language for the device as English and Hindi only.

• Shortcut settings: To set shortcuts by urself.

· Scheduled Power On/Off: Lets you set a particular time on the phone when the phone should power on/off itself.

 Restore Factory Settings: By selecting this option will ask you to enter the password to restore the phone to factory settings. The default password is set as 0000.

Display Settings

Under display, you can set a host of different characteristics for the device, such as:

• Wallpaper Settings: You can set default, wallpaper 1, wallpaper 2, and Wallpaper 3 or select more wallpaper from your memory card on the main screen of your device

• Idle Display Settings: Select time & date and name of the service provider to be displayed on the device screen.

· Contrast: Set the contrast settings of the display. • **Backlight:** Select time of the backlight as

5secs, 10 secs, 15 secs, 20 secs, 30 secs,

or always on for the device. · Keypad Backlight Time: Select the 35

set the alarm to ring at a specific date and time. Press On/Off (Left Soft Key) to activate and deactivate the alarm settings. Press Edit to access the following sub-options:

• **Message:** Enter name of the Alarm. Press **Edit** to modify the name of the Alarm. • **Time:** Set the time at which you wish to

ring the alarm by using 0-9 Number keys. • **Ringtone:** Display the ring of the alarm.

· Repeat Mode: You can repeat the alarm once, daily, and weekly.

You can communicate with other compatible

device through wireless Bluetooth connection.

Compatible devices may include Mobile Phones,

Personal Computers, and Bluetooth headsets.

Through Bluetooth, you can send or receive

To access this menu, press Menu→

· Bluetooth On: Select to activate the

Organizer→ **Bluetooth**. The available

pictures, videos or music files.

Bluetooth

options are:

Bluetooth.

36

o access user profiles, p Settings→ User Profiles. The available profiles are General, Silent, Meeting, Indoor, and Outdoor. Press Options

for the task.

contacts into caller groups to send group messages →Activated to select the desired profile for contacts or press Right soft key to directly

press the Dial Key1/2 to initiate a call to this contact. Write SMS Compose and send text messages. To 39

Organizer Alarm

Press Menu→Organizer→Alarm, to 40

Bluetooth Visibility: Set the Visibilit of the Bluetooth · Paired Device: It shows a list of devices which have been paired with your phone before.

41

- · Device Name: You can view or edit the name of the Bluetooth device.
- Bluetooth file storage: To select the storage for file transfer.

Note: Bluetooth needs to be activated to perform all the above mentioned functions.

Calendar

You can use the calendar to keep track of important meetings. To access calendar press Menu→Organizer→Calendar. You can select year, month and date using navigation keys. On a selected date you can press left soft key to view the available options · Add New Schedule: The options

- available for add task are: • Subject - You can add subject for the task. • Date - Enter date for the selected task Time – Enter time for the selected task. Ringtone - You can add the ringtone for the selected task. • Type – You can select once, every day, every week, every month, every year and no reminding options for add
- task • Deadline - You can also put the
 - 42

· View Schedules: Display date and time of the task. Press Options to view, edit, add task, delete, and delete all options for the task. • All Schedules: View date and time for all stored tasks. • Clear Today's Task: Remove the tasks that are added in the calendar today · Clear All: You can remove all the tasks from the calendar • Go To Date: Enter a date, and then select **OK** to go to a specific date for entry/edit and viewing of task for that date. • Weekly: Select it to view the calendar by Weekly and Monthly. • Daily: Select to view the calendar by

daily. Calculator

To access calculator, press ${\sf Menu} o$ Organizer→Calculator

Your phone comes with a built-in conversion application that you can use to perform calculations on a daily basis, such as addition, subtraction division and multiplication

To make a calculation:

1.Enter the first number of the calculation.

43

Select clear to delete the last digit entered. 2.Select a function, '+' (Up navigation key), '+' (Right navigation key), '-' (Down navigation key) or 'x' (left navigation key). 3. Enter the second number of the calculation. and select **OK** to get the result.

Options

Allows you to view the memory functions. M+: Press Up navigation key twice and then press OK key. This adds the value to the value stored in memory. By default it is zero. M-: Press **Down** navigation key twice and then press **OK** key. This subtracts the value from the value stored in memory. MR (Memory Recall): Press Right navigation key twice and then pres OK key. This recalls the value from the memory MC (Memory Clear): Press Left navigation key twice and then press OK key. This clears the value from the memory Clear: Allows you to clear all the memory functions. World Clock World clock can be used to know the time

in various cities across the world. You can see a world map and immediate time in those cities using world clock. To see the current time in any city of the

44

World, press Menu→Organizer→World **Clock**, and select the city name using the

navigation keys. Torch Switch on or off the device Torch that is available at the top of the device. Or, long press 'o' to switch on the torch and again long press 'o' to switch off the torch.