




ELITE
INDOOR UNIT
Screen options : 3.5” – 4.3” – 5.6”

USER’S MANUAL

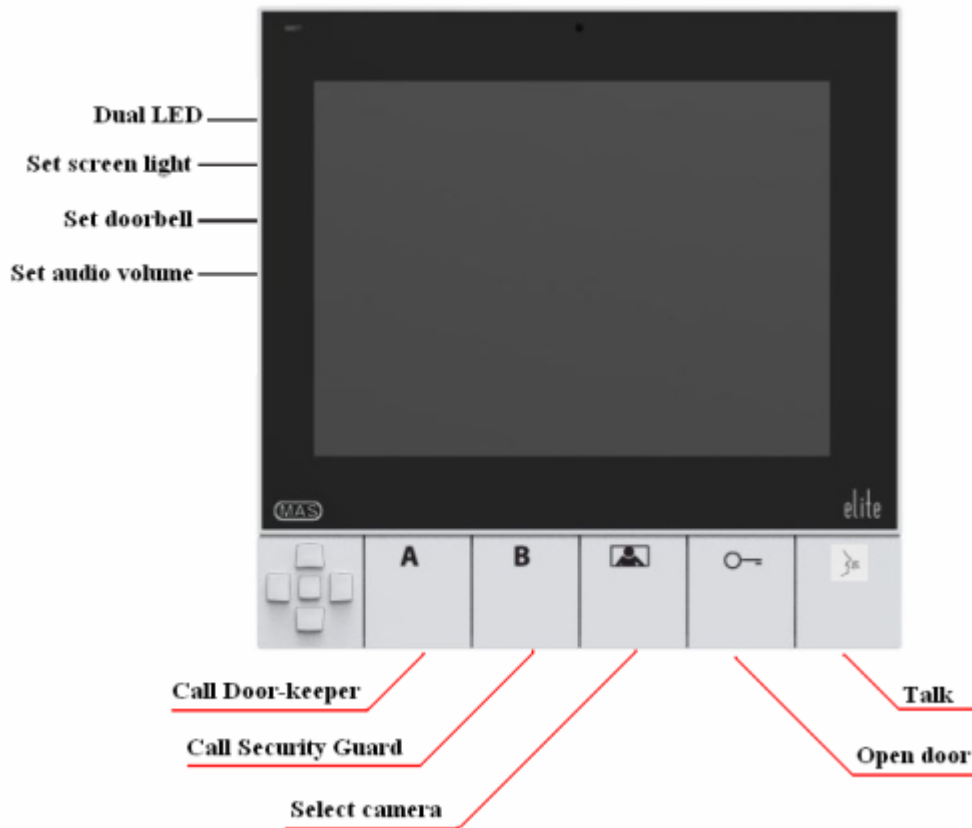

SECURITY INSTRUCTIONS

- * Do not open the device.
- * Keep the device free from impacts.
- * Avoid any contact with water.
- * Do not use the device in dense moisture, dusty and dirty places.
- * Use dry clean fabric for cleaning, do never clean with alcohol, thinner or corrosive liquids.
- * Do not dismount the device unless it is necessary

DUAL WARNING LEDs (Green and Red)

When you are making a call or when the screen is ON, the green LED is ON. If you do not answer an incoming call, the red LED is blinking.

OPEN DOOR-LOCK

You can open the door lock when you are in communication with outdoor panel or by pressing .

CALL DOOR-KEEPER or SECURITY GUARD

After turning ON the screen, you can call the Door-keeper or Security Guard by pressing A or B button. They can see the block and apartment numbers of incoming calls on their telephones (if there is a LCD screen on the telephone).

TURN ON THE SCREEN / SELECT CAMERA

You can turn ON the screen and have a view from Outdoor Panel by pressing . If there are more than one camera in the system, you can select cameras by pressing this button turn by turn.

SELECT HANDSFREE or PUSH-TO-TALK modes

To switch between “**Handsfree**” and “**Push-to-talk**” modes, you only need to press simultaneously  and  buttons during 5 seconds. In **Handsfree** mode, you can talk and listen without touching the unit. In “**Push-to-talk**” mode, you have to push on  button to talk and release this button to listen. Every time you switch from one mode to the other, a LED starts to blink.

Push-to-talk

At an incoming call from the outdoor panel or Security Guard, the screen turns ON and stays ON during 45 seconds. You can talk by pushing and holding  button and you can listen by releasing this button. Talk duration is 60 seconds and listen duration is 15 seconds. If you are not at home or do not answer an incoming call for any reason, a LED is blinking. You can turn it OFF by pressing any button.

Handsfree

At an incoming call from the outdoor panel or Security Guard, the screen turns ON and stays ON during 45 seconds. You can talk and listen by pressing once  button. Communication duration is 60 seconds and if you want to end it earlier, you only press again  button. If you are not at home or do not answer an incoming call for any reason, a LED is blinking. You can turn it OFF by pressing any button.

SCREEN LIGHT, COLOR AND DOORBELL SETTINGS

The screen light level is preset at factory. You can change the light, color and volume settings by means of buttons at left side of the unit.

ANSWER INCOMING CALL

1. At an incoming call from the Door-keeper or Security Guard, a pre-defined melody rings and the screen is automatically turned ON and if they have a camera, you automatically get their image (and this image stays 60 seconds on your screen). You can answer or not this call.
2. At an incoming call from the outdoor panel, you automatically get the panel image (and this image stays 60 seconds on your screen). If you wish to answer, you only need to press  button, otherwise do not press any button.
3. If you hear the doorbell of your apartment, we do not recommend you to open the door without looking through the peephole. We also recommend you to put an extra camera in front of your apartment door.

CHANGE DOORBELL MELODY

You can select 3 melodies out of 10 for different communication points (Door-keeper, Security Guard, Outdoor panel, Apartment door). You can then understand where the visitor is whenever your doorbell is ringing.

To change doorbell melody, enter the related menu by pressing simultaneously  and (A) buttons during 10 seconds. When you hear a beep, browse available melodies by pressing (A) button, when you like a melody, follow below steps :

Change outdoor panel bell

Press once  button to select it, A button to save it and B button to exit the menu.

Change apartment doorbell

Press twice  button to select it, A button to save it and B button to exit the menu.

Change Security Guard bell

Press three times  button to select it, A button to save it and B button to exit the menu.

Change Door-keeper bell

Press once four times  button to select it, A button to save it and B button to exit the menu.

BACK TO FACTORY SETTINGS

Pressing simultaneously  and (A) buttons during 10 seconds, you hear a beep and go back to factory settings.

OPTIONAL FEATURES

Take video and still image

3 seconds after the doorbell has rung, the system starts to record. When you see a blinking LED, you understand that you have been called while you were out. As soon as you are back home, you can enter memory mode and see the image of the visitor together with hour and date information. You can also transfer these images to a flash memory.