

 LAKELAND

USER MANUAL



The Lakeland Guarantee....

is probably the simplest guarantee in the world!
If you are not satisfied at any time, you receive your money back!
This is our promise.

Lakeland

Alexandra Buildings, Windermere, Cumbria LA23 1BQ
Tel: 015394 88100 Web: www.lakeland.co.uk

HANDY STEAMER

Model: 22594

Helpline No: 015394 88100

INTRODUCTION

Thank you for choosing the Lakeland Handy Steamer. Harnessing the cleansing and sanitising power of steam, this hand-held cleaner gives pristine results around the home – dissolving dirt and grease on tiles, taps, stove tops, oven racks and doors, windows, carpets, rugs, upholstery and more – even cars and alloy wheels. Not a drop of detergent or cleaning product is needed; just fill from the tap and choose from a range of accessories designed to leave every nook and cranny hygienically clean. Please take a few moments to read these instructions before using the steamer for the first time, and keep them in a safe place for future reference.



FEATURES

1. Pilot light
2. Nozzle tip
3. Steam trigger
4. Water tank release button
5. Water tank (300ml)

Operating voltage: 220-240V~50Hz

Power: 1450W

ACCESSORIES

6. Upholstery brush – for cleaning fabric upholstery, curtains in situ, carpets and rugs, or freshening up clothes on hangers (not suitable for chenille, velvet, leather or Dralon)
7. Window squeegee
8. Small soft-bristled brush – for kitchen and bathroom
9. Jet nozzle concentrator tool – a concentrated jet of steam for tricky corners, tile grouting etc
10. Small hard-bristled brush – for kitchen and bathroom
11. Small brass wire brush – for oven and barbecue racks
12. Drawstring storage bag

IMPORTANT SAFEGUARDS

When using this steamer, please follow these basic safety precautions to avoid the risk of burns, injury or electric shock.

1. Please read all instructions before using, and keep in a safe place.
2. Make sure your electricity supply matches the voltage shown on the appliance.
3. The steamer is for household use only. It is not suitable for commercial use, or for use outdoors. It must only be used for its intended purpose.
4. Steam is extremely HOT and will burn skin if the steamer is used incorrectly. Never point the steamer at people or pets. Keep your hands, hair, clothing, face and body at a safe distance from the steam.
5. The steamer is not a toy. Keep it well away from children and pets.
6. Never use the steamer if the water tank is empty; this will damage the machine.
7. Fill the water tank with plain tap water or distilled water only. Using other liquids or chemicals may damage the steamer or cause injury.
8. Take care not to overfill the water tank. The maximum capacity is 300ml; if in doubt please use a measuring jug.
9. To avoid electric shock, do not let the steamer, power cord or plug get wet. Never immerse the steamer in water. Do not operate with wet hands.
10. The steamer must not be used on chenille, velvet, Dralon, leather or polished hardwoods.
11. Do not direct steam at equipment with electrical components e.g. oven interiors.
12. Never use the steamer if the nozzle cap is blocked. Keep it free from anything that may block the steam output.
13. Before refilling the water tank or changing accessories, always switch off the steamer and let it cool for 10 minutes. The nozzle tip and accessories will get very hot during use. Never touch them whilst the steamer is switched on.
14. Carry the steamer by its handle, not the power cord. Keep the cord away from hot surfaces and sharp edges, and avoid getting it trapped in doors.
15. Never leave the steamer unattended when switched on.
16. Always unplug after use. Let the steamer cool down for 10 minutes before emptying the water tank and storing away in a cool, dry place. Never store whilst hot.

17. When unplugging the steamer, grasp the plug, not the power cord. Do not touch with wet hands.
18. The steamer must only be used with the accessories supplied by the manufacturer. Using other attachments may cause electric shock, fire, injury or damage.
19. An extension cable may be used with care. The electrical rating of the cable should be at least as great as that of the steamer. Please ensure the cable cannot be pulled or tripped over.
20. The steamer is not intended for use by children or infirm people unless they have been adequately supervised by a responsible person to ensure they can use it safely.
21. Do not use the steamer if the power cord or plug show any signs of damage, or if the appliance has been dropped, damaged, left outdoors, allowed to get wet, or is working incorrectly. Call the helpline on 015394 88100 to arrange a replacement. Never try to repair it yourself as this may cause electric shock.

BEFORE USING FOR THE FIRST TIME

Unpack the steamer carefully. Remove any packaging and check that you have all the accessories.

USING YOUR STEAMER

This hand-held steamer delivers powerful cleaning on a variety of surfaces around the home, dislodging grime and dissolving grease on everything from oven shelves to bathroom tiles. Always test on an inconspicuous area first. Allow to dry and observe the results before continuing. Keep your work area well-lit.

PLEASE NOTE: the steamer must not be used on chenille, velvet, Dralon, leather or polished hardwoods.

1. Making sure the steamer is unplugged, remove the water tank by sliding along the release button.
2. Fill the water tank with warm, plain tap water or distilled water. No detergents or chemicals should be added. Please take care not to overfill the water tank. The maximum capacity is 300ml; if in doubt, please use a measuring jug.
3. Place the ball and plug water feed assembly into the tank, and turn to lock into place.



4. Push the water tank onto the steamer; you will hear it click firmly into place. To prevent leakage, hold the water tank upright!

5. Next, choose one of the accessories and push it onto the nozzle tip. Rotate the accessory to lock it into place.
6. Plug the steamer into a mains socket. The pilot light will come on whilst the machine heats up. After around 30 seconds the light will go off. The steamer is now ready to use.
7. Holding the steamer by the handle, point it at the area to be cleaned. Press the steam trigger to activate the steam and move the steamer back and forth to loosen dirt and grease. To stop the steam, release the trigger. **CAUTION:** to prevent scalding, please keep your hands well away from the steam. Surfaces being steam-cleaned will also get very hot and should not be touched until they have cooled.
8. When you have finished steam-cleaning, unplug the steamer and let it cool for 10 minutes before emptying the water tank and storing away.

CHANGING ACCESSORIES AND REFILLING THE WATER TANK

Always unplug the steamer and let it cool for 10 minutes before changing accessories or refilling the water tank. The accessories will stay hot for at least 10 minutes after use.

Changing accessories

To remove the brush, squeegee or jet nozzle, rotate it and pull it firmly away from the nozzle tip. Choose another accessory and push it onto the nozzle tip, rotating to lock.

Refilling the water tank

Slide along the release button to remove the water tank. Turn the ball and plug and lift it out, then refill the tank. Replace the ball and plug, then push the water tank back onto the steamer, until it clicks into place.

TROUBLESHOOTING

No power?

Make sure the steamer is plugged in and the mains socket is switched on.
Check for electricity at the socket. If in doubt, ask a qualified electrician.

No steam?

Check the level in the water tank.
Check the pilot light has gone out.
Make sure the steamer is plugged in and the mains socket is switched on.

In the unlikely event that your steamer still does not work, please do not attempt to repair it yourself. Call the helpline on 015394 88100.

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country. Visit www.recycle-more.co.uk to find your nearest recycling point. The steamer must not be disposed of with ordinary household waste.




ELECTRICAL CONNECTIONS

THIS APPLIANCE MUST BE EARTHED

This appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications. If the fitted plug is not suitable for your socket outlets, it should be cut off and carefully disposed of. To avoid an electric shock, do not insert the discarded plug into a socket.

Fitting a new plug

If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown here. The wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

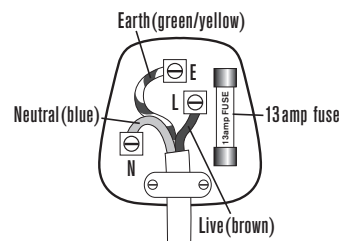

Connect BLUE to Neutral (N)

Connect GREEN & YELLOW to Earth (E)

Connect BROWN to Live (L)

13 amp fuse to be used

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured green and yellow **MUST** be connected to the terminal which is marked with the letter E (Earth) or coloured green. The wire which is coloured blue **MUST** be connected to the terminal which is marked with the letter N (Neutral) or coloured black. The wire which is coloured brown **MUST** be connected to the terminal which is marked with the letter L (Live) or coloured red.

Before refitting the plug cover, check that there are no cut or stray strands of wire inside the plug. Use a 13 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are at all unsure which plug or fuse to use, always refer to a qualified electrician.

Note: after replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EEC Directives: 73/23 EEC (Low Voltage Directive) and 89/336 EEC (EMC Directive).