

Oster^{TM/MC}

User Manual **Digital Countertop
Oven**

Notice d'emploi **Four posable
numérique**

**MODELS TSSTVDG01 Series/
MODÈLES de la série TSSTVDG01**



*Visit us at www.oster.ca
Visitez au www.oster.ca*

P.N. 171321 Rev. A

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ AND SAVE THESE INSTRUCTIONS

- READ ALL INSTRUCTIONS, PRODUCT LABELS AND WARNINGS BEFORE USING THE COUNTERTOP OVEN.
- Do not touch hot surfaces. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Allow the unit to cool thoroughly before putting in or taking off parts. Always use the oven handles when moving the unit.
- When the unit is not in use and before cleaning, press the “Start/Cancel” button and remove the countertop oven from the power outlet.
- To protect against risk of electrical shock, do not immerse the appliance in water or any other liquids.
- Close supervision is always necessary when this or any appliance is used near children. This appliance is not for use by children.
- Do not operate this or any appliance with a frayed or damaged cord or plug or after the appliance malfunctions or is dropped or has been damaged in any manner. Return the countertop oven to the nearest Authorized Sunbeam Appliance Service Center for examination, repair or electrical or mechanical adjustment.
- Do not use attachments not recommended by the manufacturer; they may cause fire, electric shock or personal injury.
- Do not use outdoors or for commercial purposes.
- Do not use this appliance for other than its intended use.
- Do not let the cord dangle over the edge of a tabletop or countertop or touch hot surfaces.
- Do not place the appliance near a hot gas or electric burner or in a heated oven.
- Extreme caution should be used when using containers constructed of material other than metal or glass.
- A fire may occur if the countertop oven is covered or touching flammable materials, including curtains, draperies, walls, etc., when in operation. Do not store any items on top of the appliance when in operation.
- When using countertop oven, pull the unit out a minimum of 6 inches away from the wall or other cords.

- Do not store any materials, other than manufacturer's recommended accessories, in this unit when not in use.
- Do not place any flammable materials in oven, such as paper, cardboard, plastic or any materials that may catch fire or melt.
- Do not cover the oven tray or rack with metal foil. This will cause overheating of the appliance.
- Oversized foods or metal utensils must not be inserted in the appliance as they may create a fire or risk of electrical shock.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electrical shock.
- Use extreme caution when removing pan or disposing of hot grease or other hot liquids.
- To turn this appliance off, press the "Start/Cancel" button and remove cord from outlet. The LCD will turn off after 30 seconds.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way."
- Use extreme caution when removing tray or disposing of hot grease.

This Unit Is for Household Use Only

Short Power Supply Cord Instructions

 
A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the electrical rating of the cord must be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

For Products Purchased in the United States and Canada Only


To reduce the risk of electrical shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits a polarized outlet only one way; if the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. ***Do not attempt to defeat*** this safety feature.

SAVE THESE INSTRUCTIONS

PRODUCT DIAGRAM

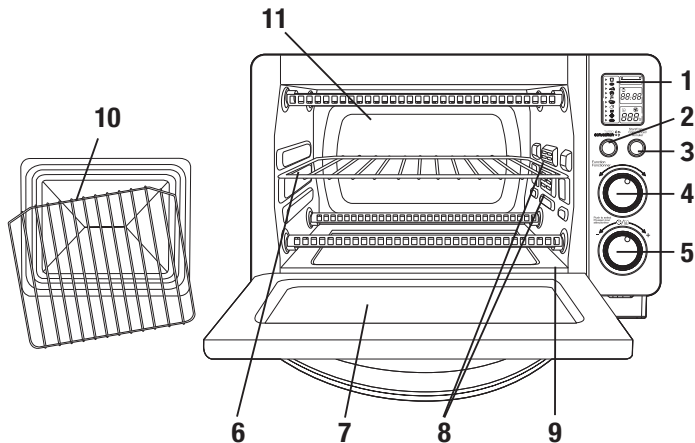

1. **LCD Display**
2. **Turbo Convection Heat Button** – Use to activate or cancel turbo convection heat.
3. **Start/Cancel Button** – Press this button to turn the appliance off.
4. **Function Selector Knob** – Select cooking function by turning knob to desired setting.
5. **Time/Temperature Control Knob** – Adjust the dial thermostat to the desired temperature/ Adjust the dial to the desired time
6. **Removable Wire Rack** – See “Positioning Rack” section.
7. **Tempered Glass Door** – For front viewing of food.
8. **Two Rack Positions**
9. **Removable Crumb Tray** – For crumb or fallen food particles collection. Pulls out for easy cleaning.
10. **Baking Pan/Cookie Sheet in One and Broil Rack** – Use for all your baking needs, broiling and grilling needs.
11. **Easy Clean Interior Walls** – Allows fast clean up.

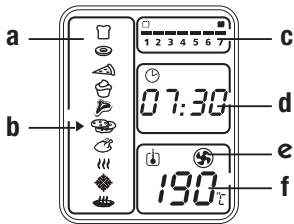 

LCD Display

- Functions Indicator** – Toast (☐), Bagel (☉), Pizza (⚓), Bake (🍪), Broil (🔥), Cookies (🍪), Roast (🍖), Warm (☰), Defrost (❖), Reheat (👉)
- Function Indicator Arrow**
- 1-7 color shade setting indicator**
- Time Indicator**
- Turbo Convection Heat Icon**
- Temperature Indicator**

Preparing Your Toaster Oven

If you are using your toaster oven for the first time, please:

- Remove any stickers from the surface of the oven.
- Open oven door and remove all printed documents and paper from inside the toaster oven.
- Clean the rack and pan with hot water, a small amount of dishwashing liquid and a nonabrasive sponge or cleaning pad.
DO NOT IMMERSE THE BODY OF THE UNIT IN WATER.
- Dry the unit thoroughly before using.
- Select a location for the toaster oven. The location should be in an open area on a flat counter where the plug will reach an outlet.
- Plug the toaster oven into an electrical outlet.

USING YOUR TOASTER OVEN (SEE FIG. 1)

Plug the unit in. The unit will emit two long “beeps” and the LCD screen will illuminate. The function option will appear with an indicator on the preset TOAST (☐) function. The LCD and the Start/Cancel button light will be illuminated for 30 seconds and then go out if no other buttons or knobs are pressed or moved.

PLEASE NOTE: once the blue LCD display goes out – you can press or move any button or knob to “wake up” the display and operate as normal.

Step 1. Select Function

Turn the Function Knob to choose one of the following 10 options from the menu: Toast (☐), Bagel (☉), Pizza (⚡), Bake (☺), Broil (☼), Cookies (☪), Roast (☺), Warm (☺), Defrost (⬢) and Reheat (☼). The indicator arrow will move from function to function as the knob is turned.

NOTE: If the cooking process is not started or no further button is pressed or knob is turned within 30 seconds the blue backlight and the Start/Cancel Button Light will turn off.

Step 2. Temperature:

Turn the temperature/time knob to increase or decrease the temperature setting.

Step 3. Time:

Turn the temperature/time knob to increase or decrease the cooking time. The maximum time setting is 60 minutes.

NOTE: Press the temperature / time knob to toggle between the temperature and time selection.

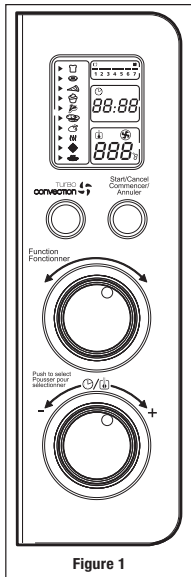 


Figure 1

USING THE TOAST FUNCTION (SEE FIG. 2)

Step 1. Turn the Function Knob to the Toast (☐) function. When you select the Toast function, the 1-7 color shade setting indicator will become visible on the LCD. Both upper and lower heating elements will heat.

Default Color Shade Setting is 4. This will be the default every time the Toaster Oven is unplugged and plugged back in. If the Toaster Oven remains plugged in since the last time you have selected a different shade for the Toast function (even if not activated), the unit will remember the last shade setting you selected.

NOTE: The bottom rack position is recommended for toasting. The temperature or time is not adjustable for the Toast function.

Step 2. To adjust the shade color:

Turn the Temperature/Time Knob to adjust the shade color. The color shade-setting indicator will show your selection as you turn the knob. The frame around the shade setting indicator on the LCD display will be blinking.

Step 3. To Start:

Press the Start/Cancel Button to start the toasting process. The red Start/Cancel Button light will illuminate. The LCD Display will show the Toast Function, the shade color selection and the countdown time. The unit will begin to operate and the timer will start counting down. (Step 3)

When the Toasting is complete, the unit will emit 3 beeps. The LCD and the Start/Cancel Button Light will turn off after 30 seconds.

NOTE: You can cancel the toasting cycle at any time by pressing the Start/Cancel Button once.

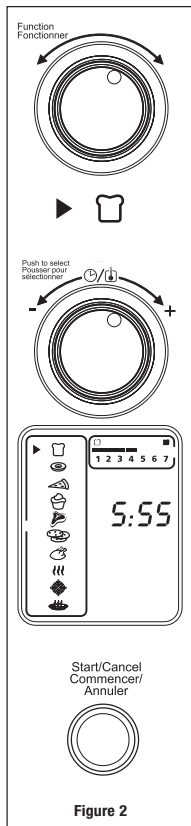 


Figure 2

USING THE BAGEL FUNCTION (SEE FIG. 3)

Step 1. Turn the Function Knob to the Bagel (☉) function. When you select the Bagel function, the 1-7 color shade setting indicator will become visible on the LCD. Only upper heating element will heat. Default Color Shade Setting is 4. This will be the default every time the Toaster Oven is unplugged and plugged back on. If the Toaster Oven remains plugged-in since the last time you have selected a different shade for the Bagel function (even if not activated), the unit will remember the last shade setting you selected.

NOTE: The bottom track position is recommended for bagel toasting. For best results toast bagel with cut side up. The temperature or time is not adjustable for the Bagel function once it has started.

Step 2. To adjust the shade color:

 
Turn the Temperature/Time Knob to adjust the shade color. The color shade-setting indicator will show your selection as you turn the knob. The frame around the shade-setting indicator on the LCD display will be blinking.

Step 3. To Start:

Press the Start/Cancel Button to start the bagel toasting process. The red Start/Cancel Button light will illuminate. The LCD Display will show the Bagel Function, the shade color selection and the countdown time. The unit will begin to work and the timer will start counting down.

When the Bagel toasting is complete, the unit will emit 3 beeps. The LCD and the Start/Cancel Button Light will turn off after 30 seconds.

NOTE: You can cancel the bagel toasting cycle at any time by pressing the Start/Cancel Button once.

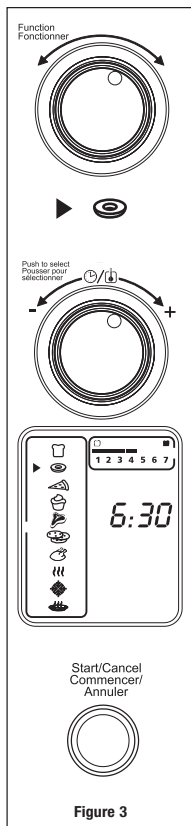

USING THE PIZZA/ TURBO CONVECTION HEAT FUNCTION (SEE FIG. 4)

 
- Step 1.** Turn the Function Knob to the Pizza (🍷) function. When you select the Pizza function, the Turbo Convection Heat will automatically activate.
- Step 2.** If you wish to switch to the regular Pizza function, press the Turbo button once to turn off the Turbo Convection Heat default selection. The blue light of the Turbo Convection Heat button will turn off.

The Turbo Convection Heat Function turns on a built-in fan that circulates hot air in the oven chamber, cooking your food faster and more evenly.

Default Temperature: 200°C.

Default Time: 16 minutes.

- Step 3. To set the temperature:** Turn the Temperature/Time Knob if you wish to increase or decrease the temperature setting. The frame around the temperature setting on the LCD display will be blinking. For the Pizza Function, the temperature can be set from 170 to 230°C in 15-degree increments. Once you have selected the desired temperature, press the knob once to set that selection. The frame of the temperature will disappear and the frame of the time setting will start blinking.
- Step 4. To set the time:** Turn the Temperature/Time Knob if you wish to increase or decrease the cooking time. The maximum time setting for Pizza is 60 minutes (1 hour). Once you have selected the desired cooking time, press the Start button to initiate the cooking process. The frame of the time will disappear.

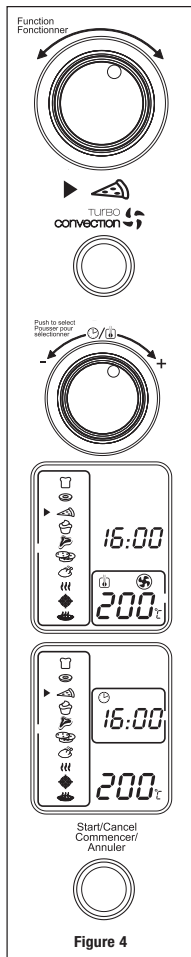

Step 5. To Start:

Press the Start/Cancel Button to start the cooking process. The red Start/Cancel Button light will illuminate. The LCD Display will show the Pizza Function, the countdown time and the selected temperature. The unit will begin to work and the timer will start counting down.

When the Pizza function cycle is complete, the unit will emit 3 beeps. The LCD and the Start/Cancel Button Light will turn off after 30 seconds.

NOTE: You can cancel the cooking cycle at any time by pressing the Start/Cancel Button once.

USING THE BAKE/ TURBO CONVECTION HEAT FUNCTION (SEE FIG. 5)

Step 1. Turn the Function Knob to the Bake (☉) function. When you select the Bake function, the Turbo Convection Heat will automatically activate.

Step 2. If you wish to switch to the regular Bake function, press the Turbo button once to turn off the Turbo Convection Heat. The blue light of the Turbo Convection Heat button will turn off.

The Turbo Convection Heat Function turns on a built-in fan that circulates hot air in the oven chamber, cooking your food faster and more evenly.

Default Temperature: 165°C.

Default Time: 30 minutes.

Step 3. To set the temperature:

Turn the Temperature/Time Knob if you wish to increase or decrease the temperature setting. The frame around the temperature setting on the LCD display will be blinking. For the Bake Function, the temperature can be set from 65 to 230°C in 1-degree increments. Once you have selected the desired temperature, press the knob once to set that selection. The frame of the temperature will disappear and the frame of the time setting will start blinking.

Step 4. To set the time:

Turn the Temperature/Time Knob if you wish to increase or decrease the cooking time. The maximum time setting for Bake is 60 minutes (1 hour). Once you have selected the desired cooking time, press the Start button to initiate the cooking process. The frame of the time will disappear.

Step 5. To Start:

Press the Start/Cancel Button to start the cooking process. The red Start/Cancel Button light will illuminate. The LCD Display will show the Bake Function, the countdown time and the selected temperature. The unit will begin to work and the timer will start counting down.

When the Baking cycle is complete, the unit will emit 3 beeps. The LCD and the Start/Cancel Button Light will turn off after 30 seconds.

NOTE: You can cancel the cooking cycle at any time by pressing the Start/Cancel Button once.

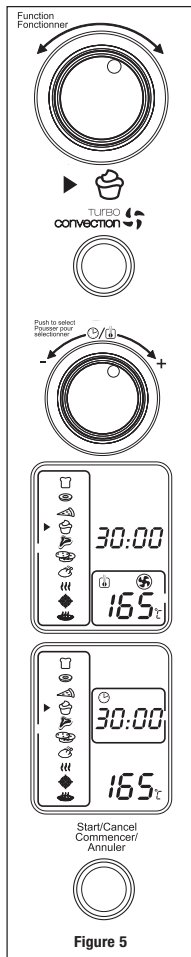 


Figure 5

USING THE BROIL FUNCTION (SEE FIG. 6)

- Step 1.** Turn the Function Knob to the Broil (🔥) function. When you select the Broil function, the upper heating elements will heat.

Default Temperature: 230°C.

Default Time: 10 minutes.

 
- Step 2. To set the temperature:** Turn the Temperature/Time Knob if you wish to increase or decrease the temperature setting. The frame around the temperature setting on the LCD display will be blinking. For the Broil Function, the temperature can be set from 200 to 230°C in 15-degree increments. Once you have selected the desired temperature, press the knob once to set that selection. The frame of the temperature will disappear and the frame of the time setting will start blinking.

- Step 3. To set the time:** Turn the Temperature/Time Knob if you wish to increase or decrease the cooking time. The maximum time setting for Broil is 60 minutes (1 hour). Once you have selected the desired cooking time, press the Start button to initiate the cooking process. The frame of the time will disappear.

- Step 4. To Start:** Press the Start/Cancel Button to start the broiling process. The red Start/Cancel Button light will illuminate. The LCD Display will show the Broil Function, the countdown time and the selected temperature. The unit will begin to work and the timer will start counting down.

When the Broiling cycle is complete, the unit will emit 3 beeps. The LCD and the Start/Cancel Button Light will turn off after 30 seconds.

NOTE: You can cancel the broiling cycle at any time by pressing the Start/Cancel Button once.

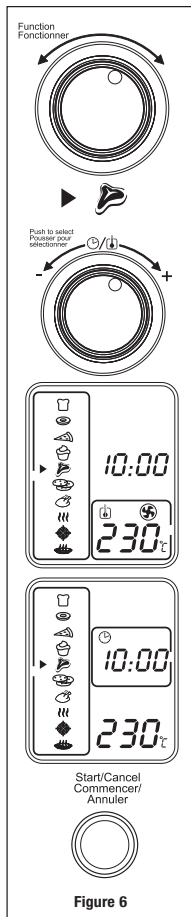

USING THE COOKIES/TURBO CONVECTION HEAT FUNCTION (SEE FIG. 7)

 
- Step 1.** Turn the Function Knob to the Cookies (🍪) function. When you select the Cookies function, the Turbo Convection Heat will automatically activate.
- Step 2.** If you wish to use the regular Cookies function, press Turbo button once to turn off the Turbo Convection Heat. The blue light of the Turbo Convection Heat button will turn off.

The Turbo Convection Heat Function turns on a built-in fan that circulates hot air in the oven chamber, cooking your food faster and more evenly.

Default Temperature: 170°C.

Default Time: 11 minutes.

- Step 3. To set the temperature:** Turn the Temperature/Time Knob if you wish to increase or decrease the temperature setting. The frame around the temperature setting on the LCD display will be blinking. For the Cookies Function, the temperature can be set from 65 to 230°C in 1-degree increments. Once you have selected the desired temperature, press the knob once to set that selection. The frame of the temperature will disappear and the frame of the time setting will start blinking.
- Step 4. To set the time:** Turn the Temperature/Time Knob if you wish to increase or decrease the cooking time. The maximum time setting for Cookies is 60 minutes (1 hour). Once you have selected the desired cooking time, press the Start button to initiate the cooking process. The frame of the time will disappear.

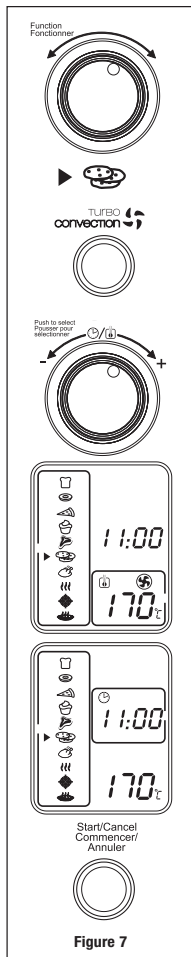

Step 5. To Start:

Press the Start/Cancel Button to start the cooking process. The red Start/Cancel Button light will illuminate. The LCD Display will show the Cookies Function, the countdown time and the selected temperature. The unit will begin to work and the timer will start counting down.

When the Cookies function cycle is complete, the unit will emit 3 beeps. The LCD and the Start/Cancel Button Light will turn off after 30 seconds.

NOTE: You can cancel the cooking cycle at any time by pressing the Start/Cancel Button once.

USING THE ROAST/TURBO CONVECTION FUNCTION (SEE FIG. 8)

Step 1. Turn the Function Knob to the Roast (☼) function. When you select the Roast function, the Turbo Convection Heat is will automatically activate.

Step 2. If you wish to use the regular Roast function, press the Turbo button once to turn off the Turbo Convection Heat. The blue light of the Turbo Convection Heat button will turn off.

The Turbo Convection Heat Function turns on a built-in fan that circulates hot air in the oven chamber, cooking your food faster and more evenly.

Default Temperature: 170°C.

Default Time: 60 minutes.

Step 3. To set the temperature:

Turn the Temperature/Time Knob if you wish to increase or decrease the temperature setting. The frame around the temperature setting on the LCD display will be blinking. For the Roast Function, the temperature can be set from 65 to 230°C in 1-degree increments. Once you have selected the desired temperature, press the knob once to set that selection. The frame of the temperature will disappear and the frame of the time setting will start blinking.

Step 4. To set the time:

 
Turn the Temperature/Time Knob if you wish to increase or decrease the cooking time. The maximum time setting for Roast is 60 minutes (1 hour). Once you have selected the desired cooking time, press the Start button to initiate the cooking process. The frame of the time will disappear.

Step 5. To Start:

Press the Start/Cancel Button to start the cooking process. The red Start/Cancel Button light will illuminate. The LCD Display will show the Roast Function, the countdown time and the selected temperature. The unit will begin to work and the timer will start counting down.

When the Roasting cycle is complete, the unit will emit 3 beeps. The LCD and the Start/Cancel Button Light will turn off after 30 seconds.

NOTE: You can cancel the cooking cycle at any time by pressing the Start/Cancel Button once.

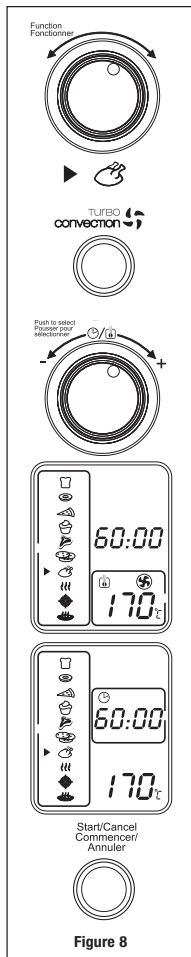

USING THE WARM FUNCTION (SEE FIG. 9)

Step 1. Turn the Function Knob to the Warm (☀️) function.

Default Temperature: 65°C.

Default Time: 60 minutes.

You may manually activate the Turbo Convection Heat by pressing the Turbo button once to turn it on. The blue light of the Turbo button will turn on.

Step 2. To set the temperature:

 
Turn the Temperature/Time Knob if you wish to increase or decrease the temperature setting. The frame around the temperature setting on the LCD display will be blinking. For the Warm Function, the temperature can be set from 65 to 95°C in 15-degree increments. Once you have selected the desired temperature, press the knob once to set that selection. The frame of the temperature will disappear and the frame of the time setting will start blinking.

Step 3. To set the time:

Turn the Temperature/Time Knob if you wish to increase or decrease the warming time. The maximum time setting for Warm is 60 minutes (1 hour). Once you have selected the desired warming time, press the Start button to initiate the warming process. The frame of the time will disappear.

Step 4. To Start:

Press the Start/Cancel Button to start the warming process. The red Start/Cancel Button light will illuminate. The LCD Display will show the Warm Function, the countdown time and the selected temperature. The unit will begin to work and the timer will start counting down.

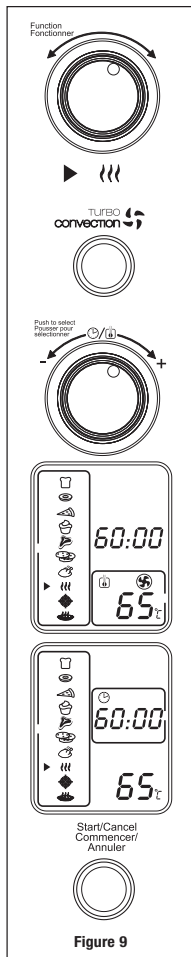

When the Warming cycle is complete, the unit will emit 3 beeps. The LCD and the Start/Cancel Button Light will turn off after 30 seconds.

NOTE: You can cancel the warming cycle at any time by pressing the Start/Cancel Button once.

USING THE DEFROST FUNCTION (SEE FIG. 10)

Step 1. Turn the Function Knob to the Defrost (❖) function.

Default Temperature: 230°C.

Default Time: 16 minutes.

 
You may manually activate the Turbo Convection Heat by pressing the Turbo button once to turn it on. The blue light of the Turbo button will turn on.

Step 2. To set the temperature:

Turn the Temperature/Time Knob if you wish to increase or decrease the temperature setting. The frame around the temperature setting on the LCD display will be blinking. For the Defrost function, the temperature can be set from 65 to 230°C in 1-degree increments. Once you have selected the desired temperature, press the knob once to set that selection. The frame of the temperature will disappear and the frame of the time setting will start blinking.

Step 3. To set the time:

Turn the Temperature/Time Knob if you wish to increase or decrease the defrosting time. The maximum time setting for Defrost is 60 minutes (1 hour). Once you have selected the desired defrosting time, press the Start button to initiate the cooking process. The frame of the time will disappear.

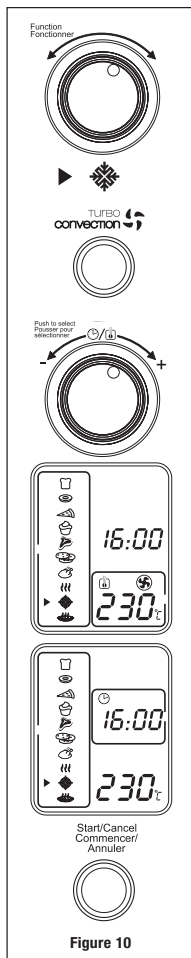

Step 4. To Start:

Press the Start/Cancel Button to start the defrosting process. The red Start/Cancel Button light will illuminate. The LCD Display will show the Defrosting function, the countdown time and the selected temperature. The unit will begin to work and the timer will start counting down.

When the Defrosting cycle is complete, the unit will emit 3 beeps. The LCD and the Start/Cancel Button Light will turn off after 30 seconds.

NOTE: You can cancel the defrosting cycle at any time by pressing the Start/Cancel Button once.

USING THE REHEAT FUNCTION (SEE FIG. 11)

Step 1. Turn the Function Knob to the Reheat (👉) function.

Default Temperature: 165°C.

Default Time: 15 minutes.

You may manually activate the Turbo Convection Heat by pressing the Turbo button once to turn it on. The blue light of the Turbo button will turn on.

Step 2. To set the temperature:

Turn the Temperature/Time Knob if you wish to increase or decrease the temperature setting. The frame around the temperature setting on the LCD display will be blinking. For the Reheat function, the temperature can be set from 65 to 230°C in 1-degree increments. Once you have selected the desired temperature, press the knob once to set that selection. The frame of the temperature will disappear and the frame of the time setting will start blinking.

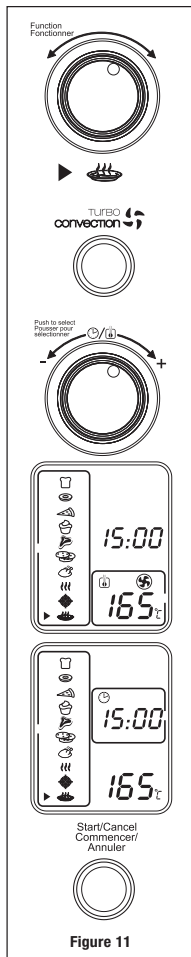 


Figure 11

Step 3. To set the time:

Turn the Temperature/Time Knob if you wish to increase or decrease the reheating time. The maximum time setting for Reheat is 60 minutes (1 hour). Once you have selected the desired reheating time, press the Start button to initiate the reheating process. The frame of the time will disappear.

Step 4. To Start:

 
Press the Start/Cancel Button to start the reheating process. The red Start/Cancel Button light will illuminate. The LCD Display will show the Reheat Function, the countdown time and the selected temperature. The unit will begin to work and the timer will start counting down.

When the Reheating cycle is complete, the unit will emit 3 beeps. The LCD and the Start/Cancel Button Light will turn off after 30 seconds.

NOTE: You can cancel the reheating cycle at any time by pressing the Start/Cancel Button once.

POSITIONING PAN

- To accommodate a wide variety of foods the oven has two rack positions. The rack can be inserted in the oven in the upper or lower rack guides. The rack will fit into either of the rack guides inside of the Countertop Oven. (See Figure Below)
 - Before removing the rack allow the unit to cool.
 - To remove the rack, open the oven door and pull the rack towards the front of the oven. The rack will slide on the rack guides on the inside of the oven.
- PLEASE NOTE: the oven rack may tilt downward causing food to shift when the rack is pulled out, proceed with caution.
- Positioning of the oven rack will depend on the size of the food and desired browning. Move the rack to the lower rack position to prevent top browning and move the rack to the upper rack position to prevent bottom burning.
 - For best toasting results, position the rack in the lower rack guide.

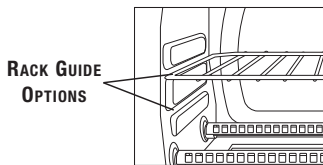

CLEANING YOUR COUNTERTOP OVEN

DO NOT IMMERSE IN LIQUIDS.

- Step 1.** Press the Start/Cancel Button OFF and remove plug from electrical outlet. Allow to cool.
- Step 2.** Wipe unit down with damp cloth. DO NOT IMMERSE IN WATER. Make sure to only use mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the coating on this unit.
- Step 3.** Remove crumb tray by pulling out of Countertop Oven.
- Step 4.** Shake off crumbs from crumb tray. Cleaning the crumb tray often will avoid any accumulations.
- Step 5.** Remove wire rack and clean with damp cloth or place in top rack of dishwasher.

STORING YOUR COUNTERTOP OVEN

Allow the appliance to cool completely before storing. If storing the Countertop Oven for long periods of time make certain that the Countertop Oven is clean and free of food particles. Store the Countertop Oven in a dry location such as on a table or countertop or cupboard shelf. Other than the recommended cleaning, no further user maintenance should be necessary.

1 Year Limited Warranty

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively “JCS”) warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-334-0759 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

**PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE
ADDRESSES OR TO THE PLACE OF PURCHASE.**



For product questions:
Sunbeam Consumer Service
USA: 1.800.458.8407
Canada: 1.800.667.8623
www.oster.ca

© 2013 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved.

In Canada, imported and distributed by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, 20 B Hereford Street, Brampton, Ontario L6Y 0M1.

Pour toute question en ce qui concerne ce produit,
appelez le service à la clientèle de Sunbeam
États-Unis : 1 800 458 8407
Canada : 1 800 667.8623
www.oster.ca

© 2013 Sunbeam Products, Inc., faisant affaire sous le nom de Jarden Consumer Solutions. Tous droits réservés.

Au Canada, importé et distribué par Sunbeam Corporation (Canada) Limited faisant affaire sous le nom de Jarden Consumer Solutions, 20B Hereford Street, Brampton (Ontario) L6Y 0M1.

GCDS-OST30432-PH