



Flow Control Division

Logix 1400
Digital Positioner

Start-up Guide

Scope

This manual is provided for those users unfamiliar with fieldbus devices. It also provides documentation to fill any gaps in information between fieldbus device user's manuals and configurator software manuals. This information is beneficial to those with a good understanding of the new and emerging fieldbus technology but without experience using it.

This document was written to be used specifically with the Logix 1400 digital positioner. It is not meant to replace the *Logix 1400 Digital Positioner User's Manual*, or be a complete guide to the fieldbus or NI Configurator software. This document will explain the steps necessary to configure and bench-operate the Logix 1400 digital positioner. It assumes the user has the positioner mounted to an actuator, tubed properly and with a good air supply. This document references the NI Configurator (version 2.25) as the host tool.

Definitions

AI block: Analog Input block. This block receives an analog signal and converts it to a FF signal.

AO block: Analog Output block. This function block produces an analog output signal. This block controls the input to a transducer block.

Configurator: Software tool used to access data and configure FF devices

DD: Device Description. Files used by configurator software or other FF host, which describes an FF device. DDs allow for custom manufacturer specific features to be added to a FF device, and the host to have access to those custom features.

FF: FOUNDATION™ fieldbus. Communications protocol used in the Logix 1400 digital positioner.

FINAL_VALUE: Fieldbus terminology for the positioner's command signal.

Function Blocks: All FF device functions are divided into virtual function blocks. For example, if the device is capable of performing PID control, a PID function exists.

FVPTB block: Flowserve Valve Positioner Transducer block. This block handles the configuration, calibration and diagnostics for the Logix 1400 digital positioner.

Logix 1400 digital positioner: Flowserve's FOUNDATION fieldbus two-wire valve positioner.

mA: Milliamperes

PID block: Proportional, Integral, Derivative control function block

RS block: Resource block. This block contains basic FF information and configuration data

VDC: Volts, Direct Current.

FOUNDATION fieldbus Basics

The FOUNDATION fieldbus protocol is an all-digital, two-wire method of interconnecting field devices. A traditional 4-20 mA analog loop calibrator can not be used with a Logix 1400 digital positioner. The positioner always receives its command signal from a digital source. In essence, when configured, a FF loop becomes a local area network (LAN) and the positioner receives its command over the network.

Because the Logix 1400 digital positioner is a two-wire device, existing wiring from a 4-20 mA application can be used. FF devices require 9-32 VDC power supply, and FF power supply conditioner. (Just because the same wire can be used, it does not mean the device is powered similar to other 4-20 mA devices.)

The different functions within an FF device are found in virtual function blocks. For example, if a device is capable of performing PID control, the device will have a PID function block. In an FF network any function block in one device can have a virtual connection to the function block of another device. This makes it possible to have any vendor's transmitter PID function block connected to a Logix 1400 digital positioner analog out function block, thus controlling the valve. Any combination of these virtual function blocks is possible, regardless of who manufactures the devices. The NI Configurator allows for easy graphical connection, or 'wiring' of the function blocks.

The Logix 1400 digital positioner contains four function blocks;

1. Resource block (RB). The RB contains basic FF information.
2. PID control block. This block is capable of performing PID control of a process. Honeywell designed the Logix 1400 digital positioner's PID. Honeywell should be consulted for assistance in tuning this block.
3. Analog Out (AO). This function sends the command signal to the transducer block. It can receive the signal from another function block, or be written to directly from the Configurator.
4. Transducer block (FVPTB). This block converts the command signal (FINAL_VALUE) to valve position. Positioner configuration, calibration and diagnostics are handled in this block.

The user should read all documentation that comes with any FF device. FF documentation can be obtained from the Fieldbus Foundation. The final section of this document provides FF contact information.

To allow for product differentiation, the FF specification permits manufacturers to add custom features to an FF device. For the host systems to take advantage of these custom features the manufacturer supplies a Device Description (DD). The DDs must be installed correctly for the Configurator to take full advantage of a device's functionality. A later section details proper DD installation when using the NI Configurator.

Hardware Requirements

In order to have a FF network the following items are required:

FF device (such as the Logix 1400 digital positioner) and the DDs for the device

1. FF power supply 9-32 VDC. The Logix 1400 digital positioner draws about 23 mA.
2. FF power supply conditioner. The power conditioner allows for the communications signals to be superimposed onto the power supply line (much like the HART filter).
3. FF terminator. This device prevents excess noise from getting onto the bus due to improper termination of unused FF spurs.
4. NI Fieldbus card. National Instruments produces both a PC-AT, and a PCMCIA Fieldbus card.
5. NI Configurator software, or other vendor's configurator.
6. PC running Windows 95 or NT operating system with a minimum of 16MB of RAM. Pentium or Pentium II processor is highly recommended.

A PC running the Configurator, the power supply and the FF device are all connected in parallel to the FF Power Supply Conditioner. Polarity is important, but the Logix 1400 digital positioner is protected against reverse polarity. Connecting the supply wires backwards will only cause a loss of communications and should not harm the device. The following figure shows a simple wiring diagram, for more information refer to the *Logix 1400 Digital Positioner User's Manual*.

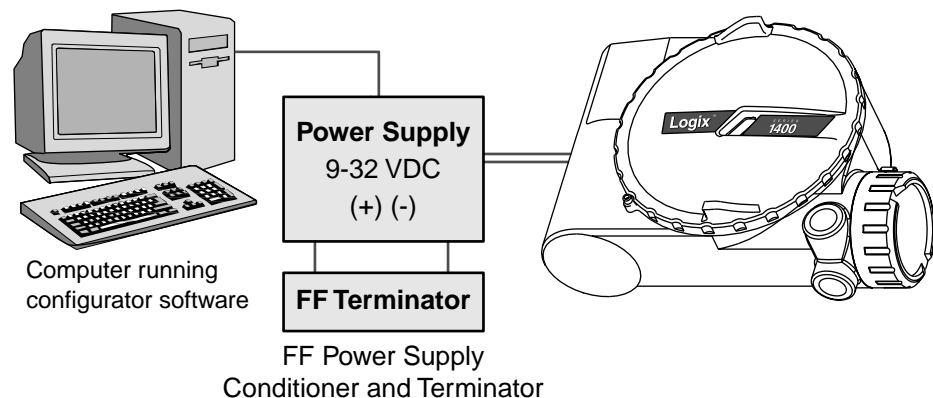



Figure 1: Logix 1400 Digital Positioner Wiring Diagram

NOTE: Contact information for the FF supply, conditioner and terminator can be found in the last section of this document.


Getting Started with the NI Configurator

The NI Configurator comes with complete instructions for installing the NI Fieldbus card and Configurator software. The instructions that came with the software should be followed carefully, ensuring that the software is installed and running properly. This document is not meant to cover NI Configurator software installation, or troubleshooting. Flowserve does not offer technical support for the NI Configurator.

Configurator Configuration:

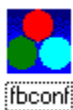

Launch the NI-FBUS Config utility (icon seen to the left). Select *Port0*. Click the *Edit* button. In the *Port* window click the *Advanced* button. Fill in the fields in the *Advanced Stack Configuration* window to match the screen below.

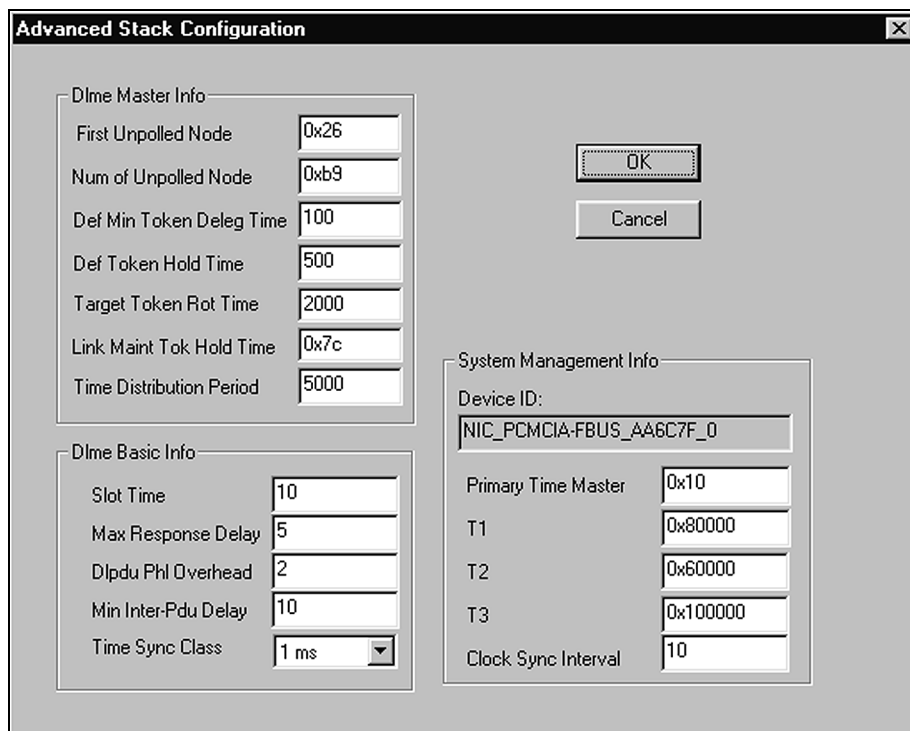

The image shows a screenshot of the 'Advanced Stack Configuration' window. It contains several input fields for configuring the system. The fields are organized into three main sections: 'Dlme Master Info', 'Dlme Basic Info', and 'System Management Info'. The 'Dlme Master Info' section includes fields for 'First Unpolled Node', 'Num of Unpolled Node', 'Def Min Token Deleg Time', 'Def Token Hold Time', 'Target Token Rot Time', 'Link Maint Tok Hold Time', and 'Time Distribution Period'. The 'Dlme Basic Info' section includes fields for 'Slot Time', 'Max Response Delay', 'Dl pdu Pdu Overhead', 'Min Inter-Pdu Delay', and 'Time Sync Class'. The 'System Management Info' section includes fields for 'Device ID', 'Primary Time Master', 'T1', 'T2', 'T3', and 'Clock Sync Interval'. The 'OK' and 'Cancel' buttons are located in the top right corner of the window.

Dlme Master Info	
First Unpolled Node	0x26
Num of Unpolled Node	0xb9
Def Min Token Deleg Time	100
Def Token Hold Time	500
Target Token Rot Time	2000
Link Maint Tok Hold Time	0x7c
Time Distribution Period	5000


Dlme Basic Info	
Slot Time	10
Max Response Delay	5
Dl pdu Pdu Overhead	2
Min Inter-Pdu Delay	10
Time Sync Class	1 ms

System Management Info	
Device ID:	NIC_PCMCIA-FBUS_AA6C7F_0
Primary Time Master	0x10
T1	0x80000
T2	0x60000
T3	0x100000
Clock Sync Interval	10

Figure 2: Advanced Stack Configuration Window

With these values entered click, OK three times to save and exit the configuration.

DD Installation: While still in the Configuration utility select Board0, and click the *DD Info* button. Take note of DD base directory field. This is the root directory for the DD installation; any root directory is acceptable. The DDs must be installed in the correct location in order for the Configurator to find them. From the directory listed in base (root) directory field, create the sub-directory 464C53. In the 464C53 directory, create the sub-directory 0201. Install the DDs in the 0201 directory. Two files with the same four-digit hexadecimal name should be found, along with different file extensions (XXXX.ffo and XXXX.sym). These are the DDs.

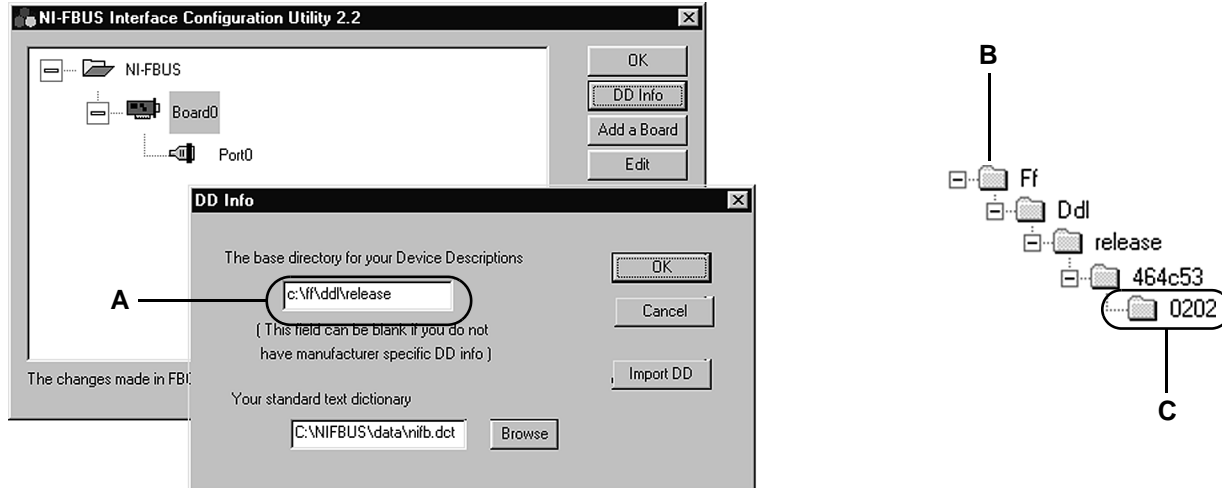

A. DD base directory B. Directory Tree for DDs for example used C. Install DDs here

Figure 3: DD Installation Windows

The two sub-directories created are specific to the Logix 1400 digital positioner. If another device is to be attached to the bus, the correct sub-directory structure will have to be created and the DDs installed. Always start the subdirectories in the directory listed in the base DD directory field. Click *OK* in the DD info screen. More information about how to create the directory structure for the DDs can be found in the Resource Block section of this document. Whenever changes are made within Configuration Utility the NI-FBUS *must be restarted* for the new settings to take effect.

Launching the NI Configurator:




Nifb

In order to run the Configurator software NI-FBUS (a fieldbus communications driver must be running). To start the NI-FBUS double-click on the blue icon shown on the left. Once running, the window will automatically minimize. Next launch the NI_FBUS Configurator (icon with the NI logo and 3 squares seen at the left). Click *OK* on the *Add Links* window. The *Configurator* window should now open and the NI Fieldbus card should be listed in the window on the left.



Flowserve does not support the NI tools suite. If problems occur, check that all steps in the installation manual were followed correctly and verify wiring and setup. If the problem persists, contact National Instruments.

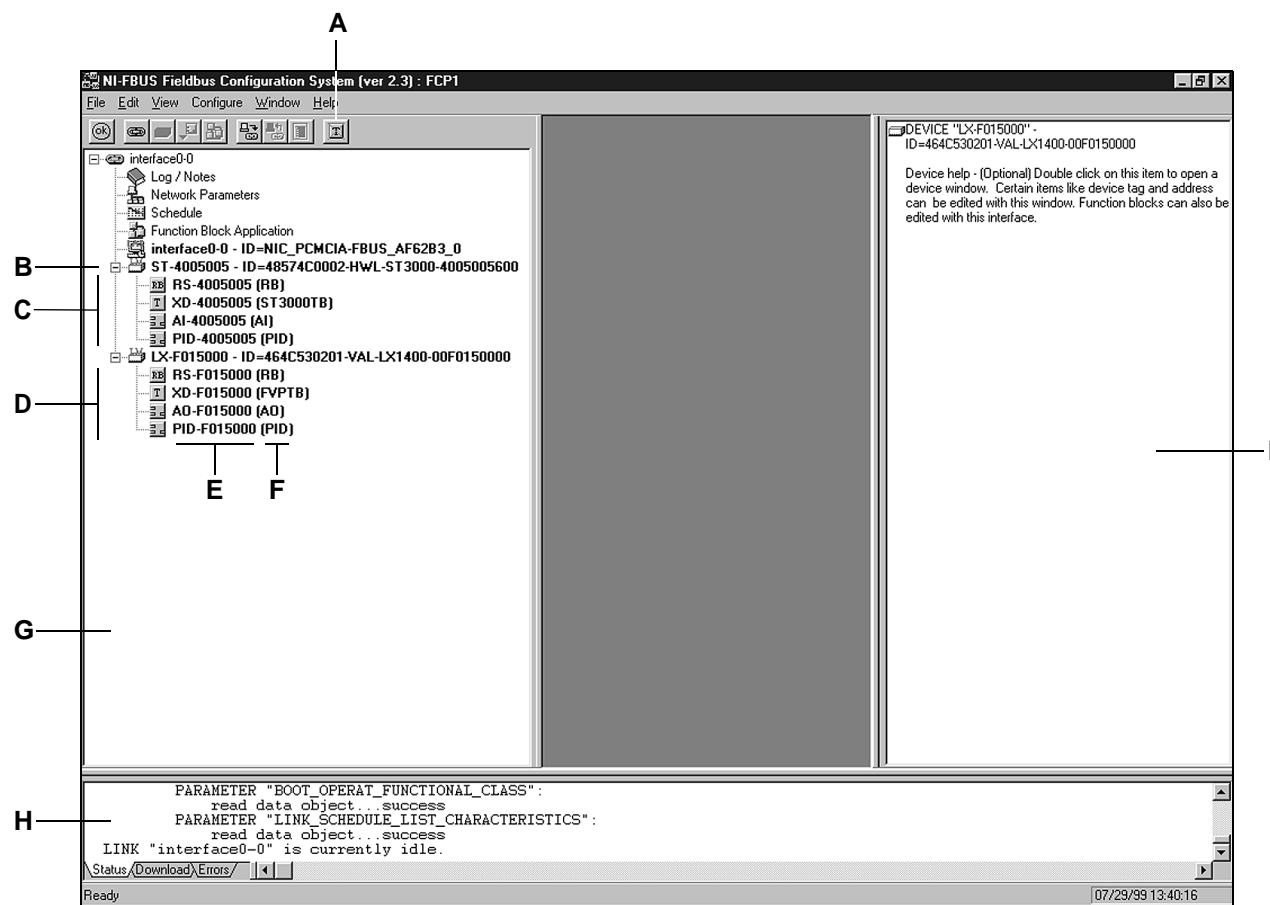

A. Transducer Block B. NI FF Card C. Logix 1400 Digital Positioner D. Function Blocks E. Function Block Tag Name F. Function Block Type G. Main Configurator Window H. Status Window I. Help Window

Figure 4: NI Configuration Set-up Window

Connect the Logix 1400 digital positioner to the fieldbus. One of the LEDs on the Logix 1400 digital positioner should start to blink. If not, verify wiring polarity and that the power supply is plugged in. Once the NI card and Logix 1400 digital positioner are connected to the Fieldbus, the Logix 1400 digital positioner should show up in the NI Configurator's main window (as seen above). Wait for the small hour glass icon that pops up next to each device and function block to go away. Under the Logix 1400 digital positioner, four function blocks should be listed. Each function block should have the function block tag name and type listed in apprentices. The four functions blocks are (AO)= Analog Out, (PID)= PID control, (RB)= Resource block, and (FVPTB)= Flowserve Valve Positioner Transducer Block. If any of the blocks are listed as unknown (UKN) the DDs are incorrect or not installed properly. If this occurred, try re-installing the DDs, and restarting the NI-FBUS application.

NOTE: To view the transducer block, click the Transducer block icon.

Function Blocks

With the Logix 1400 digital positioner on the bus and NI Configurator now talking to the positioner, configuration and calibration can take place. To do this, a brief understanding of function blocks is necessary.

The function block's tag name and type are listed under the device in the main Configurator window. Tag names can be changed for easier identification. To change the tag name, right click the mouse cursor on the tag name. Select the *Set Tag* option. Type in the new tag name, and click the *Set* button. Note that the block types (AO, PID, RB, or FVPTB) remain unchanged.

To gain access to the parameters within a function block, simply double click on the function blocks tag name in the main window. A pop-up window with several tabs similar to the one below should now be seen.

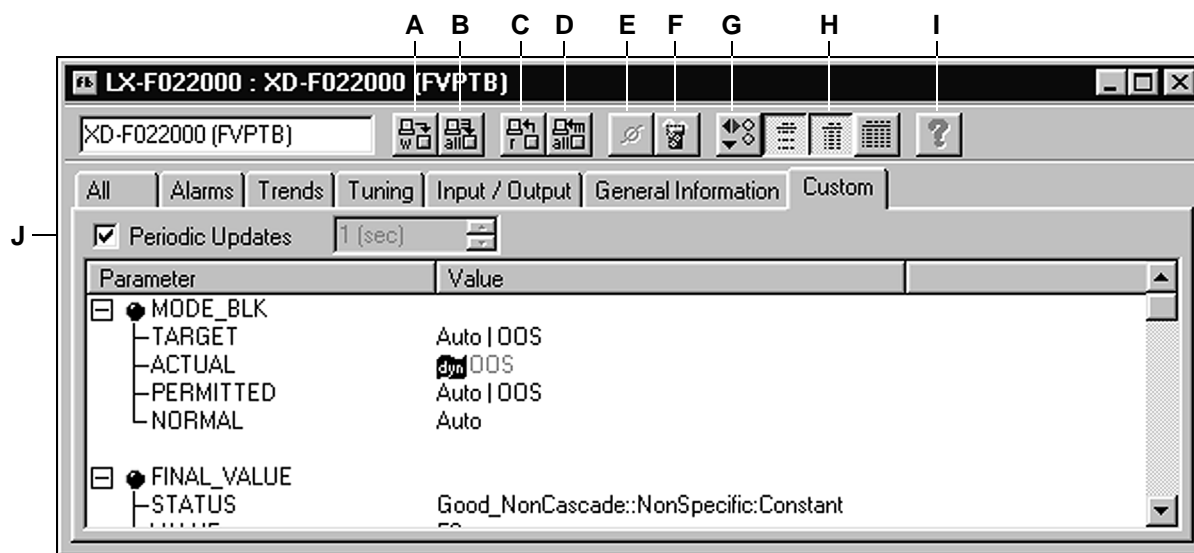


Figure 5: Function Block Parameter Window

A. Write (writes changes made within the block; must be clicked to apply parameter changes) B. Write All (writes all parameters to the device) C. Read (reads the value of the selected parameter) D. Read All (reads all parameters from the function block) E. Clear (normally inactive) F. Refresh (redraws the screen) G. Customize Parameters (allows user to view custom sets of parameters) H. Changes to one of three views I. Help J. Periodic Updates


Normally in a function block window, the *All* tab or the *Custom* tab is used. Click the *Custom* tab. Notice the *Periodic Updates* box in the upper left corner. The NI Configurator does not constantly update the parameters within a function block window, so some of the data may be stale. By checking the *Periodic Update* box the Configurator will attempt to update the viewed parameters at the specified rate. On a busy bus, updating the parameters may take longer than the specified rate. Once checked, the *Parameters* tab under the other tabs in the Function Block window will be updated. Otherwise use the *Read* button to verify that a parameter is correct. Do not assume that the value shown is correct until a read or update is done.

The NI Configurator will display some of the parameters in decimal or hexadecimal format. To toggle between the two modes, move the mouse cursor inside the function block window. Right click, and toggle the *Hexadecimal* option.

The next four sections detail what parameters must be set to within the Logix 1400 digital positioner's function blocks to control the positioner on a Fieldbus network. It is not

meant to be a detailed description of the function blocks or their parameters. See the *Logix 1400 Digital Positioner User's Manual* and FF documentation for more details.

Resource Block (RB)

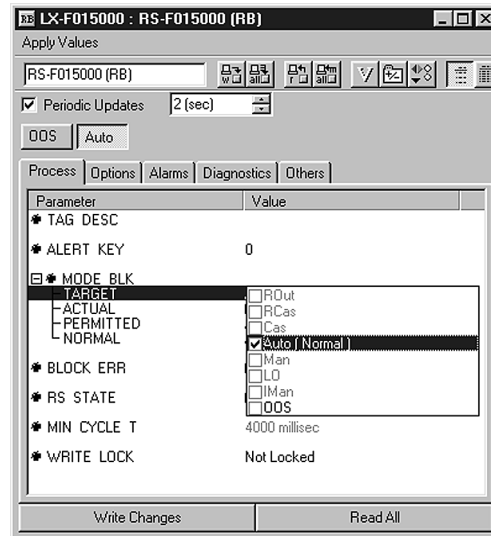

All function blocks have a MODE_BLK parameter. Out Of Service (OOS) means the function block is not executing. FF specifications require that the Resource block be in *Auto* mode before any of the other function blocks will exit the OOS mode.

To put the Resource block in *Auto*, open the Resource block window and find the MODE_BLK parameter. Double-click on TARGET. Select *Auto* and uncheck *OOS*. Click the *Write* button on the tool bar.

An asterisk should appear next to TARGET, this indicates that the value has not yet been written. Wait for the asterisk to go away, indicating the value has been written. Click on the *Read* button until the ACTUAL field reads *Auto*. The Resource block is now in *Auto* mode.

Other noteworthy parameters found in the Resource block are:

RESTART: *Processor* will reset both the fieldbus and positioner card, similar to cycling power. Selection of this will cause the device to drop off the network and then come back up.

REVISION_ARRAY: Three elements exist in REVISION_ARRAY. Element number 1 (closest to the top) is the Fieldbus (Honeywell) Embedded Software version. Element number 2 is the Fieldbus Stack Revision level. The final element is the Positioner Embedded Code revision.

MANUFAC_ID: This should always equal a 0x00464c53 (4607059) (this is Flowserve's FF Manufacturer ID number). Converting this number to ASCII will produce FLS.

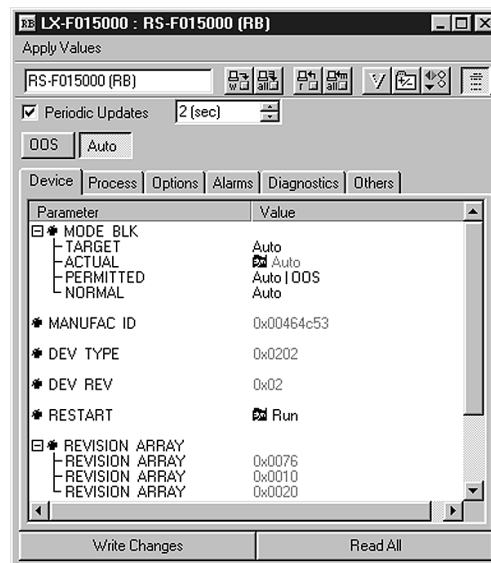


Figure 6: Resource Block Windows

DEV_TYPE: This will be 0x0202. This tells the Configurator that the device is a Logix 1400 digital positioner.

DEV_REV: This is the revision level of the device.

DD_REV: This is the revision level of the DDs.

To create the directory structure for a device, go to the DD base directory listed in the NI-FBUS Config. In that directory create a sub-directory that matches the last six digits of the hexadecimal number listed in MANUFAC_ID. Do not include the '0x' hexadecimal

identifier. Next create a subdirectory in the MANUFAC_ID directory that matches the DEV_TYPE hexadecimal numbers. This directory should be four digits. Do not include the '0x' identifier. The DDs are installed in the DEV_TYPE directory. Two exist for each device. Their name is a hexadecimal four-digit name made from the combination of DEV_REV and DD_REV with the file extensions [dev_rev|dd_rev].sys and [dev_rev|dd_rev].ffo. Go to the Windows Explorer tool to see the Logix 1400 digital positioner directory structure, and compare it to the data listed above.

Proportional Integral Derivative (PID)

Honeywell designs this function block to perform PID loop control. It is not needed to operate the positioner. Some of its features will be discussed in the Configuring the FF Network section. For more information, refer to the *Logix 1400 Digital Positioner User's Manual* or contact Honeywell.


Analog Out (AO)

When in an active control loop, the Logix 1400 digital positioner receives its command signal into the AO block. When not running in an active control loop, the Logix 1400 digital positioner can be controlled from the AO block or the FVPTB block. To control the Logix 1400 digital positioner from the AO block, the block must be in manual mode. To get this block out of OOS, set the following parameters in the AO block.

- CHANNEL = 1
- SHED_OPT = NormalShed_NormalReturn

Click the write button to apply. Use *Read* or *Periodic Update* to verify the changes have taken place. Now try to set the MODE_BLK: TARGET to *Man* (manual). If it won't exit the OOS mode and CHANNEL and SHED_OPT are both correct, the AO block needs to be scheduled (executed).

To schedule the AO block, double-click the *Function Block Application* option in the main (left) window of the Configurator. Click and drag the AO block into the Function Block Application Window. Next from the menu bar select Configure/Download Configuration option.

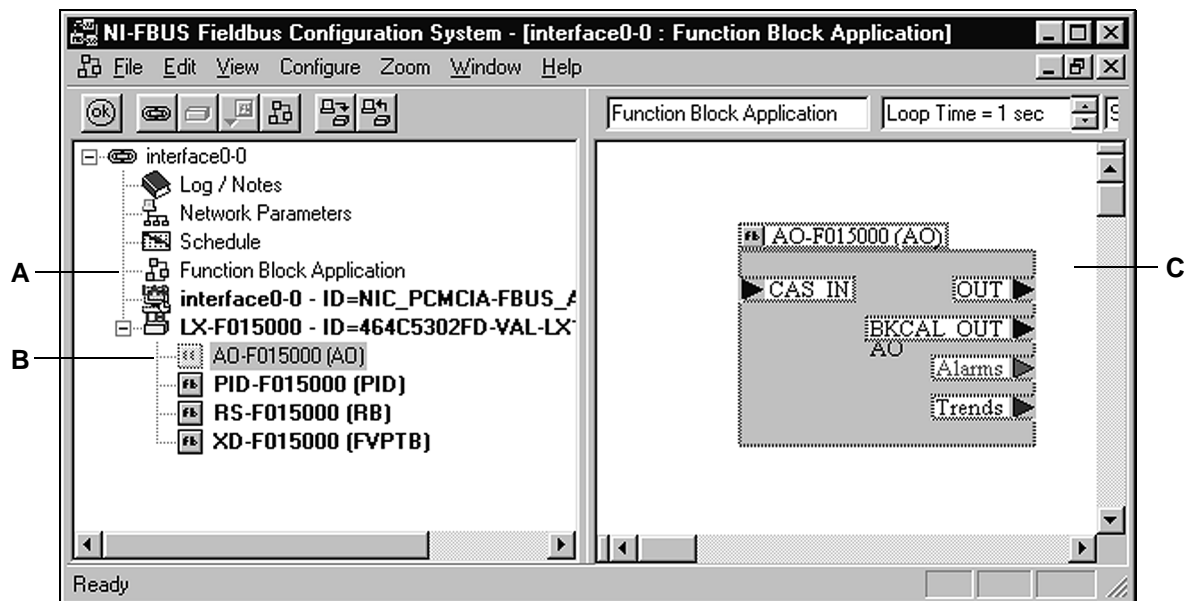

A. Click to open Function Block application window B. Drag AO function block into the Function Block Application Window C. Function Block Application Window

Figure 7: Function Block Window

In the *Download Configuration* window, click the *Download* button. Wait for the download to complete then exit.

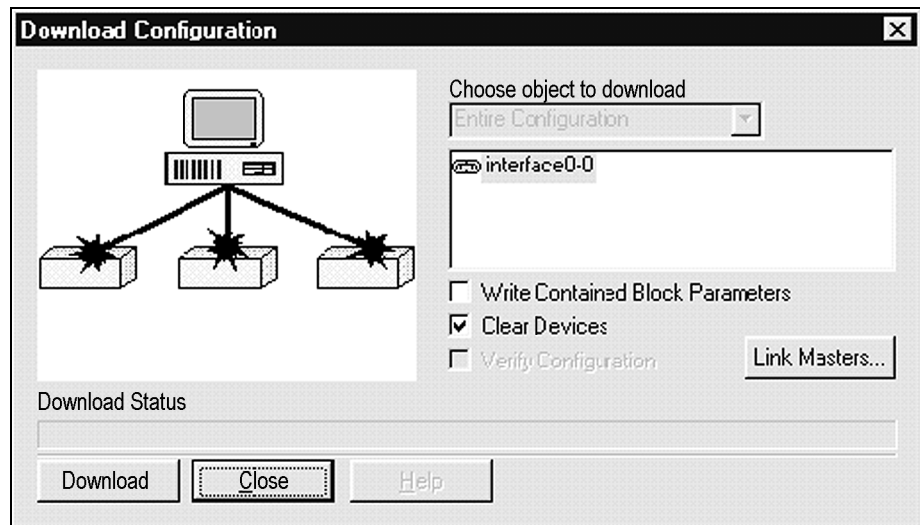



Figure 8: Download Configuration Window

Repeat the steps to put the AO block into manual mode. With the AO block in MAN mode and the FVPTB block in AUTO the valve can be controlled by writing to the OUT: VALUE within the AO block.

Transducer Block (FVPTB)

NOTE: To view the transducer block, first click the *Transducer Block* icon.

The transducer block is where all configuration, calibration and diagnostics are set up, and read. Due to the large amount of data that can be accessed in the transducer block, the custom view option should be used and the parameters of interest selected. To do this, choose the *Custom* tab in the *FVPTB* Window and click the *Custom* button on the tool bar. Check the items to view in the pop-up selection menu. Check the *Periodic Update* button to have the Configurator update the data every couple of seconds.

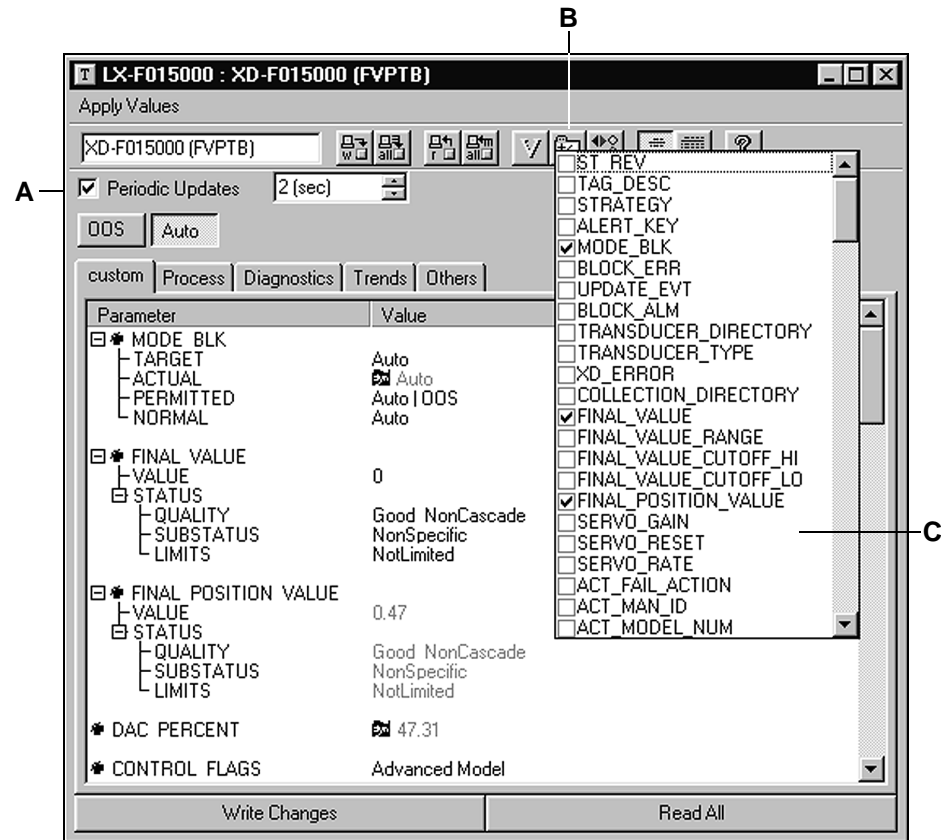

A. Periodic Update Box B. Custom Parameters C. Selection Menu

Figure 9: Transducer Block Window

If the positioner is to be controlled by the AO block, the FVPTB block must be in Auto. If the positioner is to be controlled by the FVPTB the AO block must be in OOS and FVPTB in OOS. To move the valve, write to FINAL_VALUE: VALUE.

Logix 1400 Digital Positioner Configuration

Configuration of the Logix 1400 digital positioner is done almost exclusively in the transducer block (FVPTB).

Open the transducer block (FVPTB) window by double-clicking its tag in the main *NI Configurator* window. The FVPTB MODE_BLK: TARGET parameter must be set to OOS in order to do any configuration.

Due to the large number of parameters in the FVPTB configuration is easiest under the *Custom* tab. Use the *Custom Config* button to select parameters to be viewed or modified. Check the *Periodic Update* box to ensure that the data being viewed is current.


The following table summarizes basic configuration of a Logix 1400 digital positioner on a 25 square-inch actuator and linear valve.

Table 1: Logix 1400 Digital Positioner Parameters

Parameter	Default Value	Function
MODE_BLK:TARGET	Auto	Determines the mode of the function block.
FINAL_VALUE	No default	Command going to positioner before characterization, soft stops, or MPC.
FINAL_VALUE_CUTOFF_HI	110%	This will saturate the actuator in an open position, if FINAL_VALUE becomes greater than the cutoff value.
FINAL_VALUE_CUTOFF_LO	1%	This will saturate the actuator in a close position, if FINAL_VALUE becomes less than the cutoff value. This is the same has the Minimum Position Cutoff feature of the Logix 1200 digital positioner. The new terminology matches FF terminology.
FINAL_POSITION_VALUE	Dynamic	Actual stem position in percent of stroke.
DAC_PERCENT	Dynamic	DAC output in percent.
CONTROL_FLAGS	Advanced Model	Used to tell positioner type of actuator and characterization to use.
GAIN_UPPER	2	Maximum proportional gain used.
GAIN_LOWER	1	Minimum proportional gain used.
GAIN_MULT	0.05	Adjust the rate of change between GAIN_UPPER and GAIN_LOWER. Same as in the Logix 1200 digital positioner.
IGAIN	10	Integral gain.
IL_OFFSET	30-70%	DAC value to hold spool in a null position. This value is automatically adjusted during a stroke calibration procedure.
SOFTSTOP-HIGH	110%	Software upper stroke limit.
SOFTSTOP-LOW	-10%	Software lower stroke limit.
PRESS_UNITS	Psi	Units pressure sensors reading are expressed in.
TEMP_UNITS	Degrees F	Units temperature is expressed in.

To set the FVPTB in OOS mode, double-click on MODE_BLK: TARGET, in the pop up box check the OOS box. Click the *Write* button. With the block mode is set to OOS (MODE_BLK: ACTUAL = OOS), editing the parameters is now permitted. To change or

edit a parameter, double-click on the value, and make the changes in the *Edit* box. Remember to click the *Write* button to apply the change.

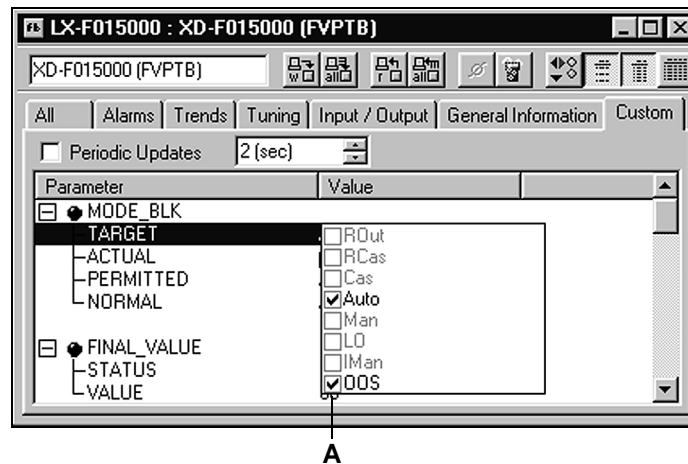

A. *MODE_BLK*: *TARGET* must have *OOS* selected to edit parameters in the *FVPTB*

Figure 10: FVPTB Parameter Window

Parameter Definitions:

The following list summarizes some of the key parameters within the Logix 1400 digital positioner. For definitions of parameters not listed, use the help window in the NI Configurator. The Logix 1400 digital positioner automatically stores changed parameters in non-volatile memory whenever the change is made.

FINAL_VALUE: This is the set point or command received by the Logix 1400 digital positioner.

FINAL_VALUE_CUTOFF_HI: If *FINAL_VALUE* is greater than *FINAL_VALUE_CUTOFF_HI*, the positioner will saturate the actuator in an open position. A 1 percent hysteresis added, so *FINAL_VALUE* must be more than 1 percent smaller than *FINAL_VALUE_CUTOFF_HI* before the positioner will allow the valve to start closing. This feature is disabled in *SOFTSTOP_HIGH* is less than or equal to 100 percent

FINAL_VALUE_CUTOFF_LO: If *FINAL_VALUE* is less than *FINAL_VALUE_CUTOFF_LO*, the positioner will saturate the actuator in a closed position. A 1 percent hysteresis is added, so *FINAL_VALUE* must be more than 1 percent of *FINAL_VALUE_CUTOFF_LO* before the positioner will allow the valve to start opening. This feature is disabled in *SOFTSTOP_LOW* is less than or equal to 0 percent

FINAL_POSITION_VALUE: This is the valve's stem position as sensed by the positioner. This value is always reported in percent of stroke.

CONTROL_FLAGS: Eight options exist under *CONTROL_FLAGS*. Each option has a significant effect on how the positioner controls the valve. Make sure that the *CONTROL_FLAGS* is configured correctly.

- **Quick Opening Curve:** The Logix 1400 digital positioner comes with a default quick opening curve. If this response is desired, check the *Quick Opening Curve* and *Custom Characterization Active* boxes
- **Equal Percent Curve:** The Logix 1400 digital positioner comes with a default equal percent curve. If this response is desired, check the *Equal Percent Curve* and *Custom Characterization Active* boxes.

- **Actuator Type:** Check this box only when the positioner is mounted on a single acting type actuator. This will disable the second pressure sensor.
- **Positioner Model:** This parameter is automatically set at power-up. It tells the positioner if it is an advanced (pressure sensors) model or standard (no pressure sensors). If the user wishes to over-ride the Auto Model Detect feature, consult the factory.
- **Actuator Style:** Check this box only if the positioner is mounted on a rotary type actuator.
- **Custom Characterization Active:** Check this box if the user wishes to have the FINAL_VALUE parameter characterized. If the *Quick Opening* or *Equal Percent* box is also checked the positioner will use a factory defined curve. If only *Custom Characterization Active* is checked a user-defined curve will be used. Note that when this box is checked the curve can not be changed. If the user wishes to use a different curve, or edit the custom curve, the user must first uncheck this box.
- **Fail Position:** Currently this has no function.
- **Air Action:** Check this box only if the actuator is tubed to be ATC (Air-To-Close) After configuring CONTROL_FLAGS, remember to click the *Write* button to apply the values.

GAIN_UPPER: The Logix 1400 digital positioner uses a special gain algorithm. The proportional gain increases with a decrease in error. This allows for maximum resolution and speed. GAIN_UPPER is the upper limit to proportional gain.

GAIN_LOWER: The Logix 1400 digital positioner uses a special gain algorithm. The proportional gain increases with a decrease in error. This allows for maximum resolution and speed. GAIN_LOWER is the lower limit to proportional gain.

GAIN_MULT: The Logix 1400 digital positioner uses a special gain algorithm. The proportional gain increases with a decrease in error. This allows for maximum resolution and speed. GAIN_MULT adjust the transition rate between GAIN_UPPER and GAIN_LOWER.

IGAIN: In addition to proportional gain the Logix 1400 digital positioner used integral as well. This in the integral gain setting. Typically this is set to 10.

IL_OFFSET: This parameter tells the positioner where the spool valves 'null' position is. This value is set during a stroke calibration procedure, and typically requires no further adjustments.

CMD_USED: This is the set point or command to which the positioner is controlling. After FINAL_VALUE is acted on by Characterization, Softstops and FINAL_VALUE_CUTOFF, CMD_USED reports the modified or used command value.

CALIBRATE: This parameter initiates Calibration. Three types of calibration are available: stroke, pressure sensors (advanced models only) and stroke time test. Stroke time test will measure the stroke speed of the actuator from a 1 percent to 99 percent position, and from 99 percent to 1 percent. To learn more about calibration refer, to the Calibration section of this document.

PRESS_CAL: Before doing a pressure sensor calibration, enter the supply pressure being used (in units expressed by PRESS_UNITS).

SOFTSTOP_HIGH: Software-imposed stroke limit. The positioner will not allow the valve to open beyond the value shown in this parameter.

SOFTSTOP_LOW: Software-imposed stroke limit. The positioner will not allow the valve to close beyond the value shown in this parameter.

CYCLE_COUNTER: : This parameter counts the number of cycles that have occurred.

CYCLE_DEADBAND: In order for a cycle to be counted, it must be greater than the value in this field.

CYCLE_LIMIT: If CYCLE_COUNTER exceeds this value, the yellow LED will start to blink and a warning generate in TRAVEL_FLAGS.

TRAVEL_ENG: Total distance the valve traveled.

TRAVEL_DEADBAND: Amount in percent of stroke the valve must move for the movement to be added to TRAVEL_ENG.

TRAVEL_ALERT: If TRAVEL_ENG exceeds this value, the yellow LED will start to blink and a warning generated in TRAVEL_FLAGS.

STROKE_ENG: Stoke length of valve. This value is used to calculate TRAVEL_ENG.

TRAVEL_UNITS: Units of measure used to calculate TRAVEL_ENG.

PRESS_UNITS: Units of measure that pressure sensor readings are expressed in.

TEMP_UNITS: Units of measure that temperature is expressed in.

FAIL_MODE: Should a communication loss occur between the fieldbus card and positioner card this parameter sets the fail-mode of the valve. Nothing selected will cause the positioner to hold the last known command should a communication loss occur.

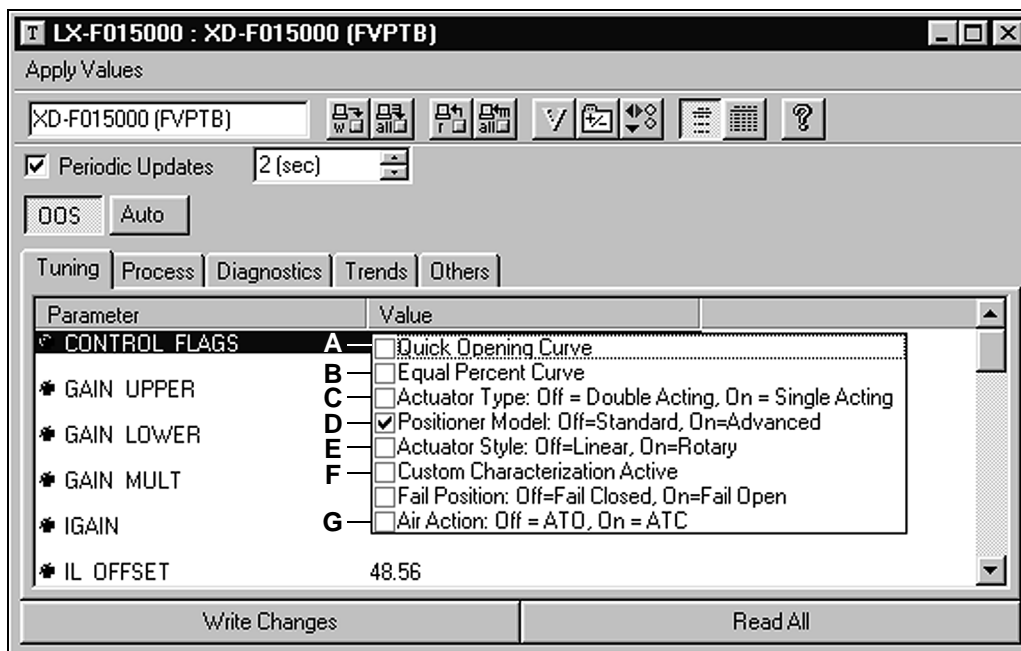


Figure 11: CONTROL_FLAGS Window

Stroke Characterization

In addition to three pre-defined and embedded characterization curves, the Logix 1400 digital positioner has a 21-point custom stroke characterization feature. This allows the user to define a unique set of operating parameters customizable to his process conditions.


Table 2: Transducer Block Characterization Parameters

Parameter	Description	Value — Meaning	Comments
MODE_BLK	The operating mode of the transducer block	Permitted Modes: Auto — Auto (target mode) OOS — Out Of Service	The transducer block must be out of service before the user can edit or change characterization.
CONTROL_FLAGS	Byte values which select positioner operation features	1 Quick Opening Curve* 2 Equal Percent Curve 3 Actuator Type 4 Advanced Model 5 Rotary Actuator Gain 6 Custom Characterization Active 7 Fail Position TBD 8 Air Action	Loads factory-defined QO curve as custom curve. Loads factory-defined equal percent curve as custom curve. Activates custom curve. If 'Off', response is 'Linear.'
CURVEX	Numeric X value array for custom point. (1x21 array points)	X-axis value for custom stroke characterization point. Range -10 to 110	Pair each X-value with corresponding Y-value to define the desired point. Values must be in ascending (or equal) order.
CURVEY	Numeric Y value array for custom point. (1x21 array points)	Y-axis value for custom stroke characterization point. Range -10 to 110	

* Must not be selected if a custom curve is to be created or edited.

Characterization Procedure

The following procedure outlines setting up a custom stroke characterization.

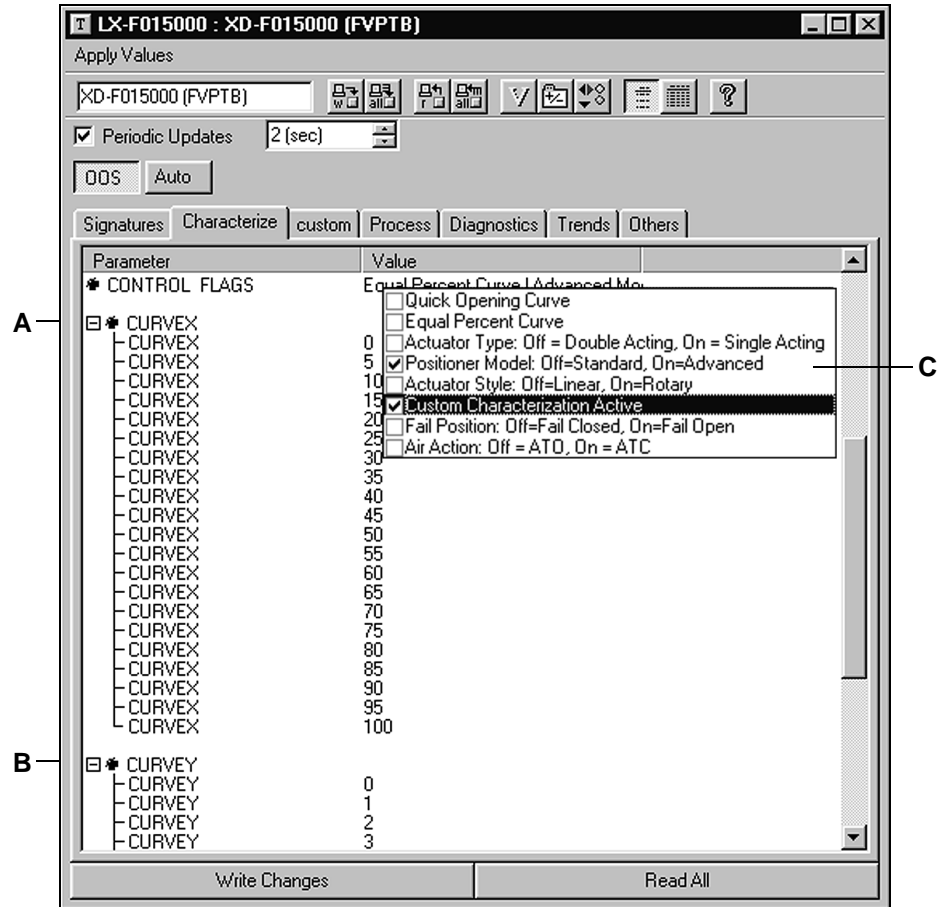

A. X-axis variables (21) B. Y-axis variables (21) C. Control Flags window

Figure 12: Custom Stroke Characterization Window

Steps:

1. Verify the process is in a safe condition and that the valve may be taken out of service.
2. Put the Transducer block MODE_BLK out of service.
3. Make sure that *Quick Opening Curve*, *Equal Percent Curve*, nor *Custom Characterization Active* are selected in CONTROL_FLAGS.
4. Enter the values for CURVEX and CURVEY to define the desired response. Care must be taken to assure that each CURVEX value has the correct corresponding CURVEY value. The user may choose any number in the range to define the curve. The 21 CURVEX points do not need to be evenly spaced, if so desired. However, the CURVEX values must be in ascending (or equal) order. The CURVEY points may be any value in the range, ascending or descending. The response is a linear interpolation, or straight-line, response between points. All 21-points must be defined. (i.e. If only five point sets were needed to define the desired operation, the remaining 16 points would need to be set to 110.)
5. Write the changes to the Logix 1400 digital positioner.

6. Activate the custom curve by selecting *Custom Characterization Active* in CONTROL_FLAGS. (**NOTE:** Make sure that neither *Quick Opening Curve* nor *Equal Percent Curve* has been selected.)
7. Write the changes to the Logix 1400 digital positioner.
8. Verify the proper operation of the stroke response by incrementally writing values to FINAL_VALUE. (The Resource block must also be OOS first.) CMD_USED, FINAL_POSITION_VALUE, and the valve response should track the desired curve.
9. Return the valve to service by returning both MODE_BLKs back to Auto.

Characterization Retention

Once a custom curve has been loaded into the Logix 1400 digital positioner's memory it is retained in the EPROM until it is either edited or replaced. Turning *Custom Characterization Active* on or off now selects between a linear response (Off), or the new custom curve (On). If either of the other two factory curves is selected, it will overwrite the custom curve in RAM only. The custom curve will automatically be activated again when the factory curve is deselected.

Logix 1400 Digital Positioner Calibration

Re-Cal Button:

Calibration of the Logix 1400 digital positioner is very straightforward. The *Re-Cal* button will perform a stroke calibration procedure, but the DIP switches are no longer used. The parameter CONTROL_FLAGS must be configured over the fieldbus network prior to using the *Re-Cal* button. Once the positioner is properly configured, press and hold the Re-Cal button for five seconds. The *Re-Cal* button is only operational when the FVPTB is in OOS mode.

Stroke Calibration:

To perform a stroke calibration, complete the following steps:

- Set the Transducer block to OOS.
- Ensure the positioner is configured correctly. Refer to previous section.
- Check the *Periodic Update* box under the *Custom* tab, in the Transducer block window.
- Ensure air supply and valve tubing matches configuration.
- Select *Perform a stroke calibration procedure* option under the CALIBRATE parameter in the NI Configurator.
- Click the Write Button.

The valve should now go closed, open, then to a mid-stroke position for a few seconds. CALIBRATE will return to normal operation at the completion of the calibration process

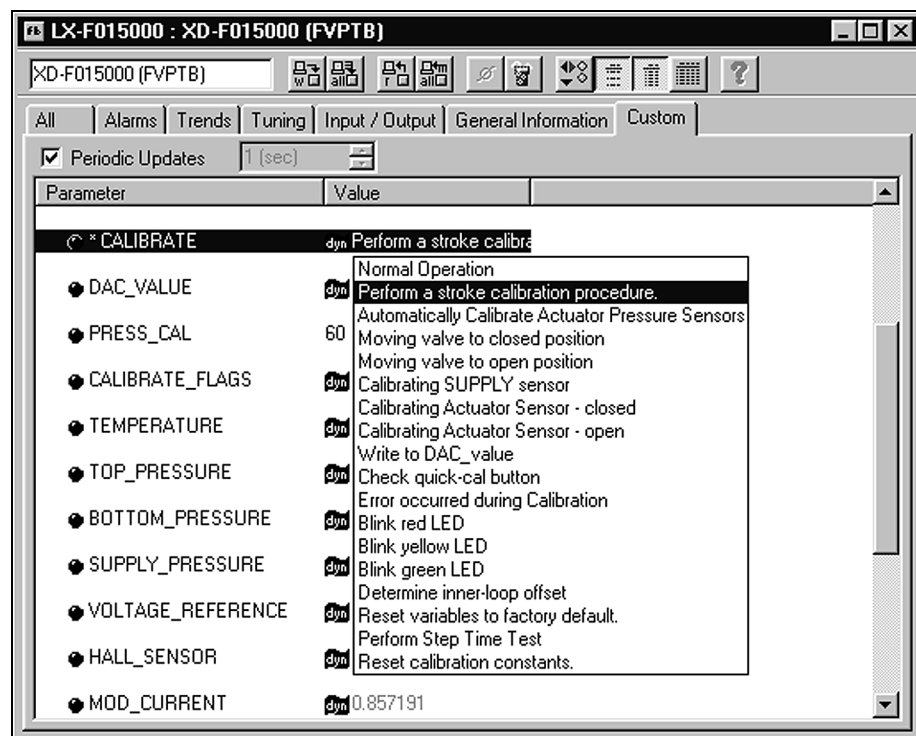


Figure 13: Calibration Window

Pressure Calibration:

To perform a pressure calibration complete the following steps:

- Set the Transducer block to OOS.
- Check the periodic update box under the *Custom* tab, in the *Transducer Block* window.
- Ensure the positioner is an advance model (see parameter CONTROL_FLAGS).
- Ensure air supply.
- Set PRESS_CAL to air supply pressure value.
- Set PRESS_UNITS to the proper pressure units
- Select *Perform Pressure Calibration* option under the CALIBRATE parameter in the NI Configurator.
- Click the *Write* button.

The valve should now go closed, then open. CALIBRATE will return to normal operation at the completion of the calibration process.

Controlling the Valve

The Logix 1400 digital positioner (or the valve position) can be controlled with one of three basic methods. The first method is to control the valve directly from the Transducer block (FVPTB). When setting up and configuring the positioner, this is a logical method to use. The second method is through the AO block. This method will verify that the positioner is receiving a command from the AO block. This method can be used when setting up the FF network or when troubleshooting the network. The final method is to put the positioner in a FF network and receive its command signal from a function block in a device on the loop.

From the XD:

Control from the FVPTB is the easiest to set up. The FVPTB and AO must both be set to OOS. This can be accomplished by two methods: The simplest method is to put the Resource block in OOS. (Whenever the Resource block is in OOS mode, all other blocks will go to the same mode.)

NOTE: This could cause problems if the device has any function blocks being used in an FF network, because all function blocks will go to OOS mode, and stop executing.

The second method is to have the FVPTB and AO OOS open their respective windows in the Configurator and set MODE_BLK: TARGET to OOS.


Once the two blocks are set to OOS write, in percent of stroke, the new valve position in the FVPTB's FINAL_VALUE: VALUE parameter field and click the *Write* button. The positioner will move the valve to that position.

From the AO:

Control from the AO block is almost as simple. The AO must be set to MAN (manual) mode, and the FVPTB must be in *Auto*. To get the any of the function blocks out of OOS the RB must be set to *Auto*.

To get the AO block into MAN mode two parameters must be set. The CHANNEL parameter must be set to 1 and the SHED_OPTS parameter to anything but initialized.

(NormalShed_NormalReturn is the typical setting.) After these two parameters are properly set, the AO MODE_BLK can be changed to MAN.

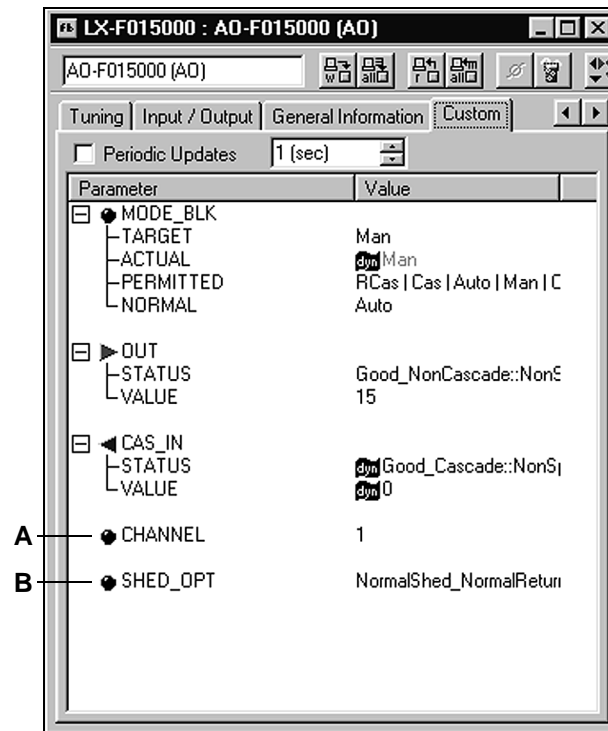

A. CHANNEL must be set to 1 B. SHED_OPT cannot be set to Uninitialized

Figure 14: Manual Mode Configuration

With the AO now in MAN mode set the FVPTB to Auto mode. Writing to the OUT: VALUE parameter, in the AO block, will control the valve position. The FINAL_VALUE parameter in the FVPTB will now track the AO's OUT: VALUE.

FF Control:


Fieldbus control is much more complicated. The FF network must be configured with some type of transmitter (AI) and control function block (PID). The configuration must then be downloaded to the devices. For this reason, the next section will cover FF network configuration. Valve control within a FF control loop will be covered here.

Configuring the FF Network

The big advantage to an FF network is the ability to program or connect function block within a device to another FF device on the bus. This allows process control to be moved from the control room, to the field devices. This section will outline how to setup a very simple control loop. Reference to a standard FF AI block will be made. The AI block must be configured to output 0 – 100 percent. The AI could be in a temperature transmitter, pressure sensor, flow meter, 4-20 mA to FF converter, or any device with an AI block. The example in this section used SMAR's IF302 4-20mA to FF converter. Details into the setup of the SMAR AI are not included in this document.

NI Configurator Function Block Application:


Double-click on the *Function Block Application* selector in the main window of the Configurator. This will open the *Function Block Application* window. To configure or create a FF control loop, click and drag the function block tag name into the *Function Block Application* window. When released a graphical wiring block for the function block will appear in the window. Drag into the application window an AI block the Logix 1400 digital positioner PID block and the Logix 1400 digital positioner AO block. Click the *Wire* button and wire the network as seen in the figure below.

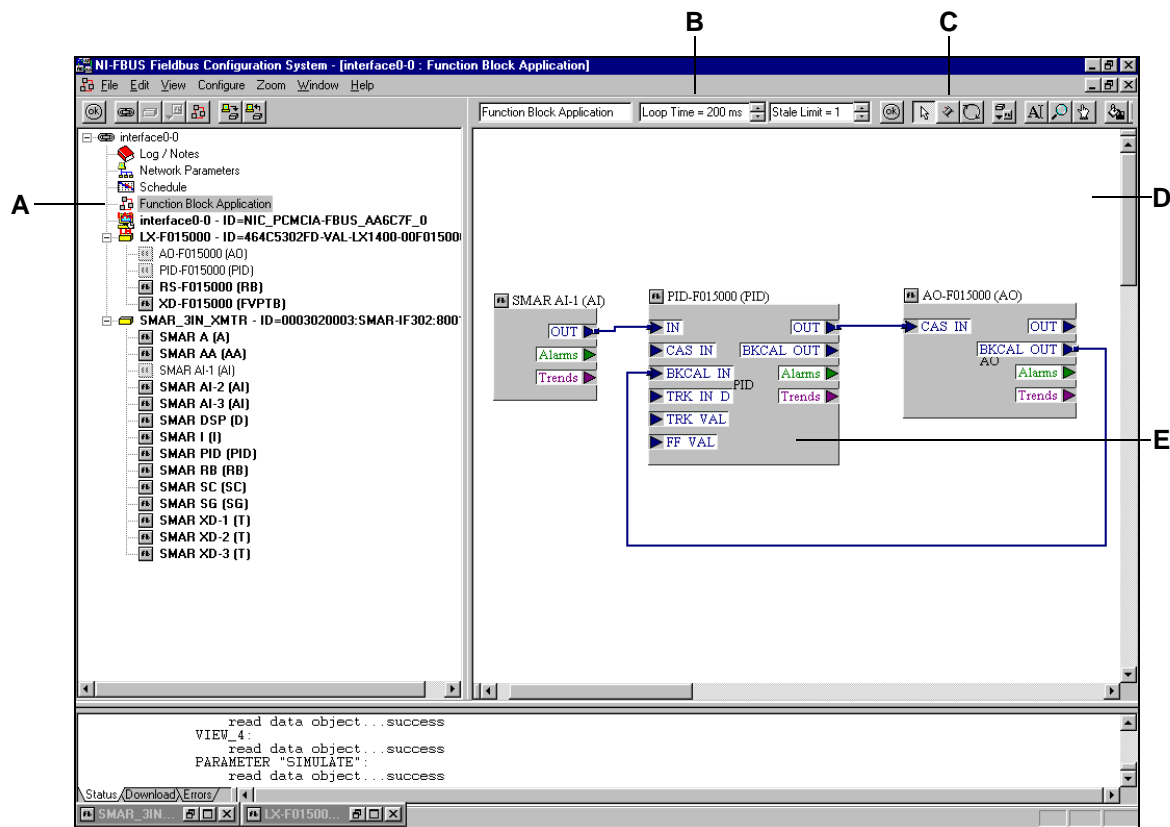

A. Function Block Application Selector **B. Loop Time Box** **C. Wire button** **D. Function Block Application Window** **E. Function Block Wiring display**

Figure 15: Function Block Wiring Window


Once the function blocks are virtually wired together the next step is to adjust to schedule. Adjusting the schedule may not be necessary for all configurations, but it seems to make downloading the configuration run more smoothly. Double-click the *Schedule Selector* to open the *Schedule* window (seen below). Execution time of the function blocks is shown in blue. Scheduled network time is shown in red. Click and slide the function blocks to allow a small amount of time between each. The Configurator schedules execution immediately after the previous block finishes execution. Next adjust the loop time. Scroll to the end of the schedule and note the total loop execution time. Go back to the *Function Block Application* window and change the value in the *Loop Time* box. Make loop time at least 100ms greater than the total sum of execution times seen in the schedule. This extra time allows for unscheduled tasks to take place on the network (such as detecting new devices) and keeping Link Masters devices updated with a live list and schedule. The shorter the Loop Time, the faster the control loop will run.

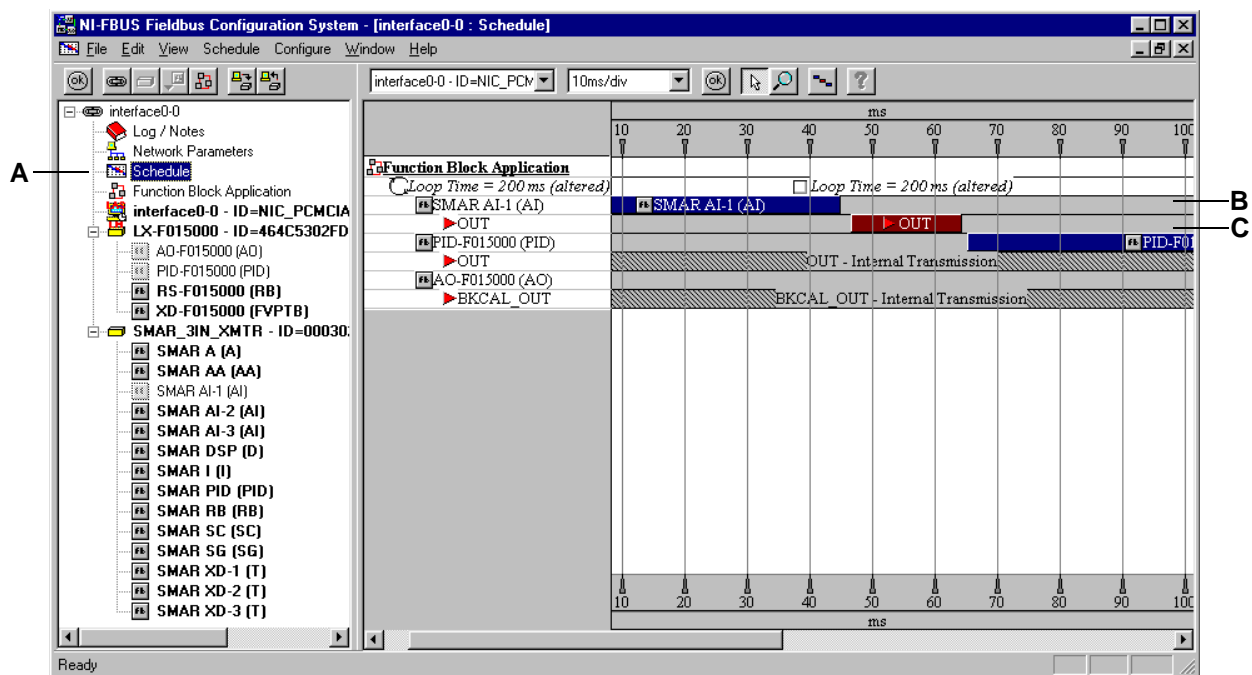

A. Schedule Selector B. Function block execution time as seen on the schedule C. Gap between function block execution time

Figure 16: Schedule Selector Window

With the function blocks programmed and the schedule adjusted, the project can be downloaded. Click the *Download Project* button on the toolbar. When the download screen pops up, click the *Link Masters* button. In the Link Masters area make sure only the NI card is selected. This is only to make the download feature run more smoothly.

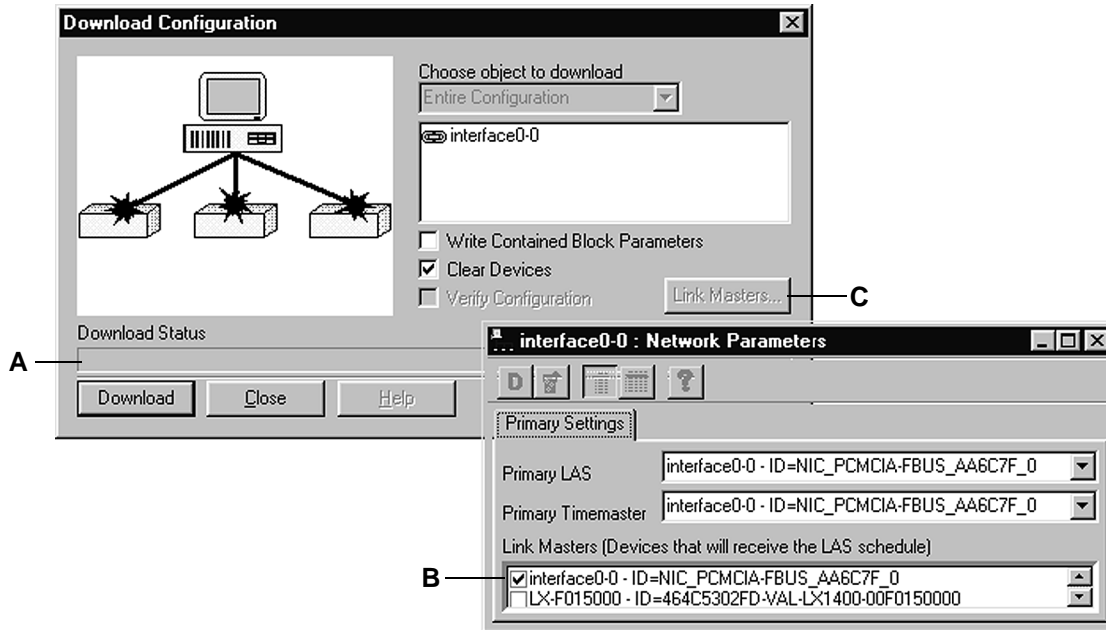

A. Download status bar B. Ensure the NI Card is selected C. Link Masters button

Figure 17: Download Projects Windows

Close the *Network Parameters* window. Click the *Download* button. The status bar will show progress of the download. The download can take several minutes. Close the window once the download is complete. The Network is now programmed or configured.

Function Block Configuration:

The next step is to configure the function blocks to run automatically. Remember that the Resource block mode for both devices must be set to Auto.

AI Block: The AI mode must be set to Auto, and the output in terms of 0 – 100 percent. The output of the AI block will be passed directly to the valve positioner in this configuration. Consult the *Logix 1400 Digital Positioner User's Manual* for configuration instructions.

PID Block: The Logix 1400 digital positioner's PID block was designed by Honeywell. This section will describe how to pass an input directly to the PID's output. For more information on how to configure the PID, consult the *Logix 1400 Digital Positioner User's Manual* or Honeywell.

Do the following to set up the PID block:

1. Set MODE_BLK: TARGET to OOS.
2. Set SHED_OPTS to NormalShed_NormalReturn.
3. Set BYBASS to Off.
4. Set CONTROL_OPTS to Direct Acting.
5. Set MODE_BLK: TARGET to Man.
6. Read the Value in IN: VALUE.

7. Write value the previous step to SP:VALUE and OUT:VALUE.
8. Set MODE_BLK:TARGET to *Auto*.

AO Block: The AO block must be put into Cascade mode. When in Cascade mode the block's output will tracks its input.

The following steps are required to set the AO block into cascade mode.

1. Set MODE_BLK: TARGET to OOS.
2. Set SHED_OPTS to NormalShed_NormalReturn.
3. Set CHANNEL to 1.
4. Set MODE_BLK: TARGET to Cas|Auto.

FVPTB Block: Set the transducer block mode to *Auto*.

Controlling The Valve:

If all the function blocks are set up as outlined above, the positioner should now tack the output of the transmitter (the AI block). If not, verify that the blocks are set up as outlined above.

Saving the Configuration:

This configuration can be saved by the Configurator. This is recommended if the PC is going to be disconnected or removed from the FF network. The Configurator is not able to reconstruct the graphical wiring diagram, so reconstructing a pre-configured network is extremely difficult. By saving the configuration, the graphical wiring diagram is saved. Saving is done upon exit from the Configurator software.

Initiating a Valve Signature

A feature of the Logix 1400 digital positioner is the ability to capture and store a valve diagnostic signature in the positioner's volatile RAM. A signature is the collected data response of the valve to a pre-defined set of operating conditions. This stored data can later be uploaded to the host system for analysis of potential problems. By comparing a baseline signature (when the valve is new) to subsequent signatures at later times, a rate of change can be tracked which can help predict possible faults in the valve before they happen. This is called 'predictive maintenance'.

NOTE: The purpose of the positioner is to act as the data acquisition device for the signature. Analysis of the data is not done on the device, but in the supervisory system.

System Preparation



WARNING: By definition, the collection of the signature requires the unmanaged operation of the positioner. Therefore, the process must be in a safe operating mode where unexpected movement of the valve will not cause a hazardous condition.

Before a valve signature can be run, the Transducer block must out of service.

Table 3: Transducer Block Signature Parameters (1 of 2)

Parameter	Description	Value — Meaning	Comments
MODE_BLK	The operating mode of the transducer block	Permitted Modes: Auto — Auto (target mode) OOS — Out of service	The transducer block must be in the OOS mode to perform a signature
SIG_FLAGS	Byte values that select which signature options are used	0 - VALVE_INIT initializes valve for signature capture. Read-only 1 - STEP_RAMP selects which type of signature is desired. Select for ramp signature. 2 - SIG_COMPLETE sets status byte when the signature has been completed, Read-only 4 - PRESS_MEAS selects if actuator pressure readings are desired as part of the signature. Select for readings 5 - BEGIN_SIG set to initiate the signature routine.	Select the desired signature options and then make sure the signature parameters are set to the desired operation before beginning the signature.
SIG_START	Beginning position point (%) for signature	-10% to 110% position range	Set higher than the stop position for a valve closing signature.
SIG_STOP	Ending position point (%) for signature	-10% to 110% position range	Set lower than the starting position for a closing signature
RAMP_RATE*	Desired rate (% per minute) for ramp	%/Min. (Minimum value is 1.0.)	Typically this is set to 100. Very long times could result in completely filling the 10K RAM buffer. Can only be set when STEP_RAMP in SIG_FLAGS has been selected.

Table 3: Transducer Block Signature Parameters (2 of 2)


Parameter	Description	Value — Meaning	Comments
SAMPLE_TIME	Data acquisition time between samples	Seconds. Range 0.1 to 2.55. Set to a valid value before running signature. Typically 0.1	Determines the number of data points stored in the signature.
STEP_TIME*	Delay time after step	Seconds. Range 0-650.0 Typically set to 0.1	Allows settling time to capture valve response to the step. Can only be set when STEP_RAMP in SIG_FLAGS is <i>not</i> selected.
SIG_INDEX	Pointer used for data transfer	Write the desired packet value.	Writing a value between 1 and the max number shown in SIG_COUNTER moves that packet of data into the SIG_DATA array for retrieval.
SIG_COUNTER	Indicates number of data points collected	Increments by 1 as each data packet is collected	
SIG_DATA	Array for the storage and transfer of signature data		Order of data is: Command (%) Position (%) Port 2 pressure Port 1 pressure
STROKE_TSTPSI	Supply pressure in psi for stroke test	150 psi max.	
STROKE_OPENTIM	Stroking time during opening	Seconds	Determined during the last stroke calibration where the Step Time Test option was ran
STROKE_CLOSEDIM	Stroking time during closing	Seconds	Determined during the last stroke calibration where the Step Time Test option was ran

* **Special Note:** Because of the internal database size limit of 10K within the fieldbus device, the values for RAMP_RATE or STEP_TIME may be recalculated to the most reasonable value to allow using the database. The new value will appear in the parameter after the desired one is written. This is done to prevent accidental overflow of the database.

The database may possibly overflow because of timing constraints. If this should happen, SIG_COMPLETE will not appear, but BEGIN_SIG will be turned off. BLOCK_TEST element 6 will be set to 10 (0x0a) as an error indication. Since this does not affect operation of the positioner itself, no actual error will be reported over fieldbus.

Signature Procedure

The following steps are an example of how to initiate a **ramp signature** capture.

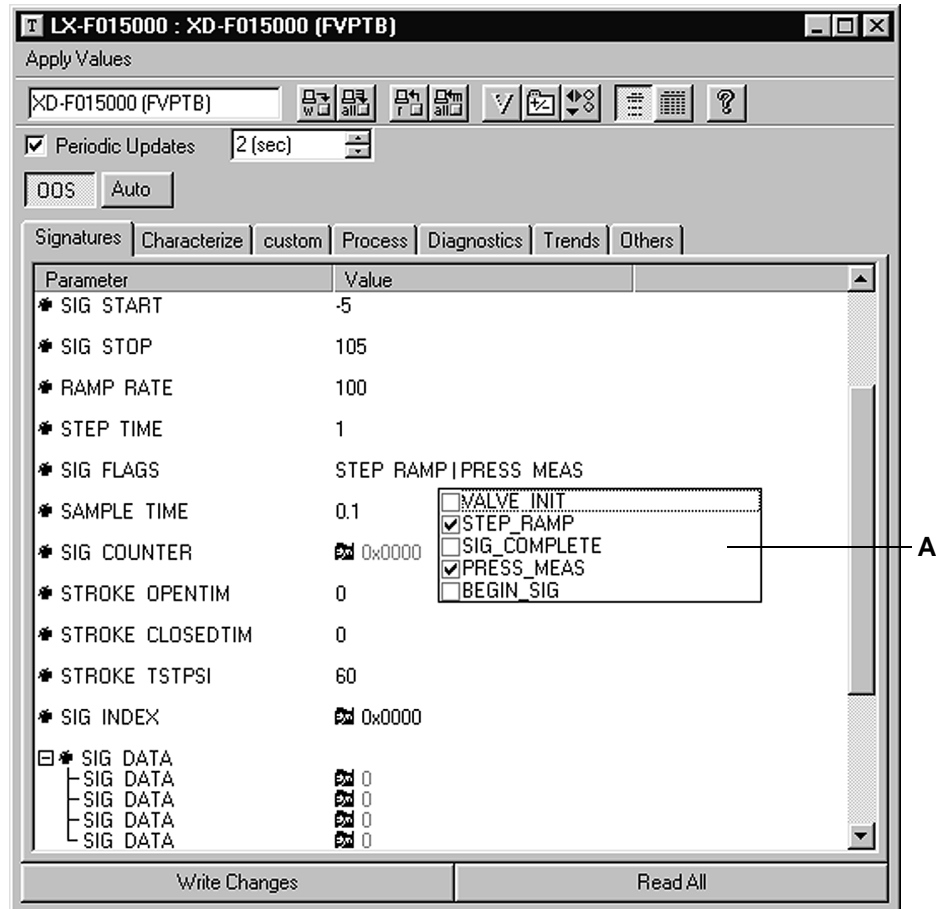

A. Signature Flags box

Figure 18: Ramp Signature Window

1. Make sure the process is in a safe condition and notify the control room that the valve will temporarily be taken off-line.
2. Verify preparedness to proceed.
3. Put the Transducer block MODE_BLK out of service.
4. Set SIG_START to desired value.
5. Set SIG_STOP to desired value.
6. Set SAMPLE_TIME to desired value. (Typically 0.1)
7. In SIG_FLAGS, select; STEP_RAMP, PRESS_MEAS.
8. Write values to the Logix 1400 digital positioner.
9. Set RAMP_RATE to desired value (typically 100).
10. Write value to the Logix 1400 digital positioner.
11. In SIG_FLAGS, select BEGIN_SIG.
12. Write value to the Logix 1400 digital positioner.

13. The valve will stroke to the beginning position (as defined by SIG_START) and will begin ramping to the desired ending position, as defined by SIG_STOP. Notice that SIG_COUNTER will increment while this takes place. (Typically approximately 670 data sets will be collected with the above settings and full stroke of the valve. Exact numbers will vary.)

14. SIG_FLAGS indicates SIG COMPLETE.

15. Return the MODE_BLK to Auto.

16. Notify control room the valve is back on-line.

The stored signature will remain in the Logix 1400 digital positioner volatile RAM until the either the unit is powered down, or another signature is taken which overwrites the previous one.

STEP SIGNATURE

If a step signature was desired, **do not** select STEP_RAMP in SIG_FLAGS, and then set the STEP_TIME prior to selecting BEGIN_SIG.

Collection of Stored Signature

The collection of the stored signature is accomplished by the host system. It is not part of the device. See host system programming.

A simple utility using National Instruments NIFBUS is available from Flowserve for retrieving a signature file. This file is stored in a text format that can be imported into other programs for plotting and analysis.

Contact Flowserve for more details.

Contact Information

Fieldbus Foundation

9390 Research Blvd.

Suite 11-250

Austin, TX 78759

512-794-8890 voice

512-794-8893 fax

www.fieldbus.org/information/

RELCOM Inc. (FF power conditioners and terminators)

2221 Yew Street

Forest Grove, OR 97116

800-383-3765 voice

503-357-0491 fax

E-mail: fieldbus@relcominc.com

National Instruments (Configurator software)

6504 Bridge Point PKWY

Austin, TX 778730-5039

512-794-0100 voice

Support number: 512-794-5678

www.natinst.com

support@natinst.com

