



**SY-1522**

**FM Transmitter. MP3 player**

**USB / Micro SD slot**

# User Manual

Thank you for purchasing the Sytech SY-1522 FM transmitter. We are sure this product will satisfy your needs. Welcome to Sytech!

## KEY FEATURES:

- Numerical LCD display.
- Supports USB disk & Micro SD card.
- Supports MP3 format files.
- Selectable frequencies: range from (87.5 to 108.0 MHz).
- 206 channels options : 87.5—108MHZ.
- 5 Equalizer settings : Natural, Popular, Rock, Jazz, Classic
- Saves the last frequency setting.
- 4 Playing modes: All, Folder, One, Random.
- Rotating shaft which makes it convenient for installation.
- Supports 12V voltage.

## Operation:

1. Insert the Sytech FM transmitter to a 12V car cigarette socket power.
2. Tune your car stereo to your desired FM frequency.
3. Tune your FM transmitter to the same frequency which has been set in your car stereo. Use the ►► to go forward or ◀◀ on the FM transmitter or on your remote control to go forward or backwards.
4. Plug a USB disk, MP3, MP4 player or a SD card into the unit. The SY-1522 will play and transmit the MP3 files automatically to your car speakers.

### Note:

1. Make sure MP3 files are recorded into the Flash memory.
2. Make sure to choose a non-interfering FM frequency to avoid background noise.
3. When inserting a Micro SD card and a USB stick, the unit will read the first device which has been inserted.

## **LCD DISPLAY:**

LCD display will show the selected frequency or the volume level.

## **VOLUME LEVEL:**

Long press the “▶▶” button to increase the volume.

Long press the “◀◀” to decrease the volume.

## **FREQUENCY SETTING:**

To adjust the FM frequency, press the CH + or CH- buttons. The frequency will change by 0.1 Mhz upwards or downwards.

The frequency can also be inserted directly with the help of the numerical keys on the remote.

Example: if u wish to input a direct frequency such as 93.3, simply press the 9,3,3 on your remote and Press CH to confirm.

## **SELECT A TRACK:**

Press the “▶▶” key to select the next track or “◀◀” to select the previous track.

The other option to select a track is by inputting directly the track number from the remote control.

Example: Track 18. Press the buttons 1,8.

## **REPEAT MODE:**

To activate the repeat mode, while music is playing, long press the PLAY button to switch between the Different options:

- 1: Repeat all
- 2: Repeat the folder
- 3: Repeat One
- 4: Random

Note: The repeat mode can only be activated from the FM transmitter.

## **EQUALIZER MODE:**

The SY-1522 includes 5 equalizer modes: Natural, Popular, Rock, Jazz, Classic

To activate the equalizer, press the EQ button on your remote control.

Note: The EQ function will only work from the remote control, by pressing the “EQ” button.

## **SELECTING A FOLDER:**

If your USB or Micro SD card contains more than 1 folder, press the Folder + or Folder – buttons on the remote control, to select your desired folder.



### REMOTE FUNCTIONS:

CH-: adjust the FM frequency backwards.

CH+: adjust the FM frequency upwards.

CH: Confirm the FM frequency once adjusted.

“◀◀”: Select the previous song.

“▶▶”: Select the next song.

“▶||”: Playback a song or pause a song

VOL-: Decrease the volume

VOL+: Increase the volume

EQ: Select the Equalizer mode

Folder +: Select the next folder.

Folder -: Select the previous folder

0-9: Change the FM frequency, or change the track number.

## TECHNICAL SPECIFICATIONS.

<b>Frequency</b>	87.5-108 MHZ
<b>Frequency Stability</b>	±10ppml(-10°C+50°C)
<b>Voltage</b>	12V
<b>Music Format</b>	MP3 Format
<b>USB</b>	USB 2.0 Hi-Speed interface
<b>Transmit Distance</b>	3-5 M
<b>Distortion</b>	≤3%(F=75KHZ,f=1KHZ)
<b>Signal to noise ratio</b>	≥45dB
<b>Display</b>	LCD Display
<b>Material</b>	Plastic and Metal
<b>FUNCTION FEATURE:</b> <ul style="list-style-type: none"><li>• LCD screen, displays the number;</li><li>• Supports USB disk &amp; Micro SD card;</li><li>• Supports MP3 format files;</li><li>• 206 Channel : 87.5— 108MHZ;</li><li>• Draws power from car cigarette lighter;</li><li>• Supports 4 loop modes;</li><li>• Memorize the last played frequency, song and volume;</li><li>• Remote control</li></ul>	

## DECLARATION OF CONFIRMITY

All company names, brands and products are trademarks of their respective companies.

### DECLARATION OF CONFIRMITY

Manufacturer: Sytech. Satyatrade S.L

Address: Pol. Ind. La Raya – C/ Guadalquivir, 2 – 28816 Camarma de Esteruelas - Madrid – ESPAÑA.

Tel: 902 430967

Fax: 91-886-42-85

C.I.F: B83254763

Declare under our sole responsibility that the product:

Sytech® FM transmitter SY-1522

complies policies, standards and essential standards of the European Union Directive 89/336/EEC (EMC Directive).

Manufactured in: China

