



## Installation and Operation Manual for Contraband Control Toilet Inspection Unit.

This manual is suitable for the following models:

|                        |   |
|------------------------|---|
| <b>Standard Model:</b> |   |
| SPPL.CT.2              | Contraband Control Toilet Inspection Unit Type 2. |

### CONTENTS

|                                       |   |
|---------------------------------------|---|
| CONTENTS .....                        | 1 |
| RECOMMENDATIONS .....                 | 2 |
| RESPONSIBILITIES.....                 | 2 |
| SCOPE .....                           | 2 |
| FEATURES .....                        | 2 |
| REFERENCED AUSTRALIAN STANDARDS ..... | 2 |
| INSTALLATION.....                     | 2 |
| Water Supply Requirements .....       | 2 |
| Installation.....                     | 2 |
| OPERATION .....                       | 3 |
| Cleaning Instructions .....           | 3 |
| Glove Replacement.....                | 3 |
| Warranty .....                        | 4 |
| Customer Complaints.....              | 4 |

## RECOMMENDATIONS

Upon receiving a Stoddart product, inspect immediately for any visible signs of shipping damage and notify the carrier immediately. When removing the product from its packing, be careful not to dent or scratch outer surface. Any concealed damage should be noted and reported immediately to the freight carrier. A claim should be filed with carrier if appropriate.

## RESPONSIBILITIES

Stoddart thoroughly inspect all products they are despatched from our factory. Stoddart Manufacturing will not accept responsibility for shipping damage.

The Plumber is responsible to ensure that the system is installed in accordance with all specific requirements of local codes and regulations (including AS 3500). If questions or complications should arise during the installation of a Stoddart product that cannot be solved using the accompanying instructions, please contact our offices or local representatives.

*Note: It is the responsibility of the plumber to install this product in accordance with AS3500.*

## SCOPE

This product is designed to be used by Customs in airports and corrections facilities where inspection of faeces is required to recover contraband capsules.

## FEATURES

- Fully welded seamless outer construction.
- Access hatches both ends

## REFERENCED AUSTRALIAN STANDARDS


|   |  |                          |
|---|--|--------------------------|
| Pan Outlet Dimension  | Shall comply with the applicable clauses   | AS 1172.1 - Clause 2.2.3 |
| Dezincification resistance  | Dezincification resistance applicable to copper alloy components in contact with mains water   | AS 2345 - 2006           |
| Contamination of water  | Products For Use In Contact With Drinking Water  | AS 4020 - 2005           |
| Pipes and Fittings  | Dimensional compliance with relevant or corresponding Australian Standard for the pipe or fitting  | AS 3688 - 2005           |
| Joints (i.e. Spigots, sockets, flanges, or other joint components, where interfacing other authorized components) | Dimensional compliance with relevant or corresponding Australian Standard for the pipe or fitting<br>Pipe Threads of Whitworth Form. – Part 2 Fastening Pipe Threads | AS 3688 - 2005           |
| Installation  | Warranty / Installation instructions shall be provided by the manufacture  | AS3500.2 - 2003          |

## INSTALLATION

### Water Supply Requirements

Installation of a 20mm water connection is required with an anti-syphon, non-return valve if water is supplied from mains. Supply should have a tap that is easily accessible for the operator.

### Installation

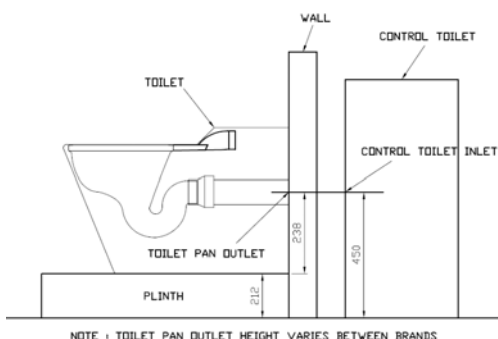

- Remove the packing from the Control Toilet Unit.
- Locate the unit level ensuring toilet will drain to unit.
- Connect the unit waste to the floor waste. Note: it must drain through an S trap to sewer.
- Connect the waste lines to the unit using a Furnco flexible coupling to the toilet discharge pipe and basin discharge pipe.
- Connect the water supply.
- Install fixing screws through feet to floor as required.
- Test Flush mechanism and check for leaks.
- Clean stainless steel surfaces.

*Note: Protect the product at all times by wrapping in plastic until all other work is complete and the system ready to be put into operation.*

## OPERATION

The Control Toilet Inspection unit has been designed so that the majority of effluent can be washed away by the permanent rose.

Gloves and a spray rinse unit enable the operator to thoroughly clean the contents of the basket and surrounding deck prior to removing contraband capsules etc. from the end hatch.

After use, hang the spray-rinse back on the hook on the back wall.

Keep the gloves inside the cabinet. They can be hung over the cross bar to dry or they can be laid across the deck in front of the basket.

The access doors should be kept closed except when removing contents.

*Note: the spray-rinse spray is for removing sticky residue - care should be taken when directing it at any fragile contraband capsules.*



## Cleaning Instructions

All surfaces of the product should be cleaned with mild soap and water or a neutral product.

Carefully rinse away all surplus cleaning product.

**IMPORTANT:** *Never use harsh or abrasive cleaners on stainless steel. Do not use chlorinated or bleach water*

Care should be taken when cleaning the interior of the cabinet. Avoid spraying water directly at the corners of the hatch hinges. Prolonged direct spray from the spray rinse may push a small amount of water past the door seal. If this occurs, the outside should be wiped dry with paper towel.



## Glove Replacement

The gloves are durable gloves designed for industrial applications. They will perish over time and can be replaced. The gloves are 762mm long PVC gloves; part # P130 from Elliott Australia (or similar).

To replace the gloves, unscrew the glove mounting plate and extract glove assembly from unit. Unscrew the inner glove retaining ring and remove glove (take note of assembly). Fit new glove over inner ring (same as previous). Fit inner ring onto outer ring & fit retaining nuts. Check gasket is in place on outer ring. Insert glove assembly into unit and fasten outer ring to unit.





## Warranty

Upon receiving a Stoddart product, inspect immediately for any visible signs of shipping damage and notify the carrier immediately. When removing the product from its packing, be careful not to dent or scratch outer surface. Any concealed damage should be noted and reported immediately to the freight carrier. A claim should be filed with carrier promptly if appropriate. Stoddart Manufacturing will not accept responsibility for shipping damage.

The Standard Terms and Conditions of Sale clearly details Standard Warranty Policy. Plumbing Products offer additional conditions as follows;

- Warranty on materials and labour is limited to 12 months from date of initial installation.
- The Warranty does not cover damage caused by abuse, misuse or improper application or improper installation.
- Warranty Claims must be submitted in writing to Stoddart Manufacturing within 14 days of observation of fault.
- Items may be returned to Stoddart's Factory by the Customer for warranty inspection. For valid warranty claims, Stoddart will repair or replacement the item and return it to the Customer promptly.
- For installed products, photos must accompany the Warranty Claim for effective consideration.
- If a site visit is required to conduct warranty repairs, such work will be carried out during normal business hours e.g. 8am to 5pm. Mon to Fri.

## Customer Complaints

All customer complaints regarding Stoddart Stainless Steel Toilets should be referred to:

Customer Service Department  
Stoddart Manufacturing  
149 Jackson Road 4109  
Sunnybank Brisbane  
Ph +61 7 33455011  
Fax +61 7 33441000  
Email: [sunnybank@stoddart.com.au](mailto:sunnybank@stoddart.com.au)  
Web : [www.stoddart.com.au](http://www.stoddart.com.au)