

# PC client Cam Viewer1 User Manual

# CIPCAMPTIWL\_V2,CIPCAM720PTIWL,CIPCAM720OD,CIPCAM

# 7200DWDR,CIPDCAM7200D



#### Statement

If the user manual doesn't help you to resolve the problem, please contact us via our website for technical support.



- Keep away from the places of high-temperature, heat sources and direct sunlight.
- Keep away from water and if wet, cut off the power immediately.
- Avoid using in a damp environment; the reference range for operation humidity is below 85%RH.
- \* Avoid using in too hot or too cold environments, the reference range for operation temperature is  $-10^{\circ}C \sim +50^{\circ}C$ .
- Please install it horizontally or wall mount, avoid strenuous vibration and do not place other items on top of the unit.

#### 2、 Transport and Handling

- Please handle the item with care.
- Do not use in areas around condensation.
- Please disconnect the item from the mains before moving.



- 1. Be careful not to damage the camera or subject it to strong impacts or shocks.
- 2. Do not touch the optical components for the image sensor, such as the lens, if necessary, please place a clean and moistened cloth with alcohol and wipe the dirt gently; When not in use, please place the dust cover on to the item to protect the image sensor.
- 3. Do not aim the camera directly into the sun or at other intense light sources that could affect the image quality, this will also shorten the service life for the image sensor.
- 4. Keep away from laser when it is working, otherwise the image sensor can be damaged.
- 5. If the equipment is not working properly, please contact the store or the service centre, do not disassemble or modify the equipment in any way.

			Index	
1.	Cam Vi	ewer1 S	Summary	4
2.	Require	ed comp	puter	4
3.	Installir	ig Cam	Viewer1	5
4.	Cam Vi	ewer1 A	Application	5
5.	Device	list mer	าน	6
	5.1.	Add de	evice	6
	5.1	.1.	Search to add device in LAN	6
	5.1	.2.	Add device manually	6
	5.2.	Edit De	evice	7
	5.3.	Delete	device	8
	5.4.	Device	right-click Menu	8
6.	View Vi	ideo ano	d video setting menu	9
	6.1.	Play Vi	ideo	9
	6.2.	Audio	&Video/Image parameters/PTZ control	9
7.	Local M	1enu		10
	7.1.	System	ı Setting	10
	7.1	.1.	Trigger alarm	11
	7.1	.2.	Play automatically after launching the software	11
	7.1	.3.	Default Record Plan	11
8.	Operati	on Log	and Alarm Management	12
9.	Play ba	ick reco	rding and inquire recording file	13

#### 1. Cam Viewer1 Summary

Cam Viewer1 is a Cloud IP camera centralization management software provided by the manufacturer. It provides the central control of monitoring, video capture, record, alarm detection, etc for multiple IP cameras on LAN or WAN.

Cam Viewer1 can be running in Windows OS.

The Cam Viewer1 features:

- Support P2P camera connection;
- Support DDNS connection;
- Support international language switching;
- Support local scheduled recording;
- Support alarm recording and snapshot;
- Support monitoring and talking;
- Support image setting;
- Support PTZ setting;
- Customized change skin.

### 2. Required computer

For using the Cam Viewer1 stably, your computer should meet the following configuration, recommend minimum computer configuration:

- CPU:Dual core CPU
- RAM: above 1G
- Hard Disk: above 500G
- > OS:Windows XP or above

➢ Monitor resolution:≥1024\*768

# 3. Installing Cam Viewer1

Obtain Cam Viewer1 installation software:

- Obtain the software from attached CD
- Download the software from our website

Please create desktop shortcut icon when installing the Cam Viewer1.



# 4. Cam Viewer1 Application

Double click the Cam Viewer1 desktop shortcut icon to run the Cam Viewer1, it shown as below.

Cam Viewer1_V14.0.1.3		1 <sup>*</sup> -=×	F
		Courses invent	
			E
			٨
			A
	R		
Ž <b>≼×⊡</b> ⊠×\⇔ ⊛	∕ <b>╡</b> ×⊠0⊠⊀☆ ℜ		
		序号   设备别名   动作   结果	
			D
✓ ■×IOIX4☆ 桑	/ ■שX:☆ X		
2014-10-1509:27:08	<ul> <li>•</li> </ul>	🏾 💿 🔍	С

Figure 1

- A: Camera list area
- B: View video and video setup area
- C: Local Menu setting area
- D: Camera operation log
- E: Search bar
- F: System language switching functions etc

## 5. Device list menu

#### 5.1. Add device

Add device ico	n
	Add device mode
	C Add device manually
	C Search to Add
	Cancel

Figure 2

#### 5.1.1. Search to add device in LAN

Select "Search to Add" to access search interface, and then select corresponding device type to search, fill in correct username and password in searched device and save as Figure 3.

Tips: The device will be displayed in device list after saving.

✓ Serial number Ø	Device alias VIEW-000002-PYJEE	DDNS/ip VIEW-000002-PYJEE	Port 80	Account	Password *****	Device Type Smart P2P
0	VIEW-000002-PYJEE	VIEW-000002-PYJEE	80	admin	*****	Smart P2P
						Sa

Figure 3

#### 5.1.2. Add device manually

Select "Add device manually" to access add interface, the item marked \* must be filled as

#### Figure 4

Tips: please select correct Device Type when you add camera.

Edit device information	
Device alias	VIEW-000002-PYJEE *
	Change
Device Type	Smart P2P *
DDNS/IP	VIEW-000002-PYJEE *
Port	*
Account	admin *
Password	*****
	Test
	Cancel Save

Figure 4

#### 5.2. Edit Device



Select the camera added in device list, click Edit Device button to set up user management parameters as Figure 5.

Edit device information				×
Device alias	VIEW-000002-PYJEE		*	
Device Type	Smart P2P	•	*	
DDNS/IP	VIEW-000002-PYJEE		*	
Port	80 *			
Account	admin		*	
Password	*****			
		Test		
	Cancel	Save		

Figure 5

#### 5.3. Delete device



Select the camera added in device list, click Delete Device button to delete the device.

#### 5.4. Device right-click Menu

Select the camera added in device list, right click it, it will pop up Right-click Menu as Figure 6.





Query Log: query operation log and alarm log of the camera, same as section 8; Set Plan: You can perform single camera recording plan after adding recording plan.(need to add "default record plan" in system setting, then you set up it, detail see section 7.1.3); Edit Device: the function same as 5.2 Edit Device;

Local Property: view information of selected device as Figure 7

Device Property		×
Device alias	VIEW-000002-PYJEE	
DDNS/ip	VIEW-000002-PYJEE	1
Port	80	
Account	admin	
Password	123456	
Device Type	Smart P2P	
Record		
Description		
	1	

Figure 7

Tips: Right click any here, it will pop up a menu as Figure 8 when you don't select any camera, then you can use one key to perform all operation.



## 6. View Video and video setting menu

#### 6.1. Play Video

Select the camera you want to play in device list, right click "Play Video" or double click to play the video as Figure 9.



Figure 9

#### 6.2. Audio&Video/Image parameters/PTZ control

You can perform monitoring, talking, snapshot, record, image parameter setting and PTZ control etc when viewing video.

- Z Talking button;
- **\*** monitoring button;
- Snapshot button;

Record and status display (two mode: <sup>1</sup>indicate record manually, <sup>1</sup>indicate scheduled record);

Image Parameters Setting button, the setting of image parameters may be different due to camera model or series as Figure 10.

<u> 2020</u>		×
Brightness	[	76
Contrast	[	89
Resolution	320*240	•
🔽 Real Time (	Mirror Flip Control Refresh Def	ault Setup

Figure 10

😢 PTZ control button



# 7. Local Menu



## 7.1. System Setting



You can set up snapshot, alarm recording, recording save path, play automatically after reboot and recording plan here as Figure 11.

System Setup	
Save Path for Snapshot and Record file D:\Record\	
Trigger Alarm I⊄ Snapshot	
Alarm recording	
Pop up Snapshot Window	
✓ Play automatically after reboot	
Default Record plan NULL Create	
Default Save	

Figure 11

#### 7.1.1. Trigger alarm

It supports snapshot, alarm recording and alarm voice prompt Tips: You need to set up motion detection and the trigger alarm of camera website, so it will be performed trigger alarm.

#### 7.1.2. Play automatically after launching the software

Ticked "Play automatically after reboot", it will connect automatically and play the cameras in device list after reboot the software.

#### 7.1.3. Default Record Plan

You need to create recording plan to set up it when you use local record plan; record status indicate as <sup>1</sup>/<sub>1</sub> record manually, <sup>1</sup>/<sub>1</sub> record plan, shown as Figure 12.

Default Record plan	NULL	Create
	NULL	
1	Play2014-04-09102122	



Tips: You need to select record property when creating record plan, consider if cover the recording or stop recording after the space is full, shown as Figure 13



Figure 13

# 8. Operation Log and Alarm Management

Device log and alarm manage log icon
--------------------------------------

You can query work log and alarm log for a camera, example for, what time is it played video, what time is it closed video as Figure 14.

Device	alias <mark>MEW-00</mark>	UUUZ-PTJEE		Search		
Log Ty	pe Operato	r Log	•	Sta	art: 2014/ 4/ 8	End: 2014/ 4/ 9
Ser	. Device alias	Action	Result	Create Time	Log Type	Log Detail:
1 0	VIEW-0000 VIEW-0000	Play Get Param	Success! Success!	2014-04-09 11:01:56 2014-04-09 11:03:36	Operator Log Operator Log	

Figure 14

# 9. Play back recording and inquire recording file



Launch Eyeplayer, the user can check recording file of each camera by recording path as Figure 15

🚓 V14.0.4.1		
1	2	Directory D:\Record\
		To: 2014-04-09 11:07:: ↓
3	4	

Figure 15