



1200 Watt Halogen Heater

TECHNICAL SPECIFICATIONS

Voltage	220-240V ~ a.c.
Frequency	50 Hz
Power input	1200 Watts
Features	Three Heat Settings Oscillating Function

PACKAGE CONTENTS

- 1 Halogen Heater
- 1 Base unit
- 2 Securing Wing Nuts
- 1 Instruction manual

Confirm all parts before disposing of carton. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.



SAFETY INSTRUCTIONS

Carefully read this manual before using this heater. Make sure that you know how the heater functions and how to operate it. Maintain the heater in accordance with the instructions to ensure that it functions properly. Keep this manual with the heater. If the heater is to be used by a third party, this instruction manual must be supplied with it. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used. No liability can be accepted for any damage or personal injury caused by non-compliance with these instructions or any other improper use or mishandling.

WARNING! Do not use this heater if it has been dropped or damaged in any way or if the supply cord is damaged.

USERS MANUAL

Halogen Heater

MODEL BR2219H



ASSEMBLY AND OPERATION

Check for damage.

Upon opening check to ensure that all parts of this appliance, cord and plug are not damaged.

Assembling the Base.

To fit the base unit to the heater simply place the supply cord through the base centre hole, locate the base onto the bottom of heater as shown in figure 1 and attach with the two securing wing nuts supplied. Fit the supply cord to the retaining clips as shown if fig 1

WARNING! Do not operate without the base securely fitted.



Fig 1

Location.

Place on a level flat surface. Keep away from any combustible material such as curtains. Allow freedom of movement under "Oscillating" mode. Do not place in any area where it may be possible to accidentally tip the heater over, keep away from traffic flow areas. For best results, place to one side in room, away from windows and doors.

WARNING! Keep heater away from young children.

Power Connection.

Connect to a suitable power supply, corresponding to that of the appliance, 220-240~V AC 50 Hz. This appliance must be earthed.



Control.

Turn power on at socket outlet. Select desired heat setting by pressing the relevant heat selector button.

Note. The "Power ON" button controls all power and acts also as a MASTER OFF switch.

This heater has three heat elements giving three power settings, 400, 800 and 1200 watts. .

Oscillating function turns the heater face to allow for a wider heat coverage area. To operate simply press the TURN button on or off.

Safety features.

This heater is equipped with an overbalance safety cut-off tip switch. Should the heater be knocked over accidentally, this safety switch will cut power to the heater



ELECTRICAL SAFETY

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.

Always check that the power supply corresponds to the voltage on the rating plate.

Supply cord and plug.

Always unplug from mains supply when not in use. Do not abuse or damage the power cord. Fully unwind the cord before use as a coiled cord may overheat.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Children.

Caution. Be aware of the danger to young children of any electrical appliance. Keep out of reach of young children.

This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance.

Water.

Do not immerse appliance in water or other liquid. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

Do not immerse any part of this appliance or supply cord in water. Do not use with wet hands or use in any damp situations.

Environment.

This appliance is designed for inside use only. Do not use near curtains or other combustible materials. Do not use outdoors. Do not use near a hot gas or electrical burner. This heater must not be located directly below a socket outlet. This appliance must not be used in locations where flammable vapour or explosive dust is likely to exist. This heater must not be used in the immediate surroundings of any bath, shower or swimming pool or used in any other damp area where contact with water may create an electrical hazard.

Timers.

" Do not use this heater with a thermal control, a programmed control, a timer or any other device that switches the heater automatically, since a fire risk exists if the heater is covered or displaced."



Earth safety.

This appliance must be earthed.
Connect to a suitably earthed supply socket only, corresponding to the requirements of this appliance. Do not overload the circuit. Only connect this heater to the socket outlet.

Do not cover this heater.

Always leave a gap around the heater. Be aware that this heater has an oscillating feature.

Damaged or dropped.

Always inspect your heater before use. Do not use this appliance if it has been damaged, dropped, left outdoors or dropped in water.

Store in a safe place

When not in use store your appliance and all its accessories and instruction manual in a safe and dry place.

Do not attempt to service this heater yourself. Return it to a qualified service agent for repair. This appliance requires no maintenance.

MAINTENANCE

This appliance requires no specific maintenance. Simply keep the appliance clean from dust and dirt. Check for damage before use.

Before cleaning.

When not in use or before cleaning, always disconnect the appliance from the mains supply.

Cleaning.

Regularly clean the outside of the appliance of dust with a soft damp cloth and dry it with a dry towel. Do not immerse in water. Do not use harsh solvents.

Damage check.

Always check that the appliance is in good working order and that all parts are secure. Check the power supply cord and plug regularly for cuts or damage.

Store in a safe place

When not in use store your appliance and all its accessories and instruction manual in a safe and dry place.

Guarantee Card

This product is guaranteed against faulty materials and workmanship for a period of twelve months from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from whom this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Type of Appliance: _____

Model No.: BR2219HH Purchase Date: _____

Product Purchased From: _____

Your Name: _____

Address: _____

_____ Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged.

