

## YOUR SKY REMOTE CONTROL

### TV

To control the functions of your TV

### Box Office

To access the Box Office programs

### TV Guide

To preview the complete TV listings

### Mute

To turn the sound on your TV on/off

### Arrows

To view the TV listing on other channels, while staying on the current channel. To highlight the option you require.

### Text

Puts you into the text mode

### Back up

To return to the previous page

### Colours

To select a variety of onscreen options



### Sky

Press to control your Sky box

### Power

To turn your Sky box or TV on/off

### Services

To activate special features for example: Parental controls, Subtitles and Favorites

### Interactive

Press for a selection of interactive services also gives access to information about the program you're watching or a highlighted program

### Ch + and -

To change the channels

### Select

To select or confirm the option you want

### Help

To activate the subtitles or audio description. Also to get help on using the Sky Guide

### Numbers

To select channel numbers or menu options

## Important information about the batteries

If the batteries require replacing a message will appear on the Sky Guide, when this message appears you should replace the batteries straight away this will ensure that no information is lost.

- If you do not replace the batteries within 10 minutes all of the settings that you have programmed into the remote control for the TV are lost. If this occurs you will need to refer to the section 'How to setup your remote to control your TV' and reinstall the TV.
- Never leave old batteries inside your remote
- When replacing batteries always replace both batteries never mix batteries (old & new or different brands of batteries)
- Remember when disposing of old batteries always dispose of them at recycle points.

## Tips to increase the longevity of your remote control

- Do not let it fall
- Be careful around liquid products
- When cleaning the remote use a dry cloth

## Should you require further assistance, please use the following:

- The user manual for the Sky box
  - The website [www.sky.com](http://www.sky.com)
  - Via the 'interactive', 'Sky Customer Service', 'equipment help on your remote control'.
- Alternatively contact the technical helpline, you will find the details to do this press 'Services', 'Telephone Numbers', 'Technical Help'.

**UNIVERSAL ELECTRONICS / ONE FOR ALL** warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one (1) year warranty period. The forwarding costs are on the account of the owner; the costs of returning the product are on the account of UNIVERSAL ELECTRONICS / ONE FOR ALL. This warranty does not cover damage or failures caused by products or services not supplied by UNIVERSAL ELECTRONICS / ONE FOR ALL, or which result from not mounting the product according to manual instructions. This also applies when the product has been modified / repaired by others than UNIVERSAL ELECTRONICS / ONE FOR ALL or if a fault is the result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, improper maintenance, alteration, modifications, fire, water, lightning, natural disasters, wrong use or carelessness. To obtain warranty service during the warranty period, please notice that we need your original purchase receipt so that we may establish your eligibility for service.

If you have bought this product for purposes, which are not related to your trade, business or profession, please remind that you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights.

706042

SKY 100/101

RDN-1120208



## Using the Sky remote control

This is the original remote control for your Sky box, it can also be used for many different brands of TV's.

If you would like to control your TV please follow the instructions mentioned in this user guide.

It is always advisable to keep this user guide in a safe place for future use



### To begin with

Please find included in the packaging two AA batteries, insert these into the remote control following the guide below:

- 1** Remove the battery cover as shown below
- 2** Correctly insert the batteries
- 3** After inserting the batteries, replace the battery cover correctly (you should feel it click into place)

Make sure that there is nothing obstructing the infrared receiver on the Sky box or TV when you are using the remote control.  
Always point the remote directly at the Sky box or TV.

### How to set up your remote to control your TV.

- 1** Ensure the TV and Sky box are on with a picture
- 2** Check on the list opposite for the brand of your TV.
- 3** Press **TV**
- 4** Press **RED** and **Select** together until the remote blinks twice.
- 5** Press **TV** again
- 6** Enter the **4-digit code** (chosen from the list on the page opposite for your brand) the remote should blink two times, if it only blinks once check the code and enter it again.
- 7** Aim the remote at the TV and press Power, if the TV turns off, press Select and the remote blinks twice and stores the code. If the TV does not turn off, keep alternating between TV and Power until the TV turns off, once the TV turns off press the Select key to store the code. The remote control should now work with you TV.
- 8** Should you be unable to locate your brand check in the Sky Guide under the 'Interactive', 'Sky Customer Services', 'Equipment Help', 'How do I program my Sky remote to operate my TV' use these instructions to install your TV.

For future reference, you can make a note of your code here: \_ \_ \_ \_

### TV SETUP CODES

Aiwa	0406	Metz	0491
Akai	0098	Minoka	0921
Akura	0042	Mitsubishi	0150
Alba	0043	NEC	0170
Amstrad	0063	NEI	0514
Baird	0117	Nikkai	0528
Bang & Olufsen	0118	Nokia	0536
Beko	0125	Nordmende	0537
Beon	0899	Orion	0549
BPL	0115	Panasonic	0051
Brionvega	0147	Philips	0081
Bush	0157	Pioneer	0166
Crown	0225	Proline	0592
Daewoo	0092	Protech	0595
Decca	0244	Pye	0600
Dual	0257	Relisys	2214
Epson	2108	Roadstar	0625
Ferguson	0293	Saba	0645
Fidelity	0294	Saisho	0649
Finlandia	0296	Salora	0651
Finlux	0297	Samsung	0060
Fisher	0154	Sanyo	0159
Fujitsu	0313	Schneider	0665
Funai	0179	Seleco	0672
Genexxa	0330	Sharp	0093
Goldstar	0056	Siemens	0680
Goodmans	0335	Sony	0000
Granada	0340	Soundwave	0702
Grundig	0345	Tandy	0741
Harwood	0361	Tatung	0049
Hinari	0365	Technics	0250
Hitachi	0145	Techwood	0750
Hyundai	1206	Telefunken	0757
InFocus	0995	Thomson	0771
ITT	0384	Thorn	0772
JVC	0053	Thorn-Ferguson	0936
Loewe	0442	Toshiba	0156
Matsui	0477	Wharfedale	1535
Memorex	0037		

# sky remote control

## ■ user instructions

# sky

# sky

## Introduction


Your **Sky** remote control is compatible with any **Sky Digibox** receiver. To ensure that your **Sky** remote control is correctly set up to work with your equipment, it is very important that you observe the following instructions.

## A Getting started

The batteries are already fitted inside your **Sky** remote control. To connect them ready for operation, remove the tape from the battery pack by gently pulling on the tab and withdrawing it from the unit as shown below.

Next check that the batteries are connected. Press any button on the unit and check that the red LED at the end of the unit flashes.

Your **Sky** remote control is now ready to operate your **Sky Digibox** receiver.

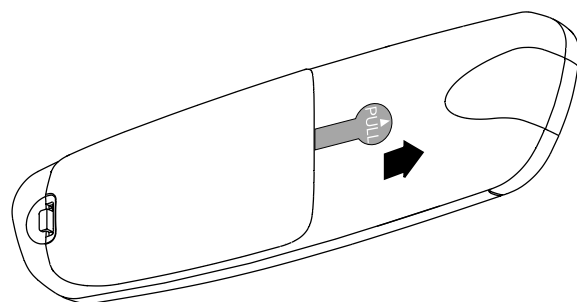

## B Setting up your Sky remote control to operate your TV

Your **Sky** remote control will also operate your TV. It has a default setting to Sony, so if you have a Sony television your **Sky** remote control should already enable television operation. To set up for your brand of TV please follow these steps:

1. Turn on your TV.
2. Find your TV manufacturer listed in section H, e.g Philips is 0081. Write down your TV code here [ ] [ ] [ ] [ ]. If your TV is not listed, press "interactive" and select "**Sky** Customer Service" for further assistance.
3. Press "tv".
4. Hold down "select" and the red button together for about two seconds, until the red LED on the **Sky** remote control flashes twice.
5. Press "tv" again.
6. Key in the four digit code for your brand of TV. The LED on the **Sky** remote control will flash twice. If the LED illuminates only once, re-check the code for your brand of TV and start again at step 3.
7. Press the standby button on your **Sky** remote control. If your TV switches off, press "select". The LED on the **Sky** remote control will flash twice. If your TV does not switch off, press "tv", then press the standby button. Repeat this (press "tv", then standby) until your TV turns off, then press "select".

If you are experiencing problems, please refer to 'Troubleshooting' in section G.

To reset your **Sky** remote control to it's factory settings, press "tv" then hold down "select" and the red button together for about two seconds, until the red LED on the **Sky** remote control flashes twice. Then press "981."

## C Key operation

 sets your remote to operate your **Sky Digibox** receiver



sky

sky

sky


## D Changing batteries

Open the battery compartment by pushing back the clip then lifting off the cover.

Replace with two AA (MN1500, LR6, UM3) batteries.

Do not mix different battery types, i.e. Alkaline and Manganese.

Do not mix old and new batteries – replace both batteries at the same time.

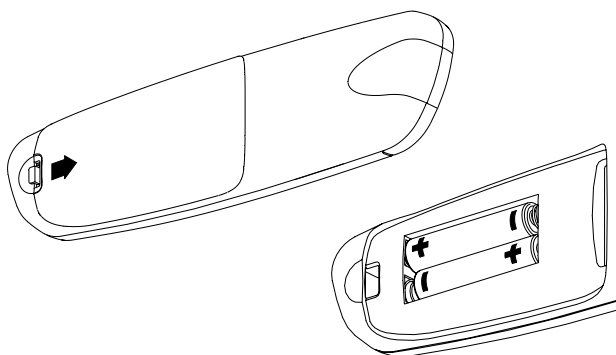

## E General use

If the batteries are removed for more than 10 minutes, the remote will need to be reprogrammed as described in section B.

If you see an on screen message that informs you the **Sky** remote control batteries are low, please change them as soon as possible.

## F Care

Do not drop

Do not immerse in liquids

Clean only with a dry cloth

Do not leave flat batteries in the unit

As this product operates using infra-red, ensure there is a clear line of sight between your **Sky** remote control and equipment you are operating

## G Troubleshooting

For further information and troubleshooting tips for your **Sky** remote control, press "interactive" and select "**Sky** Customer Service" for assistance. This menu can also be accessed from your **Sky Digibox** receiver box front panel - simply press the "tv guide" button once and then scroll to the interactive screen.

If you are still experiencing problems, please telephone for technical assistance. You will find the "Technical Help" telephone number by pressing "services" and selecting "Telephone Numbers". Again, this menu can also be accessed from your **Sky Digibox** receiver box front panel - simply press the "tv guide" button once and then scroll to the services screen.

## H TV set up codes

Aiwa	0406	Memorex	0037
Akai	0098	Metz	0491
Akura	0042	Minoka	0921
Alba	0043	Mitsubishi	0150
Amstrad	0063	NEI	0514
BPL	0115	Nikkai	0528
Baird	0117	Nokia	0536
Bang & Olufsen	0118	Nordmende	0537
Beko	0125	Orion	0549
Beon	0899	Panasonic	0051
Brionvega	0147	Philips	0081
Bush	0157	Pioneer	0166
Crown	0225	Protech	0595
Daewoo	0092	Pye	0600
Decca	0244	Roadstar	0625
Dual	0257	Saba	0645
Ferguson	0293	Saisho	0649
Fidelity	0294	Salora	0651
Finlandia	0296	Samsung	0060
Finlux	0297	Sanyo	0159
Fisher	0154	Schneider	0665
Funai	0179	Seleco	0672
Genexxa	0330	Sharp	0093
Goldstar	0056	Siemens	0680
Goodmans	0335	Sony	0000
Granada	0340	Soundwave	0702
Grundig	0345	Tandy	0741
Harwood	0361	Tatung	0049
Hinari	0365	Technics	0250
Hitachi	0145	Telefunken	0757
ITT	0384	Thomson	0771
JVC	0053	Thorn	0772
Loewe	0442	Thorn-Ferguson	0936
Matsui	0477	Toshiba	0156