

Thank you for purchasing the CellMeter-8. The CellMeter-8 allows you to check the individual cell voltages of a 2cell-8cell LiPo (lithium polymer) battery. The CellMeter-8 individually measures & diagnoses the cell voltages of the multiple cells, the result is displayed on the large liquid crystal screen.


The CellMeter-8 replaces all of the tedious measurement and calculations required in the past to determine the overall voltage of the LiPo pack and the individual cell voltages that determine the balance of the LiPo pack.

The CellMeter-8 now makes it possible to determine and verify the detailed state of the LiPo battery.

A balanced battery provides a safer environment when flying. If you know that your cell balance is out you can address the issue.

The prevention of deteriorating cells over time, will improve the efficiency and stability of the LiPo battery.

1. CellMeter-8 Applications

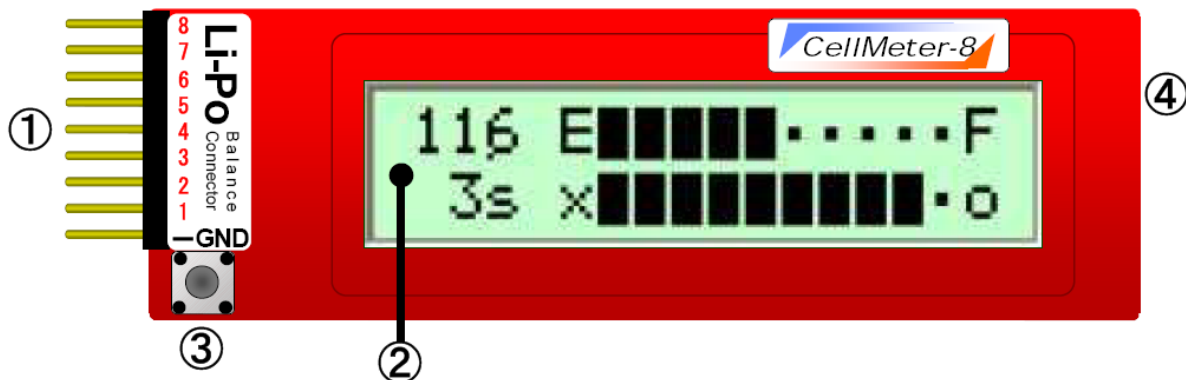


- ① LiPo Balance Connector ~ 2-8Cell LiPo
- ② LCD (Liquid Chrystal Display) ~ the battery information is displayed on the LCD screen
- ③ Menu Button ~ changes the display between different display readouts. The button also allows for numeric input in the thrust calculator.
- ④ PC Serial connector ~ allows for the connection of a serial cable to a computer. (*Not yet implemented*). Check website for software updates. <http://www.ep-plane.com/cm>

2. Basic Use Method

When you connect the balance lead to the Cellmeter-8 you must ensure that both the Ground pin's for the balance connector and the Cellmeter-8 go together. Different Balance leads have different wiring configurations and some are coloured (like the samples BELOW).

The Cellmeter-8 has 2.54mm pin intervals. If the connector on you battery does not fit do not force the connector obtain a suitable adaptor lead from your hobby shop.

The LiPo battery balance connector is connected to the "LiPo Balance Connector" on the CellMeter-8

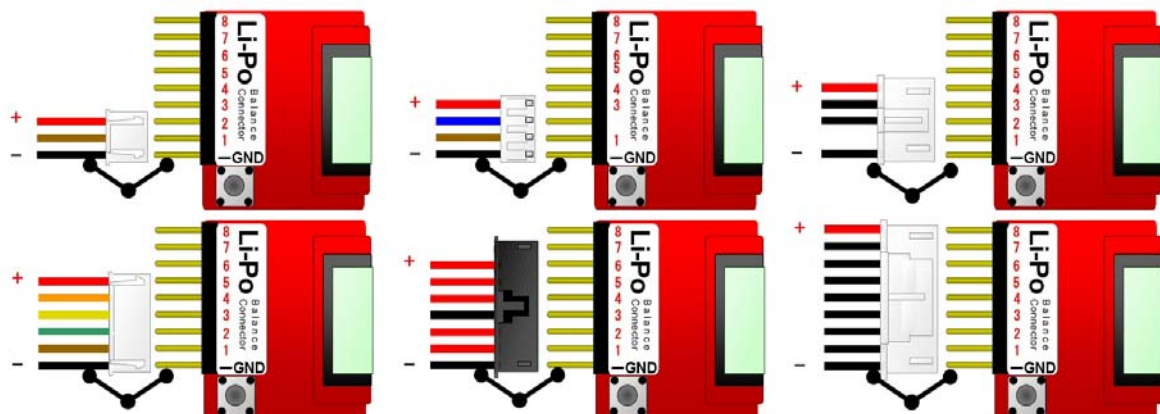

1. The balance connector of the battery pack is connected to the LiPo connector of CellMeter-8. The ground pin (the lowest voltage reference point on the balance connector 0V) connects to the ground pin marked on the CellMeter.
2. You should hear a short sound, "[stepped beep]" the CellMeter-8 starts, the title picture as in the top right figure is indicated instantly. If the CellMeter-8 does not start, check the connection of the battery and the polarity of the balance connector is around the right way. The Total voltage in the battery pack of an over discharged battery cannot start a CellMeter-8 if the voltage has fallen below 5V.
3. After the initial boot up screen as described above the CellMeter will beep respectively and display the number of cells in the LiPo pack. For example if the LiPo is a 3 cell pack, the symbols will indicate the number of cell and you will hear a "blip" 3 times. Please verify by the number indicated on the LCD screen to the number of actual cells of the battery pack. When the CellMeter displays an incorrect cell count, you need to verify whether the first connector of the balance connector is connected to the first position in the Cell Meter. Alternatively there may be a of fault in the battery balance lead or cell malfunction.
4. If when you initiate the Cellmeter you are not presented with the main page as in the figure below. You can return to this page by cycling through the screens by using the menu button.


(c) eP-Plane.com
CellMeter-8 V2.4

+ [1] + [2] + [3]

Example 3 Cell LiPo

Remaining amount fuel gauge

The remaining amount gauge gives you a graphical bar graph display of the status of the battery by graph and the balance of the cells by graph. When the battery is fully charged the graph extends to "F" on the right hand side of the LCD. As in the example you can

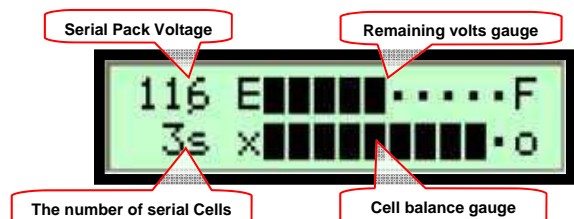

Remaining Gauge page example

see that the battery is about 50% used. If your battery shows only 1 bar you must charge the battery before you use it. Each Graphical bar on the Volts gauge refers to about 10% of the overall battery voltage. There are times when differences occur between the remaining amount and the actual remaining amount. These difference can be associated with the quality and use of the battery and its cells. A battery that has always been charged with a reputable balancer is likely to reproduce accurate readings on the CellMeter. A battery that has had a hard life full discharge and recharge with no balance charging is more likely to have discrepancies between actual and shown results.

Cell balance gauge

The Cell balance gauge measures the difference between all cells that are connected to the CellMeter. The difference is shown graphically between the cell that is showing the highest cell voltage to the cell that is showing the lowest cell voltage (largest cell voltage difference) indicated on the graph. When the cell voltages read equal, the bar extends all the way to the right (O). This indicates that the cells are all balanced to a satisfactory level. When the cells have a difference in voltage the bar shortens and indicates towards the left (X). The gauge indices are equivalent to 10mV / bar. In order to maintain long lasting battery life if the balance gauge does not show a satisfactory cell balance then a cell balancer should be applied to the pack before use. A good cell balancer can be purchased from your local hobby store. If the cell balance indication is low after the battery has been used this can be normal and charging should occur with a balance charger.

Serial voltage

Pack voltage of the whole battery (total voltage of all cell) is indicated

The number of serial cells

The total number of cells in the battery pack is indicated (3S as indicated in the picture 3 serial cells). This is the same as the cell quantity.

About the warning function

When there is an abnormality in the cell voltage of the battery pack which is connected, or when the cell imbalance becomes large (the balance has deteriorated), the CellMeter will display a warning message as indicated, and an alarm will sounds.

Cell low voltage warning


The Cell Low Voltage Warning is indicated in the case where the voltage of each cell is under 3.00V.

A LiPo battery cell requires the individual cell voltage to be maintained above 3.00V. When the cell is not under load

(nothing is connected), and the voltage for the cell has fallen into an overdischarge state, the warning will be displayed and the alarm will sound. The alarm will continue in this state until the cell voltage rises above 3.00V.

It is important for longevity of your LiPo batteries to maintain a cell voltage over 3.00V even when the battery is in a model and the throttle is on full. If you have the CellMeter connected to the LiPo battery and do this test on the ground in a controlled environment you will see what the battery is doing under load.

If the cell voltage falls below 3.00V in this test then this indicates the battery is in an over discharge state. The discharge current which drawn from the cells is too high for this battery. In this case the airplane you need to look at the power setup of the model. e.g., propeller load could be lowered, would be a good starting point.

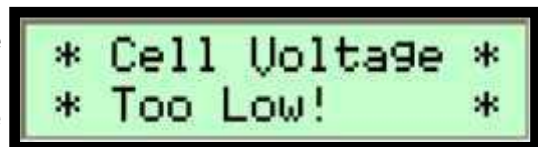Overvoltage warning

The Overcharge Voltage Warning is indicated in the case where voltage of each cell is too high.

Most LiPo battery pack products in the market have an upper limit voltage for each cell of 4.20V. Most overvoltage occurs

during the charging cycle. Even then we should try not to exceed 4.25V. when a cell exceeds 4.30V collapse of the cell function starts, when a cell reaches this point ignition / combustion (fire) can occur. The CellMeter-8 is factory set to trigger the Overvoltage Warning when the cell voltage exceeds 4.24V.



Some LiPo batteries on the market may be able to exceed 4.30V. Always enquire with the manufacturer or at the place of purchase to ensure that the specifications of the LiPo battery pack. If this is the case for your LiPo battery then you may wish to increase the warning voltage to 4.35V.

Cell voltage balance warning

The Cell Voltage Balance Warning is indicated in the case where the cell voltage balance has deteriorated.


If you test the LiPo after a use but before the pack has cooled down and settled, your reading may be affected as



the balance deteriorates naturally through a cycled run. The CellMeter-8 considering the batteries remaining voltage amount, generates this warning. When this warning occurs allow the battery to cool and then charge with a balancer and test again. If the Warning occurs when a battery pack is fully charged a balancer should be applied to the pack to re-establish unity across all cells and an even balance. An unbalanced battery pack can be dangerous.

When the battery check ends, please remove the balance connector from the LiPo connector of the CellMeter-8. If the CellMeter and the battery pack are left connected for a long period of time there is a possibility that over discharging may occur. (The consumed electric current of the CellMeter-8 is approximately 3mA, but if the pack were for example 1000mAh and was charged fully it would become overdischarge in about 2 weeks.)

NB: It is possible to make these warning functions invalid. The menu screen shown is activated by holding down the button for 5 seconds. The screen below appears. Clicking the button here, after selecting [No], disable the warning function. Holding down the button returns to the main menu

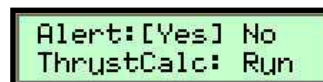

With this one time warning function disabled, disconnecting and re-connecting the battery resets the CellMeter to the factory default and the warning function becomes effective again.

3. LiPo battery check CellMeter-8 (reference)

When you purchase a brand-new battery: Immediately after opening it, test the batteries performance using the CellMeter-8. When an abnormal voltage warning occurs low voltage, there is a possibility that the battery is an inferior quality battery. Click the button, now showing the cell voltage page and take note of the cell voltages and balance state.

Before charging: Before connecting the battery to the charger, check it with the CellMeter-8, if it verifies that an abnormal low voltage warning or an overvoltage warning, this is possibly due to the natural discharge of time whilst the battery is sitting on the shelf. If this occurs either charge or balance the battery with a reputable balancer/charger and check again before use.

While charging (only in the case of series charging): When series charging is performed from the main connectors of the battery pack, the balance terminal is free to connect to the CellMeter-8. This will allow you to watch the behaviour of the battery whilst charging. It is important whilst charging especially in the latter half of the charge cycle when the cell voltage becomes high, you will need to verify that the overvoltage warning and cell voltage balance warning do not occur. Please verify the battery after charging and before use.

After completing the charge: When the batteries voltage reaches 95~100%, it is charged fully? Until it reaches the overvoltage territory, it isn't overcharged? Has the cell voltage balance been even? And so on you will need to verify. Several minutes after completing the charge, there are times when the cell voltage will go down gradually depending upon the battery, after about 10minutes has elapsed from the completion of charge. Again check using the CellMeter-8 as the reading will be more accurate.

Before the flight: Each time before you fly by habit you should do a battery check verification with the CellMeter-8. This is a good habit to get into as a simple check can save the cost and embarrassment of a crashed model from the use of a discharged or damaged battery. In addition, using a battery that you know is fully charged that has decreased naturally between the charge and flight. There is a possibility that the battery will have deteriorated over time or because it is an older battery.

After the flight: When abnormal voltage warnings occur low voltage warning , over discharge voltage warning (the current setup is drawing too much power). Post flight you should have a remaining voltage of about 10%. You should use the remaining battery amount to calculate your next flight times.

 
Before storing the Battery: If you plan on storing a battery for any reasonable length of time you should consider the battery charge levels. It is recommended for the Battery to be kept with a 10~20% charge only in the cells. No more than 50%. This will prevent the battery for over discharging. A new battery off the shelf from a reputable manufacturer will come with a 50% charge in the battery. If the Battery is less than 10% charged after a flight then add a small charge before storing. If the battery is fully charged then you can discharge through some battery charger / discharger systems to get the charged state just under 50%.

4. Detailed numerical page

When the button is pressed once from the main page (remaining amount fuel gauge), it changes to the detailed numerical page which can verify the information of the whole battery in summary with detailed values.

The top line shows the serial voltage of the battery at 1mV units, the % indication on the right side of the screen can verify to 1% units.

On the lower line it shows the cell with the highest voltage on the left and the cell with the lowest voltage to the right. The voltage difference between the highest cell and the lowest cell is then displayed on the far right bottom of the display and is accurate to 1mV units.

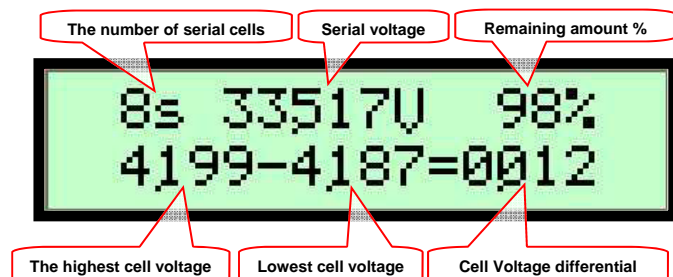

Detailed numerical page example

5. Cell voltage page (3 digit (2 decimal point) indication and 4 digit (3 decimal point) indication)

If you press the button again it changes to the CellMeter-8 voltage page which indicates the individual voltage of all serial cells. On the cell voltage page each serial cell voltage is displayed at 10mV units in a 3 digit display using 2 decimal places.

Press the button again and you get to the next page where each serial cell voltage is displayed at 1mV units in a 4 digit display using 3 decimal places. When we verify the cells individual voltage of the LiPo battery, usually it is sufficient in "3 digit indicative page" of the 10mV unit.






E.g., For the purpose of detailed investigation of the individual cell voltages and the behaviour of the LiPo battery, perhaps "4 digit indicative page" is useful.

Whenever the button is clicked, from the "main page" -> the "detailed numerical page" -> the "cell voltage 3 digit indicator page" -> the "cell voltage 4 digit indicator page" -> the "main page"... It keeps cycling through the pages, which ever page in lastly used is the page that is displayed next time the CellMeter-8 is turn on.

If you are testing a battery with 7 or more cells 7S-8S:

When connecting a battery pack of 7S cells, or more will display on the 4 digit indicator page only, cell voltage is indicated but divided into 2 groups. When these are displayed by group this is changed by holding the button down.

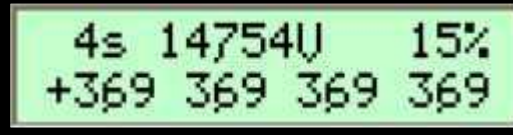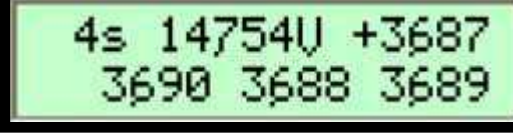Indicator example of cell voltage page


	<p>4S cell, 3 digit page indicator example of a 4 cell packs. "The number of serial cells", "serial voltage", "the remaining amount" is indicated in upper row from the left. It shows the same result as the main page. Individual voltage of each cell is indicated in the lower position in 3 digits. The numerical value where the + sign on the left edge is indicates the first cell.</p>
	<p>4S cell, 4 digit page indicator example of a 4 cell packs. The information that needs to be displayed for this setup cannot all be displayed on 1 line, so the first cell voltage is indicated in place of the remaining voltage % in the upper right side of the display. In the case of the 2~3 cell pack all cell voltage are indicated on the lower line and the voltage % remains.</p>
	<p>8s cell voltage 3 digit indicator example of an 8 cell packs. As with a 5s pack of cells or more, the cell number becomes more than a row can handle, it reaches the point where both of the rows are required to be used to indicate all of the cells voltages. It is recommended to verify this information against the pack as shown in the "detailed numerical page".</p>
	<p>8s cell voltage 4 digit page indicator example of 8 cell packs. When connecting 7 cell or an 8 cell packs, the Cell-Meter-8 divides all of the cells into 2 groups of 4. The cells that are at the highest side of the pack closest to the + are shown and after the cell count will be an (H) indicates the first 4 cell voltages. The indication bars on the display will indicate 4 electric battery bars facing toward 0 direction. When the button is held, it changes to the indication of the group of the other side.</p>
	<p>8s cell voltage 4 digit page indicator example of 8 cell packs. When connecting 7 cell and 8 cell packs, the Cell-Meter-8 divides all of the cells into 2 groups of 4. The cells that are at the highest side of the pack closest to the + are shown and after the cell count will be an (L) indicates the last 3 or 4 cell voltages. The indication bars on the display will indicate 4 electric battery bars facing toward 0 direction. When the button is held, it changes to the indication of the group of the other side.</p>

About the variation of cell voltage

Most of the time you will notice a slight difference between the voltage of the cells in the pack within 10mV (0.01V) . This becomes more apparent when the pack is under load and has a current running through the cells. This is due to the variance in capacitance of each cell. The reality is there is no pack that maintains even cell voltage across all cells under all conditions load or no load from 0%~100% charge. We recommend that the use of a cell balancer be used when charging to enable the cell voltages to be adjusted to an even level when the pack is fully charged.

When charging a multi cell LiPo battery it is important to always use a balancer and charger or a charger with an in-built balancer. There are now many good chargers on the market with built in balancers. Charge times may be longer using a balancer or a charger with an inbuilt balancer than charging the LiPo with a serial charger only. A balancer or a charger with inbuilt balancer will continually charge and discharge cells at the end of the main charge cycle to ensure that all cells are equally balanced. If you charge a LiPo only via the serial connector there is a greater risk of charging the cells to different voltages and causing damage to the cells in the LiPo. A damaged or unbalanced LiPo is more likely to cause overheating, fire and or damage in or to a model.

If you were to connect the CellMeter-8 as per the diagram below using the CellMeter-8 on the “Cell Voltage Page” you will notice how the individual cells behave under a true load. A good battery will show an even discharge across all cells under a heavy current load (Discharge).

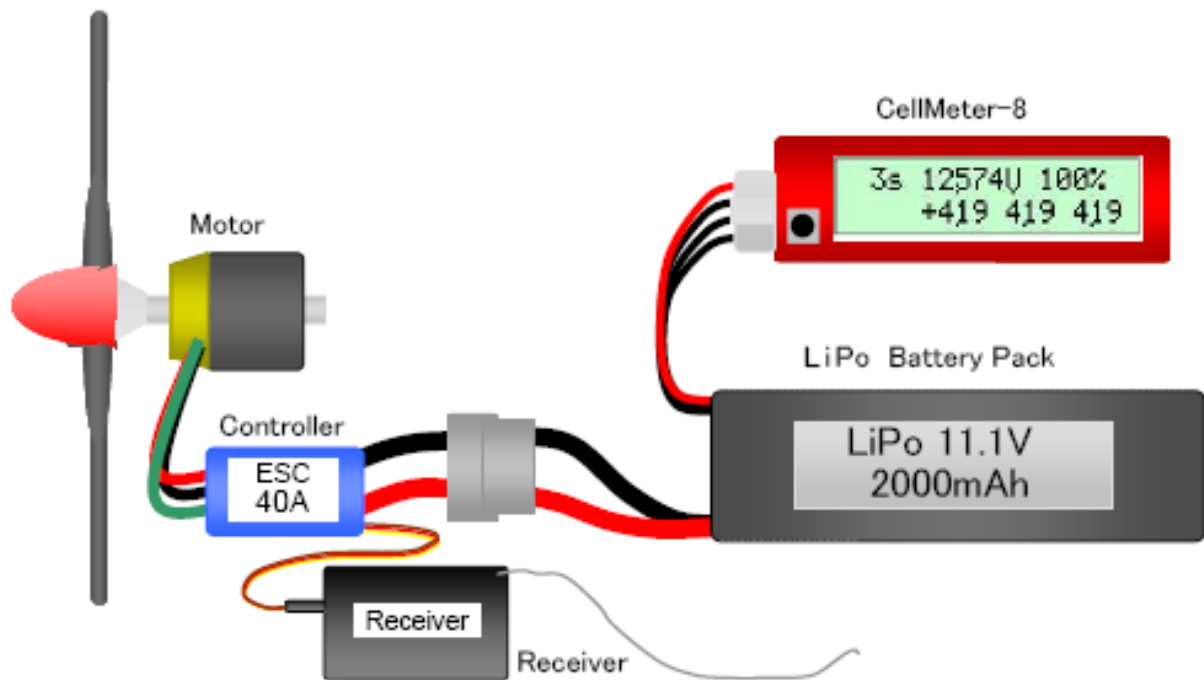

The image above shows the CellMeter-8 measuring the battery under load. The load is provided by the speed controller, motor with a propeller and securely fixed to a test station or in a plane.

(The test has been conducted in a controlled environment. Do not attempt to replicate this test without taking due care to secure and make the test environment safe).

6. Main menu

When you first connect the battery under 7s cells to the Cell-Meter-8 one of the following pages will be displayed, main page, the detailed numerical page, the cell voltage 3 digit page or the cell voltage 4 digit page. To access the Thrust calculator Hold the button until the image as in the example to the right is displayed. To move the [] over the next function press the button. To quickly make a change to the [] displayed function hold the button down.



Alert:[Yes] No
ThrustCalc: Run

Upper row Alert: This is a one off setting that turns the Alarm off if you are doing diagnostics on a battery that is triggering the alarm. The Cellmeter-8 will revert back to Alert on when the battery is removed. You have the choice to turn the Alarm on or off ([Yes] or [No]) to have the Alarm continue while the abnormal voltage is present. The alarm will display a warning message at the time of the cell imbalance. When [Yes] is selected, the warning message is made with the alarm. Only use the [No] state when you are undergoing diagnostics on a known issue when [No] is selected the warning display and the alarm will cease. In a state where a cell is over discharged or overcharge the cell is dangerous because the warnings have been stopped. For safety, this setting is not recorded to the CellMeter itself. After removing the battery pack, connection for the second time the CellMeter restarts.

Lower row ThrustCalc: To activate the Thrust Calc select and hold the button when the [Run] is selected. If the menu is left up and no button is pressed for 10 seconds a warning beep plays for the last three seconds and the words "cancelled" appear on the screen briefly, the CellMeter-8 resets to the CellMeter main pages.

7. Thrust portable calculator

With the main menu ThrustCalc: [Run] is selected, byh holding the button down ThrustCalc starts.

Thrust Calc is able to Calculate the following



8000rpm 105x 60
Th:980g Po:170W



1000V 200A
Pi:200W Ef: 85%



(a) 8000rpm (b) 105x (c) 60
Th:980g Po:170W
① ②

ThrustCalc



(d) 1000V (e) 200A
Pi:200W Ef: 85%
③ ④

ThrustCalc

What can be done with ThrustCalc

- (a) propeller revolution rpm (Revolutions Per Minute),
- (b) Propeller length,
- (c) Propeller pitch
- ① Thrust from motor
- ② Brake horsepower (Power)
- (d) voltage
- (e) Calculated current draw
- ③ Electric power consumption
- ④ Efficiency of the power setup is indicated.

①About thrust:

The CellMeter can estimate the thrust of an aeroplane, there are many variances and some known factors. Lets assume we have an aeroplane and this is its first flight. We know the size of the prop and we can do a static full throttle rpm check with a tachometer on the ground. We can now add these known figures into ThrustCalc. By the fact that you can verify thrust it becomes possible, to estimate the general power of the aeroplane in advance. This will give you more knowledge about your plane and the power characteristics to make your first flight less challenging and safer, after all you may have other flight characteristics to deal with. This should help you to estimate flight take off distances, recovery from a stall. For more experienced pilots this will enable them to calculate if the plane is going to be able to hover. It can show you what changes to the power calculation will be affected by a different size prop.

②About brake horsepower:

Brake horsepower is "the power which is necessary to turn a propeller at a given rpm (propeller has a known size & pitch). This is indicated in ThrustCalc as a watt value or kilowatt value, but it is "the highest output and horsepower". The motors power kW compared with horse power hp is about double. If the power of a motor in kW is compared with the horsepower of the motor the results are significantly different.

If the watt value of a Motor compared to horse power lets say 1watt. The numerical value which is displayed as power of the motor is 0.00136 times. This has a kilowatt value of 1. Because 36 can convert to a horsepower value by the fact that it doubles its known watt value at a PS unit, output PS can be compared to the engine and the highest output which is indicated.

In the following case we would like to compare with a hp declared value, and convert with the watt value $\times 0.00134$, or the kilowatt value $\times 1.34$.

(1 W = 0. 136 P S = 0. 134 h p

1 k W = 1. 36 P S = 1. 34 h p

1 P S = 735. 5 W = 0. 7355 k W

1 h p = 745. 7 W= 0. 7457 k W)

③About electric power consumption:


Power is the calculation of Voltage x Current ($P=V \times I$). If there is no voltage present then there are no current (amps) running through the circuit (motor). For a Current to run through a circuit there needs to be a complete circuit so current can run even if there is no motor present.

④About efficiency:

Efficiency is a ratio of power that is put into the motor versus the amount of power the motor converts into turning the prop. In an ideal world the motor would achieve 100% efficiency. We know that this is not the case. In general a smaller say 50g motor will only reproduce about 60% efficiency but a larger motor say 300g can return an efficiency up to 90%. The rest of this energy is turned in heat. When the data sheet for the motor is available we can do a comparison, it is possible to know the theoretical efficiency values from there. At full throttle it turns actual power units at the ground, "rpm", "voltage", measures "electric current" simultaneously, by the fact that it inputs into ThrustCalc are known, It now becomes possible to verify whether or not the two values compare. The efficiency value which ThrustCalc indicates and the general efficiency value of the motor weight which the graph below shows,

Because some loss occurs even in the electric wire the controller and the like the electric if from theoretical efficiency value and the general efficiency value in the below graph from the data sheet of the motor the difference is about $\pm 15\%$,

When the efficiency indicated by the ThrustCalc-8 is low in comparison with the motor data sheet, perhaps there are some electric, or mechanical issues somewhere in the power units path / chain, or incorrect propeller size battery voltage. In this case do not fly with this set up, inspect the various parts once more and look for any abnormalities. "Electric power consumption (W) - brake horsepower (W) = loss (W)" with these known factors you can calculate the loss, but remember a large portion of the energy has been turned into heat steadily, in the end can burn out a motor or speed controller.

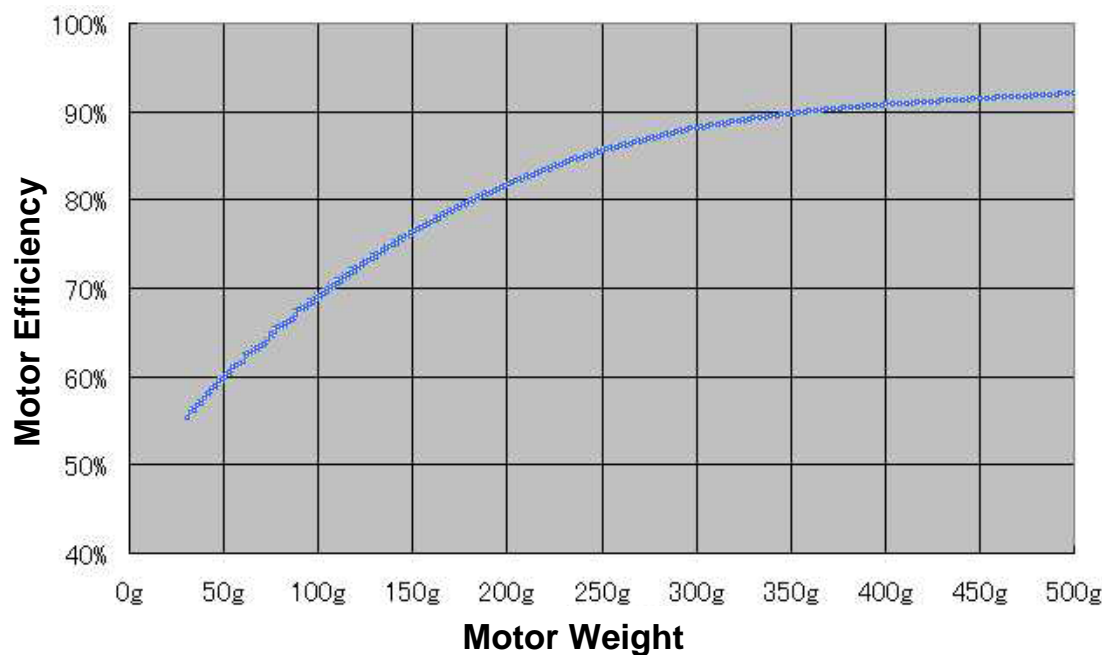

Thrust Calc Numerical input method

ThrustCalc is divided into 2 pages the thrust brake horsepower page and the electrical efficiency page. Both allow numerical input in the upper section of the display showing the calculation result in the lower row of the display. Here the rpm =9,253rpm propeller length =12.0 inch propeller pitch =6.0 inch voltage =13.60V electric current =45.3A as an example. Try different values so you are familiar with its function and how it works for the next time you are at the field.

<div data-bbox="199 159 614 253" data-label="Text"> <pre>8000rPm 105x 60 Th:9809 Po:170W</pre> </div> <p data-bbox="188 282 296 315">Cursor</p>	<p>Immediately after starting ThrustCalc the cursor will appear as an under line under the numerical value of thousands. (under the <u>8</u> in 8000 in this example). If the button is pressed for a short interval the cursor will move to the next numerical value of hundreds and so on. The values that are set in each location are remembered in the CellMeter8 memory even when the battery is removed. In order to become proficient with using the ThrustCalc try practising using the cursor.</p>
<div data-bbox="199 537 635 631" data-label="Text"> <pre>8000rPm 105x 60 Th:9809 Po:170W</pre> </div> <p data-bbox="188 660 312 694">Blinking</p>	<p>When the button is held, ThrustCalc goes into numerical editing mode, the position of the cursor begins blinking. The values that are set in each location are remembered in the CellMeter8 memory even when the battery is removed. In order to become proficient with using the ThrustCalc try practising using the cursor to input some values.</p>
<div data-bbox="199 853 643 947" data-label="Text"> <pre>9000rPm 105x 60 Th:12k9 Po:243W</pre> </div>	<p>When in Numerical editing mode you can press the button quickly and you will increase the number count by 1. (Increment mode) each input increases from 0-9 accept for the Prop, Voltage and Amps they have incremental value of the 0~49. Because we would like to designate thousand rank of rpm as 9, if the numerical value which is originally indicated is under 8, it requires several increases by clicking buttons, to get to 9.</p>
<p data-bbox="188 1256 557 1290">Numerical editing menu</p> <div data-bbox="199 1332 592 1417" data-label="Text"> <pre>→ →→ ← ←← [-] 0 OK Quit</pre> </div>	<p>To edit the numerical value which is originally larger than 9, or by clicking too much. You can open the numerical editing menu, [-] select with the button and execute by holding down the button. Now whenever the button is clicked from the main screen, it is possible to decrease the numerical value by 1 value at time. (Decrement mode)</p>
<div data-bbox="199 1568 592 1653" data-label="Text"> <pre>[→] →→ ← ←← - 0 OK Quit</pre> </div>	<p>You have entered the first numerical value and you are happy with the value and you wish to move to the hundreds value position. Press and hold the Button for a couple of seconds you will enter into the numerical editing menu again. Select the [→] and press and hold the button again. When you return to the ThrustCalc main screen you will have moved over 1 unit to the Hundreds value. Use this method to navigate through the values to input the correct numerical values.</p>

<p>9200rPm 105x 60 Th:13kg Po:259W</p>	<p>Now the blinking cursor has moved to the numerical value of hundred rank of rpm, increase up to 9 with click of the button, this value rotates from 0-1. Adjust this value to 2. Hold the button down for a couple of seconds to reach the Numerical Edit Menu and again straight away for a couple of seconds and you will move to the next value.</p>
<p>9250rPm 105x 60 Th:13kg Po:263W</p>	<p>Now adjust the numerical value of the ten rank of rpm to 5 as described above. Hold the button down for a couple of seconds to reach the Numerical Edit Menu and again straight away for a couple of seconds and you will move to the next value.</p>
<p>9253rPm 105x 60 Th:13kg Po:264W</p>	<p>Now adjust the numerical value of the unit rank of rpm to 3. Hold the button down for a couple of seconds to reach the Numerical Edit Menu and again straight away for a couple of seconds and you will move to the next value.</p>
<p>9253rPm 125x 60 Th:22kg Po:530W</p>	<p>Now you will see the blinking cursor has moved the numerical unit value to the ten value. This is because the option in this section will allow you to change the whole number between 0-49. Change the number to 12. Hold the button down for a couple of seconds to reach the Numerical Edit Menu and again straight away for a couple of seconds and you will move to the next value.</p>
<p>9253rPm 120x 60 Th:20kg Po:450W</p>	<p>Now adjust the numerical value of 0.1 rank of the propeller length. Adjustment will be from 0-9. Adjust this value to 0. Hold the button down for a couple of seconds to reach the Numerical Edit Menu and again straight away for a couple of seconds and you will move to the next value.</p>
<p>9253rPm 120x 60 Th:20kg Po:450W</p>	<p>Now you will see the blinking cursor has moved the numerical unit value to pitch value. Adjustment will be from 0-9. Change the number to 6. Hold the button down for a couple of seconds to reach the Numerical Edit Menu and again straight away for a couple of seconds and you will move to the next value.</p>
<p>9253rPm 120x 60 Th:20kg Po:450W</p>	<p>Now adjust the numerical value of 0.1 rank of the propeller pitch. Adjustment will be from 0-9. Adjust this value to 0.</p>

Now you should have the three values as entered into the ThrustCalc on the previous page. The “rpm” the Propellers “length” and the Propellers “pitch”. These values will be represented on the top row of the LCD display. On the lower Row of the LCD display you will see the values calculated. Th: 2.0kg Po:450W. This is what you expect to get as a real value result from a live setup.

Th: (Thrust) numerical value is shown in grams and kilograms. When the value is below 999g it is indicated as a gram value. When the value is higher than 999g it is shown as (k) kilograms and the symbol k is used.

Po: (out put power) numerical value is shown in Watts and kiloWatts. When the value is below 999W it is indicated as a Watt value. When the value is higher than 999W it is shown as (k) kilowatt and the symbol k is used.

If you are only after the thrust and brake horsepower then you are done. You can compare the thrust and weight of the aeroplane if indicated to the calculated values in ThrustCalc.

If you have the rpm measurement and voltage and electric current, then it is possible to do the efficiency calculation also.

Reference: You can measure the serial voltage whilst moving the throttle up to full, with the CellMeter-8 connected to the balance port of the LiPo battery. For electric current you can use a DC clamp meter between the battery and the speed controller. Used in conjunction with a WattMeter or other type of measurement tool. You will be able to measure voltage and electric current simultaneously. If you utilise Hyperion's E-Meter for rpm , voltage and electric current, you will be able to store the values in the e-Meter memory.

<div>1050V 200A</div> <div>Pi:210W Ef:Over</div>	When in Numerical editing mode you can press the button quickly and you will increase the number count by 1. (Increment mode) each input increases from 0-9 except for the Voltage and Amps they have incremental value of the 0~49. Set the tens unit rank value to 1.
<div>1350V 200A</div> <div>Pi:270W Ef:Over</div>	Continue as you did before and set the unit rank value to 3.
<div>1360V 200A</div> <div>Pi:272W Ef:Over</div>	Continue as you did before and set the .1 rank value to 6.
<div>1360V 200A</div> <div>Pi:272W Ef:Over</div>	Continue as you did before and set the .01 rank value to 0.
<div>1360V 400A</div> <div>Pi:544W Ef: 83%</div>	Now by continuing to utilise the cursor menu move the cursor over the tens unit value rank and change the value to 4.
<div>1360V 450A</div> <div>Pi:612W Ef: 74%</div>	Continue as you did before and set the unit rank value to 5.
<div>1360V 453A</div> <div>Pi:616W Ef: 73%</div>	Continue as you did before and set the .1 rank value to 3.

You have now completed the Input of all values into ThrustCalc.

Pi in the lower position: (InputPower) The numerical value is electric power consumption. When it is below 999W, it is indicated as a watt value, when it is above 1,000W, prefix meaning k is attached, this becomes a kilowatt inscription.

Ef: (Efficiency) The numerical value is efficiency. In regard to the calculation, when efficiency becomes 100% or more, Over is indicated. Because (efficiency over 100% or more is not possible, when Over, is displayed there is an input error for one or more of the numerical values).

If the data has been input correctly as indicated in the previous pages the following values should be achieved.

Electric power consumption — 616W

Efficiency — 73%

Note: As for thrust and the brake horsepower which ThrustCalc indicates, because the value is an estimated calculation, the actual thrust may differ from brake horsepower, this may happen because the pitch is too large or the prop is too long. With a simulation if the rpm is too low this has not been taken into consideration. In order to obtain the appropriate thrust, it is necessary to use a prop that is inside the appropriate manufactures range where the propeller designer has specified pitch anti- diamond ratio and rpm. In addition, actual thrust changes can occur with different atmospheric pressures. As for the simulation of ThrustCalc the APC propeller is optimized as a standard. For propellers of other brand names there are also some where pitch standards differs, when errors becomes apparent.

You may need to actually measure the propeller as some hub s differ and the measurements change from manufacturer to manufacturer. (1 inches = approximately 2.54cm) As for the simulation it is not perfect you should be able to obtain a reasonable assessment of the setup that you are wanting to use.

ThrustCalc When the button is held down the numerical value blinks the numerical editing menu opens.



If the cursor menu is left active on the display screen, it will timeout after 10 seconds. If a state where no one operates the button for 10 second or more, the menu is closed automatically and it returns to the original input mode menu. The buzzer sounds in every 1 seconds for 3 seconds alerting you that the menu is about to close. You have 3 seconds to react to stop the menu from closing.

→	Cursor is moved to the next numerical value to the right. If the cursor is already on the last numerical value in the section it will move to the next numerical value in the next section.
→→	Cursor is moved to the next input item.
←	Cursor is moved to the next numerical value to the left. If the cursor is already on the last numerical value in the section it will move to the previous numerical value in the previous section.
←←	Cursor is moved to the previous input item.
-	The numerical value will decrease 1 increment at a time with each click (decrement mode).
+	The numerical value will increase 1 increment at a time with each click (increment mode).
0	This will reset the value of the cursor highlighted number to zero
OK	Ends numerical editing mode. Again to enter into numerical editing mode, the button needs to be held.
Quit	ThrustCalc mode ends, and returns to the battery information page.

8. Configuration Mode

When the battery is connected to the CellMeter-8 while the button is held down. On the release of the button the CellMeter-8 stats Configuration mode. (setting modification mode). You can by clicking the button scroll through the individual settings and to verify each setting in order. When the setting that you wish to change is indicated on the display press and hold the button to activate the [] (cursors brackets) around the value that will be changed. Press the button to advance the [] value by a +ve increment of 1. Hold down the button again and the options page will be displayed. The value can be changed by increments of -1 values, a factory default option is available and an OK option to enter your selected option.

Adjustment of hold time of button

This menu allows you to adjust the click time for the button to advance. The default hold time is 1sec. If you wish to make the click time 0.5sec input for the Thrust- Calc is faster. This may be a better way for you to enter numerical values quicker in the CellMeter-8.

Click & Hold
Threshold [10s]

Modification of warning voltage

An Overvoltage warning occurs when the battery voltage exceeds the pre set voltage level set here in this screen.

Cell voltage such as a LiPo balance problems, if you have a special battery pack which has a limit that does not exceed 4.300V is used. This is the screen that will enable you to modify this setting. In a standard battery pack where the cells use with 4.240V the standard (default) value.

Safe Cell Volt.
UPPERLmt [4240V]

Adjustment of remaining amount meter

The remaining amount value meter can be adjusted. The CellMeter-8 calculates the remaining amount from the value which is added to this value to and the actual cell voltage. When the CellMeter-8 is at the factory default setting it is 0.000V. Modifying this setting will adjust the remaining amount indication.

Remaining Meter
Adjust [+0015V]

Cell voltage calibration

The CellMeter-8 is shipped pre calibrated and there is really no need for the user to adjust these settings. If you find that over time the values deteriorate and the errors get bigger.

This is the area that you can make the corrections in. It is suggested that the CellMeter-8 is checked against a known test device like a quality multimeter / DC voltmeter.

ADC Calibration
Ofst.C1 [+0002V]

There is the capability to change the offset in each AD converter channel parameter, in order to correct offset error and gain error these can be modified. If you feel that the Cell Meter-8 needs re calibration then this can be done upto 1 year after purchase with no charge accept for shipping from ep-plane.com To confirm pricing for recalibration e-mail.

ADC Calibration
Gain.C4 [-005%]

About Configuration menu

When the numerical value [] it is surrounded the menu item you wish to use. .



Note: Please check that the battery has enough battery level to execute the configuration mode before entering into this mode.

OK	Correction of numerical value is confirmed. Press and hold the button to execute.
Cancel	Correction of numerical value is cancelled, resets to original numerical value. Press and hold the button to execute.
Default	Correction of numerical value is cancelled, resets to standard value (factory default). Press
-	When the [-] is selected hold down the button to re-enter the numerical page. You will now be able to change your numerical value in decreasing values of 1. When in (decrement mode) the condition of [+] is indicated in the menu.
+	When the [+] is selected hold down the button to re-enter the numerical page. You will now be able to change your numerical value in increasing values of 1. When in (increment mode) the condition of [-] is indicated in the menu.

For up to date information on the CellMeter-8. please visit ep-plane.com or email: cm@ep-plane.com