

TEAC

LCD2639HD

LCD Digital TV



**“ For Optimum picture and sound quality,
please use TEAC Audio/Video cables ”**

TEAC High Performance Audio/Video cables and connectors have been designed to enhance your home entertainment experience.

USER MANUAL

IMPORTANT !

WARRANTY INFORMATION INSIDE. PLEASE READ

TEAC[®] WARRANTY REGISTRATION

Please read this warranty card.
Keep your purchase receipt to enable you to proceed quickly in the event of a Warranty Service.

Warranty Terms & Conditions

1. TEAC warrants to the original retail purchaser only, that this product is free from defects in material and workmanship under normal domestic use and authorises free service during the warranty period at any TEAC Authorised Service Centre only. TEAC warranty only applies to products purchased, used and serviced in Australia.
2. Subject to the terms herein, this warranty effectively covers the equipment as specified in the Warranty Periods Table below from the date of purchase.

TEAC PRODUCT	WARRANTY PERIOD
LED/LCD TV 106 cm and above	3 Years (1 st Year In-Home Service/ Pick up Available)*
LCD Televisions 80 cm and above	1 Year (In-Home Service/Pick up Available)*
Televisions – 59cm and above	1 Year (In-Home Service/Pick up Available)*
All Televisions under 59 cm	1 Year (No In-Home Service)
Digital Set Top Boxes & Module	1 Year (No In-Home Service)
VCR	1 Year (No In-Home Service)
DVD & Module	1 Year (No In-Home Service)
DVD Recorder & PVR Module	1 Year (No In-Home Service)
Audio Systems	1 Year (No In-Home Service)

3. In Home Service/Pick up* will only be provided as part of this warranty if all the following conditions are met;
 - a) The product as indicated in the Warranty Period Table.
 - b) The product is within the warranty period.
 - c) The product is located within the normal service area of the local TEAC Authorised Service Centre.

In any other situation or circumstance, where an In Home Service/Pick up* call is made, a service fee will be charged by the Service Provider including a travel fee if outside normal service area.

If TEAC determines that the product is not repairable on site, TEAC can complete the repair by taking the product to a TEAC Authorised Service Centre.

Where In-Home service/Pick up* is not available, the purchaser is required to send the product to the nearest TEAC Authorised Service Centre for repair. In this event, a copy of this warranty card and a copy of your receipt of purchase must be enclosed to be a valid warranty. Such equipment or part must be sent freight prepaid to your nearest TEAC Authorised Service Centre. After the repair, the product will be available for collection by or return to the purchaser at purchaser's cost. The warranty does not cover freight or insurance. In all cases of transit damage or lost, a claim must be filed against the carrier by the purchaser, even if shipment is arranged by TEAC. TEAC in-home service may also be available at a fee upon request.

4. Accessories, Remote, including power adaptors, AV box, TV tuners, etc, are warranted to be defect free for 1 year.
5. Replacement of spare parts under normal usage; except cabinet, front panel, knob, removable accessories, battery, consumable, AC cord, connecting cord and other accessories, are warranted as specified in Warranty Periods Table, and will be repaired or replaced at the sole judgement of TEAC.
6. The warranties hereby conferred do not extend to, and exclude, any cost associated with the installation, de-installation or re-installation of a product (be it in-home or otherwise), including costs related to the mounting, demounting or remounting of any screen, (and any other ancillary activities), delivery, handling, freighting, transportation or insurance of the product or any part thereof or replacement of and do not extend to, and exclude, any damage or loss occurring by reason of, during, associated with, or related to such installation, de-installation, re-installation or transit.
7. Normal customer maintenance as described in the owner's manual is not covered by this warranty (such as cleaning VCR heads etc.)
8. Service will be provided only during normal business hours and under safety conditions and circumstances.

9. This warranty does not apply to equipment showing abuse, damage or that it may have been tampered with, altered or repaired outside any TEAC Authorised Service Centre. If so, the warranty will be void.
***Please refer to TEAC website for your nearest Authorised TEAC Service Centre.**
10. No one is authorised to assume any liability on behalf of TEAC or impose any obligation on it, in connection with the sale of any equipment other than as stated in this warranty and outlined above.
11. In no event will TEAC be responsible or liable for indirect or consequential damages from interrupted operations or other causes.
12. Warranty is not transferable to any subsequent purchaser if the product is sold during the warranty period.
13. LCD dead pixel policy, please contact TEAC Customer Care Centre on 1800 656 700 for assistance.

** Extended promotional warranty may apply to certain products (for more info please contact: service@teac.com.au). In home service administration fee is applied after 1st year of warranty.*

TEAC WARRANTY PROCEDURES

Please keep this information for your own records.

Please refer to the owner's manual to ensure that you have followed the correct installation and operating procedures.

1. Read owner's manual carefully
2. If you require Warranty Service, please contact the TEAC Authorised Service Centre
3. Please have your purchase receipt as your proof of purchase and the following details completed for a valid Warranty.

Owner's Name

Owner's Address

Postcode

Model Name/No.

Serial No.

Dealer's Name

Dealer's Address

Postcode

4. Please ensure that your product is packed appropriately upon return to the service centre.

If you have any other queries regarding service or warranty please contact the TEAC Customer Care Centre below:

TEAC

service@teac.com.au

www.teac.com.au

1800 656 700

1	PREFACE	2
2	SAFETY PRECAUTIONS	2
3	IN THE CARTON	4
4	FRONT BACK CONNECTIONS OF LCD	5
5	BASIC INSTALLATION	Power Cord Connection 6 Antennas Connection 6 VGA (PC) Connection 7 USB PORT FUNCTION 7 HDMI Connection 8 COAX Connection 8 AV Connection 9 YPbPr Connection 9
6	REMOTE CONTROL	Remote control instructions in TV mode 10 Remote control instructions in DTV/USB mode 11 Remote control instructions in TELETEXT mode 12 Remote control instructions in DVD mode 13 Remote control setup 14
7	MENU OPERATION	INSTALLATION GUIDE 15 CHANNEL MENU 15 PICTURE MENU 18 SOUND MENU 20 TIME MENU 21 OPTION MENU 22 LOCK MENU 23 INPUT SOURCE 25 EPG and Channel List MENU 26 Multimedia(USB) MENU 27 DVR MENU 33
8	TROUBLESHOOTING AND ADVICE	39
9	SPECIFICATIONS	40

1. PREFACE

Thank you for Choosing this TEAC product. Before operating the TV, please read and follow all instructions and heed all warning.

 
Please keep these instructions for future reference.

Please note the diagrams in this manual are for reference only, your unit may differ slightly.


2. SAFETY PRECAUTIONS




Put the TV on a stable surface.

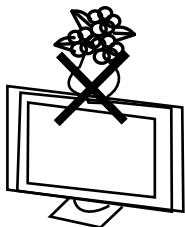


Do not place any material on the TV.

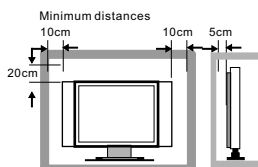 

 
Do not use the TV with fixtures other than those provided or suggested by the manufacturer.

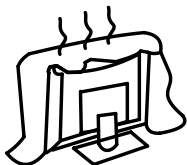

 
Do not block or cover the ventilation openings on the TV.

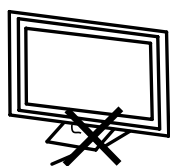

 
Power cord and cables must be properly routed and protected to prevent people from stepping on them and causing the TV to fall.

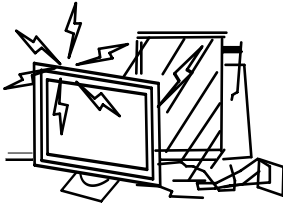

 Keep the TV dry and away from humidity.
Do not subject the TV to dripping liquids or moist environments.
Do not place any vessels containing liquids on or near the TV such as vases, cups, etc.

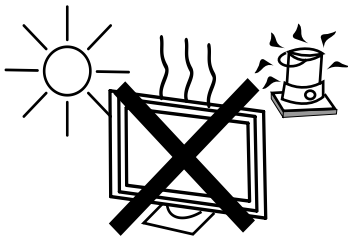


Keep the TV away from heat sources.

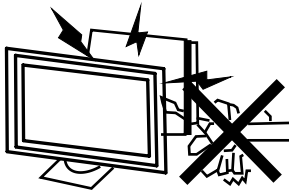 

Unplug the TV before cleaning it. Do not use solvent or liquid to clean the TV.

 
Only clean the TV with a soft and dry cloth.

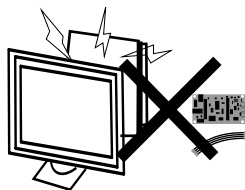

If the following problems occur, turn off the TV set and unplug the AC power cord immediately:

- AC power cord is damaged.
- Poor fitting AC power outlet.
- TV set is damaged by being dropped, hit or having something thrown at it.
- Any liquid or solid object has fallen through the openings in the cabinet.

 NEVER attempt to repair the unit yourself. Contact your dealer or the TEAC Customer Care Centre (see back page for details) to have your unit checked and repaired by approved service personnel.

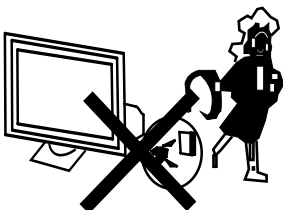

Unplug the TV during lightning storms or when unused for long periods of time.

3 . IN THE CARTON

 
Please make sure the following items are included in your package.
If any items are missing, please contact your dealer.




LCD TV SET




Remote Control

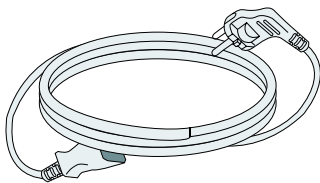

Power Cable

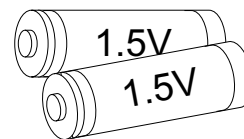 

2 x AAA Battery

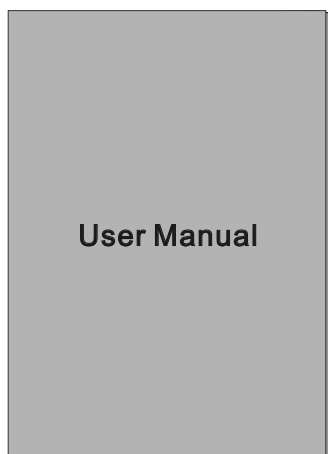 

User Manual

 


Quick Start Guide

4. FRONT, BACK, CONNECTIONS OF LCD

Front View


1. Press "VOL+ /VOL-" to increase or decrease the sound level.
2. Press "CH+ /CH-" to scan through channels.
3. Press "MENU" to bring up the main menu on the screen.
4. Press "INPUT" to select the input source.
5. Press "POWER" button to turn the TV on or off.
6. POWER INDICATOR: show red in standby mode, show green or blue when your TV is switched on.
7. REMOTE SENSOR: infrared sensor for the remote control.

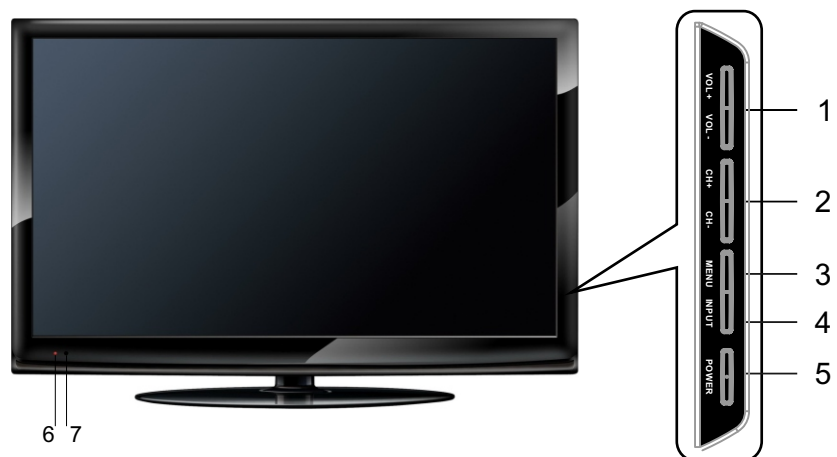

Back View and Control Connections



 1. AC IN: Main power input.
2. USB PORT: Connect to the External drive.
3. HDMI1/HDMI2/HDMI3: Connect to the HDMI output jack of DVD.
4. VGA(PC): Connect to the PC-RGB output jack of PC.
5. PC AUDIO : Connect the Audio output jack of PC.
6. YPbPr1/YPbPr2: Connect the YPbPr output jack of DVD or VCR.
7. COAX: Connect the SPDIF receiver.
8. VIDEO/Audio(L/R): Connect to the Video/Audio output jack of DVD or VCR.
9. RF IN: Connect the antenna.
10. PHONE: Connect the headphone.

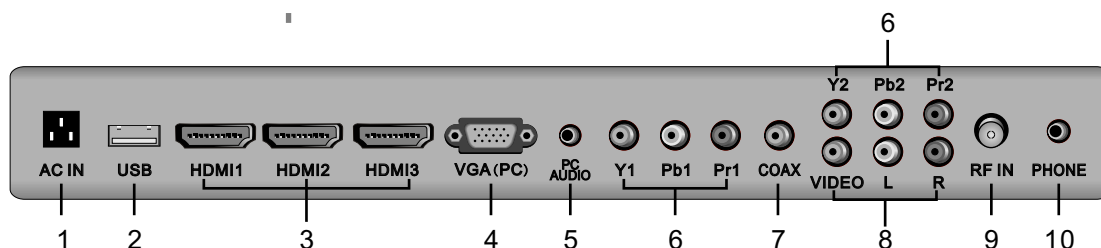


5. BASIC INSTALLATION

Power Cord Connection




- Connect the power cord correctly as shown.
- Press the POWER switch of your LCD TV to switch on the LCD TV. The power indicator on the front panel lights up in red.

 Antennas Connection

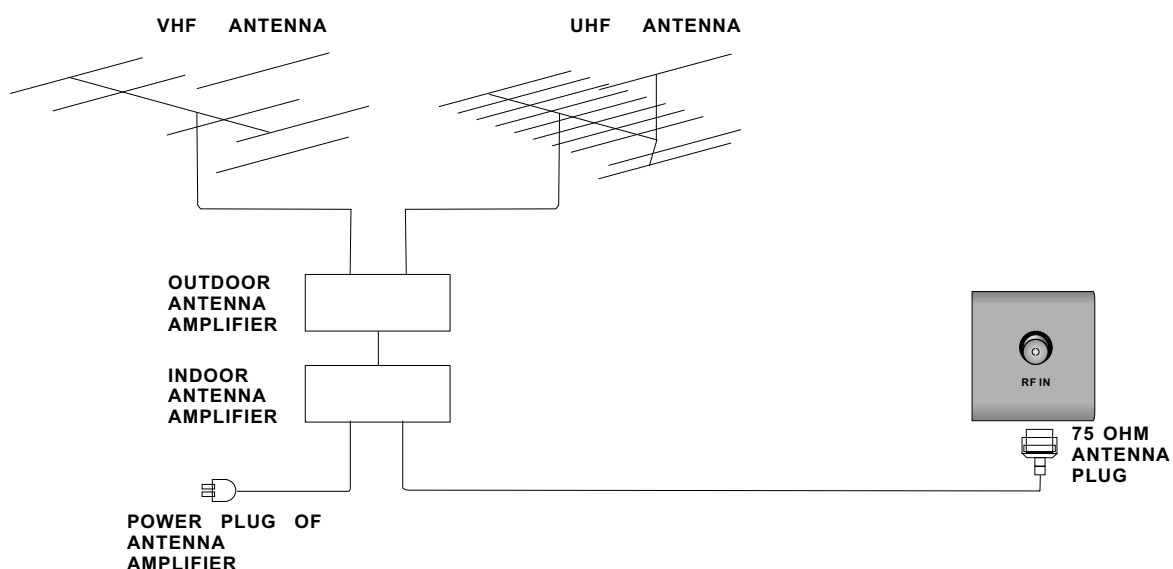


To ensure good picture and sound, TV antenna system needs to be installed. The antenna system as shown can be sourced from TV equipment shops, which will provide service for correct installation and connection. After installation, insert the 75-ohm antenna plug into the antenna jack as shown.

 VGA (PC) Connection

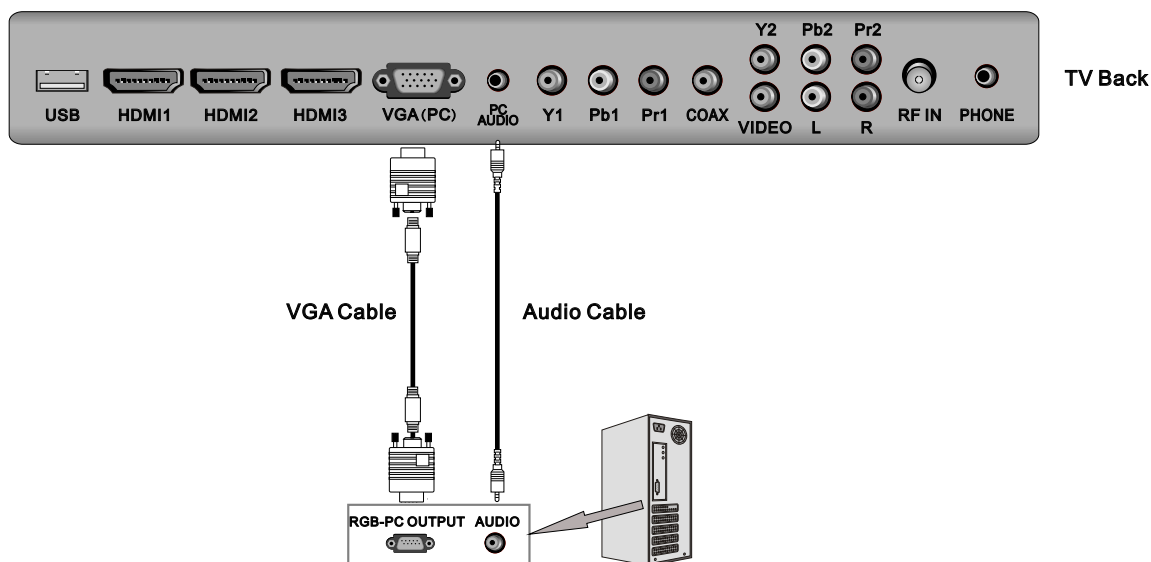


Connect the RGB output of the VGA to the PC IN jack on the set. Connect the AUDIO output of the PC to the PC AUDIO jack on the set. Select the VGA input source with using SOURCE button on the remote control.

 USB PORT FUNCTION

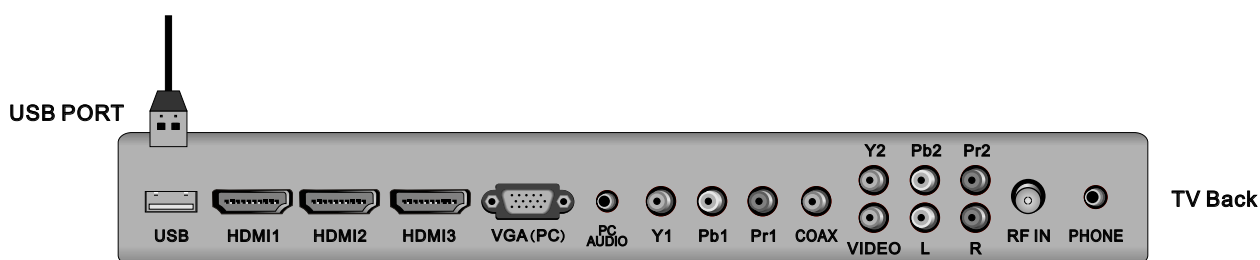


Put the USB flash drive to the USB port, Select USB channel source with using the SOURCE button on the remote control.

 HDMI Connection

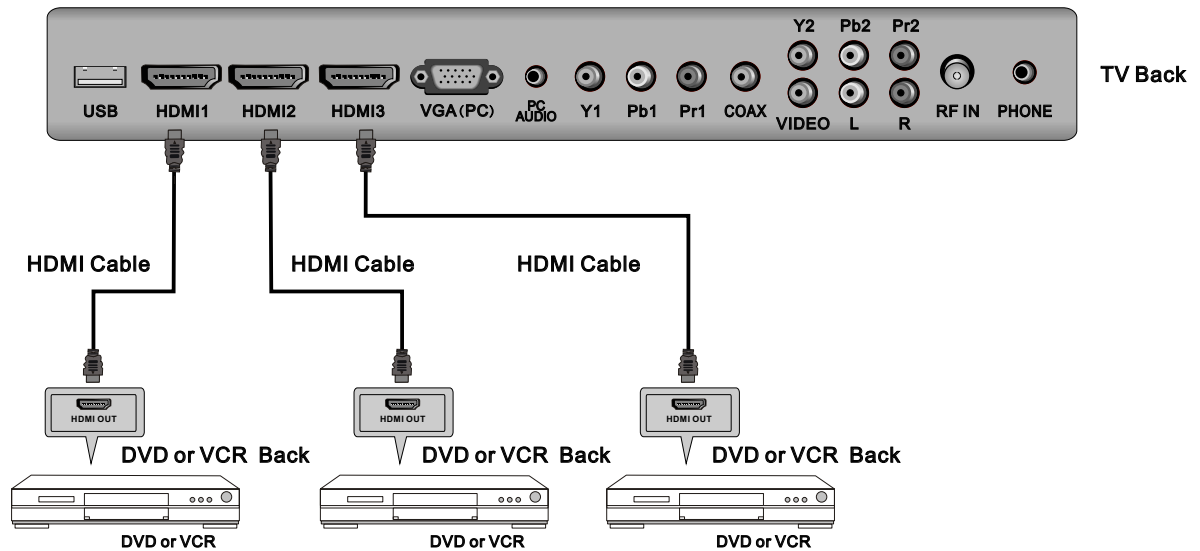


HDMI connection allows the user to transfer all audio/video/control signals through one cable only. These signals are transferred in digital.

 COAX Connection

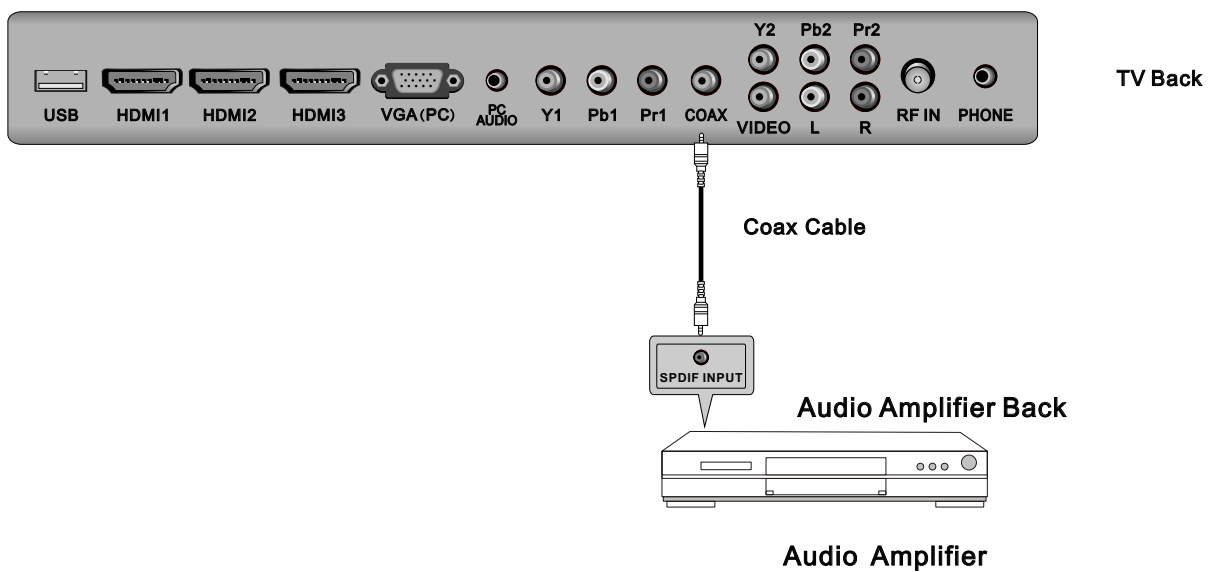


Connect to Audio Amplifier device to the COAX output jack on the TV.

 AV Connection

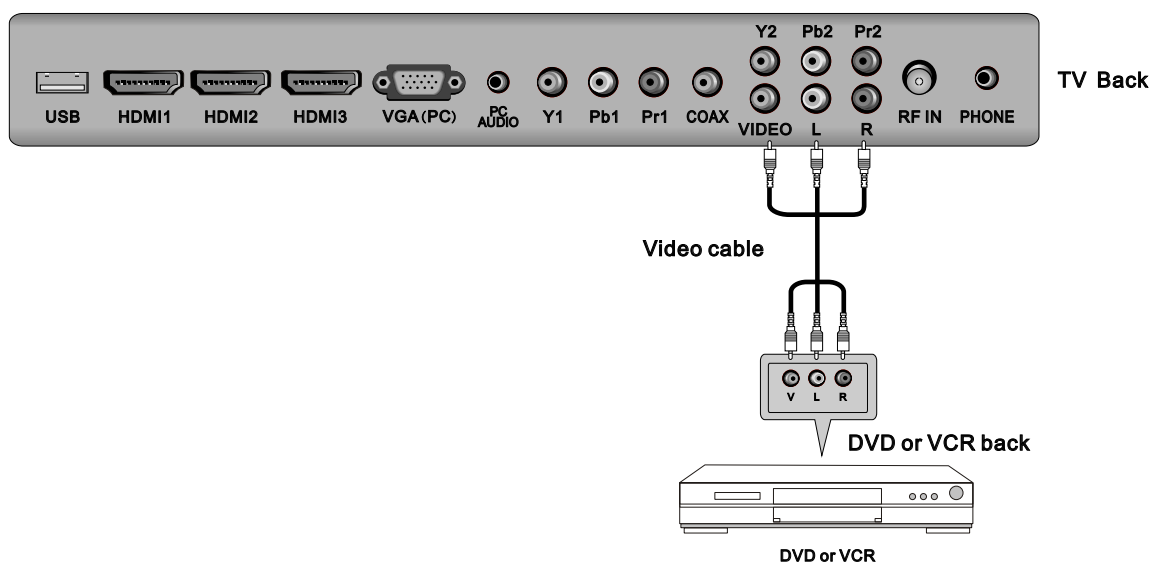

Connect the VIDEO and AUDIO output jack of the DVD or VCR to the VIDEO jacks on the TV set using the RCA cable. Match the jack colors: Video is yellow, Audio left is white, and Audio right is red. Select the AV input source via the SOURCE button on the remote control.

 YPbPr Connection

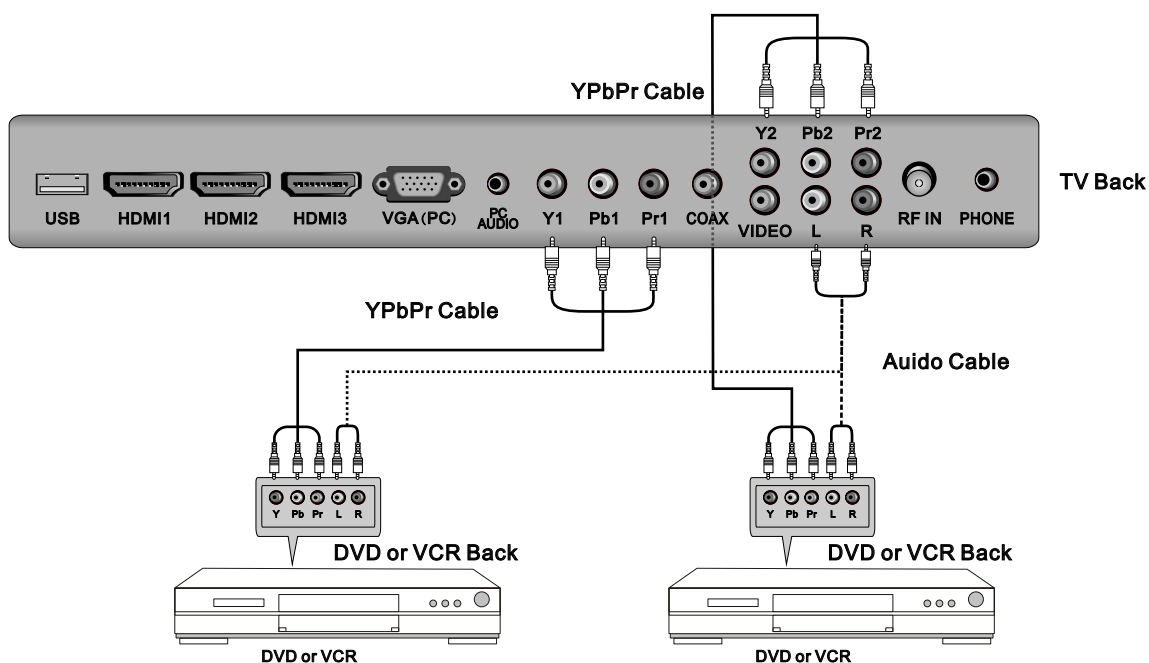


Connect the YPbPr output of the DVD or VCR to the YPbPr input on the TV set. Connect the Audio output of the DVD or VCR to the Audio input jacks on the TV set using the RCA cable.

Match the jacks colors : Y is green, Pb is blue, Pr is red, Audio left is white and Audio right is red. Select YPbPr input source via the SOURCE button on the remote control.

6.REMOTE CONTROL

 Remote control instructions in TV mode

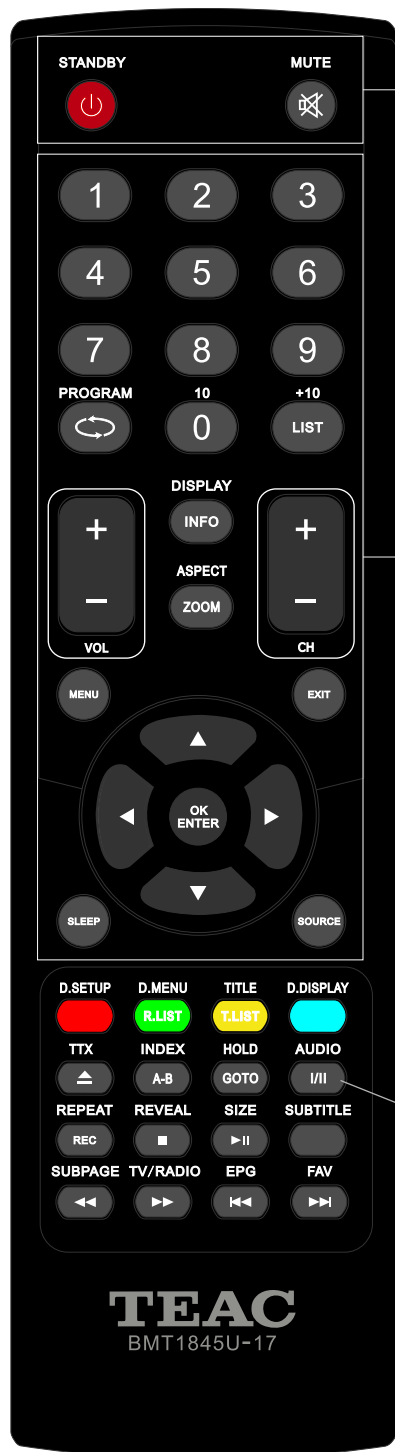

STANDBY

Turn the LCD TV ON or OFF.

MUTE

Press to mute the sound. Press again or press VOL+ to un-mute the TV.

NUMBER BUTTONS

Press 0-9 to select a TV channel directly when you are watching TV. The channel change after 2 seconds.



Return to the previous channel viewed.

LIST

Press to display the TV program list.

DISPLAY

Press to display the source and channel's information.

ASPECT

Selects screen display ratio.

VOL+/VOL-

Press to increase / decrease the sound level.

CH+/CH-

Press to scan through channels.

MENU

Brings up the main TV menu to the screen.

SOURCE

Press SOURCE to display the OSD input source, Press ▲ ▼ to select an input source, and then press OK to confirm.

THUMBSTICK(▲ / ▼ / ◀ / ▶ / OK ENTER)

Allows you to navigate the on-screen menus and adjust the system settings to your preference.

SLEEP

Lets you select amount of time before your TV turn itself off automatically.

 
EXIT

Exit the main TV menu to the screen.

AUDIO(I/II)

Press to search the NICAM modes.

Remote control instructions in DTV/USB mode

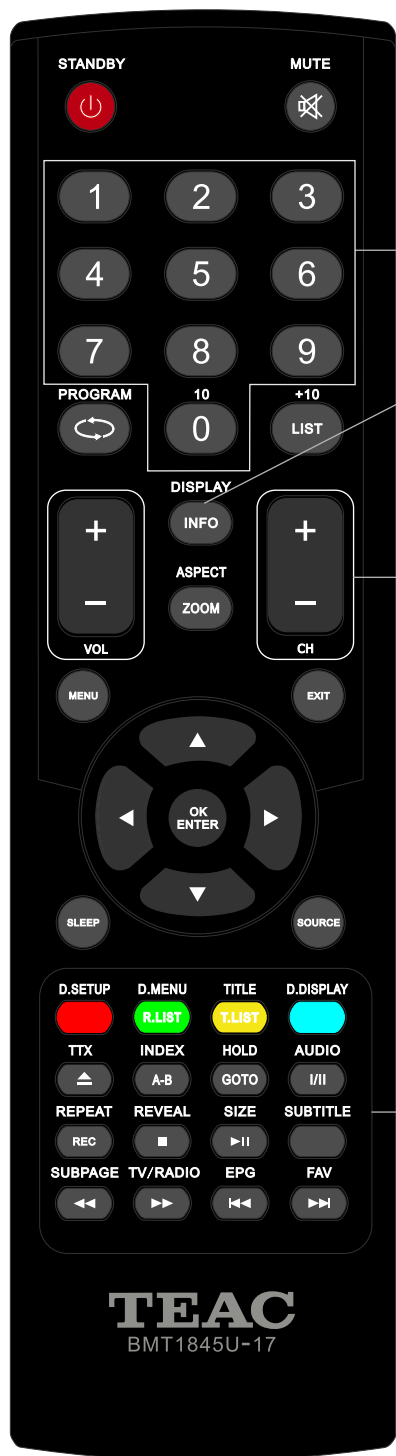

NUMBER BUTTONS

Press 0-9 to select a channel.

INFO

Press to display the source and channel's information.

CH+/CH-

When watching a channel, changes the channel.

COLOR BUTTONS

Color buttons (respectively red, green, yellow and blue) used in a few sub-menus.

T.LIST

Press to display the Record Timer Schedule List.

R.LIST

Display the recorded file list.

SUBTITLE

To display subtitle in DTV mode.

FAV

Favorite program list.

REC

Press to record the TV program in DTV mode.

EPG

Launches the EPG(Electronic Program Guide)in DTV mode.

AUDIO

To display audio menu.

TV/RADIO

When watching a channel,allows you switch between TV and Radio modes.

▶|| (Timeshift)

Play or pause.

Press to enter Timeshift, the image paused and it start record from the paused position.



Stop playing or stop recording.



Fast reverse and Fast forward.

 


Previous / next chapter in USB mode,or play the Previous /next scene of the recorded programs, jump by 30 seconds.

REPEAT

Press to select the repeat mode in USB mode.

Remote control instructions in TELETEXT mode

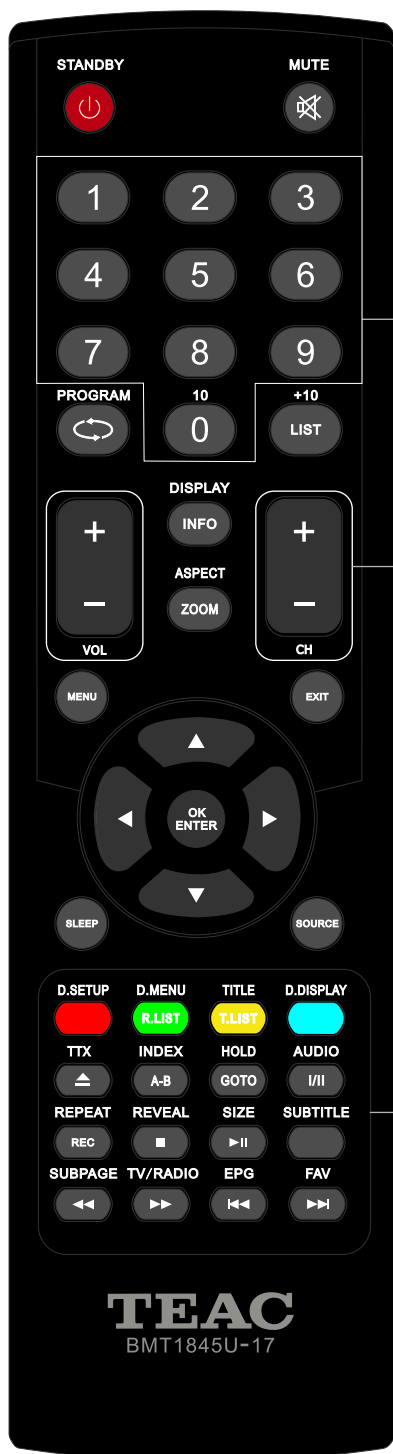

NUMBER BUTTONS

Press 0-9 to select a teletext page.

CH+/CH-

Page up and Page down.

TTX

Press to switch between TV and Teletext mode.

COLOR BUTTONS

Select 4 Preferred TELETEXT page.

SUBTITLE

To display subtitle.

HOLD

Freeze the current page.

SIZE

Change the picture size.

REVEAL

Reveal or hide the hidden words.

INDEX

 
Request index page when index link is valid.

SUBPAGE

TELETEXT Subpage.

Remote control instructions in DVD mode

Note: Please ensure that the TV you have bought with DVD loader, otherwise, all these parts with no effect.

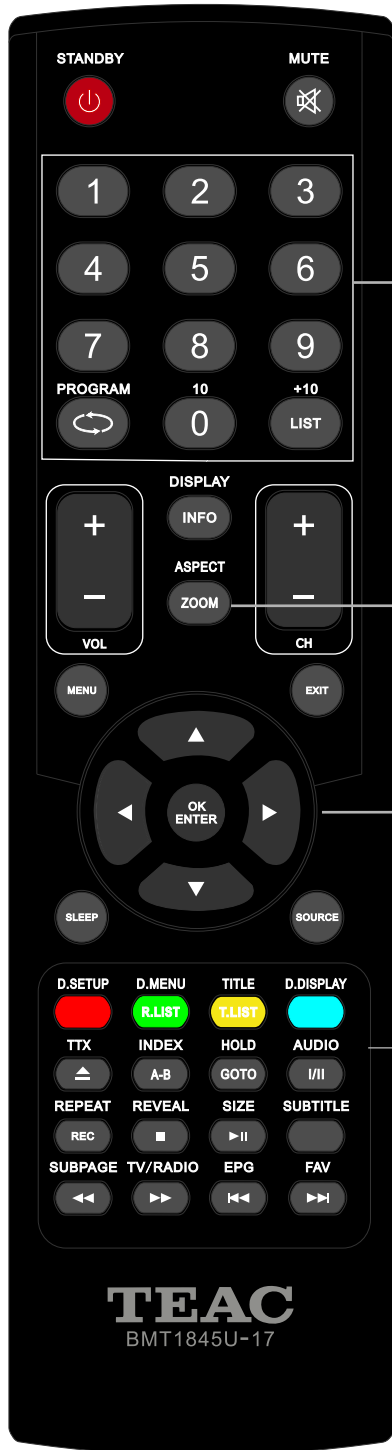

NUMBER BUTTONS

Numerical buttons for various data.

PROGRAM

Program a disc playing in a desired sequence.

ZOOM

In play state, press ZOOM, the player will zoom in the picture one time.

THUMBSTICK(▲/▼/◀/▶/OK ENTER)

Allows you to navigate the on-screen menus and adjust the system settings to your preference.

D.SETUP

Used for selecting programs. It may also be used to execute commands.

D.MENU

DVD disc menu Access to menu.

D.DISPLAY

Press to display the DVD information of DVD mode.



To eject the disc.

A-B

This button enables you to repeat a selected section from the disc.

GOTO

It is possible to get access to any point on the directly using the "GOTO" menu.

Press GOTO to access the "GOTO" menu.

AUDIO(I/II)

AUDIO selection buttons in DVD mode.

REPEAT

Press REPEAT to cycle through the repeat play options.



DVD STOP

SUBTITLE

Select a different subtitle language(the DVD disc must have the subtitle you selected).



PLAY/PAUSE in DVD mode.

SIZE

Change the picture format.



Fast backward and forward key.



 
Jump to previous and next track.

Remote control setup

1. Open the cover.
2. AAA size batteries, When inserting the batteries, make sure correct polarities as per "+" and "-" marks on the batteries and within the battery compartment
3. Replace the battery cover.

To prevent battery leakage which may result in bodily injury or damage to the remote:

1. Install all batteries correctly, and as marked on the remote control.
2. Do not mix batteries: (OLD and NEW or CARBON and ALKALINE, etc)
Remove batteries when the remote is not used for a long time.

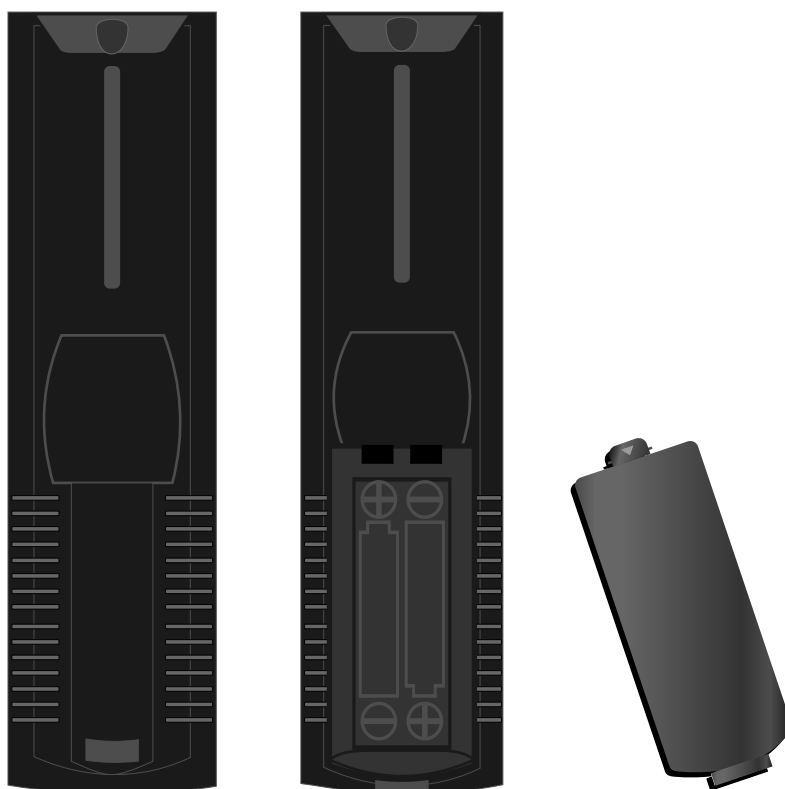


7 . MENU OPERATION

In ATV/DTV mode press the MENU button to enter the main menu. A window will appear, use ◀▶ to scroll through the following menu headings: CHANNEL, PICTURE, SOUND, TIME, OPTION and LOCK. Press ▼ or OK to enter the sub menus under the headings listed above.

While in MENU mode, press the MENU button to return to the previous menu window, or press EXIT to exit menu mode completely.

 INSTALLATION GUIDE

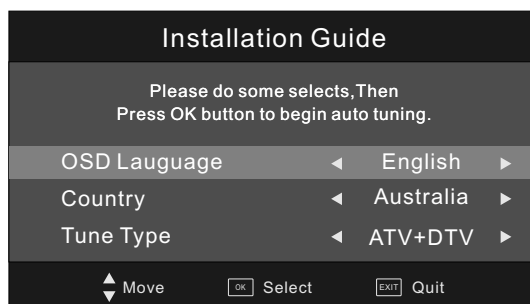

When powering up for the first time or after Factory Reset, the Installation Guide will appear on screen.

Press ▲▼◀▶ to set the OSD language/Country/Tune Type and press OK to begin auto tuning.

CHANNEL Menu

 


Press MENU button to display the main menu, use ◀▶ to select CHANNEL menu, press OK or ▼ to enter, and press menu to return to the main menu.

Note


CHANNEL can be only selected under ATV/DTV mode. The CHANNEL menu is disabled while in all other input modes.

Auto Scan

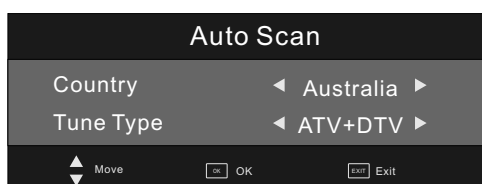


Auto Scan

 In the Auto Scan menu there are 2 options for you select from, Country and Tune Type. Press ◀/▶ to select Country and Tune Type, press OK to start scanning. If you select ATV+DTV, the first 50% of the processing is for ATV tuning, while the second 50% represents DTV tuning. When ATV tuning, you can press MENU to skip ATV tuning and start DTV tuning, or press EXIT to exit tuning.

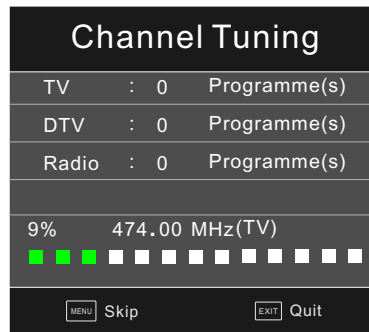


DTV manual tuning

 You can manually tune DTV channels in the CHANNEL menu. Press the ◀▶ buttons to select the channel you wish to tune, then press ENTER button to scan for the channel.

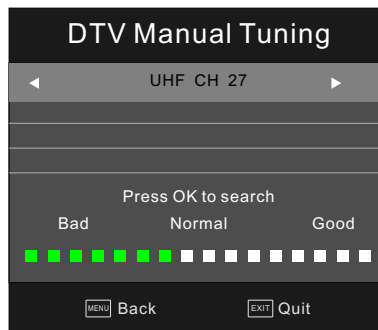

ATV manual tuning

 You can manually tune ATV channels in the CHANNEL menu.

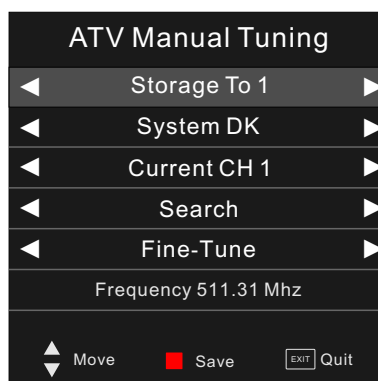

Storage to

press the ◀▶ buttons to change the numbered location of the found channel.

System

Select the system using the ◀▶ buttons.

Current CH

Displays the current channel number, press the ◀▶ buttons to choose the channel you wish to modify.

Search

Press the ◀▶ buttons to scan through the frequencies to find new channels.

Fine tune

In case of bad reception, you can press the ◀▶ buttons to make fine adjustments to the tuning.

After manual tuning is complete, please press the RED key to save any found channels.

Program Edit

Program Edit				
CH.NAME	SKIP	LOCK	FAV	Type
2 ABC TV Meihour	⓪			DTV
20 ABC HDTV				DTV
702 BBC Radio 2				Radio
703 BBC Radio 3				Radio
704 BBC Radio 4			♥	Radio
714 heat				Radio
1 C-26				ATV
2 C-44			♥	ATV
3 C-56				ATV

◀ Move [OK] Select [MENU] Back [Red] Delete [Yellow] Move [Blue] Skip [Green] Rename [FAV] FAV

Use ▲▼ to navigate through the Program Edit window.

DELETE

Press the RED button to delete the highlighted channel, a red circle will appear next to the channel name.

Press the RED key again to confirm delete.

Press MENU to return to the main menu.

MOVE

Press ▲▼ to select the channel, press yellow button to enter the move mode, then press ▲/▼ to move the channel location, press yellow button again or press OK to confirm.

Press MENU to return to the main menu.

SKIP

Press ▲▼ to select the channel you wish to skip.

Press the BLUE button, a logo will appear next to the channel name and the channel will be skipped when you scroll through the channels.

Press the BLUE button again on the highlighted channel to disable the skip function.

Press MENU to return to the main menu.

Rename(Only available in ATV)

Modify current channel name, only used in ATV mode.

Press green button to enter RENAME mode, then use the ◀▶ ▲ ▼ change name.

Press green button again or press menu button to confirm.

FAV

Set your favorite channel by pressing the ▲ ▼ buttons to highlight the channel, then press the FAV button.

A logo will appear next to the channel name. When you are viewing you can press the FAV button to see a list of your favorite channels.

 
 
Signal Information

Only available in DTV mode, Signal Information includes:channel /network /modulation/quality /strength.

DVR MENU


Enter DVR menu.(See page 33 for more details)

PICTURE Menu

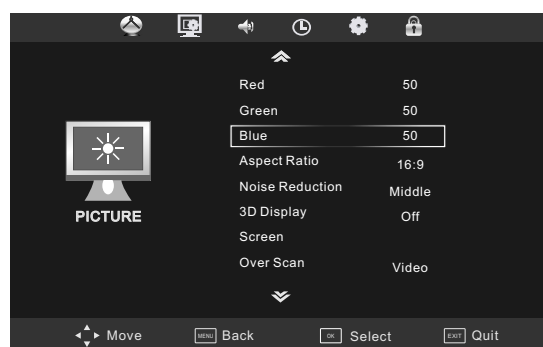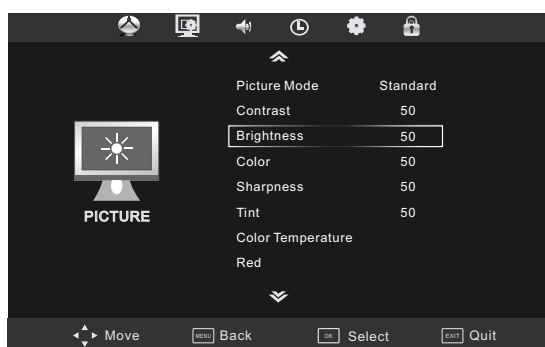

Press MENU button to display the main menu, use ◀▶ to select PICTURE menu, press OK or ▼ to enter, and press menu to return to the main menu.

 Picture Mode

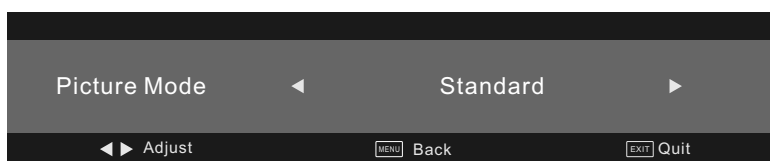


Press ◀▶ to select the picture mode, press MENU to return to the main menu.

You can select from the following preset modes - Dynamic, Standard or Mild.


Only User mode allows the adjustment of Contrast, Brightness, Colour and Sharpness, Tint is only available to adjust for NTSC.

 Contrast / Brightness / Color / Sharpness/Tint

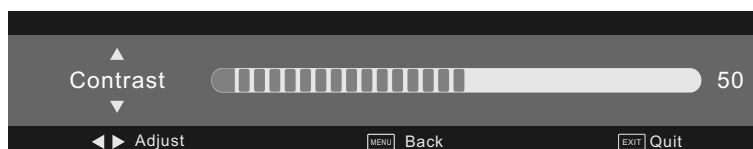

In User mode, select from Contrast/Brightness/Colour/Sharpness using ▲ ▼ and press ◀▶ to make adjustments.

 Color Temperature

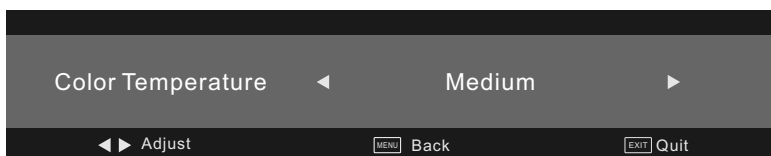

You can select from the following preset modes Cool, Medium or Warm. Only User mode allows adjustment of Red, Green and Blue values.

Red/Green/Blue

In User mode press ▲ ▼ to select Red/Green or Blue, then press ◀ ▶ to adjust.

Press MENU to return to the main menu.

Aspect Ratio

Press ▲ ▼ to highlight Aspect Ratio and OK to enter. A window will appear at the bottom of the screen, press ◀ ▶ to scroll through the following options to get the best fit picture on your screen - 16:9, ZOOM 1, ZOOM 2, Pan Scan, Panorama, Auto, 4:3.

Noise Reduction

Press ▲ ▼ to highlight Aspect Ratio and OK to enter.

Use ◀ ▶ to select from noise reduction modes as follows: Off, Low, Middle, High.

 
Note

Noise Reduction is not available in PC mode.

3D Display

In order to play 3D programme, this switch can convert 3D signal to 2D signal, and indicate in our tv sets.

Screen(Only available in PC mode).

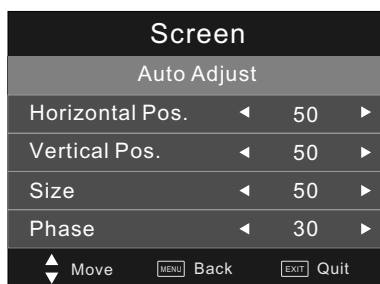

Auto Adjust

Select "Auto Adjust" and press ▶ , the unit will automatically adjust all items.

Horizontal Pos.

Allows you to use ◀ ▶ buttons to adjust the Horizontal Position.

Vertical Pos.

Allows you to use ◀ ▶ buttons to adjust the Vertical Position.

Size

Allows you to adjust the width of image.

 
Phase

Allows you to adjust the definition.

OVER SCAN


under HDMI SOURCE, user can select the HDMI input signal mode: PC/VIDEO, select PC mode used for PC input, other signal source input please select VIDEO mode;

SOUND Menu

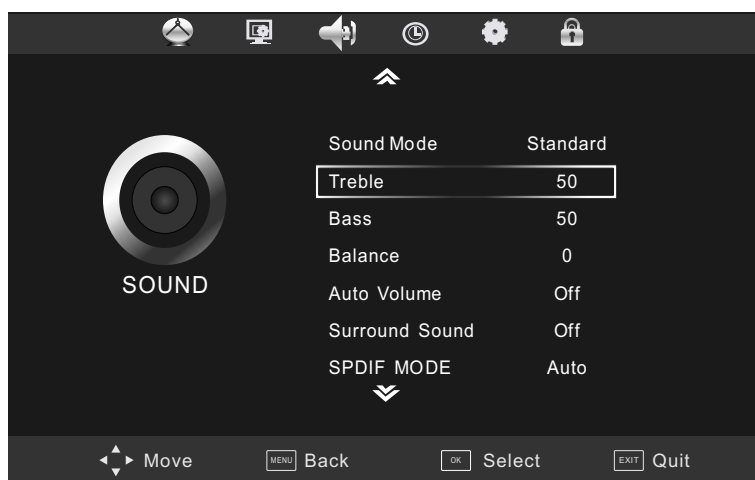

Press MENU button to display the main menu, use ◀▶ to select SOUND menu, press OK or ▼ to enter, and press menu to return to the main menu.

 Sound mode

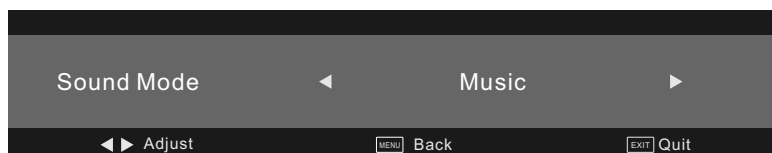

Press ◀▶ to select from the following sound modes: User, Standard, Music, Movie and Sports. Press MENU or OK to confirm.

Treble/ Bass /Balance

Use ▲/▼ to select the Treble /Bass /Balance, and press ◀▶ to adjust. Treble and Bass are only adjustable in User mode.

Auto Volume

Auto sound adjust, press ◀▶ to set ON/OFF.

 
Surround sound

Surround sound settings, press ◀▶ to set ON/OFF.

SPDIF MODE

Press OK to enter the sub menu, use ▲▼ to select Off/PCM/Auto, press MENU or OK to confirm.


TIME Menu

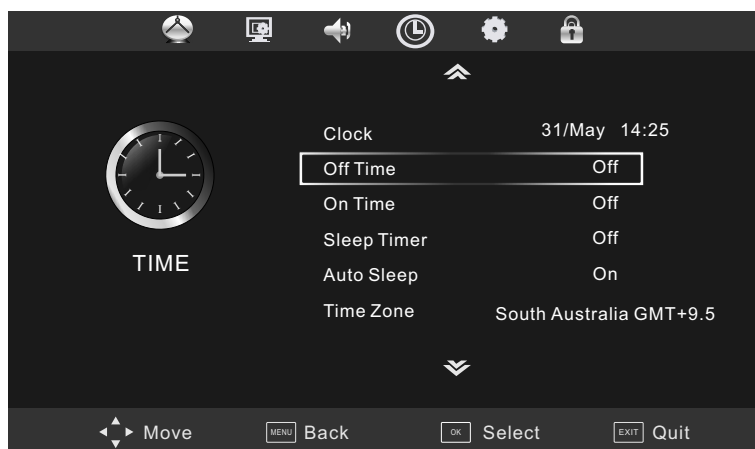

Auto clock update: please select DTV to obtains the time.

Press MENU button to display the main menu, use ◀▶ to select TIME menu, press OK or ▼ to enter, and press menu to return to the main menu.

 Clock

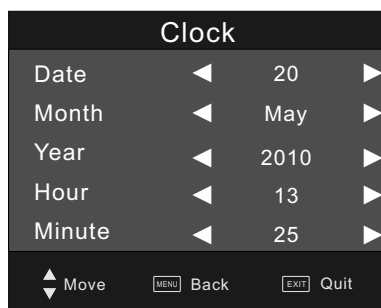

Press ◀▶ ▲ ▼ to set the Date/Month/Year/Hour/Minute, press MENU to confirm and return to Time menu.

Off time

You can set a time for the TV to turn off automatically. The Repeat mode allows the unit to be set to turned off Once, Every day, Mon-Fri, Mon-Sat, Sat-Sun or only Sun, use ◀▶ to select your preference. Once the Repeat setting has been made, press ▲ ▼ to select Hour and Minute settings, use ◀▶ to adjust.



Press MENU to confirm and return to TIME menu.

On time

You can specify a time, input source, channel and volume for the TV to turn on.
Press ▲▼ to select Repeat mode and use ◀▶ to select your preference as above.
Use ▲▼ to select the other parameters and ◀▶ to adjust.



Press MENU to confirm and return to TIME menu.

Sleep time

Press OK to enter Sleep Time sub menu, use ▲▼ to set the sleep time. You can select from the following Sleep times: 10, 20, 30, 60, 90, 120, 180, 240 minutes or Off to disable the Sleep time function. Then press OK or MENU to confirm.

Auto Sleep

Press ◀▶ to select ON/OFF.

This function allows you to set your TV to automatically turn off after 10 minutes if the TV detects no signal from the inputs.

Time zone

Press OK to enter Time Zone sub menu, use ▲▼ to set time zone for your local area. Press OK or MENU to confirm.

OPTION Menu



Press MENU to display main menu, use ◀▶ to select OPTION menu, then press OK or ▼ to enter, press MENU to return to main menu.

OSD Language

Press OK to enter OSD Language sub menu, use ▲▼ to set OSD language.

Audio Language 1St/2nd

Press OK to enter Audio Language sub menu, use ▲▼ to set Audio language.

Subtitle Language 1st/2nd

Press OK to enter Subtitle Language sub menu, use ▲ ▼ to set Subtitle language.

OSD Duration

Press OK to enter OSD Duration sub menu, use ▲ ▼ to select the amount of time the OSD will remain on the screen.

Blue Screen

Press ◀▶ to set the Blue Screen ON/OFF.

Back Light

Press OK and use ◀▶ to adjust the Back Light, press Menu or OK to confirm.

Country

Displays your country as set in the Installation Guide, not adjustable.

 
Restore factory default

Press OK to enter second menu, use ▲ ▼ to select “yes” or “no”, and press OK again to confirm.

Note

Use Restore Factory Reset function with caution as it will erase all channels and return your settings to factory default.

LOCK Menu

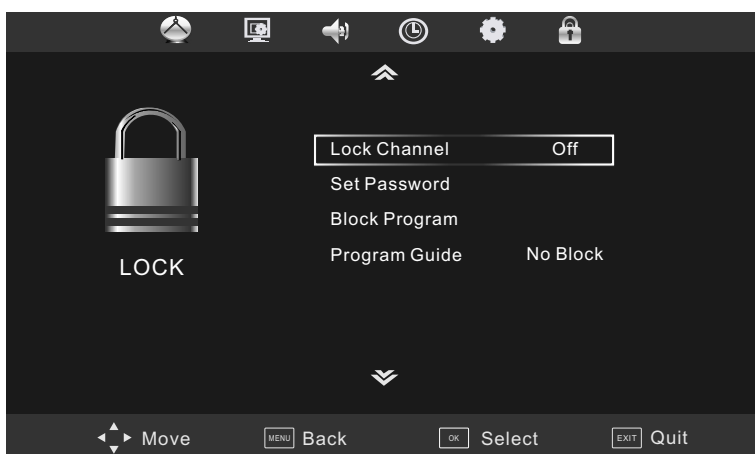


Press MENU to display main menu, use ◀▶ to select LOCK menu, then press OK or ▼ to enter.

A password is required to enter the Lock settings. Enter the default password '0000' to unlock the menu.

Press ◀ to quite password and return to main menu.

Press ▶ to clear any incorrectly entered numbers. The correct numbers will need to be entered to enter the LOCK sub menu. The message 'Wrong Password' will be displayed if the numbers are entered incorrectly.

 Press Menu to return to Lock menu.

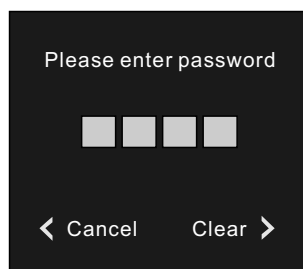


Lock Channel

This setting enables a password lock for the Program Edit function under the Channel menu.

Press ◀▶ or OK to turn the lock On or Off.

 Set Password

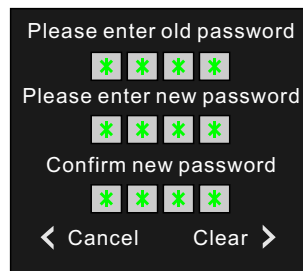

Press OK to enter sub menu.

Using the numeric keys enter the old password followed by your new password.

 
Enter the new password again to confirm.

Block Program

Use ▲ ▼ to select the channel, and press Green button to lock/unlock the channel.

If the channel is locked you will be prompted to enter a password before you can access the channel.


INPUT SOURCE

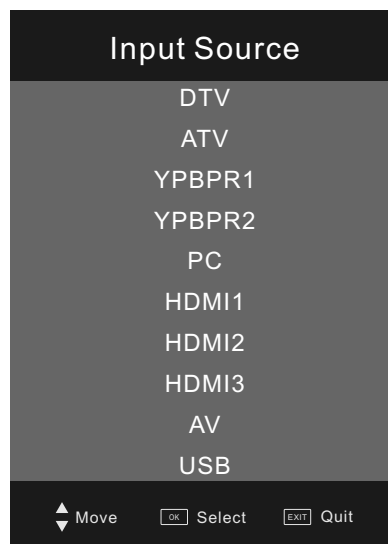

Change input

Press source button to display the source menu . Use ▲ ▼ to select the input source, press OK to confirm.

 EPG and Channel List Menu

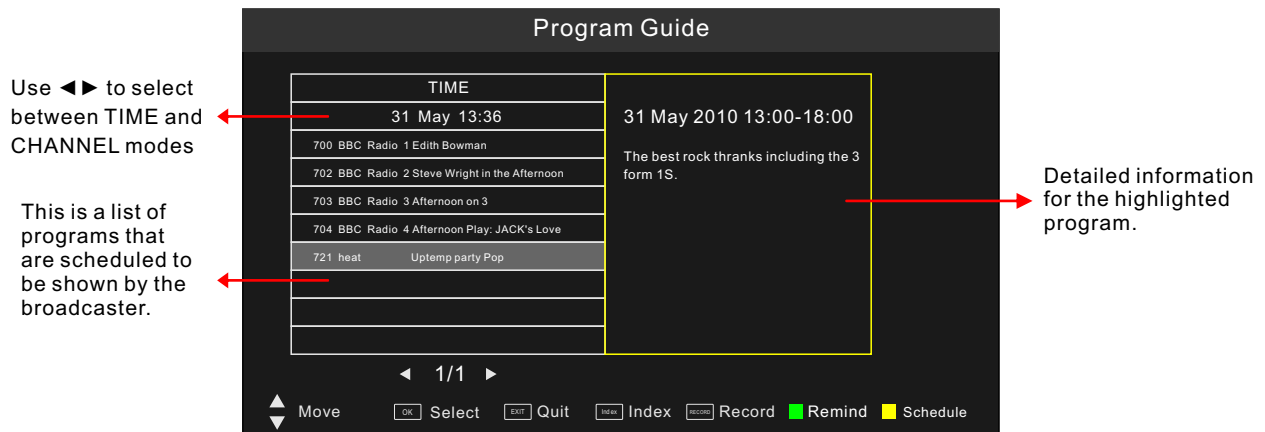

Move

Use ▲▼ to select programme.

EXIT

exit EPG.

OK

View the highlighted programme.

Index

switch to type option.

Record

Press REC button to enter a window to book a recording, see page 35 for details.

Schedule

Press YELLOW key to show a list of scheduled recordings.

 
Remind

Press GREEN button to enter a sub window to book a reminder.

You can select the channel, repeat mode, minute and hour, date and month using the ◀▶▲▼ buttons.

When a reminder has been set and the time arrives, a window will appear on the display and the channel will change after 10 seconds.

You can also intercept and confirm the change by pressing ◀.

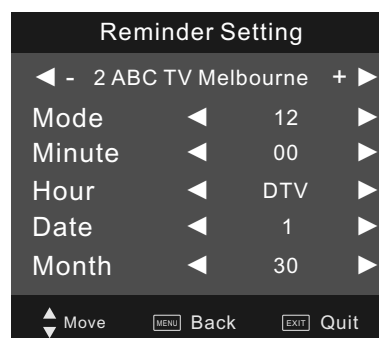

Favourite List

Press FAV button to display the Favorite Channel List.

Channel List


Press LIST button to display a list of tuned channels.

The status of the channels (Skip/Lock/Favourite) will also be displayed, see below.

Channel List		
5	Five	DTV
6	abc1	DTV
7	abc2	DTV
8	abc3	DTV
9	abc5	DTV
1	C-01	ATV
2	2C-01	ATV
3	3S-02	ATV
4	4S-03	ATV
Move Select Quit		

Multimedia(USB) Menu

 Multimedia main menu style:

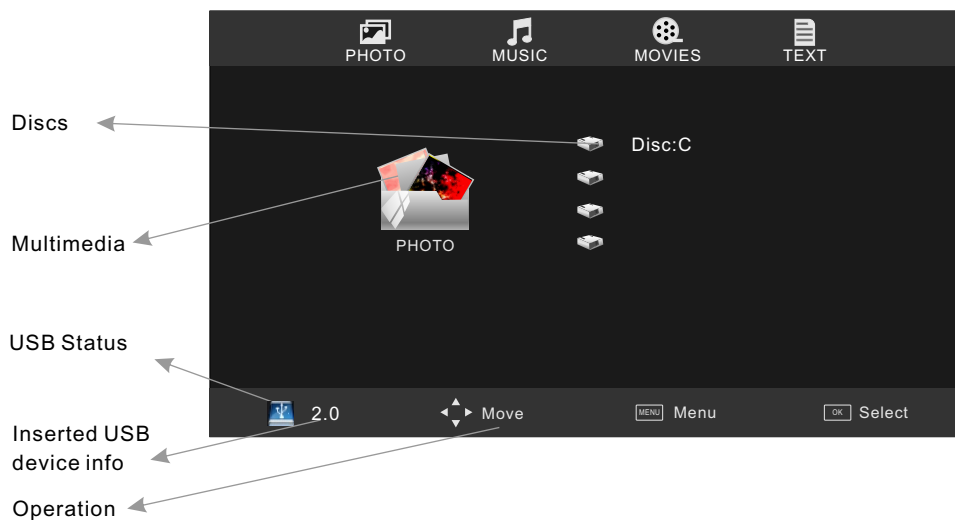

USB Status

If a compatible USB is attached the logo will appear blue. If not USB is attached the logo will be grey.

Multimedia style

Choose from the menu across the top of the screen which file type you would like to play: Photo, Music, Movie or Text.

DISC (HDD)

Shows the inserted **HDD Discs**. Each disc is assigned a letter from C onwards.

Inserted USB device info

Displays USB version of the device that is attached, for example if a USB 2.0 device is attached, 2.0 will be displayed. When no device is attached it will display 'No Device'.

Disc

Show the current disc.

Operation guide

Operational buttons on the remote ◀▶ ▲ ▼, Menu and OK.

Multimedia main board keypress instruction:

The follows only list MM page and other relevant function, Menu, sleep and other system function is not included.

◀/▶

Move Focus to left/right, it can circle move.

▲/▼

 
Turn up/down.

OK/Enter

Enter submenu.

PHOTO

Multimedia PHOTO's submenu layout:

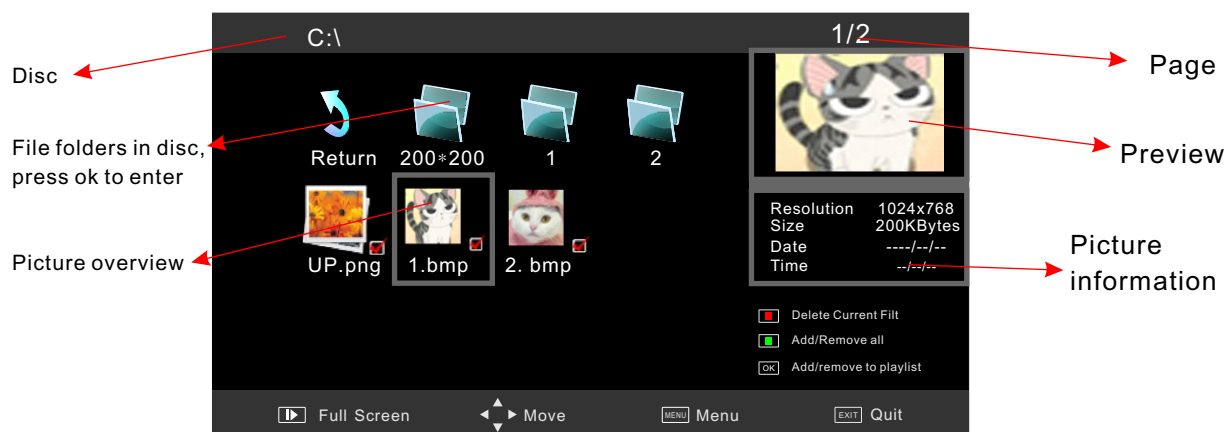

Page

Indicates the total number of pages containing files. example as per picture - '1/2' represents page 1 of 2.

Picture list

Use ◀▶ ▲ ▼ to scroll through the picture list. Press OK to select the picture, a tick will appear on the file. Press PLAY to view picture in full screen.

Preview window

Displays a preview of the highlighted picture in the Picture list.

Slide Show

When in Picture List mode you can select multiple pictures to be viewed as part of a Slide Show. Use ◀▶▲▼ to scroll through the list, press OK when the desired pictures are highlighted.

If you wish to highlight all pictures, press the GREEN button. Press the RED button to de-select all pictures. Press the PLAY button to enter Slide Show mode, the pictures will scroll after approximately 5 seconds.



Exit

Exit playing, enter previous menu.



Full screen playing of photos.



Stop playing, enter list menu.



Play previous file.



Play next file.

Repeat

Press once to repeat once, press again to repeat all photos, press three times to disable the repeat function.

 
Rotate

Clockwise/ counter clockwise turn pictures.

MUSIC

Multimedia MUSIC submenu layout.

When selected songs in the list, press OK to show the songs preview, as follows :

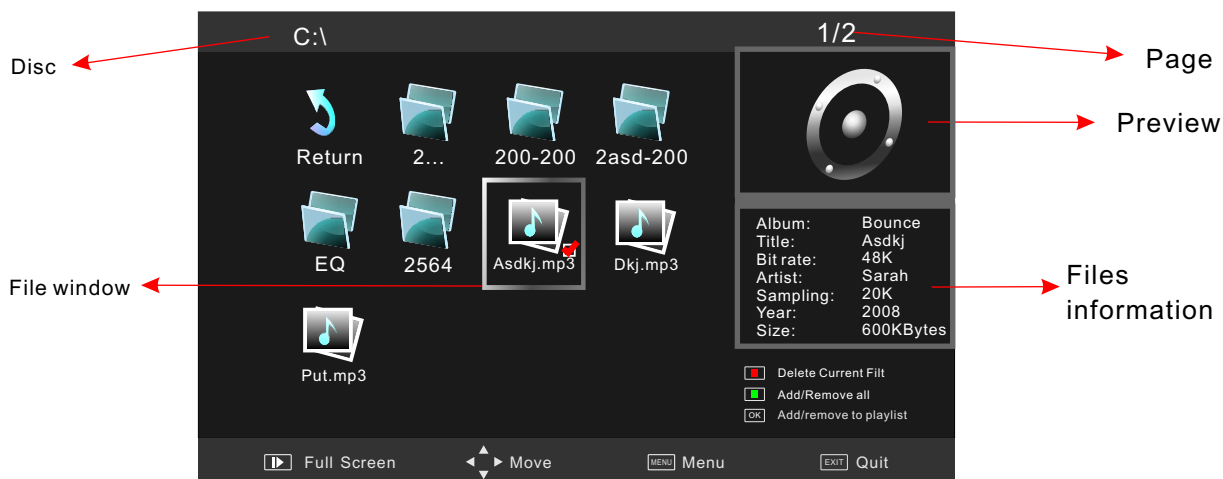

MUSIC submenu equip description:

Page

Show pages.

Preview window

 
Music picture.

Files information

Show songs name and size etc.

MUSIC playing conditon and keys function

MUSIC playing is the menu just like playing software in PC, mainly have Playlist、 basic information, processing sign, operation guide part,as follows:

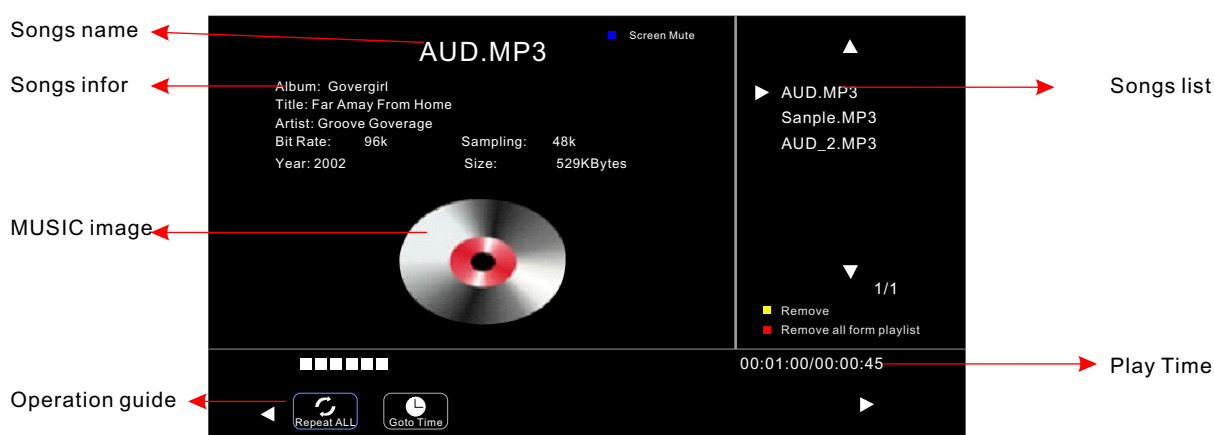

Songs name

Current songs name.

MUSIC image

One image used to sign MUSIC.

Songs list

Songs marked in Browser,from the top files on, orders by letters.

Playing time

Show playing time and in total,such as 00:01:23/00:04:56 format.

Operation guide

Show current operation guide.

Processing sign

Show current proccession time and rate.

OK/Enter

Play selected files.

Exit

Exit MUSIC playing menu.

▲▼◀▶

Scroll through songs on file list.

■

Stop playing.

◀◀/▶▶

Play Previous/next files.



Fast forward and fast reverse.

 
Repeat

Repeat playing, can choose repeat 1, repeat all, and disable repeat mode.

MOVIE

Video format: AVI etc.

Enter the movie menu and scroll through the files using the ◀▶▲▼ keys.

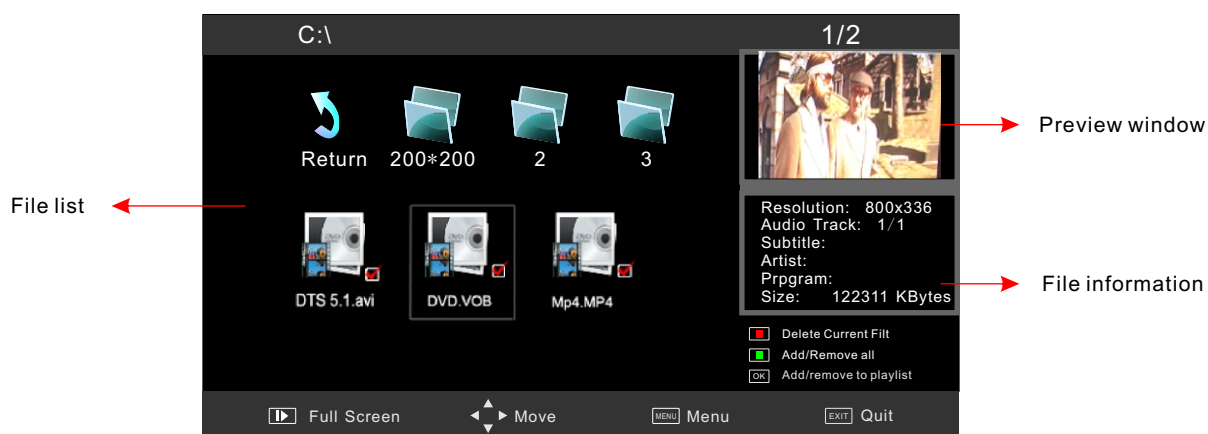

Press OK to select the file and to view a preview as above.

Press PLAY to view the file in full screen.



Repeat

Can choose repeat1, repeat all, repeat none.

Set A/B

Set A/B circle playing.

File list

You can scroll through the file list using ◀▶▲▼. Press OK to select a file and view a preview, you can also select multiple files to be played in sequence.

Press PLAY to view selected file in full screen.

Note

Larger files may take longer to load, please wait for the file to load.

Some files may not play even though they are the correct format.

Info

Displays the highlighted file's information including resolution, audio track, subtitle, artist and size.

 
Goto

This function allows you to jump to a preset time during playback. Press GOTO, a window will appear displaying time in hour minutes and seconds as follows 00:00:00.

Enter the time you would like to jump to using the numeric keys.


Press OK to confirm.

TEXT

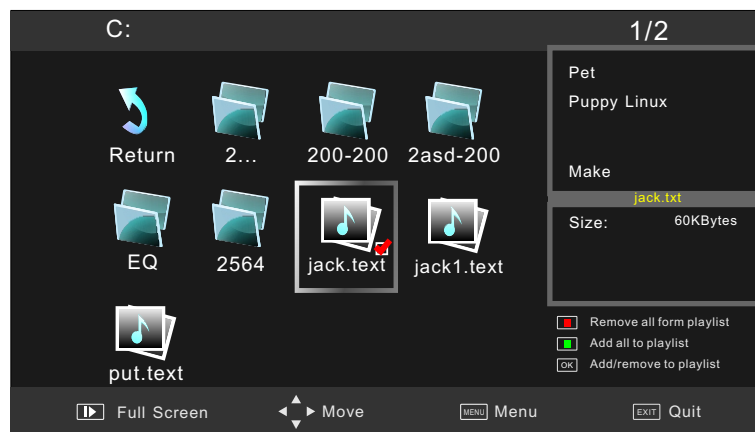

Choose TEXT files, press OK and it shows the above frame.

 Press play to start full screen playing as follows:

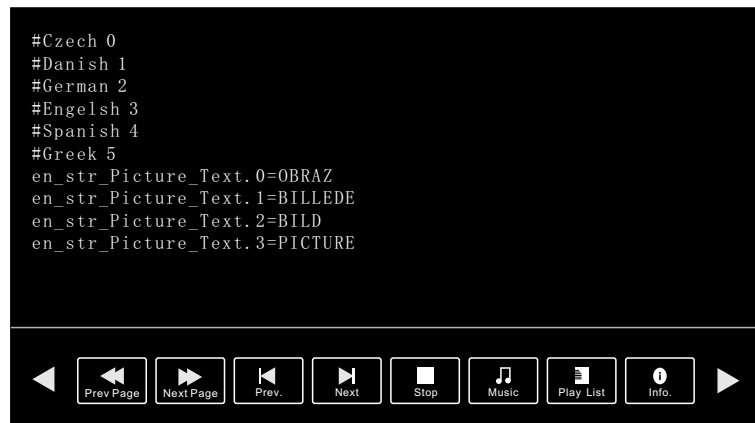

Prev page

Play previous page.

Next page

Play next page.

Prev.

Play previous files.

Next

Play next files.

Stop

Stop playing and Exit to Browser menu.

Playlist

Show play list.

Info

Displays the current file's information including file name and size.

DVR menu

DVR function is only available for DTV, includes Record, Timeshift and Playback function.

Note

When DVR function is in progress, please don't unplug the power and the external USB device at will.

 
When DVR function is active, the power indicator will blink with red and blue consecutively.

Before start recording a program, please make sure the external USB device is connected.

While recording, if the available storage space becomes low, the recording will be automatically stopped.

DVR File System

Enter DVR from CHANNEL menu, as follows:

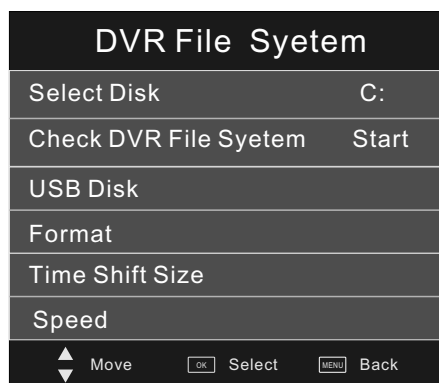

USB Disk

If a compatible USB device is attached, this will indicate 'PASS'. If no device is attached it will appear grey.

Format

Your USB device will need to be formatted before it can be used for DVR functions.

Note

Formatting a USB device will erase any existing data on the device, back up all existing data.

TEAC accepts no responsibility for any loss of data.

Larger devices will take longer to format.

Time Shift Size

 
Can't be chosen. After Check DVR File System, it means the USB passed Mstar Format and can be used. At Timeshift space, the size is chosen by clients when doing format.

Speed

Displays the speed of the attached USB device.


Select Disk

Choose the drive for DVR, C: is the default drive.

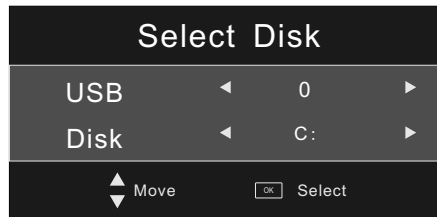


Check DVR File System

 Press 'OK' button to check if your USB device is ready for DVR functions. If the disc is formatted and compatible it will display 'SUCCESS', if the disc is not ready it will display 'FAIL'.

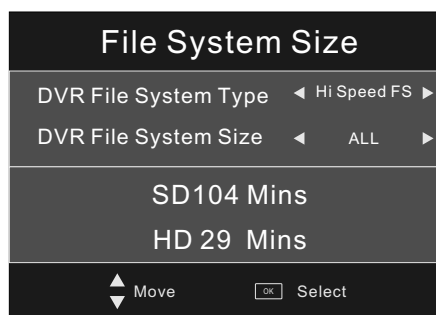

Channel - Recorded List

 To view a list of recorded programs, press the R.LIST button.

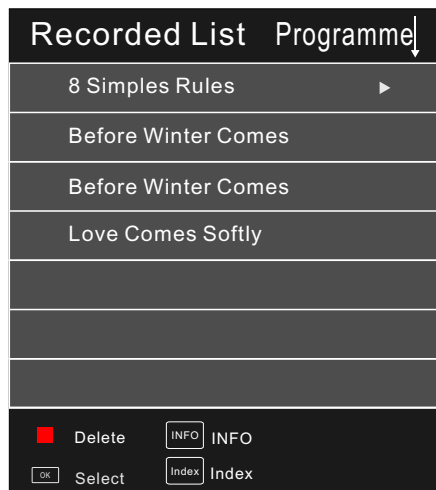

Title

Recorded List.

Ordering

Show in title right, means the current ordering way, Index key can switch option:

Programme -> Channel -> Time, which make orders by programme name, channel order and record time.

Mark

Show current condition, recorded programme shows no mark, if shows **Record** means recording, and if it shows **Play**, it means on the playing, if Focused, it shows color image, otherwise it is gray.

Programme name

The programme name is construct by channel number and record channel number.

Operation guide

Show the current available operation.

R.LIST

When no menu, press to show Recorded List; When it show Recorded List menu,switch recording programme orders.



Up and down to move Focus to select programme.

◀▶/OK/Enter

Close/pop out the programme instruction.

Info/Display

Pop out or close the programme instruction.

DELETE

Delete Focused programme.

DVR –Record Mode

Recorded Mode		
09 Jun 18:14		
▼	20 ABC HDTV	▲
Mode	◀ Once ▶	
Start Time		
Minute	◀ 00 ▶	
Hour	◀ 00 ▶	
Month	◀ Jan ▶	
Date	◀ 2010/05/04 ▶	
End Time		
Minute	◀ 00 ▶	
Hour	◀ 00 ▶	
Month	◀ Jan ▶	
Date	◀ 2010/05/04 ▶	
▲ ▼	Move	OK Select MENU Back

Title

Shows current channel name.

Mode

Choose recording mode; Switch order : Once -> Everyday -> Weekly -> Auto.

Start Time

Start recording time;

End Time

Recording end time.

DVR – Recorder Schedule

Menu and function

Schedule List					
Mode	Time	Date	Programme Title	Channel Name	Result
AUTO	19:28-20:20	Satos Jun	New Tanks	2 ABC TV	

18:14 09th Jun

Move Delete Back Quit

Note

- 1.List timer recording will start according to date and time priority.
- 2.Newly added items will be last on the listed.
- 3.It enter the menu when recording,Focus on current recording plans.

Menu

Exit Recorder Schedule List menu,enter DVR menu,Focus on Recorder Schedule List;

Move

Move Focus up and down;

Delete

Delete Focus items;

Exit

Exit menu;

DVR shortcut function

REC

Enter Record mode;



Enter Timeshift mode;

R.LIST

Pop out Recorded List menu, enter OK/Enter to enter Playback,play it;

T.LIST

Pop out Recorded Timer Schedule List.

Note

Record and Recorded List can be enter from DVR menu.

Record

Record menu includes two kind, one is Full Mode,the other is Simple Mode. At Simple mode, there is only power indicator blinking but no operation menu display.

They can switch by REC/EXIT key.

At Record mode, Record menu shows still.

The details is as follows:

Full Mode :



Stop

Exit Record, shows Processing;

Record/Exit

Switch Record menu mode;

Play

Enter Playback mode, play it from the start recorded programme Check Playback instruction in details;

R.LIST

Close Record menu , pop out Recorded List menu; when exit from Recorded List menu, it shows record again;

 
Timeshift

Timeshift menu

Timeshift is similar with Record menu, includes two kind: one is Full Mode and the other is Simple Mode. They can switch by Exit key. At Timeshift mode, Timeshift keeps still.

Full Mode:

Simple Mode:

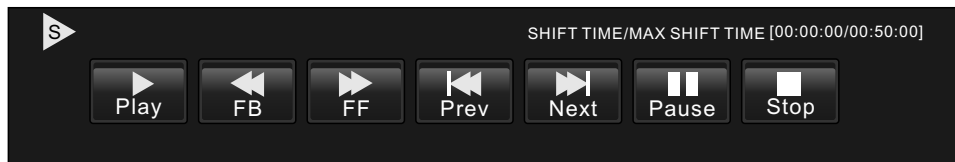

Note

At Simple Mode, it shows current Timeshift playing condition, such as Play, Pause; Simple Mode shows on the right down side;

Timeshift condition

Timeshift Start condition

Enter Timeshift to press ►, and the image paused and it start record from the paused position.

Stop

Stop Timeshift.

Exit

Switch Timeshift menu mode.

R.LIST

Close Timeshift, pop out Recorded List; From Recorded List menu to enter Playback, and then exit Timeshift;

Play

Enter Timeshift Play condition ;

Timeshift Play

At Timeshift Play condition, the system record DTV and play it at the same time.

Timeshift Play is start by press ►|| , at Timeshift Play condition, it can work Pause, Fast Forward, Fast Rewind, and it would enter A->B circle playing condition.

Timeshift Record

 
Timeshift Record condition, similar to Record mode.

Playback

Playback is similar with Timeshift, one is Full Mode, and the other is Simple Mode, they can be switch by Exit key.

At Playback mode, Playback shows still.

Full Mode:

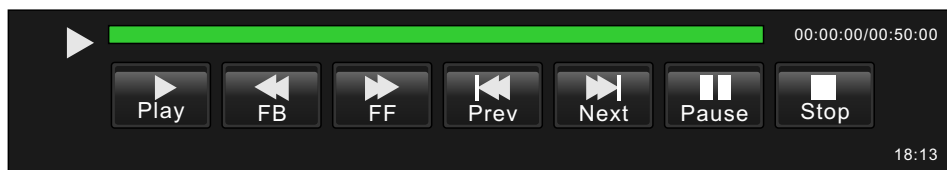

Note

At Simple mode, there is only power indicator blinking but no operation menu display.

8. TROUBLESHOOTING AND ADVICE

If you encounter problems with your TV, please check the countermeasures below.

If the problem persists, please contact your dealer or the TEAC Customer Care Centre, see back page for details.

Troubleshooting	Control
No signal	Please check that all cables are correctly plugged in.
No color	Adjust the contrast, the color and the brightness
Interference on the screen.	Maybe result from a lighting signal from car, motor, neon light and other electrical devices or appliances.
Double or multiple display image	Maybe the result of an electrical wave disturbances from other TV, Computer and Game machine or Radio
Snow on the screen	The cables of the antenna are not correctly plugged in.
The remote control does not work	Please check the batteries polarity and alignment. Make sure the signal from the remote control to the TV is blocked by any objects.
No sound	Make sure that you have not pressed the MUTE button of the panel or of the remote control. Adjust the volume setting.

9. SPECIFICATIONS

Design and specifications subject to change without notice. Weight and dimensions are approximate.

Model		LCD2639HD
Screen Size		26-inch
Native Resolution		1366X768 Pixels
Brightness		450 cd/m ²
Contrast Ratio		4000 : 1
Response time (ms)		8ms
Color System		PAL
Sound System		BG/I/DK
Tuner		VHF/UHF: 48.25~863.25MHz
Antenna		75Ω VHF/UHF input
Stereo		NICAM/A2
DVR	Max Supported USB Volume	1 TB
	Supported USB File System	FAT32
	Recorded File System	Transport Stream (.TS)
	Max Time Shift Recording Size	8 GB
VIDEO INPUT	CVBS input	PAL/SECAM/NTSC
	COMPONENT	RCA,0.7Vp-p/75Ω input (480I/60Hz,480P/60Hz,576I/50Hz,576P/50Hz,720P/50Hz, 720P/60Hz,1080I/50Hz,1080I/60Hz, 1080P/50Hz, 1080P/60Hz)
	HDMI	1080i, 720p, 1080p
	Audio in	RCA audio input
OTHERS	Multi Media USB	USB device MAX size 1TB
	VGA	15 Pin, Analog RGB signal, 0.7Vp-p, 75Ωinput(VGA, SVGA, XGA, WXGA, WSXGA*computer signal compatibility), <u>1360*768@60Hz, 1024*768@60Hz, 800*600@60Hz, 640*480@60Hz</u>
	Teletext	1000 pages
TV SET	AV output	monitor
	Speaker Output	8W+8W
	Power Requirement	AC110 to 240V,50/60Hz
	Power Consumption	< 140
	Standby Power	< 1 W
	Dimension (with stand)	664 x 210 x 507 mm (WxDxH)
	Dimension(without stand)	664 x 103 x 499 mm (WxDxH)
	Wall mounting dimension	200 x 100mm (WxDxH)
	Screw size	M4 x 12mm
	Gross weight	About 12Kg
	Ambient Temperature	0~45℃



TEAC CUSTOMER CARE CENTRE (TCCC)

Free call: 1800 656 700

Between Monday to Friday – EST 9AM to 5PM