

---

# **SPARK NEX1 User Manual**

### 1 Welcome

Thank you for purchasing Lava SPARK NEX1. Your SPARK NEX1 is packaged with the following state of the art features:

- 2.0Mp Camera
- Full touch
- 2.8 Inch screen
- Audio Player
- FM Radio
- Video and FM Recording
- Dual SIM (GSM + GSM)
- T-Flash Card support (up to 16GB)
- Hindi Language Support

#### **Important:**

1. Please read the contents of this manual to fully utilize the features of this phone.
2. Please read the Guidelines section provided with this Reference guide.

**Table of Contents**

<b>1</b>	<b>Welcome</b> .....	<b>2</b>
<b>2</b>	<b>Know Your Phone</b> .....	<b>6</b>
2.1	Keys and Parts.....	6
2.2	Insert SIM Card .....	7
2.3	Insert Memory Card.....	7
<b>3</b>	<b>Basic Operations</b> .....	<b>7</b>
3.1	Switch Phone ON/OFF.....	7
3.2	Unlock the phone .....	8
3.3	Make a call.....	8
3.4	Receive/Reject a call .....	8
<b>4</b>	<b>Notable Features</b> .....	<b>9</b>
4.1	Secure your Phone .....	9
<b>5</b>	<b>Call logs</b> .....	<b>9</b>
5.1	View Call logs.....	9
<b>6</b>	<b>Contacts</b> .....	<b>10</b>
6.1	Add New Contact .....	10
6.2	Send Message.....	<b>Error! Bookmark not defined.</b>
6.3	Call a Contact.....	<b>Error! Bookmark not defined.</b>
6.4	Delete a Contact .....	10
6.5	Delete multiple contacts .....	10
6.6	Copy Contacts .....	10
6.7	Import/Export Contacts .....	11
6.8	Send vCard.....	11
6.9	Others .....	11

6.10	Groups.....	11
<b>7</b>	<b>Music.....</b>	<b>12</b>
<b>8</b>	<b>Camera .....</b>	<b>12</b>
<b>9</b>	<b>Messages.....</b>	<b>12</b>
9.1	Write message.....	12
9.2	Use message Templates.....	13
9.3	Broadcast message .....	13
9.4	Message Settings .....	13
9.5	Message capacity.....	13
<b>10</b>	<b>Fun &amp; Games .....</b>	<b>14</b>
10.1	Lava Zone.....	14
10.2	Smash N Win .....	14
10.3	Link game .....	14
10.4	Sokoban.....	14
<b>11</b>	<b>Settings.....</b>	<b>14</b>
11.1	Call settings .....	15
11.2	Phone settings .....	15
11.3	Display settings .....	15
11.4	Security settings.....	15
11.5	Connections.....	15
11.6	Dual SIM settings .....	16
11.7	Restore factory setting .....	16
<b>12</b>	<b>My Files .....</b>	<b>16</b>
<b>13</b>	<b>Calendar .....</b>	<b>16</b>
<b>14</b>	<b>Internet .....</b>	<b>16</b>
<b>15</b>	<b>Calculator .....</b>	<b>17</b>

16	Video Player .....	17
17	Bluetooth .....	17
18	Clock .....	17
18.1	World clock .....	17
18.2	Alarm .....	18
18.3	Stopwatch .....	18
18.4	Timer .....	18
19	Cine Player .....	18
20	FM radio .....	18
21	Ebook .....	19
22	Video Recorder .....	19
23	Gallery .....	20
24	Torch .....	20
25	Profiles .....	20
26	SIM tool kit .....	20
27	Sound Recorder .....	20
28	Facebook .....	21
29	Health and Safety Precautions .....	21
30	Taking Care of Your Device .....	23
31	LAVA WARRANTY CERTIFICATE .....	26

## 2 Know Your Phone

### 2.1 Keys and Parts

Important keys and parts are listed here for you to use the phone better.



## 2.2 Insert SIM Card

The SPARK NEX1 is a Dual SIM mobile phone allowing you to use two SIM Cards.

1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM card correctly in the SIM slot(s).
3. Finally, insert the battery and place the rear cover of the mobile phone.

## 2.3 Insert Memory Card

1. Switch off the phone and remove the rear cover and the battery.
2. Insert the memory card into the slot.
3. Finally, insert the battery and the rear cover of the mobile phone.

Note: Use only compatible memory cards approved for SPARK NEX1. Incompatible cards may damage the slot or corrupt the data stored in the card.

# 3 Basic Operations

## 3.1 Switch Phone ON/OFF

To switch ON/OFF your phone, press and hold the **Power key** for a few seconds.

### 3.2 Unlock the phone

If you do not use the phone for a while, the screen is replaced with a locked screen.

1. Press **Power key** to activate the screen.
2. Slide down to unlock or Double the circle to unlock

### 3.3 Make a call

You can make a call in the following ways:

- Enter the desired number in standby mode and press the **Call key**/touch the **Call icon** to make the call.
- Go to **Menu >Contacts** and then select and dial the desired number.
- Just press the **Call key** to dial the contacts listed in Call logs.
- You can also dial a contact from the messages.

### 3.4 Receive/Reject a call

- When there is a incoming call,you can touch **“Answer”** or press the **Dial call key** to receive
- If you do not want to receive the incoming call,you can touch **“End call”** or press the **End key**



## 4 Notable Features

### 4.1 Secure your Phone

#### Menu > Settings > Security settings > Phone Lock

Let you lock/unlock your phone via a security password which you can change anytime.

The default security code to unlock the phone is **4321**.

Note: After you activate the phone lock, you would be asked for a password when you power on your phone next time.

## 5 Call logs

### 5.1 View Call logs

#### Menu > Call logs

Tip: Directly access the call logs of by pressing the **Call** key in idle mode.

1.The Call log lists the calls you have all calls,recently dialed, received, missed for SIM1 and SIM 2.

Press the Left/right navigation keys to access various call logs and work on the call logs.

2.you can highlight a record slide to right to dial the number or slide to left to send sms

## 6 Contacts

Your phonebook stores all your saved contacts for anytime use. Your phonebook data can be stored in your SIM card or your phone memory. You can manage your contacts from here.

### Menu > Contacts

#### 6.1 Add New Contact

##### Menu > Contacts > Left Key >New

You can choose the storage location **Phone/SIM**,the Phone can store 1000 records,SIM card store records related to its capacity

#### 6.2 Delete a Contact

##### Menu > Contacts >Delete multiple>Select one>ok

You can delete it which you selected the contact.

#### 6.3 Delete multiple contacts

##### Menu > Contacts >Delete multiple>Select contacts>options>ok

In the Contacts list, select the entries you want to delete.

#### 6.4 Copy Contacts

##### Menu > Contacts > Left Key > Import/Export>Copy

You can copy the records from SIM card to Phone or from Phone to SIM card

## 6.5 Import/Export Contacts

**Menu > Contacts > Left Key > Import/Export>Import contacts/Export contacts**

You can import the vcards stored in the SD card to Phone and you can export the contacts to the SD card

## 6.6 Send vCard

**Menu > Contacts > Left Key > Send vCard**

Allow you to send vCard through MMS or Bluetooth.

## 6.7 Others

**Speed dial**

**Menu > Contacts > Left Key >Others> Speed dial**

You can set speed dial from the Contacts or edit new number. On the dial interface you can long press the number-key to call the contact which you set.

**Memory status**

**Menu > Contacts > Left Key >Others>Memory status**

Check the memory status of SIM, and Phone.

## 6.8 Groups

**Menu>Contacts > Groups**

Press the Right navigation key to access the Group tab. You can build

new group or mass texting.

## 7 Music

### Menu>Music

The phone comes with an inbuilt audio player that plays all your favorite songs stored in the phone memory or memory card.

- While in music mode, press the Left key to choose various music options
- Press Up and Down keys to adjust volume.
- Press CSK to Start or pause.

## 8 Camera

### Menu>Camera

Press the navigation up key in camera mode or from menu enter into camera ,you can press LSK to choose the difference functions.

## 9 Messages

### 9.1 Write message

#### Menu > Messages > Write message > New SMS

You can compose and send SMS. Pressing the **Left Key** during/after

composing the message gives you a host of messaging features.

#### **Menu>Messages>Write message>New MMS**

You can add text/picture/music/video/attachment to compose a mms content and send it.The mms content maximum 300k,if exceed 300k will not be insert in mms.

### **9.2 Use message Templates**

#### **Menu > Messages >Templates**

Enter into preset message templates and use them. These preset templates can save you time if the theme of your message is the same as those existing in the template.

### **9.3 Broadcast message**

#### **Menu > Messages >Broadcast message**

To receive public messages on all different subjects from your network operator,you can forward,delete and delete all.

### **9.4 Message Settings**

#### **Menu > Messages > Options>Settings**

You can set your desired parameters for SMS ,MMS and Others.

### **9.5 Message capacity**

#### **Menu > Messages >Options> Message capacity**

View the memory status of your SMS,MMS,WAP Push and OTA.

## 10 Fun & Games

### 10.1 Lava Zone

**Menu >Fun & Games>Lava Zone**

We can use this to download MP3, Video, Wallpaper and other content.

### 10.2 Smash N Win

**Menu > Fun & Games>Smash N Win**

We can play this game 3 free trials.

### 10.3 Link game

**Menu >Fun & Games>Link game**

We can play the Link game freely.

### 10.4 Sokoban

**Menu >Fun & Games>Sokoban**

We can play the Sokoban game freely.

## 11 Settings

Choose various preferences to customize your handset according to your requirements. You can set:

### 11.1 Call settings

#### **Menu > Settings>Call settings**

To perform the Call divert, Call waiting, Call barring, Fixed dialing, Others.

### 11.2 Phone settings

#### **Menu > Settings>Phone settings**

To perform the Date & time, Language settings, Preferred input method, Dedicated keys, Schedule power on/off ,Battery status and Shortcuts.

### 11.3 Display settings

#### **Menu > Settings>Display settings**

Performance related Settings shown as Wallpaper settings, Main menu style,Idle display settings,Screen lock,Brightness, Backlight and Key pad light time setting.

### 11.4 Security settings

#### **Menu > Settings>Security settings**

Execute related the SIM1/2 security, mobile security, automatic screen lock, anti-theft tracking and privacy protection.

### 11.5 Connections

#### **Menu > Settings> Connections**

You can set Network account, GPRS Service,Network selection,GPRS counter.if the GPRS Service not be selected,you can not open any webpage.

### 11.6 Dual SIM settings

#### Menu>Settings>Dual SIM settings

To perform Standby mode,Reply by master SIM,Set SIM name,Set SIM color.

### 11.7 Restore factory setting

#### Menu>Settings> Restore factory setting

Input correct password,then you restore settings and restar the phone

## 12 My Files

#### Menu >My Files

You can check Phone/ memory card files from my files.

## 13 Calendar

#### Menu > Calendar

You can check the date and can reminder you after setting an event.

## 14 Internet

#### Menu >Internet

To access this menu, enter the Main Menu in the standby mode and then select Internet. You can use the network-related services with this function.



## 15 Calculator

### Menu > Calculator

To provide a calculator with 4 basic functions to facilitate simple calculations.

## 16 Video Player

### Menu > Video Player

Let you play videos stored in your phone or memory card.

Press 2 key while playing a video to change the display mode.

Press 5 key while playing a video to decrease or increase the brightness.

Press \* key to cancel mute/mute

## 17 Bluetooth

### Menu > Bluetooth

Open the Bluetooth, for file transfer and acceptance

## 18 Clock

### Menu>Clock

You can set World clock,Alarm,Stopwatch,Timer

#### 18.1 World clock

Menu>Clock>World clock

You can add new city,delete city,set local city and set daylight saving system

### 18.2 Alarm

**Menu >Clock>Alarm**

To use the alarm service available with your mobile phone.

### 18.3 Stopwatch

**Menu >Clock>Stopwatch**

You can count the time multiple.

### 18.4 Timer

**Menu >Clock>Timer**

You can set a time then countdown.

## 19 Cine Player

**Menu>Cine Player**

This player only support KMV format,you can perform the files delete,play,etc.

Press 2 key while playing a video to change the display mode.

Press 5 key while playing a video to decrease or increase the brightness.

Press \* key to cancel mute/mute

## 20 FM radio

**Menu > FM radio**

Your phone comes with an FM radio to let you listen to FM channels.

- Go to Options> Search Channels> Auto Search to fill up the channels.
- Press the number keys on your keypad in accordance to the channel list.
- Press OK key to start/stop the radio.
- Press the Up or Down key to increase/decrease the volume.
- Press the Left key for various radio options.

## 21 Ebook

### Menu>Ebook

You can choose a txt format file to open and press the Left key for various options

## 22 Video Recorder

### Menu >Video Recorder

Press the **OK** Key to start recording.

- You can press Options switch to **Camera** and vice versa.
- You can also press **Options** key to choose memory
- Press **Left key** to choose various settings

## 23 Gallery

### Menu>Gallery

You can manage the images which saved in phone memory or TF-card.

## 24 Torch

### Menu > Torch

You can turn on/off Torch

## 25 Profiles

### Menu > Profiles

Activation and customize the required profile is General, Silent, Meeting, Indoor, Outdoor, Earphones, Bluetooth.

## 26 SIM tool kit

### Menu>SIM tool kit

STK is the operator to provide value-added service for you,if you use a SIM card to provide the value-add service,such as news, sports and entertainment services,you can enter into this menu,it effective service may vary with the service provider's plan.

## 27 Sound Recorder

### Menu >Sound recorder

You can record surrounding sounds using this feature.

## 28 Facebook

### Menu >Facebook

You can open the facebook webpage.

## 29 Health and Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.

### SAR Compliance

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.
- SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories or other accessories.
- The highest SAR value of the device at the head and body are below 1.6W/kg respectively averaged over 1 gm. of human tissue.

### SAR Recommendations

- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- Please keep your calls short and use SMS whenever more convenient.

This advice applies especially to children, adolescents and pregnant women

- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 mm from the device.

### Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

### During Flight

- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

### In Hospitals

- Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices such as a

pacemaker or cardioverter defibrillator:

- Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
- Do not carry the wireless device in chest pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

### Unsafe Areas

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

## 30 Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it to the service center.

- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

### **Battery Recommendations:**

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.



- Use manufacturer approved batteries, chargers, accessories and supplies. SPARK NEX1 will not be held responsible for user's safety when using unapproved accessories or supplies.

### Recycle Your Handset



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed of or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Specified collection points for recycling of such hazardous waste. Collection and proper recovery of your electronic waste equipment at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: [www.Lavamobiles.com](http://www.Lavamobiles.com)

### Disclaimers

1. The colors and specifications shown/mentioned in the user manual may

differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

2. SPARK NEX1 keeps the right to make modifications to any of the content in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

### Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part of all of the contents in this document in any form without the prior written permission of Lava International is strictly prohibited.

## 31 LAVA WARRANTY CERTIFICATE

### Limited warranty:

LAVA international Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as “product”)

The warranty period for the transceiver is one (1) year and for battery, charger and headset is six (6) months from the date of purchase.

### **LAVA Warranty**

Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery & charger.

You shall have to coverage or benefits under this warranty in the event that any of the following conditions are applicable:

1. The product has been subjected to abnormal use or conditions, improper storage, exposure to excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs), abuse, accidents, Acts of God, spills of food or liquids, improper installation.
2. You have not notified Lava of the defect in the product during the applicable warranty period.
3. The product serial no. code or the accessories date code has been removed, defaced or altered.
4. The product has been used with or connected to an accessory (i) Not supplied by Lava or its affiliates, (ii) Not fit for use with the product or (iii) Used otherwise than in manner intended.
5. The seals of the product's battery enclosure have been broken or shown evidence of tempering or the product's battery has been used in equipment other than that for which it has been specified usable

by LAVA.

6. All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use.

To get maximum of your new product, we recommend you to:

- Read the guidelines for safe and efficient use as mentioned in the manual.
- Read the terms and conditions of your Lava warranty in the manual.
- Keep your original receipt; you will need it for warranty services if asked to produce.
- Present this Lava Warranty Certificate along with original proof of purchase whenever you require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website [www.lavamobiles.com](http://www.lavamobiles.com) for updated list of Authorized Service Centers near to your location.

Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized distributor/retailer.

All warranty information, product features and specifications are subject to change without notice.

IMEI No. ....  
Dealers Stamp .....  
Date of purchase .....  
Model No. ....