



RW-50/15

User Manual





Thank you for purchasing the Polaris RW-50/15 in dash unit.
Before operation, be sure to thoroughly read these instructions.
Keep these instructions with your vehicle records for future reference.

Warranty for this product is 3 years from date of purchase, however warranty will be void if:

- The unit is tampered with, damaged or modified in anyway.
- Reverse camera cable is cut or modified in any way
- Reverse camera is subjected to over voltage
- The Navigation SD card is damaged or tampered with in any way (this includes installing foreign mapping or software onto the SD card)

Warranty Terms

The RW-50/15 is covered for 3 years and includes:

- Defective Equipment • Defective Cables

Not Covered under warranty:

- Abuse • Improper installation
- Alteration to cables (this includes cutting of any cables) • Remote control batteries
- Accidents • Water Damage • Improper use • Labour

This Polaris RW-50/15 utilises the OEM CD player, AM/FM Radio and USB input.

If you have any specification or troubleshooting enquiries in regards to the CD player, AM/FM Radio or OEM USB input, please refer to your owners manual.

If you have any questions concerning the installation, warranty or the operation of the unit, please contact **Polaris** on **1300 555 514**.


We hope that you enjoy the Polaris RW-50/15 in dash unit.

INDEX

Home Screen	Page 4
OEM Radio Operation	Page 5
OEM CD Operation	Page 6
OEM USB Operation	Page 7
Media Operation	Page 8
Bluetooth Operation	Page 9
Bluetooth Music Operation	Page 10
Settings	Page 11

RW-50/15 User Manual


Home Screen

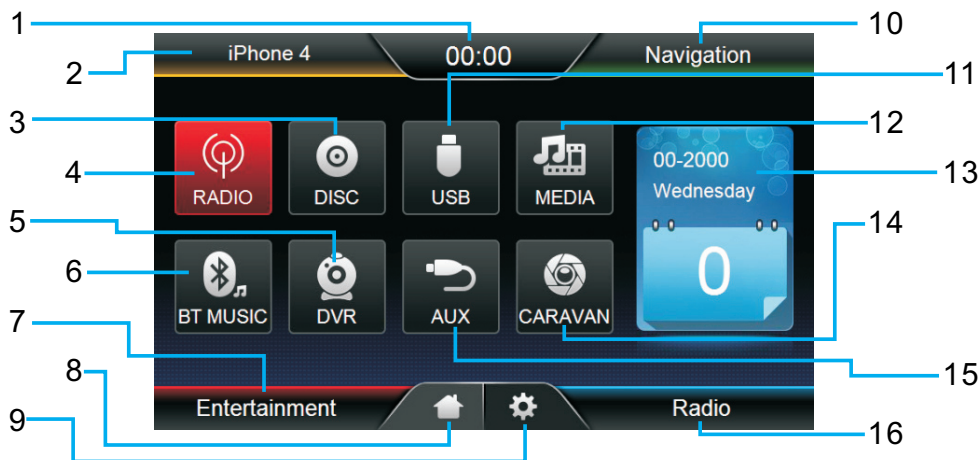

1. **CLOCK:** This feature displays the current time. You can adjust the settings in the setup function.
2. **PHONE:** Once your phone is paired with the unit, enter this feature to make/receive calls, import your contact list, view paired devices and more.
3. **DISC:** Touch to enter OEM CD feature.
4. **RADIO:** Touch to enter OEM AM/FM Radio.
5. **DVR:** This is an optional feature and is used to connect an external DVR device. The screen will simply mirror your DVR screen.
6. **BT MUSIC:** Once your phone has been paired with the unit, enter this feature to stream your music.
7. **ENTERTAINMENT:** Shortcut to MEDIA Function.
8. **HOME PAGE:** Touch to go back to the home page.
9. **SETUP:** Touch to enter Setup Menu. In the setup menu you can adjust the time, audio, video, steering wheel controls and navigation settings.
10. **NAVIGATION:** Touch to enter the street navigation or off road navigation (off road mapping is an optional extra).
Please refer to your navigation manual for operation instructions.
11. **USB:** Touch to enter the OEM USB Function.
12. **MEDIA:** Touch to enter the unit's USB function.
13. **CALENDAR:** This feature will display the current date on the home screen. This can be adjusted in the setup function.
14. **CARAVAN:** Touch to view the caravan and forward vision camera (optional extras).
15. **AUX:** Touch to enter AUX function.
16. **RADIO:** Shortcut to AM/FM Radio function.

RW-50/15 User Manual

OEM radio operation

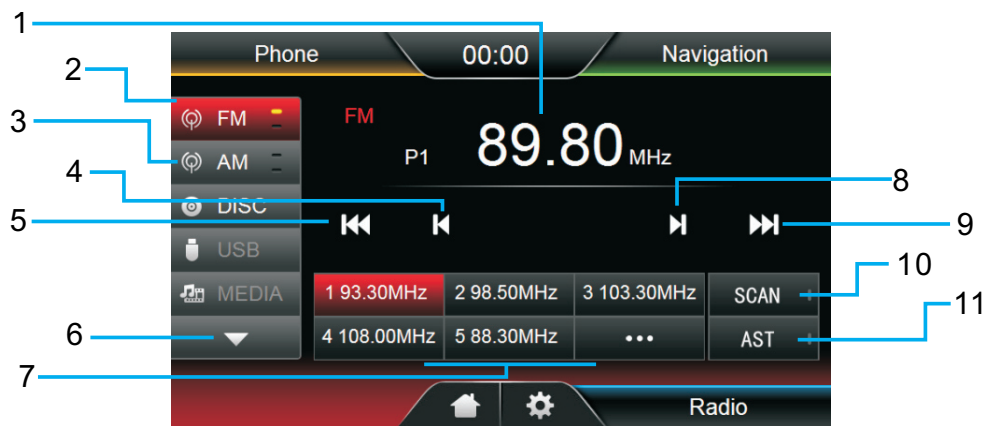


1. **STATUS:** Displays the current radio frequency
2. **FM:** Touch icon to enter FM band.
3. **AM:** Touch icon to enter AM band.
4. **MANUAL ADJUSTMENT:** This function allows you to manually adjust to the previous frequency.
5. **SCAN PREVIOUS:** This function allows you to scan to the previous available radio station.
6. **SCROLL DOWN:** Scroll down for more features.
7. **RADIO PRESETS:** Displays your preset radio stations. To save a preset, when you have reached your desired station, simply hold your finger down on one of the Presets for approx. 5 seconds to save.
8. **MANUAL ADJUSTMENT:** This function allows you to manually adjust to the next frequency.
9. **SCAN NEXT:** This function allows you scan to the next available radio station.
10. **SCAN ALL:** This function allows you to scan all the current stations and will broadcast them all for 10 seconds.
11. **AUTOSTORE:** This function allows you to search the strongest signal radio stations in the area and will automatically save them as your presets.

The RW-50/15 utilises the OEM radio operation which means that RW50/15 unit simply brings up the information onto the 8" screen.

For specifications or troubleshooting please refer to your owner's manual.

RW-50/15 User Manual

OEM CD operation

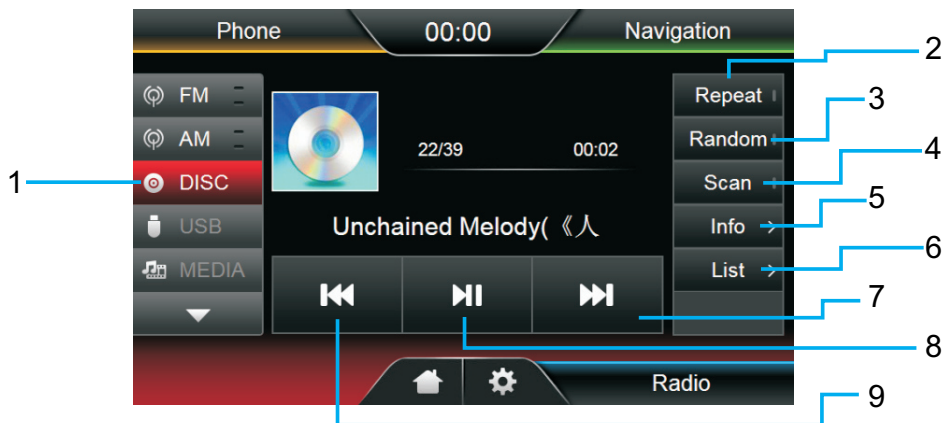

1. **DISC:** This feature allows you to change the CD settings.
2. **REPEAT:** This function allows you to filter between repeat song > repeat CD > repeat off.
3. **RANDOM:** This function allows you filter between random on > random off.
4. **SCAN:** This function allows you to scan through all of the songs on the CD for 10 seconds. Once you have reached a song you like, simply press SCAN to disable.
5. **INFO:** This function allows you to view the current track information.
6. **LIST:** This function allows you to view the current CDs track list.
7. **SKIP NEXT:** This function allows you to skip to the next song.
8. **PAUSE/PLAY:** This function allows you to pause / play the current song .
9. **SKIP PREVIOUS:** This function allows you to skip to the previous song.

The RW-50/15 utilises the OEM CD which means that RW50/15 unit simply brings up the information onto the 8" screen.

For specifications or troubleshooting please refer to your owner's manual.

RW-50/15 User Manual

OEM USB operation




1. **USB:** This feature allows you to utilize the OEM USB input and will play music from your USB or IPOD.
2. **REPEAT:** This function allows you to filter between repeat song > repeat all > repeat off.
3. **RANDOM:** This function allows you to turn random on > off.
4. **SCAN:** This function allows you to Scan through all of the songs on the USB/IPOD for 10 seconds. Once you have reached a song you like, simply press SCAN to disable.
5. **INFO:** This function allows you to view the current track information.
6. **LIST:** This function allows you to view the current USB/IPOD track list.
7. **SKIP NEXT:** This function allows you to skip to the next track.
8. **PAUSE/PLAY:** This function allows you to pause / play track.
9. **SKIP PREVIOUS:** This function allows you to skip to the previous song.

The RW-50/15 utilises the OEM USB which means that RW50/15 unit simply brings up the information onto the 8" screen.

For specifications or troubleshooting please refer to your owner's manual.

RW-50/15 User Manual


Media operation

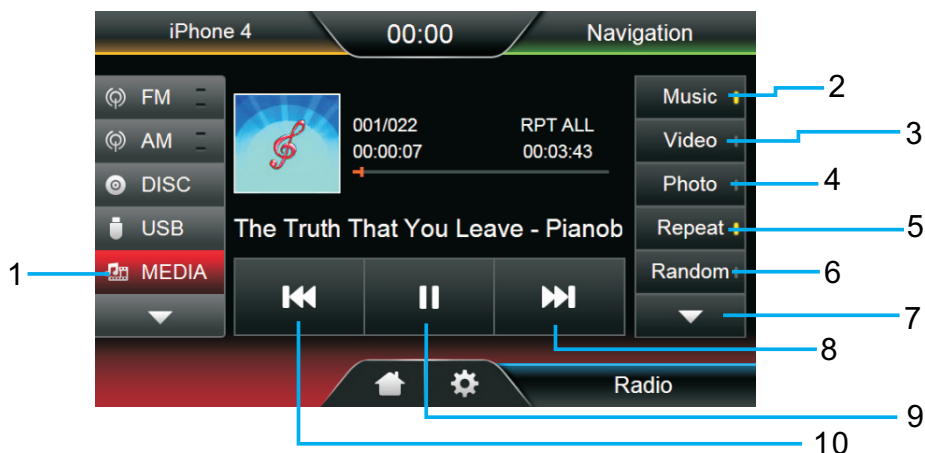

1. **MEDIA:** This function allows you to play media through a USB flash drive (maximum size: 32GB).
2. **MUSIC:** This function allows you to play music files from the USB.
3. **VIDEO:** This function allows you to play video files from the USB.
4. **PHOTO:** This function allows you to display photo files from the USB.
5. **REPEAT:** This function allows you to filter between repeat song > repeat all > repeat off.
6. **RANDOM:** This function allows you to turn random on > off.
7. **SCROLL DOWN:** Scroll down for more options (**INFO:** displays information about current track / **LIST:** displays current USB's track list).
8. **SKIP NEXT:** This function allows you to skip to the next track.
9. **PAUSE/PLAY:** This function allows you to pause / play track.
10. **SKIP PREVIOUS:** This function allows you to skip to the previous track.

RW-50/15 User Manual

Bluetooth operation

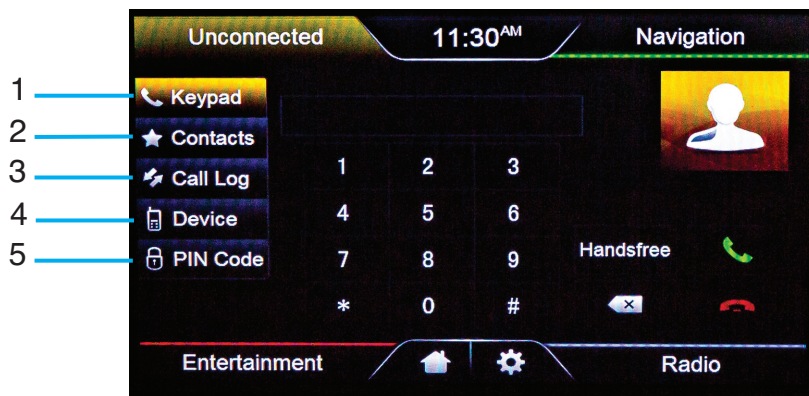

1. **KEYPAD:** Use this function to bring up the keypad for dialling out.
2. **CONTACTS:** This function will automatically import your contacts from your mobile phone.
3. **CALL LOG:** This function allows you to view your recent missed, dialled and received calls.
4. **DEVICE:** This function allows you to view and modify all of the paired devices.
5. **PIN CODE:** This function allows you to change the default password when pairing your phone. (Default password is 0000).

How to pair your phone with the unit:

- Simply go into your phones bluetooth settings and search for available devices.
- Select MAZDA BT50.
- Your phone will then ask you for a pass code.
- Enter 0000 (or your preferred password if you have changed it in the settings).

RW-50/15 User Manual

Bluetooth music operation



1. **BLUETOOTH MUSIC:** This feature allows you to stream your music via bluetooth.
2. **SKIP PREVIOUS:** This function allows you to skip to the previous track.
3. **SKIP NEXT:** This function allows you to skip to the next track.
4. **PAUSE/PLAY:** This function allows you to pause / play current track listed.

RW-50/15 User Manual

Settings



1. **CLOCK:** This function allows you to adjust the date and time.
2. **AUDIO:** This function allows you to change the audio settings.
3. **SETUP:** This function allows you to change the general settings.
4. **VERSION:** This function allows you to view the current software version.

Audio Settings

Will allow you to adjust the following settings:

Treble, Mediant, Bass, Equalizer, Balance, Fader, Volume Auto and Sound Effects.

Setup:

Will allow you to adjust the following settings:

News, RDS Area, DSP Dir, AF, Backlight (contrast/brightness/saturation), Steering wheel control setup, and Nav path file setup.

