User's manual





Before putting this appliance into operation, please read all instructions contained in this user's manual carefully, even if you are already familiar with using similar appliances. Only use this appliance in accordance with the instructions described in the user's manual. Keep the user's manual in a safe place where it can be easily retrieved for future use.

Save the original packaging, including the internal packing material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this appliance, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g. when moving or when you need to send this appliance for repair).

EN-1



CONTENTS

IMPORIANT SAFETY NOTICE	. 3
PRODUCT DESCRIPTION	. 4
INSTRUCTIONS FOR USE	. 5
CLEANING AND MAINTENANCE	. 5
TECHNICAL DETAILS	. 5
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT	
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF LISED PACKAGING MATERIALS	6


SWC 5050

IMPORTANT SAFETY NOTICE

- Carefully unpack the appliance and take care not to throw away any part of the packaging before
 you find all the parts of the appliance.
- 2) This appliance must not be used by persons (including children) with physical or mental impairments or by inexperienced persons, unless properly trained or schooled in the safe use of the appliance, or unless they have been properly supervised by a qualified person who will be responsible for their safety.
- 3) Never use accessories that have not been delivered with this appliance or are not intended for it.
- 4) Under no circumstances should you try to repair or adjust the appliance on your own danger of electric shock! Entrust all repairs and adjustments to a specialised company/service. Tampering with the appliance during the warranty period may void the warranty.
- 5) Only store and use the appliance away from flammable or volatile materials and solutions.
- 6) Keep the appliance away from extreme temperatures, direct sunlight and excessive humidity. Do not use in a dusty environment.
- 7) Do not place the appliance near heaters, open fires or other appliances or equipment that are sources of heat.
- 8) This appliance is designed for household use. Do not use it in industrial surroundings or outdoors!
- 9) Do not use the appliance for purposes other than those intended.
- 10) Before connecting the appliance to the power outlet ensure that the voltage on the label is the same as that in the power outlet.
- 11) Do not place the power cord near hot places or sharp objects. Do not place heavy objects on the power cord. Position the cord so that it will not be stepped on or tripped over. Make sure the power cord is not touching a hot surface.
- 12) If the power cord of the appliance is damaged have it repaired by an authorised service technician to prevent causing a dangerous situation. It is forbidden to use a appliance with a damaged power cord or plug.
- 13) Do not disconnect the power cord from the wall outlet by pulling the cord.
- 14) Do not spray the appliance with water or any other liquid. Do not pour water or any other liquids into the appliance. Do not submerge the appliance in water or any other liquid.
- 15) Never use the appliance near a bathtub, wash basin or any other container filled with water.
- 16) If you are not using the appliance, or if you know that you will not be using it soon, turn it off and disconnect the power cord from the wall socket. Prior to cleaning, proceed in the same manner.
- 17) Use extra care if the appliance is used near children. Always keep the appliance out of the reach of children. Children must be supervised to ensure that they do not play with the appliance.
- 18) The manufacturer takes no responsibility for damages caused by the incorrect use of this appliance and its accessories (injuries, burns, scalding, fire, food spoilage, etc.).

SWC 5050

PRODUCT DESCRIPTION

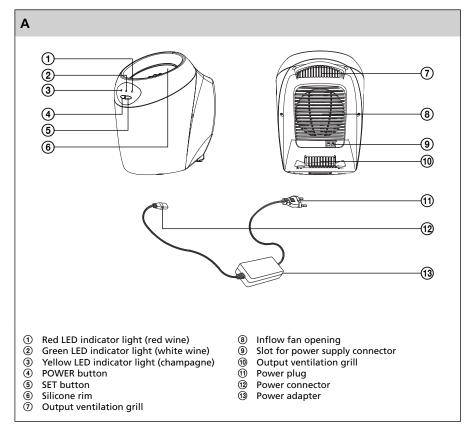

This cooler will cool your champagne, white wine or red wine to the recommended serving temperature:

- Champagne to 5 °C
- White wine to 11 °C
- Red wine to 17 °C

We recommend that the bottle is placed in the cooler pre-cooled from the fridge, this will avoid the need to wait for it to cool from room temperature. This cooler serves to maintain champagne and wine bottles at a serving temperature, but it is not designed for rapid cooling of beverages from room temperature.

SWC 5050

INSTRUCTIONS FOR USE

- Connect the cooler to the power mains by inserting the power connector into the slot and subsequently connecting the power plug into the power socket.
- 2) Place the bottle into the cooler.
- 3) Hold down the "POWER" button to turn on the cooler. A yellow LED diode will turn on signalling the champagne setting. If you wish to change the temperature for red or white wine, repeatedly press the "SET" button, which serves to switch between all three temperatures.
- 4) Hold down the "POWER" button to turn off the cooler.



Note

- The silicone rim serves to improve the insulation of the temperature inside the cooler.
- There are pressure clips inside the cooler, which help improve the contact between the bottle and the cooling surface.



Warning

- Never place bottles into the cooler that are wrapped in a transport wrapping, or which have tags on them, etc. This could lead to a significant reduction in the cooling effectiveness and in extreme situations damage the appliance.
- Make sure that any napkins, wipes, etc. on the bottle do not cover the inflow ventilation grill of the appliance, this could lead to its irreparable damage.
- The appliance is designed only and exclusively for cooling bottles with beverages, do not use
 it for other applications.

CLEANING AND MAINTENANCE



Narning

Before cleaning disconnect this appliance from the power source.

To clean the outer parts of the appliance, use a soft cloth dipped in lukewarm water. Do not use aggressive cleaning products and solvents as this could damage the surface of the appliance.

TECHNICAL SPECIFICATIONS

Nominal voltage	
Nominal frequency	50 Hz
Rated power input	
Safety class (with regard to electric shock protection)	
Max. bottle diameter	

Amendments to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.