
250 FT HOSE REEL CART

SKU # 8587066 MODEL # HC0008

USER MANUAL

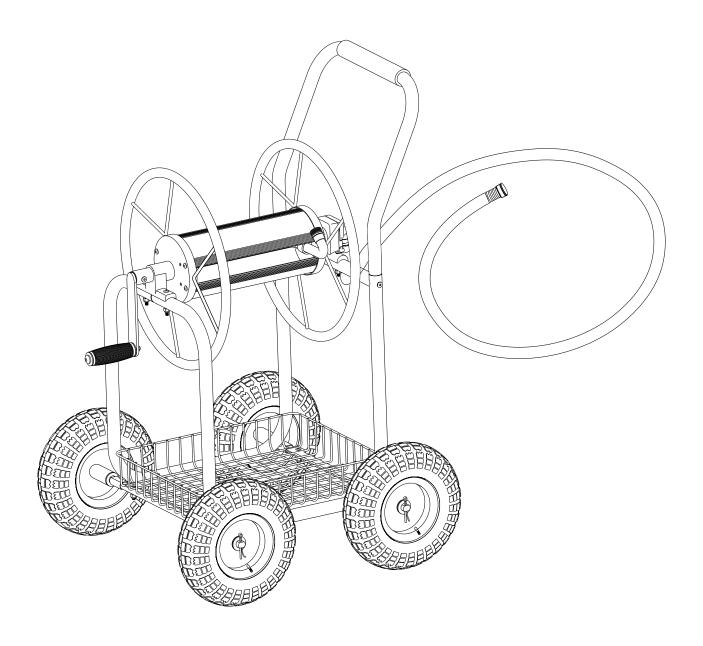

READ YOUR USER MANUAL COMPLETELY AND CAREFULLY BEFORE ATTEMPTING TO SET UP OR OPERATE YOUR HOSE REEL CART. ALL OPERATORS OF THIS EQUIPMENT SHOULD READ AND UNDERSTAND ALL SAFETY RULES IN THIS USER MANUAL BEFORE USE.

TABLE OF CONTENTS

Safety Information	. 2
Package Contents	. 3
Hardware Contents	4
Preparation	
Assembly Instructions	4
Parts List and Exploded View	8



SAFETY INFORMATION

Equipment can cause injury if operated improperly.



Look for this symbol to point out important safety precautions. It means -ATTENTION! Be alert! Your safety is involved.




Do not use air compressor to inflate the tires. Use of a hand pump is strongly recommended.


- . **ONLY** use hand air pump to inflate the tires. Do not exceed maximum air pressure of 30psi.
- . Always drain water to reduce pressure when the hose reel is not in use.
- . **DO NOT** operate this hose reel cart on uneven surface.
- . **DO NOT** ALLOW children or untrained persons to operate this hose reel cart.
- . DO NOT exceed maximum hose length of 250 ft.
- . Thread Seal Tape (not included) can be used on the threaded end of the joints to seal from water leaks.

PACKAGE CONTENTS

Part	Description	Quantity	Part	Description	Quantity
Α	Left Tube	1	В	Right Tube	1
С	Axle	2	D	Middle Tube	1
Е	Handle	1	F	Basket	1
G	Drum half	2	Н	Front Drum Wheel	1
1	Rear Drum Wheel	1	J	Front Bearing Bracket	1
K	Rear Bearing Bracket	1	L	Wheel	4
М	Leader Hose	1	Ν	Crank Handle	1

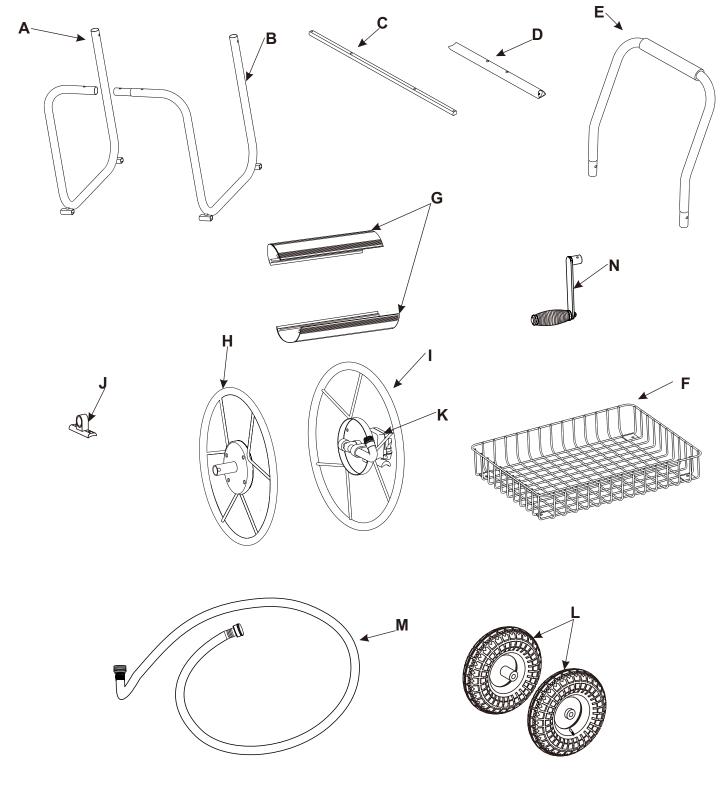

HARDWARE CONTENTS

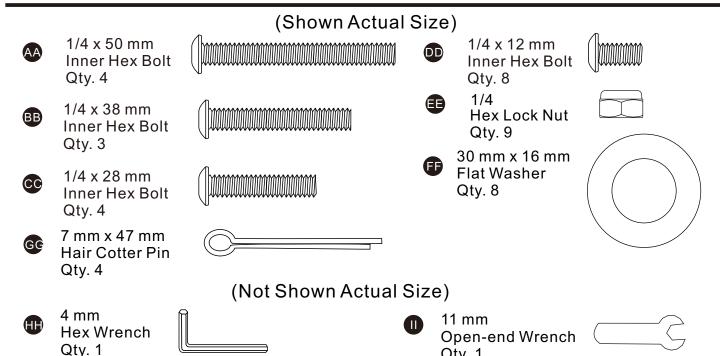

PREPARATION

Before assembling product, ensure all parts are included. Compare parts with package and hardware contents lists (page 3 & 4). If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement.

Qty. 1

Estimated assembly time: 15 minutes


Tools Required for Assembly:

4 mm Hex Wrench (included)


11 mm Open-end Wrench (included)

ASSEMBLY INSTRUCTIONS


1. Assemble the front drum wheel (H). rear drum wheel (I) to the two drum halves (G) with eight 1/4 x 12 mm inner hex bolts (DD). Tighten.

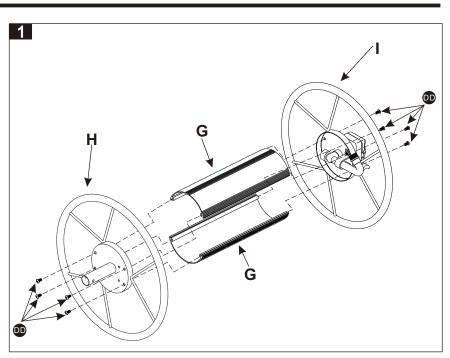


2. Slide the two axles (C) onto the right tube (B) and left tube (A), insert the handle (E) into the right and left tube (B & A). Assemble middle tube (D) to the right and left tubes with two 1/4 x 38 mm inner hex bolts (BB) and two 1/4 hex lock nuts (EE). Tighten.

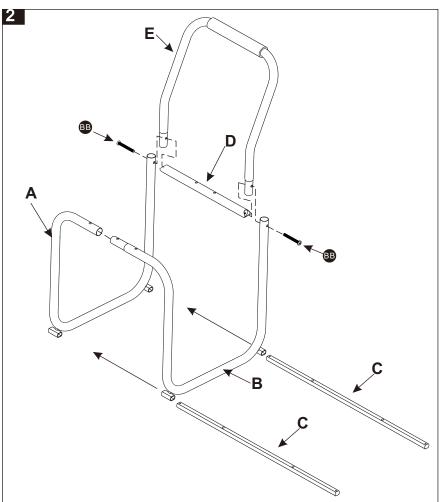


3. Slide the front bearing bracket (J) onto the front drum wheel (H), assemble the crank handle (N) to the front drum wheel with **one** 1/4 x 38 mm inner hex bolt (BB), **tighten** with one 1/4 hex lock nut (EE).

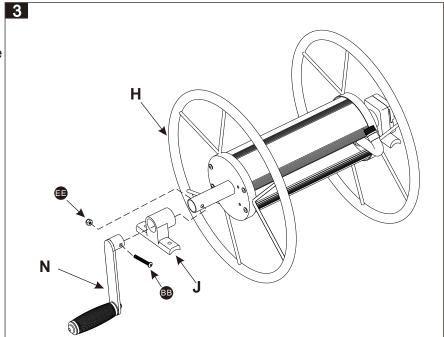


4. Assemble the basket (F) to the axles (C) with **four** 1/4 x 28 mm inner hex bolts (CC), **tighten** with **four** 1/4 hex lock nuts (EE).

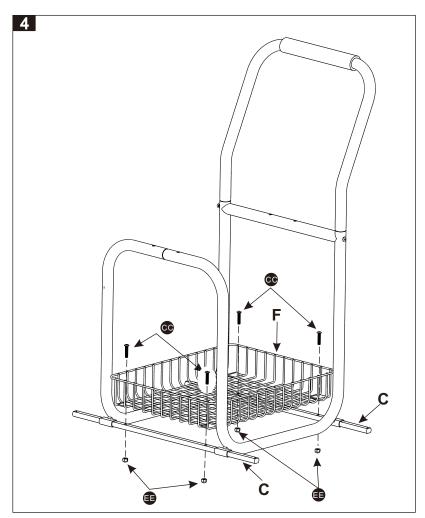


5. Attach the wheels (L) to the axles (C) with eight 30 mm x 16 mm flat washers (FF)(one on each side of wheel), four 7 mm x50 mm hair cotter pins (GG). Spread the end of pins to secure.

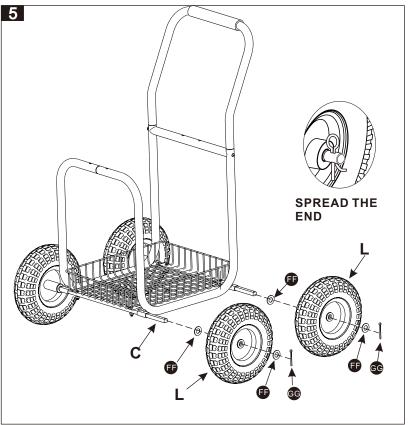


6. Attach the drum wheels to the assembled tubes, secure the front bearing bracket (J), rear bearing bracket (K) to the tubes with four 1/4 x 50 mm inner hex bolts (AA) and four 1/4 hex lock nuts (EE). **Tighten**.

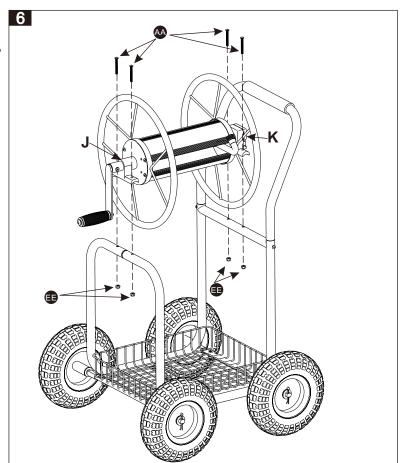

8. Screw the leader hose (M) to the brass connector on the rear bearing bracket (K).

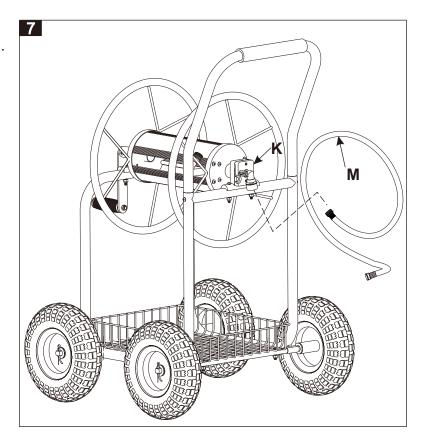

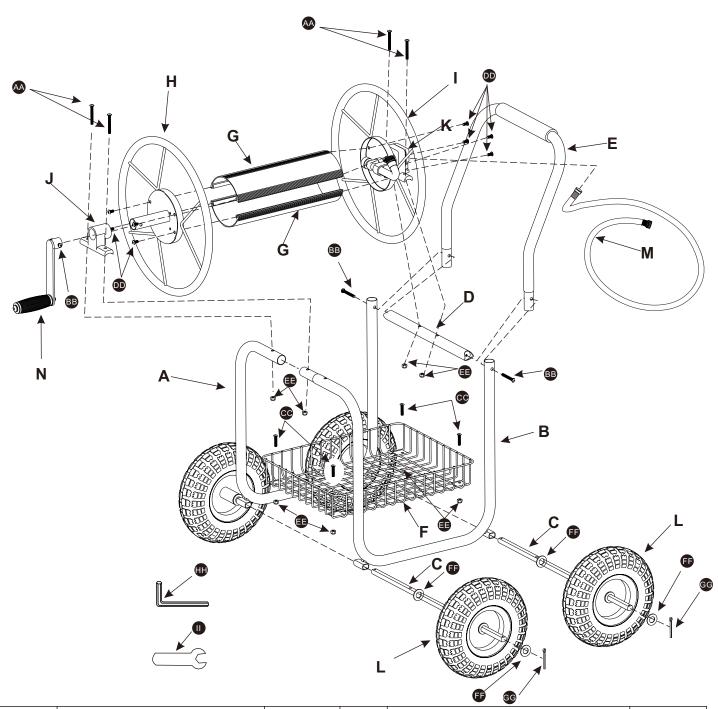

Part	Description	Quantity	Part	Description	Quantity
Α	Left Tube	1	М	Leader Hose	1
В	Right Tube	1	N	Crank Handle	1
С	Axle	1	AA	1/4 x 50 mm Inner Hex Bolt	4
D	Middle Tube	1	BB	1/4 x 38 mm Inner Hex Bolt	3
Е	Handle	1	CC	1/4 x 28 mm Inner Hex Bolt	4
F	Basket	1	DD	1/4 x 12 mm Inner Hex Bolt	8
G	Drum half	2	EE	1/4 Hex Lock Nut	9
Н	Front Drum Wheel	1	FF	30 mm x 16 mm Flat Washer	8
I	Rear Drum Wheel	1	GG	7 mm x 50 mm Hair Cotter Pin	4
J	Front Bearing Bracket	1	НН	4 mm Hex Wrench	1
K	Rear Bearing Bracket	1	П	11 mm Open-end Wrench	1
L	Wheel	4			