

kogan

KGNDPF8VAA

USER MANUAL



TABLE OF CONTENTS

SAFETY INFORMATION.....	2
PACKAGE CONTENTS	2
SPEC SUMMARY.....	2
DPF INTRODUCTION.....	3
REMOTE CONTROL OVERVIEW.....	4
QUICK START.....	4
OPERATION GUIDE.....	4
Picture Display	5
Setting	6
OSD FUNCTION.....	7
FAQ.....	14

Safety Information:

Important Safety Precautions:

- Keep away from water, moisture and dusty areas.
- Working temperature 0-40°C. Never store in a hot or very cold place.
- Be careful not to drop or knock the photo frame.
- Never try to open the case yourself, always seek technical support.
- Connect the AC adaptor to both the DC IN jack and to the power outlet. (mains socket)
- Only use attachments / accessories approved by the manufacturer.
- When left unused for a long period of time, the unit should be unplugged from the household AC outlet.

Warning: To reduce the risk of fire or electronic shock, do not expose to rain, moisture, dripping or splashing.

Package Contents:



PHOTO FRAME



REMOTE CONTROL



ADAPTER

Spec Summary

Main Features:

- Play as slideshow, thumbnail, split screen picture display..
- Rotate and zoom photos
- Brightness, contrast and saturation adjustable

Memory Card Slots

Secure Digital (SD)

Multi Media Card (MMC)

Memory Stick (MS), MS Pro, MS Duo, MS Pro Duo

Secure Digital High Capacity (SDHC)

- MS Duo adapter required

Specifications

Pictures: JPEG up to 26 mega pixel resolution



USB ports: - USB 2.0 Device
- USB 2.0 Host

AC adapter


-Input AC 100V~240V 50-60Hz

-Output DC5V-1A

Digital Photo Frame Introduction

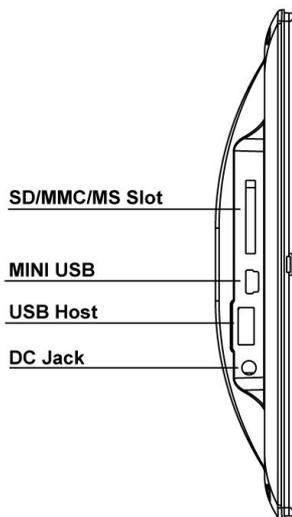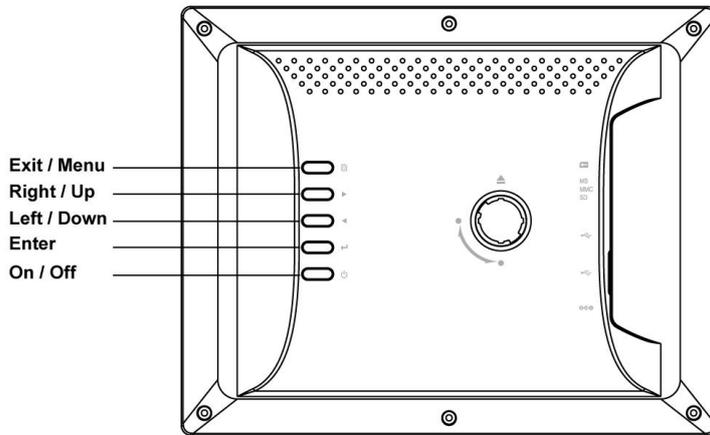

Stand installation

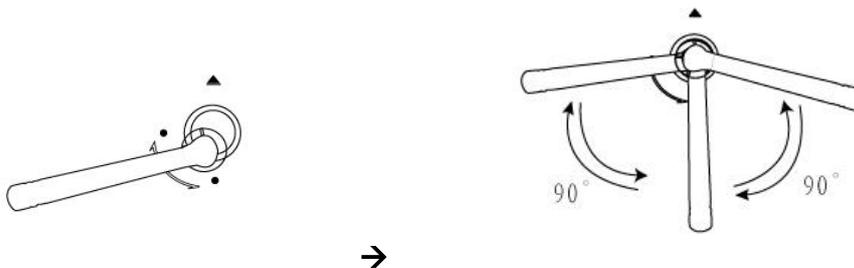

Note: Insert the jack of stand into DPF. And then rotate stand 90° to lock the stand.

Remote Control Overview



Note: a) To edit or adjust, press **MENU** on the remote control; or you can instead press button **Menu** on the frame for 3 seconds.

b) To go back a step or go to the main menu, press **EXIT** on the remote control; or you can instead press button **Menu** on the frame.

Quick Start:

1. Insert the jack of the DC adapter into the digital photo frame, and then plug the DC adapter into a standard power outlet.
2. Turn on the power, the pictures from the inserted memory card will be displayed.



Operation Guide:

1. Select Menu

- In the main menu, you will see highlighted the device you have inserted.
- Press ◀ / ▶ and **ENTER** to select.

2. Picture display screen

- Choose the memory card you want to view, and then press **ENTER** to go to the picture preview mode.



- To slideshow pictures, press ◀ / ▶ to choose a picture, and then press **ENTER**.

Note: If you want to stop the slideshow and keep the picture on the screen, you can press **ENTER**, and then continue pressing **ENTER** to slideshow.

- When playing a picture, you can press **MENU** on remote control or you can instead press button **Menu** on the frame for 3 seconds.



(Pause) (Zoom out) (Rotate left 90°) (Rotate right 90°) (Ratio) (Delete) (Exit)

- Change the photo display mode in “**SETTING**” menu, Press ▲ / ▼] to choose “Display mode”. There are “Slideshow” “Thumbnail” and “Splitscreen” mode available.

a. Slideshow



b. Thumbnails



c. Splitscreen



3. Setting

Press **Setting icon** to set display information.



4.OSD Menu Functions

Menu item	Description
Slide show time	3sec / 5sec / 15sec / 1min / 15min
Transition effect	Random / Snake / Partition / Erase / Blinds / Grid / Cross / Rect
Set time	Time setting (hour / minute / mode)
Set date	Date setting (dd/mm/yyyy)
Language	Multi language
Brightness	Brightness adjust
Contrast	Contrast adjust
Saturation	Saturation adjust
Display Ratio	Original--preserves dimension ratios of original picture Stretch-- stretches picture to fit screen Crop-- full screen picture, preserves dimension ratios, but crops picture to do so.
Display Mode	Slide Show / Thumbnail / Splitscreen
Power on	Set time to power on automatically
Power off	Set time to power off automatically
Alarm set	Set alarm
Default	Restore to the factory settings.

5. Frequently Asked Questions

Q. Why can't the Digital Photo Frame play all images?

A: The Digital Photo Frame supports JPEG format pictures, It may not read some files downloaded from the internet.

Q. I have a memory card in the Digital Photo Frame, but it's not reading the card, what should I do?

A: First, make sure that you are using a memory card that is supported by the Digital Photo Frame. Second, ensure that the memory card is inserted all the way into the correct slot. Third, choose the correct card icon which you want to play.

Q. Why do some pictures load faster than others?

A: Higher resolution pictures usually load slower.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

NOTE: All rights for modifications reserved

The above settings are subject to change if the product specifications are modified.